

PARTS MANUAL

MODEL
EH722

EH722DSF081

07/14



SUBARU

Industrial Power Products

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047 - Phone 847-540-7300 - Fax 847-438-5012


e-mail: sales@subarupower.com - www.subarupower.com

© 2012 Subaru Industrial Power Products

Group Index

Group Name	Page
100 Crankcase.....	4
200 Crankshaft.....	8
300 Intake & Exhaust.....	10
317 Intake.....	12
400 Governor.....	14
500 Cooling & Starting.....	16
600 Fuel, Lubrication.....	18
640 Carburator.....	20
685 Fuel, Lubrication.....	22
700 Ignition.....	24
731 Ignition.....	26
 Part Number Index.....	 28
Part Description Index.....	29

100 Crankcase

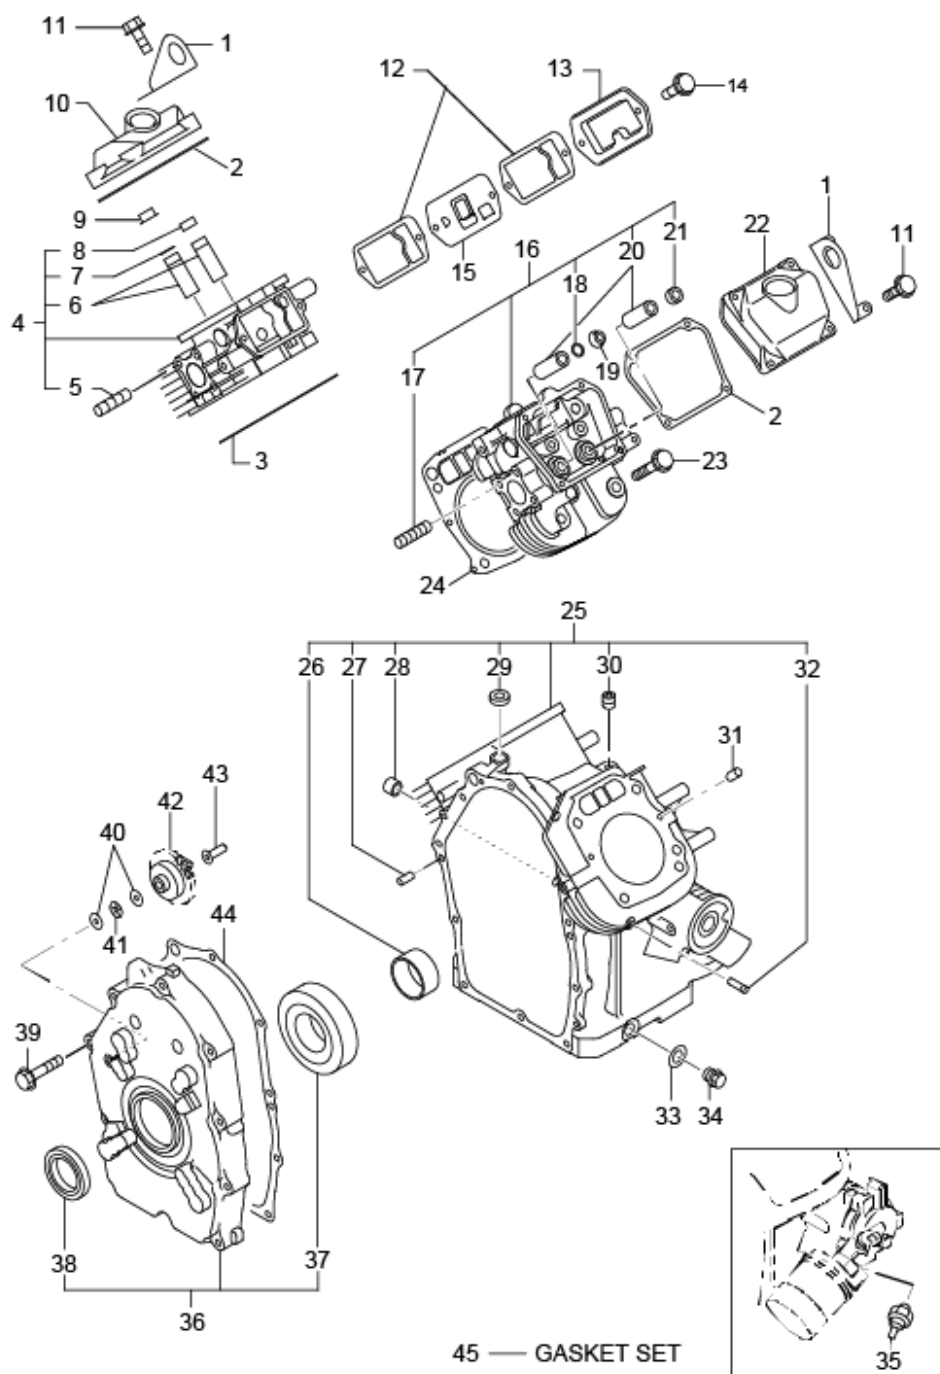

0100 0002 000

100 Crankcase


Ref	Part Number.	Description	Qty	Remark
1	280-19001-03	HOOK	2	
2	263-16101-A3	GASKET(ROCKER COVER)	2	
3	280-15001-23	GASKET 1 (CYL HEAD)	1	
4	20K-13002-11	CYLINDER HEAD 1 CP	1	
5	010-50802-90	STUD	4	
6	263-14202-03	VALVE GUIDE	2	
7	056-51000-50	CLIP	1	
8	132-11AA1-10	SEAL-EXH VALVE	1	
9	263-35341-03	RETAINER PLATE	1	
10	263-15505-03	ROCKER COVER	1	
11	011-00601-01	FLANGE BOLT	8	
12	263-16006-03	GASKET(BREATHERPLATE	2	
13	263-14301-03	BREATHER COVER	1	
14	011-00600-30	FLANGE BOLT	2	
15	280-14411-A1	BREATHER PLATE CP	1	
16	20K-13102-11	CYLINDER HEAD 2 CP	1	
17	010-50802-90	STUD	4	
18	056-51000-50	CLIP	1	
19	263-35341-03	RETAINER PLATE	1	
20	263-14202-03	VALVE GUIDE	2	
21	132-11AA1-10	SEAL-EXH VALVE	1	
22	263-15505-03	ROCKER COVER	1	
23	011-01000-70	FLANGE BOLT	8	
24	280-15001-23	GASKET 2 (CYL HEAD)	1	
25	280-10102-11	CRANK CASE CP	1	
26	263-15805-03	MAIN BEARING	1	
27	031-00801-10	DOWEL PIN	2	
28	263-55601-03	PIPE	2	
29	044-00800-10	OIL SEAL	1	
30	235-15421-03	BLIND PLUG CP	1	
31	031-00600-20	DOWEL PIN	4	
32	263-19111-03	PLUG (PULSE PIPE HOLE)	1	
33	021-11400-20	GASKET	2	
34	040-11400-30	PLUG	2	
35	263-76102-H1	SWITCH OIL PRESSURE	1	
36	263-11004-41	MAINBEARING COVER CP	1	
37	X60-04500-20	BALL BEARING	1	
38	044-04200-30	OIL SEAL	1	
39	011-00802-20	FLANGE BOLT	10	

100 Crankcase

Ref	Part Number.	Description	Qty	Remark
40	263-46214-03	WASHER	2	
41	263-46215-A3	THRUST BEARING	1	
42	263-45004-11	GOVERNOR GEAR CP	1	
43	277-41902-03	GOVERNOR SLEEVE	1	
44	263-16002-A3	GASKET (M.B COVER)	1	
45	280-99001-17	GASKET SET	1	

This Page Intentionally Left Blank

200 Crankshaft

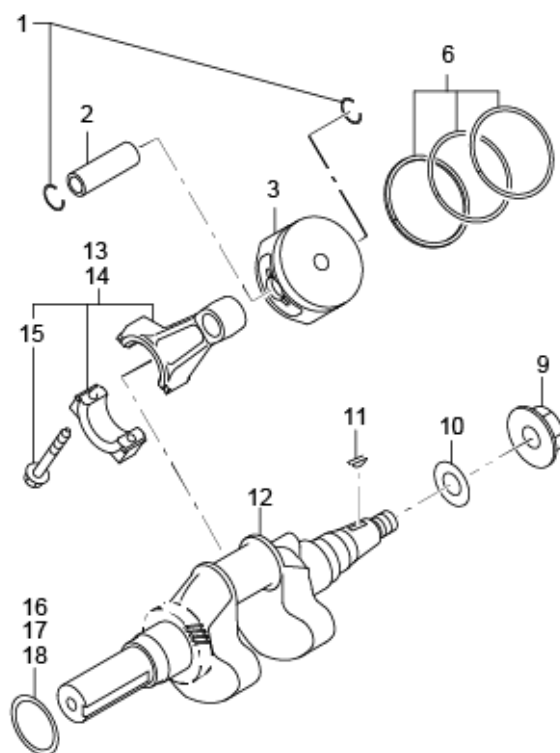


0200 0001 000

200 Crankshaft

Ref	Part Number.	Description	Qty	Remark
1	056-52100-20	CLIP	4	
2	263-23301-33	PISTON PIN	2	
3	280-23411-H3	PISTON	2	PISTON STD.
3	280-23412-H3	PISTON	2	PISTON 025 OS
3	280-23413-H3	PISTON	2	PISTON 050 OS
6	280-23501-07	PISTON RING SET	2	PISTON RING SET STD
6	280-23502-07	PISTON RING SET	2	PISTON RING SET 0.25
6	280-23503-17	PISTON RING SET	2	PISTON RING SET 0.50
9	018-01800-10	FLANGE NUT	1	
10	003-10180-00	WASHER	1	
11	005-32054-01	WOODRUFF KEY	1	
12	263-20811-11	CRANK SHAFT CP	1	
13	263-22601-30	CONNECTING ROD AY	2	
14	263-22602-10	CONNECTING ROD AY	2	
15	001-05084-00	FLANGE BOLT	4	
16	263-25012-A3	SPACER	1	
17	263-25013-A3	SPACER	1	
18	263-25014-A3	SPACER	1	

300 Intake & Exhaust

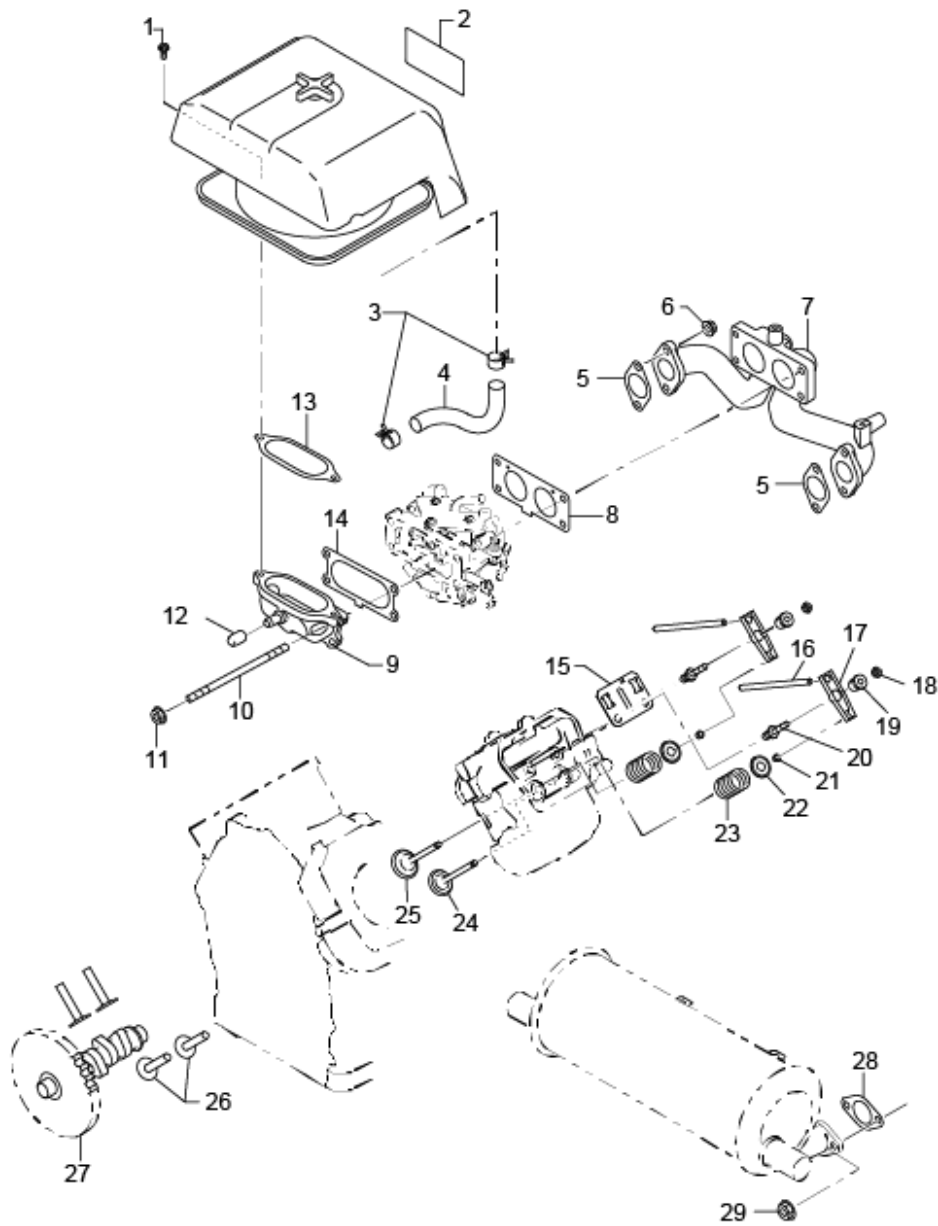


0300 0001 000

300 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
1	011-00600-20	FLANGE BOLT	3	
2	20K-91702-03	LABEL(TRADE MARK)	1	
3	263-68512-A3	HOSE CLAMP	2	
4	280-18001-03	BREATHER PIPE	1	
5	263-35503-A3	GASKET(IN MANIFOLD)	2	
6	002-38080-00	FLANGE NUT	4	
7	280-33005-H1	INTAKE MANIFOLD CP	1	
8	280-66202-03	GASKET(CARBURETOR)	1	
9	280-38001-03	CLEANER ADAPTER	1	
10	010-50601-91	STUD	4	
11	002-38060-00	FLANGE NUT	4	
12	X42-30600-30	CAP(VINYL)	1	
13	280-35622-03	GASKET(CLEANER)	1	
14	280-35501-03	GASKET(ADAPTER)	1	
15	263-37002-A3	GUIDE PLATE	2	
16	263-35322-A1	PUSH ROD CP	4	
17	267-36102-03	ROCKER ARM	4	
18	017-00601-10	NUT	4	
19	267-35701-03	PIVOT	4	
20	263-35801-03	BOLT(PIVOT)	4	
21	246-35501-03	COLLET-VALVE	8	
22	246-33711-13	SPRING RETAINER	4	
23	246-33611-03	VALVE SPRING	4	
24	263-33401-H3	INTAKE VALVE	2	
25	263-33502-H3	EXHAUST VALVE	2	
26	263-33301-A3	TAPPET	4	
27	280-31801-03	CAM SHAFT	1	
28	270-35201-01	GASKET CP (MUFFLER)	2	
29	002-38080-00	FLANGE NUT	4	

317 Intake

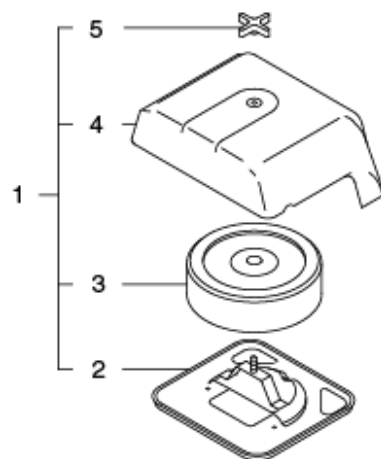


0317 0002 000

317 Intake

Ref	Part Number.	Description	Qty	Remark
1	20K-32601-A0	AIR CLEANER AY	1	
2	280-32626-A1	CLEANER BASE CP	1	
3	263-32610-A1	CLEANER ELEMENT CP	1	
4	263-32630-03	CLEANER COVER	1	
5	263-32640-01	WING NUT	1	

400 Governor

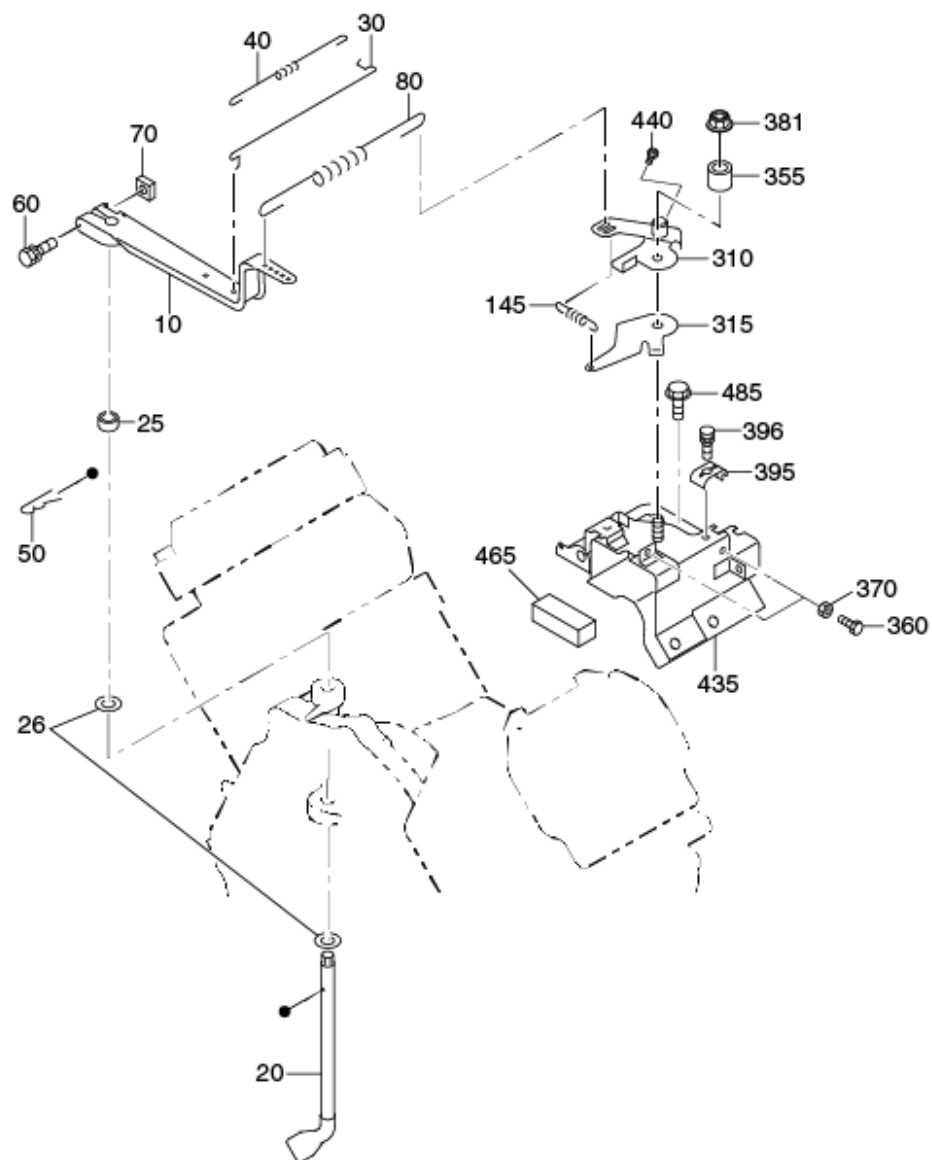


0400 0001 000

400 Governor

Ref	Part Number.	Description	Qty	Remark
10	263-42301-B3	GOVERNOR LEVER	1	
20	263-42201-A3	GOVERNOR SHAFT	1	
25	X23-00801-50	SPACER	1	
26	003-10080-00	WASHER	2	
30	20K-42701-03	GOVERNOR ROD	1	
40	20K-42801-03	GOVERNOR ROD SPRING	1	
50	005-11060-01	SNAP PIN	1	
60	001-14063-00	BOLT AND WASHER AY	1	
70	018-60600-20	NUT	1	
80	263-42501-13	GOVERNOR SPRING	1	
145	261-45201-13	RETURN SPRING	1	
310	263-43312-01	SPEED CONTROL LEVER	1	
315	263-47001-A3	BRACKET, RETURN SPRING	1	
355	261-45301-03	SPACER	1	
360	011-50500-20	BOLT	1	
370	002-27050-00	NUT	1	
381	002-38060-00	FLANGE NUT	1	
395	261-43901-03	CLAMP	1	
396	001-17052-00	BOLT & WASHER AY	1	
435	263-45027-00	BRACKET UN(SPD CTL)	1	
465	X84-14320-00	RUBBER FOAM	1	
485	011-00600-20	FLANGE BOLT	2	
440	004-31040-80	SCREW	1	

500 Cooling & Starting

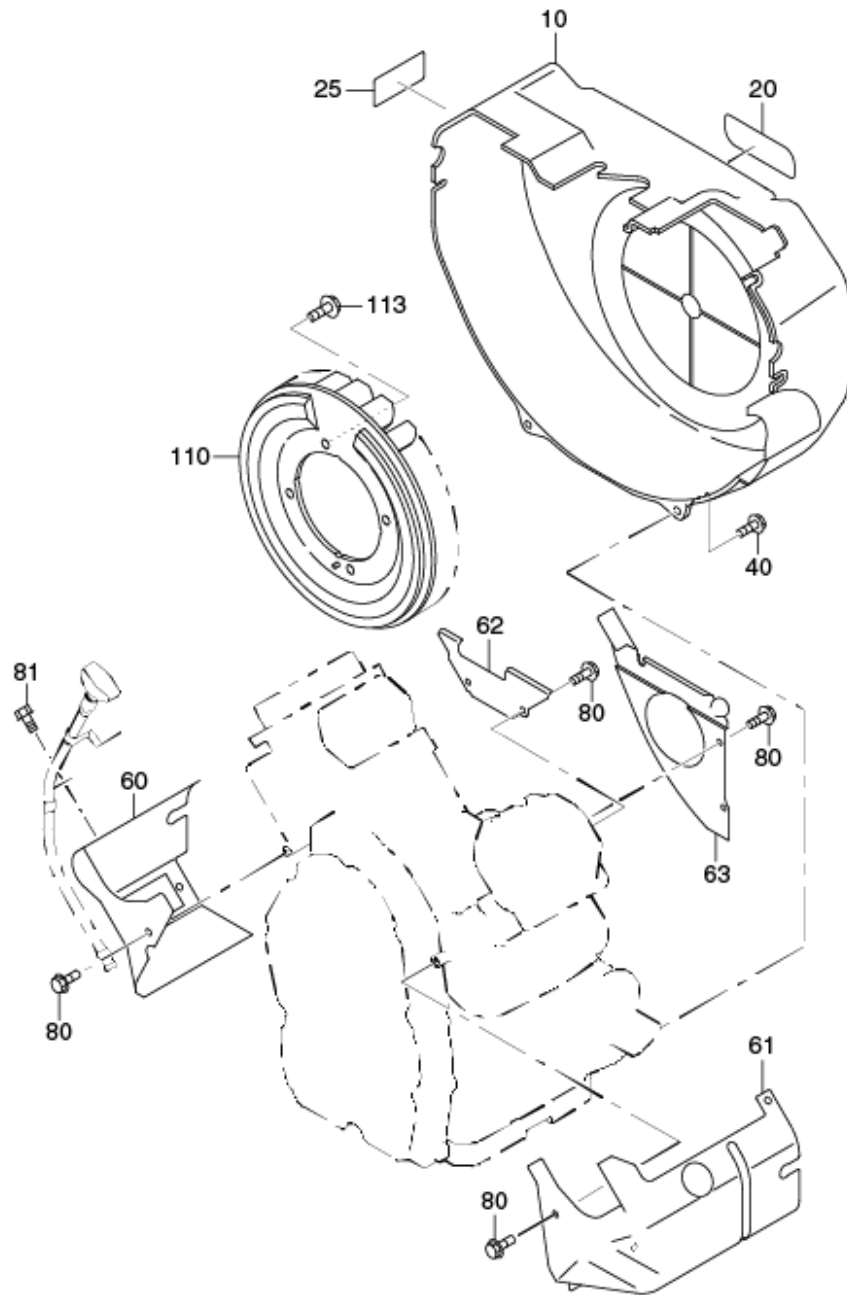


0500 0001 000

500 Cooling & Starting

Ref	Part Number.	Description	Qty	Remark
10	20K-51206-H2	BLOWER HOUSING UN	1	
20	073-20057-20	LABEL(FI)	1	
25	X73-20057-60	LABEL(WARNING)	1	
40	011-00600-20	FLANGE BOLT	8	
60	263-52612-A1	CYLINDER BAFFLE 1 CP	1	
61	280-52701-C1	CYLINDER BAFFLE 2 CP	1	
62	280-52801-A2	CYLINDER BAFFLE 3 UN	1	
63	263-52912-A2	CYLINDER BAFFLE 4 UN	1	
80	011-00600-30	FLANGE BOLT	8	
81	011-00600-20	FLANGE BOLT	1	
110	263-54101-H2	COOLING BLOWER UN	1	
113	001-14061-60	BOLT AND WASHER AY	4	


600 Fuel, Lubrication

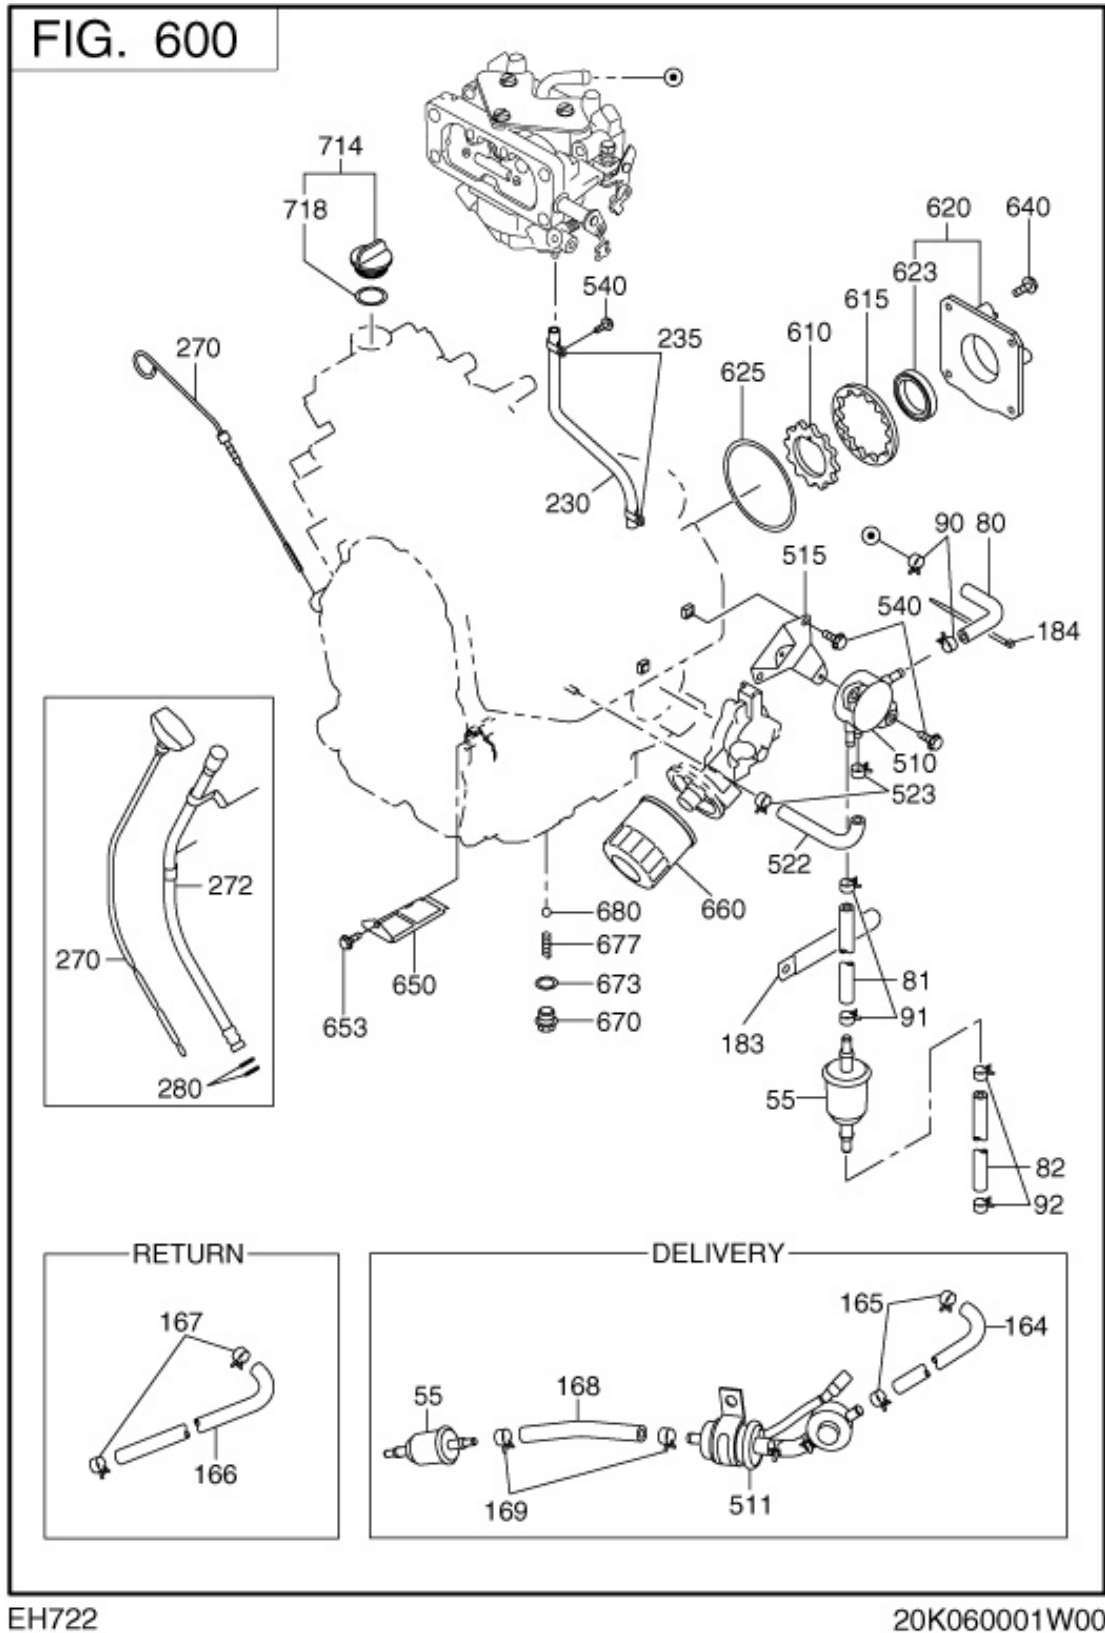

600 Fuel, Lubrication

Ref	Part Number.	Description	Qty	Remark
55	263-65012-A3	FILTER,FUEL	1	
80	263-62613-01	FUEL PIPE 13 CP	1	
90	263-68501-03	HOSE CLAMP	2	
164	X85-10616-60	RUBBER PIPE	1	
165	263-68501-03	HOSE CLAMP	2	
166	X85-10614-81	RUBBER PIPE	1	
167	263-68501-03	HOSE CLAMP	2	
168	X85-10613-81	RUBBER PIPE	1	
169	263-68501-03	HOSE CLAMP	2	
270	263-63604-11	GAUGE CP,OIL LEVEL	1	
272	263-63622-01	GUIDE CP	1	
280	024-01000-20	O-RING	2	
511	20K-62201-00	FUEL PUMP ASSY	1	
540	011-00600-20	FLANGE BOLT	6	
610	263-63904-H3	INNER ROTOR	1	
615	263-63905-H3	OUTER ROTOR	1	
620	263-64002-01	OIL PUMP COVER CP	1	
623	044-03501-70	OIL SEAL	1	
625	X24-08900-30	O RING	1	
640	011-00600-30	FLANGE BOLT	4	
650	263-64302-02	OIL PUMP FILTER UN	1	
653	263-65011-A3	FLANGE BOLT	1	
660	248-65801-10	OIL FILTER AY	1	
670	263-65001-13	PLUG(OIL RELIEF)	1	
673	003-70140-00	GASKET,ALUMINUM	1	
677	263-66001-03	SPRING(RELIEF VALVE)	1	
680	006-90308-00	STEEL BALL	1	
714	280-63602-A1	OIL FILLER CAP CP	1	
718	263-64414-A3	O RING	1	

640 Carburator

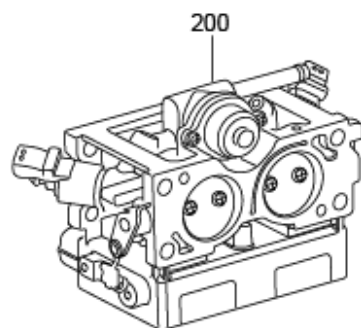


0640 0001 000

640 Carburator

Ref	Part Number.	Description	Qty	Remark
200	20K-62401-10	THROTTLE BODY AY	1	

685 Fuel, Lubrication

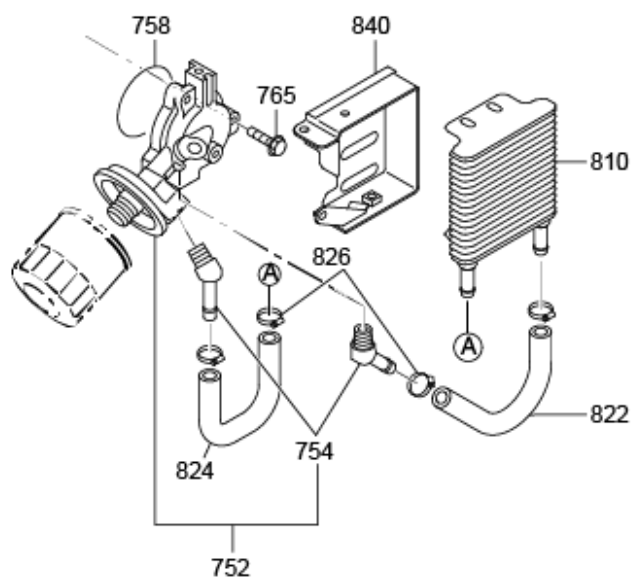


0685 0001 000

685 Fuel, Lubrication

Ref	Part Number.	Description	Qty	Remark
752	280-65011-01	ADAPTER CP	1	
754	280-65025-A3	ELBOW ADAPTER 1	2	
758	280-65050-A3	O RING	1	
765	011-00601-01	FLANGE BOLT	3	
810	280-65001-C1	OIL COOLER CP	1	
822	280-65037-03	HOSE 1, OIL COOLER	1	
824	280-65038-03	HOSE 2, OIL COOLER	1	
826	X56-10900-30	HOSE CLAMP	4	
840	280-65030-01	BRACKET CP, OIL COOLER	1	

700 Ignition

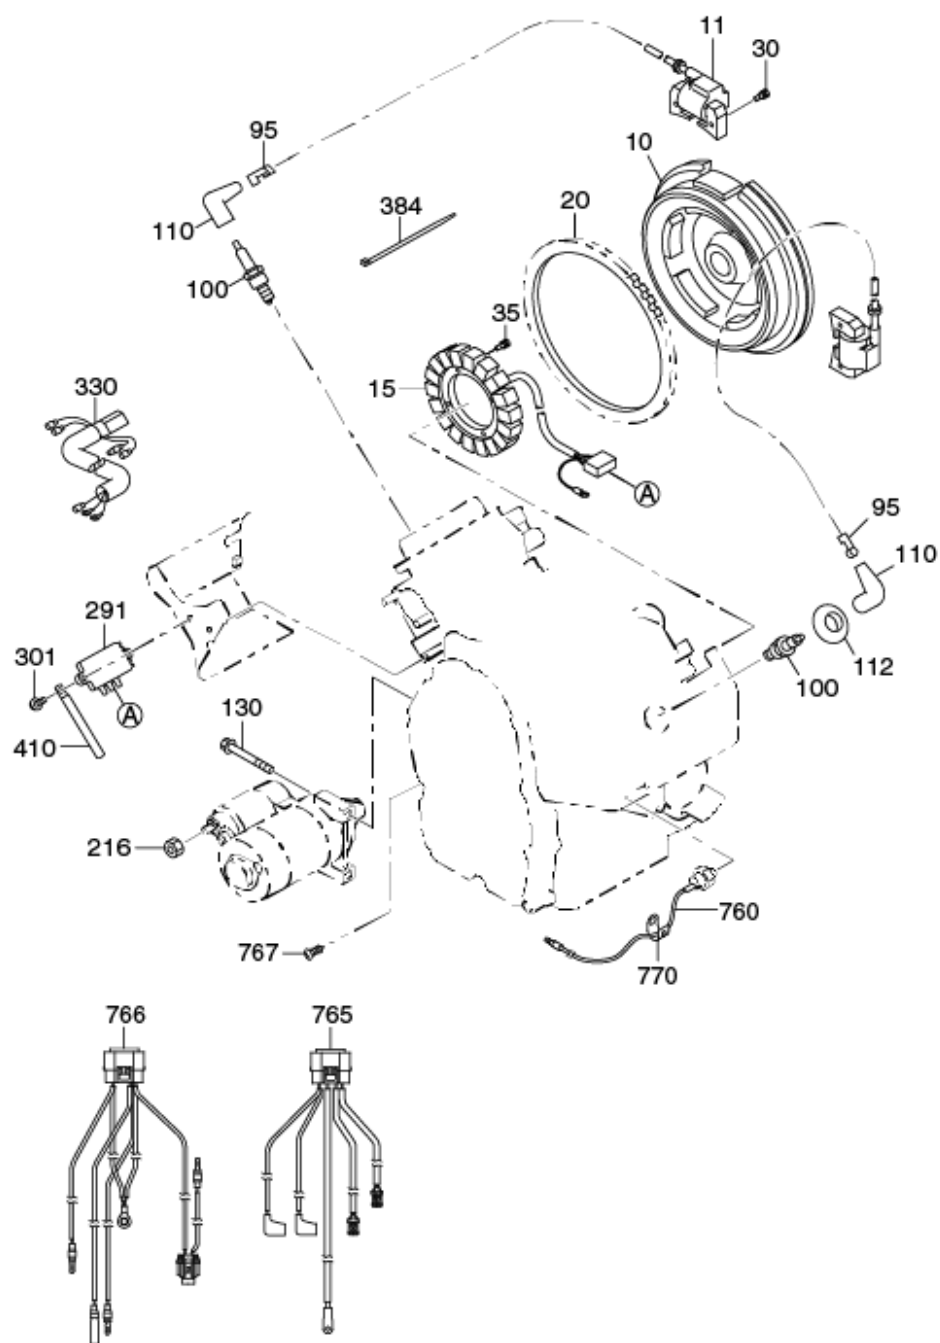

0700 0001 000

700 Ignition

Ref	Part Number.	Description	Qty	Remark
10	263-77206-01	FLYWHEEL CP	1	
11	263-78202-11	IGNITION COIL CP	2	
15	263-79402-B1	CHARGE COIL CP	1	
20	263-71002-H3	RING GEAR	1	
30	001-14062-50	BOLT AND WASHER AY	4	
35	001-16052-50	BOLT & WASHER AY	4	
95	X65-91000-10	PLUG TERMINAL	2	
100	065-01402-80	SPARK PLUG	2	
110	X65-51000-10	SPARK PLUG CAP	2	
112	279-55201-03	GROMMET(PLUG CAP)	1	
130	011-00801-00	FLANGE BOLT	2	
216	002-38080-00	FLANGE NUT	1	
291	263-71902-A1	REGULATOR CP 30A	1	
301	011-00601-40	FLANGE BOLT	2	
330	263-73130-A1	WIRING HARNESS	1	
384	056-30000-10	WIRE BAND	4	
410	056-60002-50	CLAMP	1	
760	263-73102-11	WIRE AY(OIL PRE.SW.)	1	
765	20K-73101-01	WIRING HARNESS 1	1	
766	20K-73102-11	WIRING HARNESS 2	1	
767	015-00400-10	TAPPING SCREW	1	
770	206-75501-01	CLAMP CP	1	

731 Ignition

No diagram associated with this Parts List

731 Ignition

Ref	Part Number.	Description	Qty	Remark
120	263-70504-J0	STARTING MOTOR AY	1	

Part Number Index

The Part Number Index is a numeric index of all part numbers included in this manual. The index shows what page(s) the part is used on.

Part Number	Page	Part Number	Page	Part Number	Page
001-05084-00	9	263-14301-03	5	280-14411-A1	5
001-14061-60	17	263-15505-03	5	280-15001-23	5
001-14062-50	25	263-15805-03	5	280-18001-03	11
001-14063-00	15	263-16002-A3	6	280-19001-03	5
001-16052-50	25	263-16006-03	5	280-23411-H3	9
001-17052-00	15	263-16101-A3	5	280-23412-H3	9
002-27050-00	15	263-19111-03	5	280-23413-H3	9
002-38060-00	11, 15	263-20811-11	9	280-23501-07	9
002-38080-00	11, 25	263-22601-30	9	280-23502-07	9
003-10080-00	15	263-22602-10	9	280-23503-17	9
003-10180-00	9	263-23301-33	9	280-31801-03	11
003-70140-00	19	263-25012-A3	9	280-32626-A1	13
004-31040-80	15	263-25013-A3	9	280-33005-H1	11
005-11060-01	15	263-25014-A3	9	280-35501-03	11
005-32054-01	9	263-32610-A1	13	280-35622-03	11
006-90308-00	19	263-32630-03	13	280-38001-03	11
010-50601-91	11	263-32640-01	13	280-52701-C1	17
010-50802-90	5	263-33301-A3	11	280-52801-A2	17
011-00600-20	11, 15, 17, 19	263-33401-H3	11	280-63602-A1	19
011-00600-30	5, 17, 19	263-33502-H3	11	280-65001-C1	23
011-00601-01	5, 23	263-35322-A1	11	280-65011-01	23
011-00601-40	25	263-35341-03	5	280-65025-A3	23
011-00801-00	25	263-35503-A3	11	280-65030-01	23
011-00802-20	5	263-35801-03	11	280-65037-03	23
011-01000-70	5	263-37002-A3	11	280-65038-03	23
011-50500-20	15	263-42201-A3	15	280-65050-A3	23
015-00400-10	25	263-42301-B3	15	280-66202-03	11
017-00601-10	11	263-42501-13	15	280-99001-17	6
018-01800-10	9	263-43312-01	15	X23-00801-50	15
018-60600-20	15	263-45004-11	6	X24-08900-30	19
021-11400-20	5	263-45027-00	15	X42-30600-30	11
024-01000-20	19	263-46214-03	6	X56-10900-30	23
031-00600-20	5	263-46215-A3	6	X60-04500-20	5
031-00801-10	5	263-47001-A3	15	X65-51000-10	25
040-11400-30	5	263-52612-A1	17	X65-91000-10	25
044-00800-10	5	263-52912-A2	17	X73-20057-60	17
044-03501-70	19	263-54101-H2	17	X84-14320-00	15
044-04200-30	5	263-55601-03	5	X85-10613-81	19
056-30000-10	25	263-62613-01	19	X85-10614-81	19
056-51000-50	5	263-63604-11	19	X85-10616-60	19
056-52100-20	9	263-63622-01	19		
056-60002-50	25	263-63904-H3	19		
065-01402-80	25	263-63905-H3	19		
073-20057-20	17	263-64002-01	19		
132-11AA1-10	5	263-64302-02	19		
206-75501-01	25	263-64414-A3	19		
20K-13002-11	5	263-65001-13	19		
20K-13102-11	5	263-65011-A3	19		
20K-32601-A0	13	263-65012-A3	19		
20K-42701-03	15	263-66001-03	19		
20K-42801-03	15	263-68501-03	19		
20K-51206-H2	17	263-68512-A3	11		
20K-62201-00	19	263-70504-J0	27		
20K-62401-10	21	263-71002-H3	25		
20K-73101-01	25	263-71902-A1	25		
20K-73102-11	25	263-73102-11	25		
20K-91702-03	11	263-73130-A1	25		
235-15421-03	5	263-76102-H1	5		
246-33611-03	11	263-77206-01	25		
246-33711-13	11	263-78202-11	25		
246-35501-03	11	263-79402-B1	25		
248-65801-10	19	267-35701-03	11		
261-43901-03	15	267-36102-03	11		
261-45201-13	15	270-35201-01	11		
261-45301-03	15	277-41902-03	6		
263-11004-41	5	279-55201-03	25		
263-14202-03	5	280-10102-11	5		

Part Description Index

The Part Description Index is an alphabetical index of all part descriptions included in this manual. The index shows what page(s) the part is used on.

A

ADAPTER CP.....23
AIR CLEANER AY.....13

B

BALL BEARING.....5
BLIND PLUG CP.....5
BLOWER HOUSING UN.....17
BOLT.....15
BOLT & WASHER AY.....15, 25
BOLT AND WASHER AY.....15, 17, 25
BOLT(PIVOT).....11
BRACKET CP, OIL COOLER.....23
BRACKET UN(SPD CTL).....15
BRACKET, RETURN SPRING.....15
BREATHER COVER.....5
BREATHER PIPE.....11
BREATHER PLATE CP.....5

C

CAM SHAFT.....11
CAP(VINYL).....11
CHARGE COIL CP.....25
CLAMP.....15, 25
CLAMP CP.....25
CLEANER ADAPTER.....11
CLEANER BASE CP.....13
CLEANER COVER.....13
CLEANER ELEMENT CP.....13
CLIP.....5, 9
COLLET-VALVE.....11
CONNECTING ROD AY.....9
COOLING BLOWER UN.....17
CRANK CASE CP.....5
CRANK SHAFT CP.....9
CYLINDER BAFFLE 1 CP.....17
CYLINDER BAFFLE 2 CP.....17
CYLINDER BAFFLE 3 UN.....17
CYLINDER BAFFLE 4 UN.....17
CYLINDER HEAD 1 CP.....5
CYLINDER HEAD 2 CP.....5

D

DOWEL PIN.....5

E

ELBOW ADAPTER 1.....23
EXHAUST VALVE.....11

F

FILTER,FUEL.....19
FLANGE BOLT.....5, 9, 11, 15, 17, 19, 23, 25
FLANGE NUT.....9, 11, 15, 25
FLYWHEEL CP.....25
FUEL PIPE 13 CP.....19
FUEL PUMP ASSY.....19

G

GASKET.....5
GASKET (M.B COVER).....6
GASKET 1 (CYL HEAD).....5
GASKET 2 (CYL HEAD).....5
GASKET CP (MUFFLER).....11
GASKET SET.....6
GASKET(ADAPTER).....11
GASKET(BREATHERPLATE).....5
GASKET(CARBURETOR).....11
GASKET(CLEANER).....11
GASKET(IN MANIFOLD).....11
GASKET(ROCKER COVER).....5
GASKET,ALUMINUM.....19
GAUGE CPOIL LEVEL.....19
GOVERNOR GEAR CP.....6
GOVERNOR LEVER.....15
GOVERNOR ROD.....15
GOVERNOR ROD SPRING.....15
GOVERNOR SHAFT.....15
GOVERNOR SLEEVE.....6
GOVERNOR SPRING.....15
GROMMET(PLUG CAP).....25
GUIDE CP.....19
GUIDE PLATE.....11

H

HOOK.....5
HOSE 1, OIL COOLER.....23
HOSE 2, OIL COOLER.....23
HOSE CLAMP.....11, 19, 23

I

IGNITION COIL CP.....25
INNER ROTOR.....19
INTAKE MANIFOLD CP.....11
INTAKE VALVE.....11

L

LABEL(FI).....17
LABEL(TRADE MARK).....11
LABEL(WARNING).....17

M

MAIN BEARING.....5
MAINBEARING COVER CP.....5

N

NUT.....11, 15

O

O RING.....19, 23
O-RING.....19
OIL COOLER CP.....23
OIL FILLER CAP CP.....19

OIL FILTER AY.....19
OIL PUMP COVER CP.....19
OIL PUMP FILTER UN.....19
OIL SEAL.....5, 19
OUTER ROTOR.....19

P

PIPE.....5
PISTON.....9
PISTON PIN.....9
PISTON RING SET.....9
PIVOT.....11
PLUG.....5
PLUG (PULSE PIPE HOLE).....5
PLUG TERMINAL.....25
PLUG(OIL RELIEF).....19
PUSH ROD CP.....11

R

REGULATOR CP 30A.....25
RETAINER PLATE.....5
RETURN SPRING.....15
RING GEAR.....25
ROCKER ARM.....11
ROCKER COVER.....5
RUBBER FOAM.....15
RUBBER PIPE.....19

S

SCREW.....15
SEAL-EXH VALVE.....5
SNAP PIN.....15
SPACER.....9, 15
SPARK PLUG.....25
SPARK PLUG CAP.....25
SPEED CONTROL LEVER.....15
SPRING RETAINER.....11
SPRING(RELIEF VALVE).....19
STARTING MOTOR AY.....27
STEEL BALL.....19
STUD.....5, 11
SWITCH OIL PRESSURE.....5

T

TAPPET.....11
TAPPING SCREW.....25
THROTTLE BODY AY.....21
THRUST BEARING.....6

V

VALVE GUIDE.....5
VALVE SPRING.....11

W

WASHER.....6, 9, 15
WING NUT.....13
WIRE AY(OIL PRE.SW.).....25

Part Description Index (continued)

WIRE BAND.....25
WIRING HARNESS.....25
WIRING HARNESS 1.....25
WIRING HARNESS 2.....25
WOODRUFF KEY.....9

This Page Intentionally Left Blank

PRINTED IN THE USA

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047

Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com