


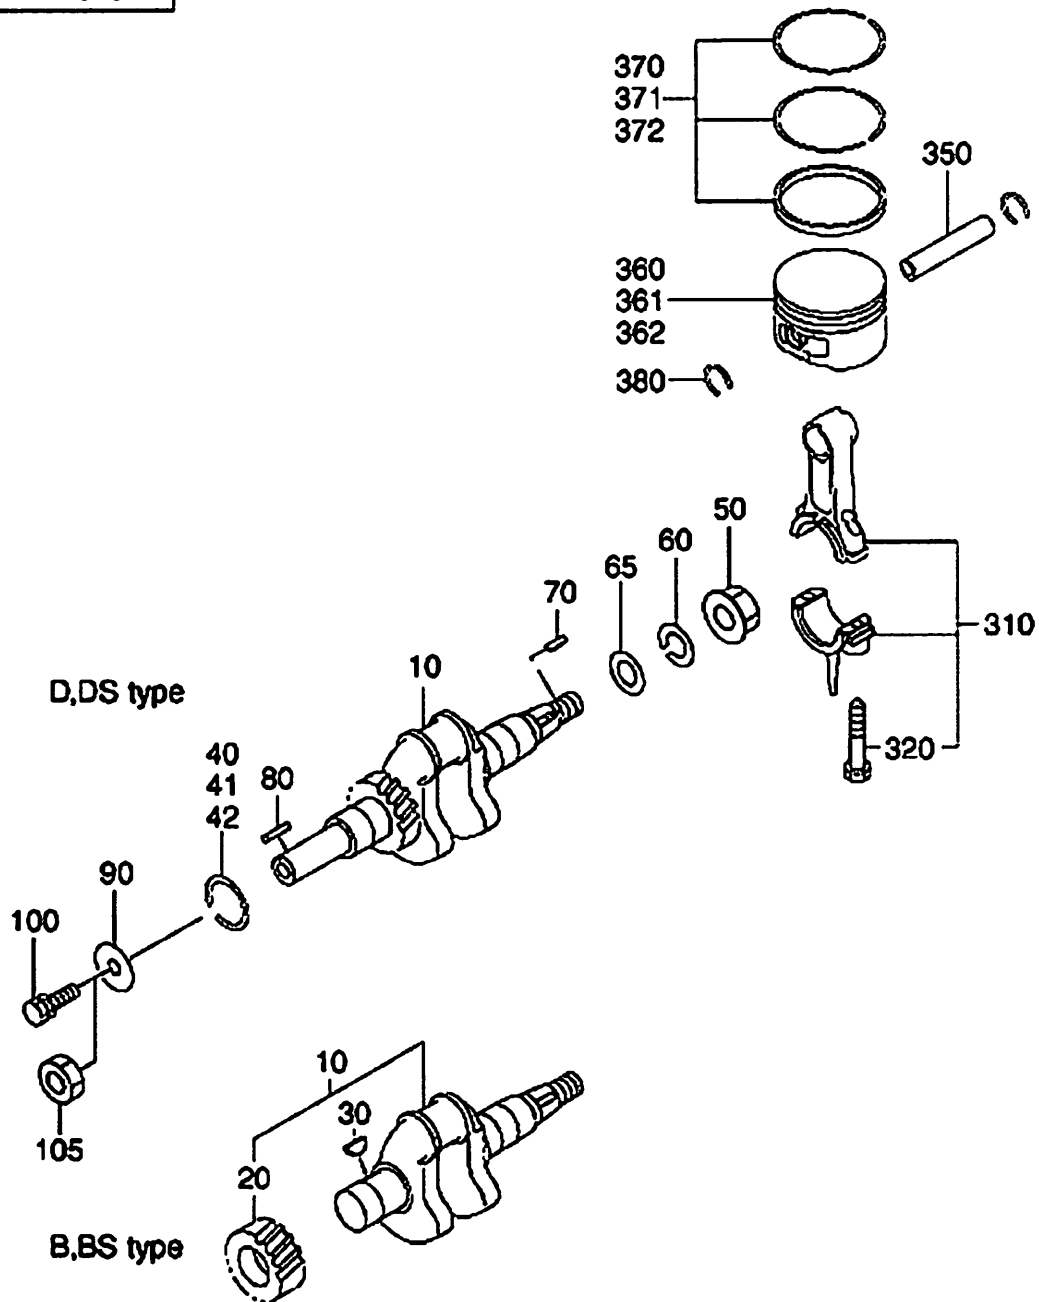

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	252-10301-31	CRANKCASE CP	1	Start Code: 4926. Remarks: RAMMER.	
10	252-10301-21	CRANKCASE CP	1	End Code: 4925. Remarks: RAMMER.	
20	237-14202-03	VALVE GUIDE	2	Remarks: 5.5DX9.5DX27L.	
26	277-16010-01	STEM SEAL	1	Start Code: 5437. Remarks: 5.5DX9.5DX15DX7.8B.	
26	237-16008-01	STEM SEAL	1	End Code: 5436. Remarks: 5.5DX9.5DX14DX7.5B.	
30	044-02501-50	OIL SEAL	1	Remarks: 25DX38DX7B.	
40	060-02501-00	BALL BEARING	1	Remarks: 25DX52DX15B.	
50	031-00600-20	DOWEL PIN	2	Remarks: 6DX14.5L.	
60	010-50804-80	STUD	2	Remarks: M8X1.25X35L.	
70	010-50601-31	STUD	1	Remarks: M6X1.0X33L.	
71	001-39066-00	STUD	1		
75	044-00800-10	OIL SEAL	1	Start Code: 4926. Remarks: 8DX14DX4B.	
80	040-11400-30	PLUG	2	Remarks: M14X1.5X20DX12L.	
90	021-11400-20	GASKET	2	Remarks: 14.1DX19DX2.3T.	
210	268-11109-01	MAIN BEARING COVER C	1		
220	044-02501-60	OIL SEAL	1	Remarks: 25DX41DX7B.	
230	060-02500-10	BALL BEARING	1	Remarks: 25DX52DX15B.	
250	227-45003-01	GOVERNOR GEAR CP	1	Remarks: 52DX26T N=25.	
260	205-41901-03	GOVERNOR SLEEVE	1	Remarks: 6DX9DX16DX26L.	
270	268-63603-01	OIL GAUGE CP	1	Start Code: 5125. Remarks: M18X1.5 L=76+18.	
270	268-63603-03	OIL GAUGE	1	Start Code: 4803. End Code: 5124.	
270	252-63601-01	OIL GAUGE CP	1	End Code: 4802.	
280	021-31600-20	GASKET	1	Start Code: 5125. Remarks: 16DX23DX1.2T RUBBER. Interchangable with X21-31600-20.	
280	021-31600-20	GASKET	1	End Code: 5124. Remarks: 16DX23DX1.2T RUBBER. Interchangable with X21-31600-20.	
294	252-17002-01	BRACKET(M.B.C) CP	1		
295	252-17001-01	SUPPORT(M.B.C)	1		
297	001-13081-60	BOLT & WASHER AY	1		
298	001-13081-60	BOLT & WASHER AY	2		
300	013-00602-00	BOLT AND WASHER AY	8	Remarks: M6X1.0X30L W/SW.	
610	268-13101-21	CYLINDER HEAD CP	1	Start Code: 5876. Remarks: RAMMER.	
		CYLINDER HEAD		Start Code: 5437. End Code: 5875. Remarks:	

610	268-13101-11	CP	1	RAMMER. Interchangeable with 268-13101-21.
610	268-13101-01	CYLINDER HEAD CP	1	Start Code: 4941. End Code: 5436. Remarks: RAMMER. Interchangeable with 268-13101-11.
610	268-13003-11	CYLINDER HEAD CP	1	Start Code: 4825. End Code: 4940. Remarks: RAMMER. Interchangeable with 268-13101-01.
610	268-13101-01	CYLINDER HEAD CP	1	Start Code: 4625. End Code: 4824. Remarks: RAMMER. Interchangeable with 268-13101-11.
610	268-13003-01	CYLINDER HEAD CP	1	End Code: 4624.
620	253-15001-33	GASKET (HEAD)	1	Start Code: 6301. Remarks: T=0.2.
620	253-15001-23	GASKET (HEAD)	1	End Code: 6300. Remarks: T=0.3. Interchangeable with 253-15001-33.
630	011-00801-00	FLANGE BOLT	4	Remarks: M8X1.25X17DX65L.
675	056-60002-50	CLAMP	1	Remarks: 6.5DX10BX95LX0.6T.
677	011-00600-20	FLANGE BOLT	1	M6X1.0X12
680	252-15502-03	ROCKER COVER	1	
690	269-16004-03	GASKET (ROCKER COVER)	2	Remarks: T=2.0. Interchangeable with 269- 16007-03.
700	031-00600-20	DOWEL PIN	2	Remarks: 6DX14.5L.
710	011-00601-70	FLANGE BOLT	4	Remarks: M6X1.0X13DX40L.
720	252-15601-20	SPACER (BREATHING) AY	1	
721	252-15601-13	SPACER (BREATHING)	1	
722	252-16001-03	LEAF VALVE	1	
723	252-16101-03	RETAINER PLATE	1	
724	252-14401-23	PLATE	1	
725	011-00601-50	FLANGE BOLT	2	Remarks: M6X1.0X14DX10L.
726	004-35061-20	SCREW & WASHER AY	1	
830	268-16201-03	GASKET (BREATHING CVR)	1	Remarks: T=1.2.
860	001-13061-60	BOLT AND WASHER AY	2	
960	268-99002-07	GASKET SET	1	


FIG. 200

EH122

268020001W00

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	268-21902-11	CRANKSHAFT CP	1	Remarks: L=237 25DX1/5 TAPER.	
40	023-02501-10	SPACER	1	Remarks: 25.3DX32DX0.6T.	
41	023-02501-20	SPACER	1	Remarks: 25.3DX32DX0.8T.	
42	023-02501-30	SPACER	1	Remarks: 25.3DX32DX1.0T.	
50	002-18140-00	NUT	1		
60	003-20140-00	SPRING WASHER	1		
70	032-30300-10	WOODRUFF KEY	1	M3X6X16	
310	252-22501-10	CONNECTING ROD ASSY	1	Remarks: 73CDX23B 26D-13D.	
320	236-23001-03	CONNECTING ROD BOLT	2	Remarks: M6X1.0X14DX34L.	
350	268-23301-03	PISTON PIN	1	Remarks: 13DX8DX44L.	
360	268-23401-03	PISTON	1	Remarks: STD (60DX35H).	
370	252-23501-17	PISTON RING SET	1	Remarks: STD (60D).	
371	252-23502-17	PISTON RING SET	1	Remarks: 0.25 O.S.(60D).	
372	252-23503-17	PISTON RING SET	1	Remarks: 0.50 O.S.(60D).	
380	215-25004-03	CLIP	2	Remarks: 14.1DX1.2D.	



FIG. 300

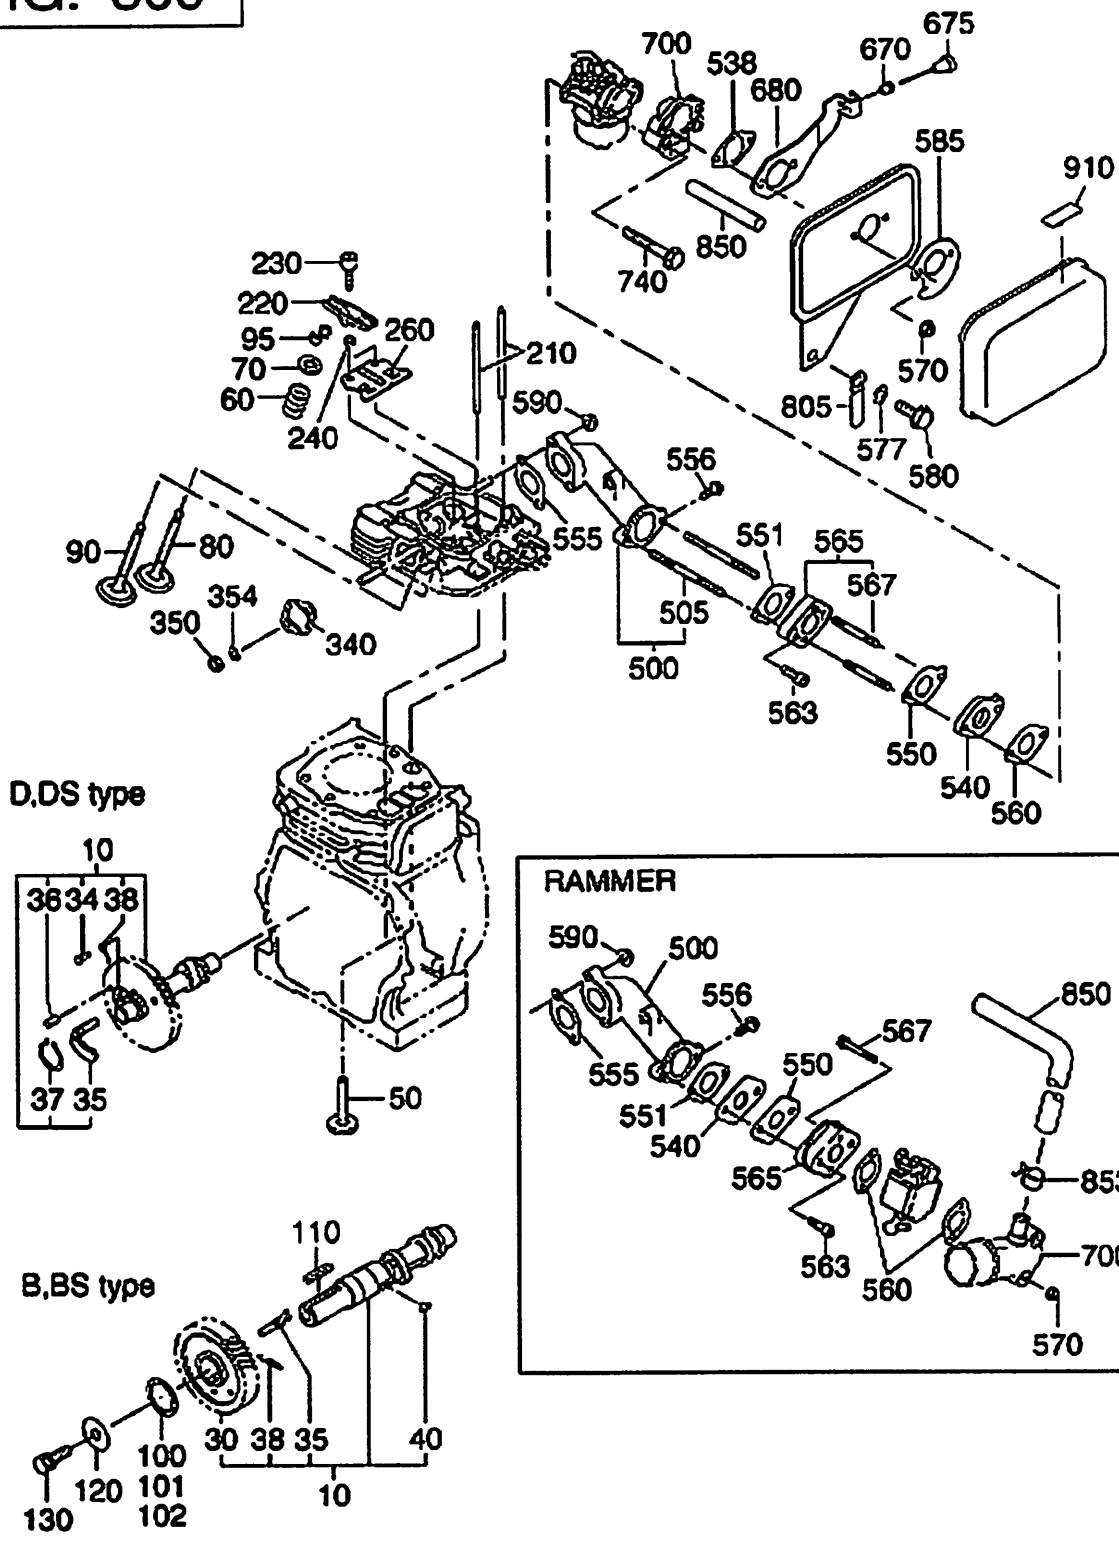

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	253-31701-11	CAMSHAFT CP	1	Remarks: L=116 89DX8B N=44.	
34	227-38601-23	PIN(SPRING)	1	Remarks: 3.8DX7.5DX14L.	
35	227-36401-13	RELEASE LEVER	1		
36	005-19041-00	SPRING PIN	1		
37	003-15220-00	SNAPRING (OUTER)	1		
38	227-38701-03	RETURN SPRING	1	Remarks: 5DX0.7DX5.5L N=6.8.	
50	239-33301-13	TAPPET	2	Remarks: 26DX8DX48L.	
60	253-33601-03	VALVE SPRING	2	Remarks: 19.1DX2.3DX27L N=5.5.	
70	269-33701-03	SPRING RETAINER	2	Start Code: 5478.	
70	132-09KA0-40	RETAINER- VALVE SPR	2	End Code: 5477. Interchangeable with 269-33701-03.	
80	268-33401-03	INTAKE VALVE	1	Remarks: 21DX5.5DX66.8L.	
90	268-33501-03	EXHAUST VALVE	1	Remarks: 19DX5.5DX66.8L.	
95	132-10KA0-31	VALVE COLLET	4		
210	268-35301-03	PUSH ROD	2	Remarks: 5.6DX118.5L.	
220	269-36001-03	ROCKER ARM	2	Start Code: 4758. Interchangeable with 269-36002-03.	
220	261-36001-A3	ROCKER ARM	2	End Code: 4757. Interchangeable with 269-36001-03.	
230	269-35801-03	BOLT (PIVOT)	2	Remarks: M6X0.75X19L SOCKET H.	
240	017-00600-90	NUT	2	Remarks: M6X0.75X5.1H.	
260	269-36501-03	GUIDE PLATE	1		
340	253-35201-03	GASKET (MUFFLER)	2	Remarks: T=0.2.	
350	017-60800-20	SELF LOCK NUT	2	Start Code: 5027. Remarks: M8X1.25X13H.	
350	017-00800-30	NUT	2	Start Code: 4618. End Code: 5026. Remarks: M8X1.25X6.5H.	
350	017-60800-20	SELF LOCK NUT	2	Start Code: 4607. End Code: 4617. Remarks: M8X1.25X13H.	
350	017-00800-30	NUT	2	End Code: 4606. Remarks: M8X1.25X6.5H.	
354	020-30800-10	SPRING WASHER	2	Start Code: 4618. End Code: 5026. Remarks: 8.2DX15.4DX2T.	
500	268-33003-11	INTAKE PIPE CP	1	Start Code: 4568.	
500	268-33003-01	INTAKE PIPE CP	1	End Code: 4567.	
505	010-50602-30	STUD	2	Remarks: M6X1.0X80L.	
540	106-32912-03	INSULATOR	1	Remarks: T=5 20D 6.5DX42P.	
555	282-35901-03	GASKET (INSULATOR)	1	Start Code: 5553. Remarks: T=0.5 25D 6.5DX42P.	
555	227-35901-03	GASKET (INSULATOR)	1	End Code: 5552. Remarks: T=0.3 25D 6.5DX42P. Interchangeable with 282-35901-	

03.

556	001-14064-00	BOLT AND WASHER AY	1	
560	236-35903-03	GASKET 2 (INSULATOR)	2	Remarks: T=0.3 19.5D 6.5DX42P.
570	017-60600-20	SELF LOCK NUT	2	Remarks: M6X1.0X13DX6.9H.
577	020-00800-80	WASHER	1	Remarks: 8.4DX17DX3.2T.
580	001-13081-80	BOLT AND WASHER AY	1	
585	252-36502-03	PLATE(AIR CLEANER)	1	
590	002-38060-00	FLANGE NUT	2	M6X1.0
850	252-18002-03	RUBBER PIPE	1	Remarks: 8DX11D FORMED.

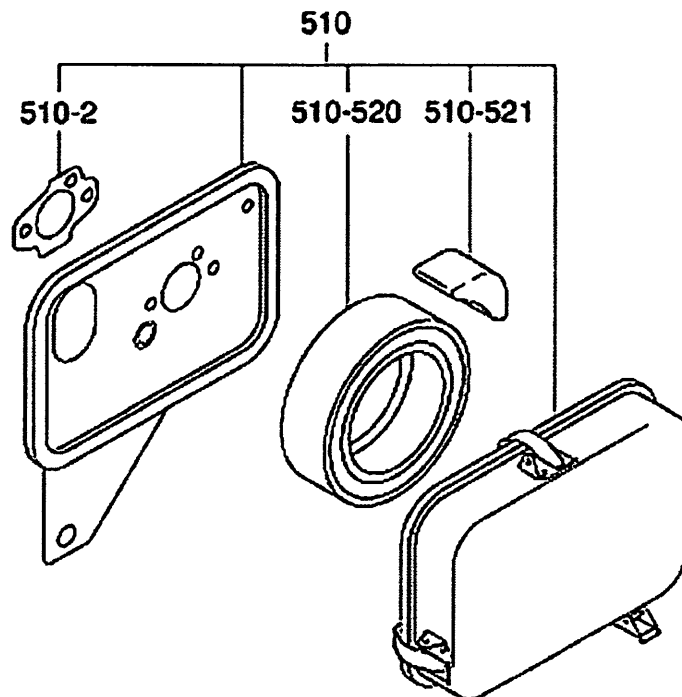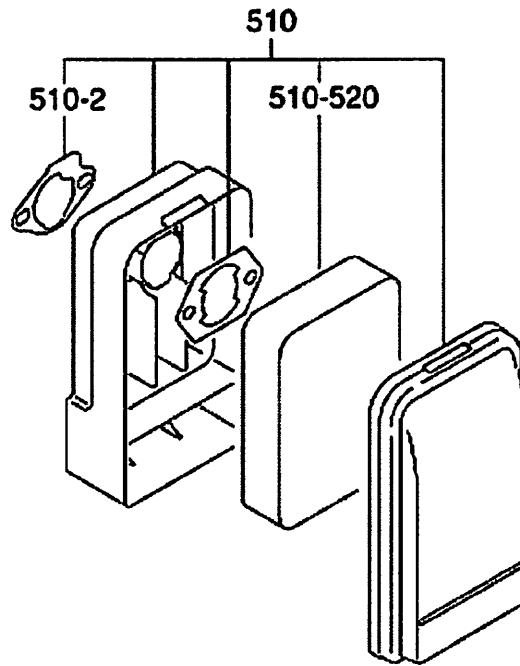
FIG. 315

EH122

268031500W01

Ref #	Part #	Description	Qty	Context Note	Foot Note
510	252-32712-10	AIR CLEANER AY	1		
2	226-32720-08	GASKET(AIR CLEANER)	1		
520	252-32601-07	ELEMENT SET	1		
521	252-32611-08	ELEMENT	1		

FIG. 331

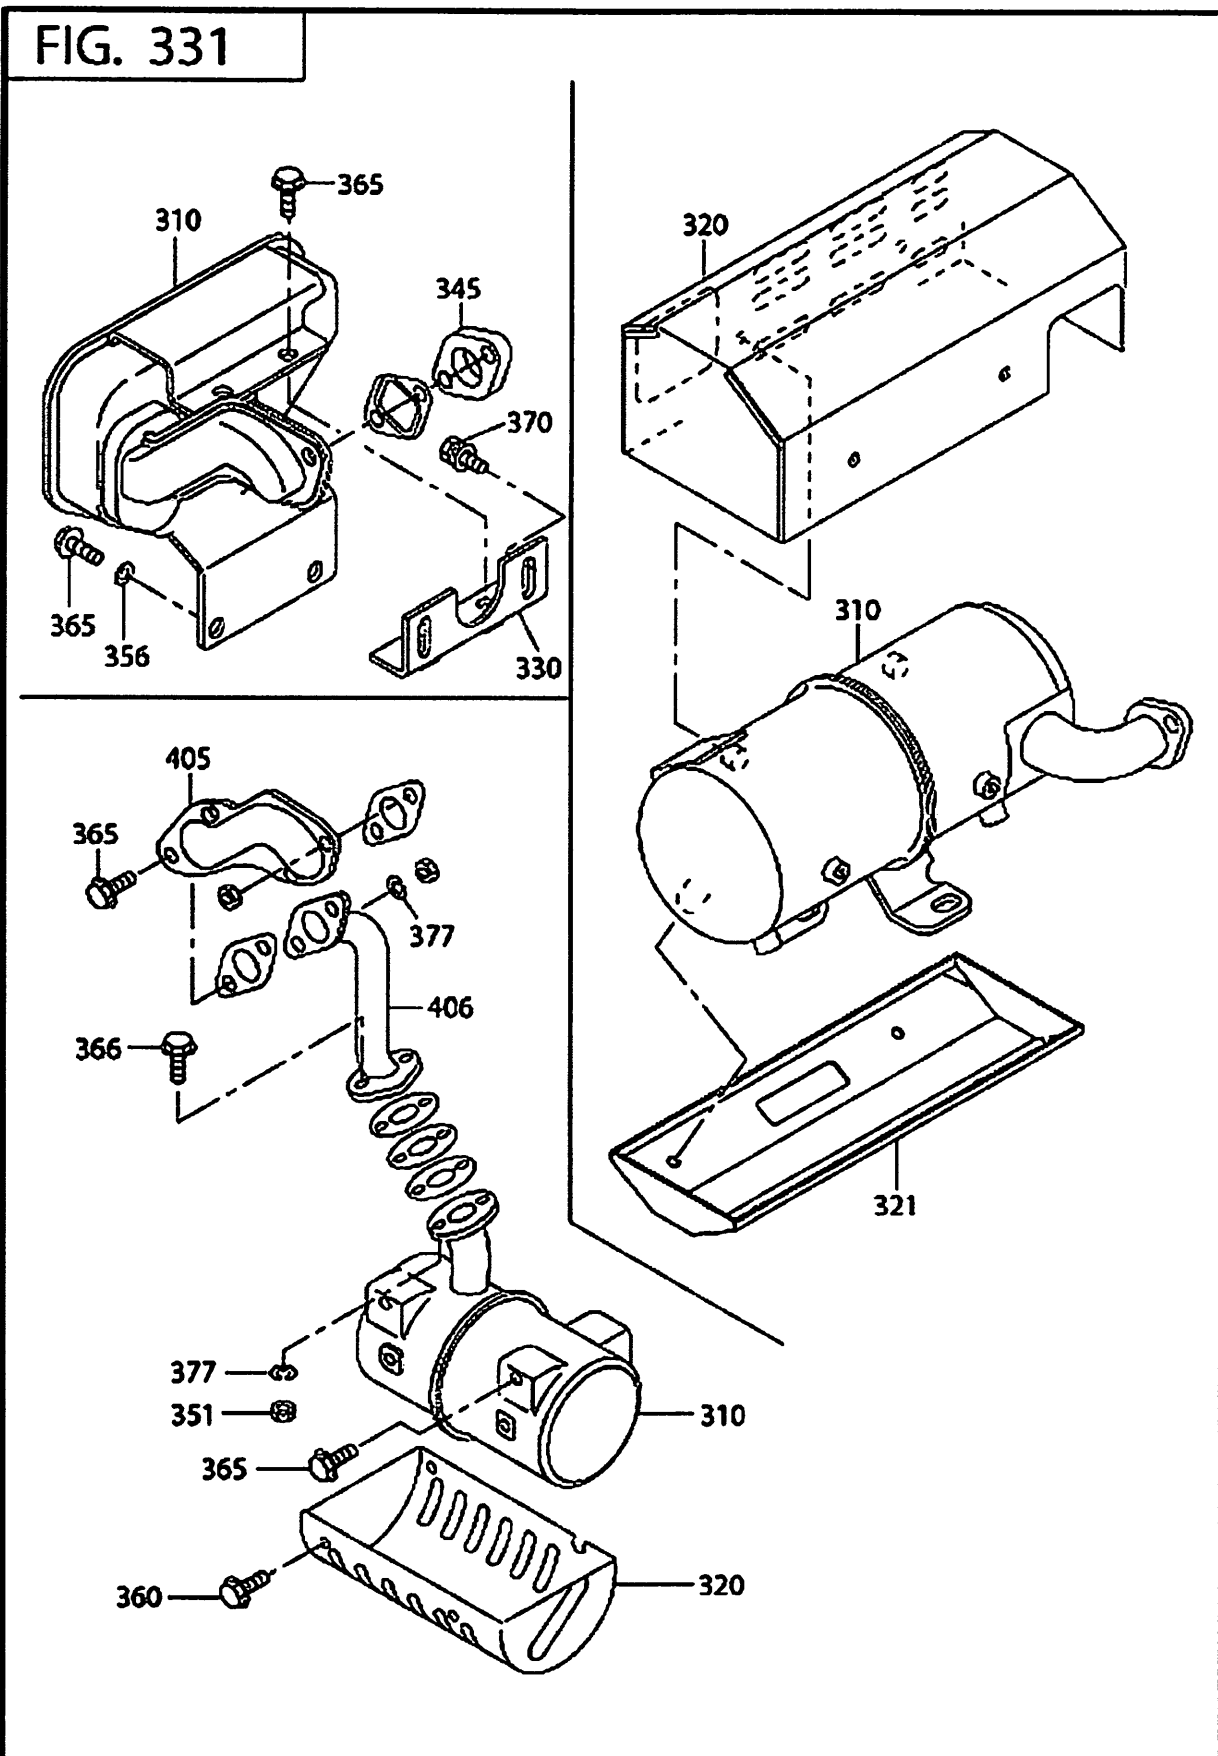


EH122

268033100W04

Ref #	Part #	Description	Qty	Context Note	Foot Note
310	252-30401-11	MUFFLER CP	1		
330	252-37001-11	BRACKET CP	1		
345	252-36501-23	SPACER (EXHAUST)	1	Start Code: 5364. Remarks: T=9.	
345	252-36501-13	SPACER (EXHAUST)	1	Start Code: 5336. End Code: 5363. Remarks: T=9.	
345	252-36501-03	SPACER (EXHAUST)	1	End Code: 5335. Remarks: T=9.	
356	003-11080-00	WASHER (M8.5X18)	2		End Code: 5256
365	001-13081-60	BOLT & WASHER AY	2	Start Code: 5257.	
365	001-13081-60	BOLT & WASHER AY	4	End Code: 5256.	
366	001-14081-60	BOLT AND WASHER ASSY (M8X16)	2		Start Code: 5257


FIG. 420

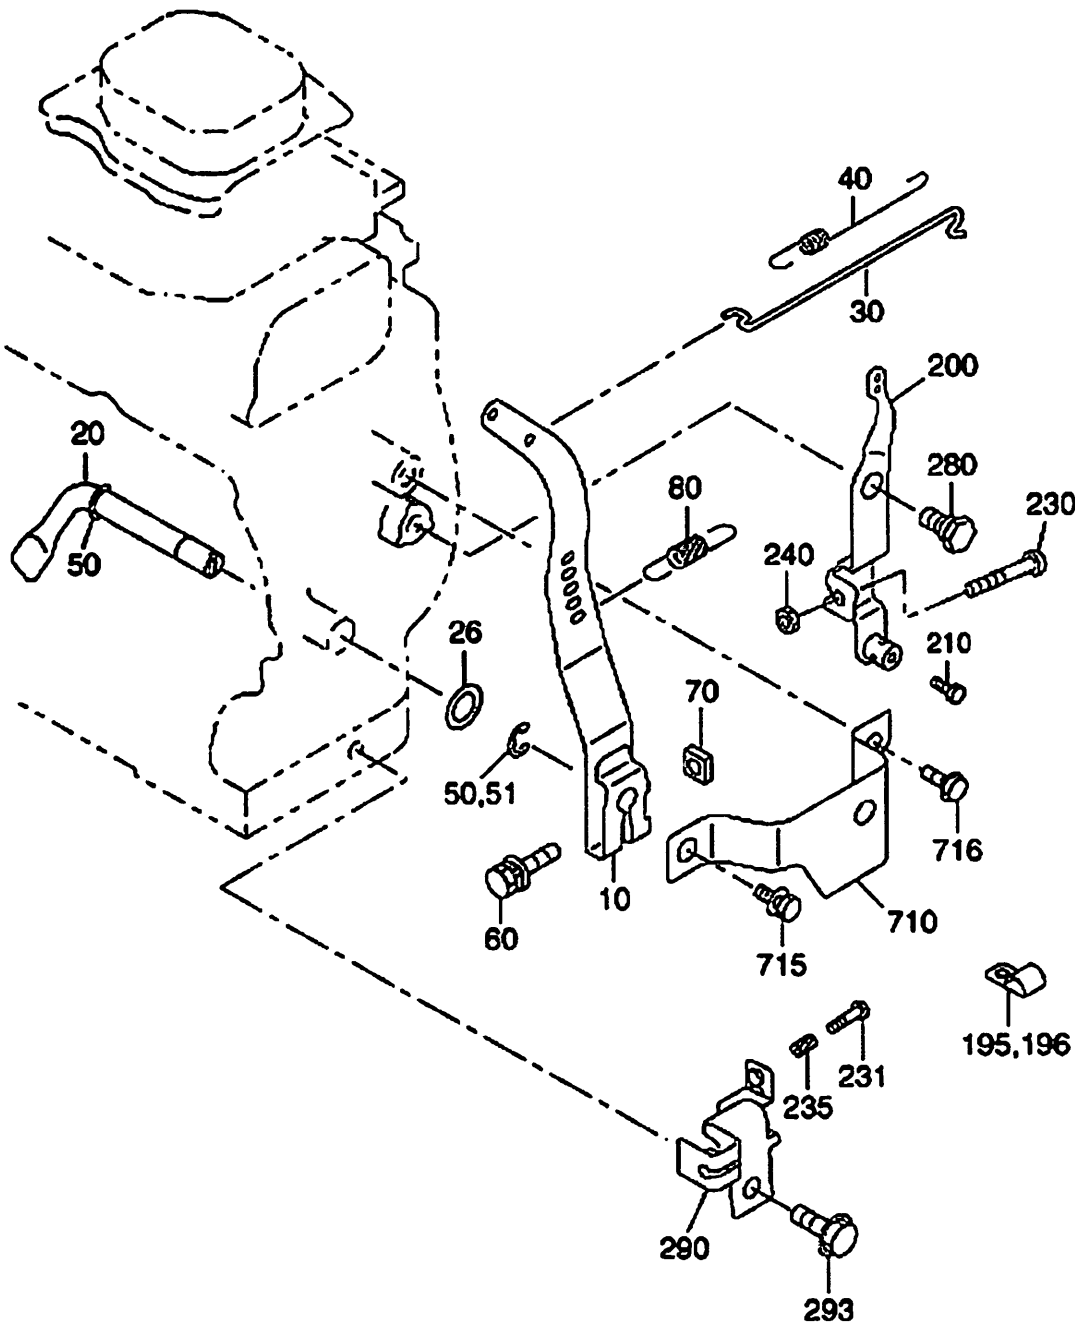

EH122

268042001W00

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	252-42303-03	GOVERNOR LEVER	1		
20	227-42201-03	GOVERNOR SHAFT	1	Start Code: 5274.	
20	227-42201-03	GOVERNOR SHAFT	1	Start Code: 5227. End Code: 5273.	
20	227-42201-03	GOVERNOR SHAFT	1	End Code: 5226.	
26	003-11080-00	WASHER (M8.5X18)	1		Start Code: 4926
30	254-42701-01	GOVERNOR ROD CP	1	Start Code: 5227.	
30	254-42701-01	GOVERNOR ROD CP	1	End Code: 5226.	
40	254-42801-03	ROD SPRING	1	Start Code: 5227. Remarks: 6DX0.5DX102L N=13.	
40	254-42801-03	ROD SPRING	1	End Code: 5226. Remarks: 6DX0.5DX102L N=13.	
50	003-13060-00	CLIP	2	Start Code: 5274.	
50	003-13060-00	CLIP	2	Start Code: 5227. End Code: 5273.	
50	003-13060-00	CLIP	2	End Code: 5226.	
60	001-14063-00	BOLT & WASHER ASSY (M6X30)	1		
70	018-60600-20	SQUARE NUT	1	M6X1.0X4.9	
80	252-42503-23	GOVERNOR SPRING	1	Remarks: 6.8DX0.9DX47L N=10.5.	
200	252-43402-30	SPEED CONTROL AY	1	Start Code: 5447.	
200	252-43402-20	SPEED CONTROL AY	1	End Code: 5446. Interchangeable with 252-43402-30.	
210	011-60400-30	BOLT	1	Remarks: M4X0.7X8L.	
230	004-31052-50	SCREW,PANHEAD	1		
231	004-31042-50	SCREW	1		
235	268-45001-13	CONTROL SPRING	1	Start Code: 5274. Remarks: 5.3DX0.8DX14.5L N=7.	
235	268-45001-03	CONTROL SPRING	1	End Code: 5273. Remarks: 5.3DX0.8DX14.5L N=7. Interchangeable with 268-45001-13.	
240	002-17050-00	NUT	1	M5X0.8	
280	226-43101-01	LINK PIVOT CP	1		
290	252-44202-13	WIRE BRACKET	1		
293	011-00600-30	FLANGE BOLT	1	M6X1.0X14	
710	252-42801-11	PROTECTOR(GOV) CP	1		
715	001-13081-60	BOLT & WASHER AY	1		
716	011-00600-30	FLANGE BOLT	1	M6X1.0X14	

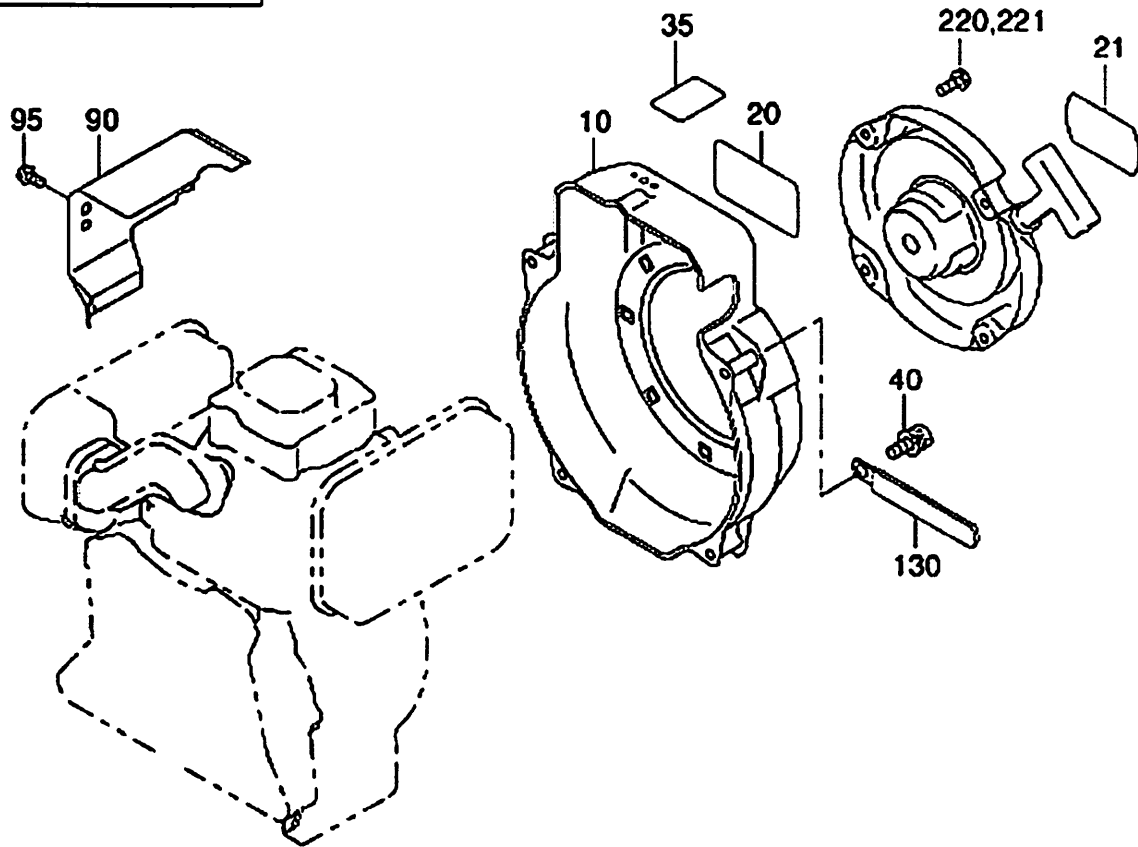
FIG. 500

EH122

268050000W01

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	252-51654-21	BLOWER HOUSING CP 2	1	Remarks: VIBRATOR D SILVER.	
20	268-91703-03	LABEL(TRADE MARK)	1	Remarks: 50X95.	
35	268-91860-03	LABEL(ENGINE NAME)	1	End Code: 5036. Remarks: 38X34 ENGLISH.	
40	001-14065-50	BOLT AND WASHER AY	4		
90	268-52703-03	HEAD COVER	1	Start Code: 6026.	
90	252-52702-23	HEAD COVER	1		
95	011-00601-40	FLANGE BOLT	2	Remarks: M6X1.0X14DX18L.	
220	011-00600-10	FLANGE BOLT	4	M6X1.10X8	


FIG. 520

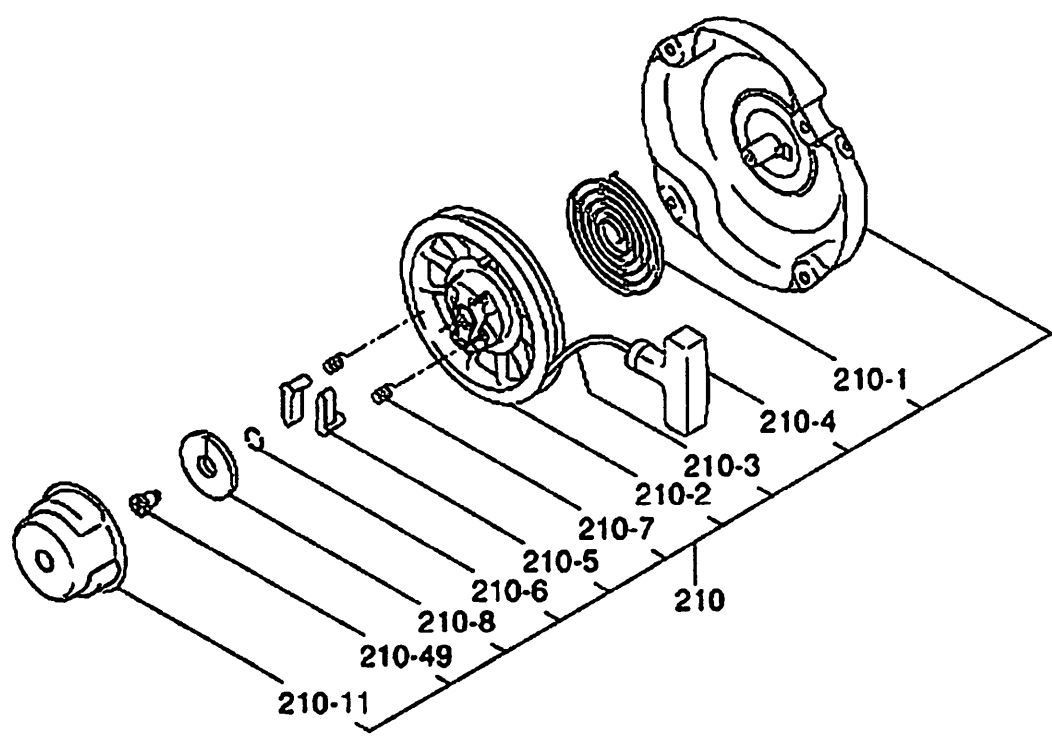

EH122


268052000W01

Ref #	Part #	Description	Qty	Context Note	Foot Note
210	268-50201-30	RECOIL STARTER AY	1	Start Code: 5814. Remarks: D 160PD.	
210	268-50201-20	RECOIL STARTER AY	1	Start Code: 5427. End Code: 5813. Remarks: D 160PD. Interchangeable with 268-50201-30.	
210	268-50201-10	RECOIL STARTER AY	1	Start Code: 5058. End Code: 5426.	
210	268-50201-00	RECOIL STARTER AY	1	End Code: 5057.	
210	270-50115-08	SPIRAL SPRING	1		
210	269-50120-08	REEL	1		
210	282-50111-18	STARTER ROPE	1	Start Code: 5814.	
210	269-50112-08	STARTER ROPE	1	Start Code: 5427. End Code: 5813.	
210	106-50111-08	STARTER ROPE,HI-JUMP	1	End Code: 5426.	
210	261-50100-08	STARTER KNOB	1		
210	270-50125-08	RATCHET	2		
210	227-50131-08	FRICTION SPRING	1		
210	227-50135-08	RETURN SPRING	2	Start Code: 5814.	
210	270-50261-08	RATCHET GUIDE	1		
210	268-50145-18	STARTER PULLEY	1	Start Code: 5058.	
210	268-50145-08	STARTER PULLEY	1	End Code: 5057.	
210	227-50152-08	SET SCREW	1		

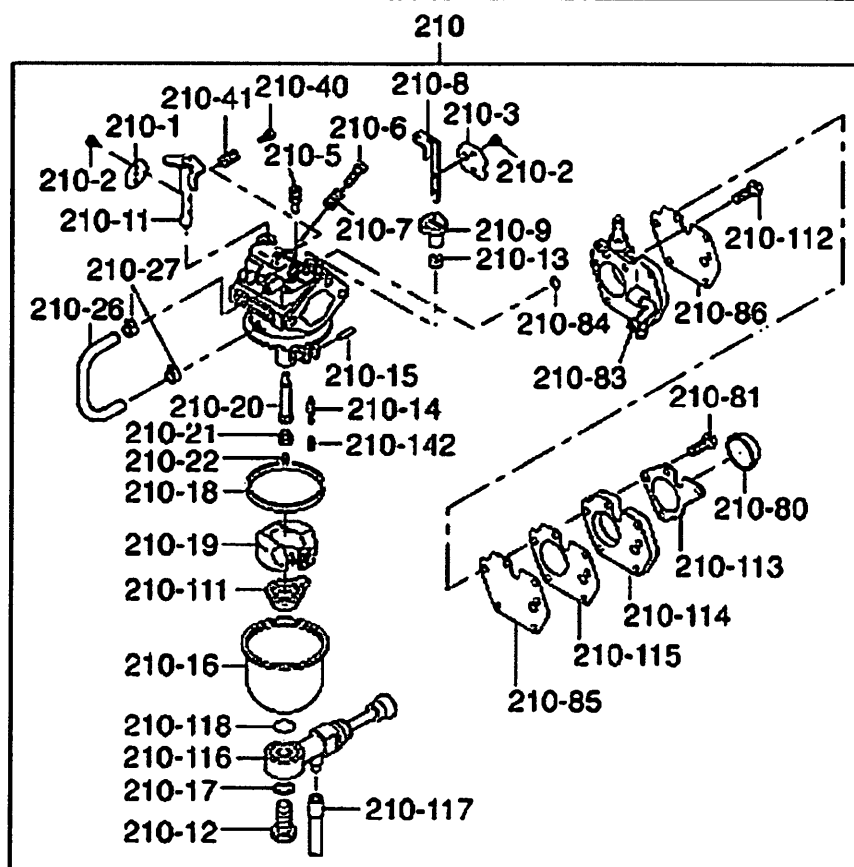[illegible]

268064000W01


Ref #	Part #	Description	Qty	Context Note	Foot Note
210-79	236-62541-08	PACKING	1		
210-142	236-62445-08	SPRING	1		
210-190	161-62400-08	MAIN JET	1	End Code: 6178.	
210-0	252-62551-20	CARBURETOR AY	1	Start Code: 6179.	
210-0	252-62551-10	CARBURETOR AY	1	Start Code: 5784. End Code: 6178.	
210-0	252-62551-00	CARBURETOR AY	1	End Code: 5783.	
210-1	252-62535-08	THROTTLE VALVE	1	Remarks: #180.	
210-2	237-62451-08	SCREW	1	Start Code: 6179.	
210-2	237-62451-08	SCREW	4	End Code: 6178.	
210-3	236-62528-08	CHOKE VALVE	1		
210-5	252-62421-08	PILOT JET	1	Start Code: 5784.	
210-5	216-62303-08	PILOT JET	1	End Code: 5783.	
210-8	252-62521-08	CHOK SHAFT AY	1		
210-11	161-62530-08	SHAFT AY (THROTTLE)	1		
210-12	236-62451-08	BOLT	1		
210-14	161-62352-08	NEEDLE	1		
210-15	214-62515-08	PIN	1		
210-16	236-62552-08	FLOAT CHAMBERBODY AY	1		
210-17	236-62450-08	PACKING	1		
210-18	236-62540-08	PACKING	1		
210-19	236-62505-08	FLOAT	1		
210-20	252-62440-08	MAIN NOZZLE	1		
210-21	235-62425-08	GUIDE HOLDER	1		
210-22	252-62405-08	MAIN JET	1	Start Code: 5784. Remarks: #68.8.	
210-22	252-62402-08	MAIN JET	1	End Code: 5783. Remarks: #68.8.	
210-26	161-62353-08	HOSE	1		
210-28	236-62350-08	SCREW	1		
210-40	246-62435-08	ADJUST SCREW	1		
210-41	230-62446-08	SPRING	1		

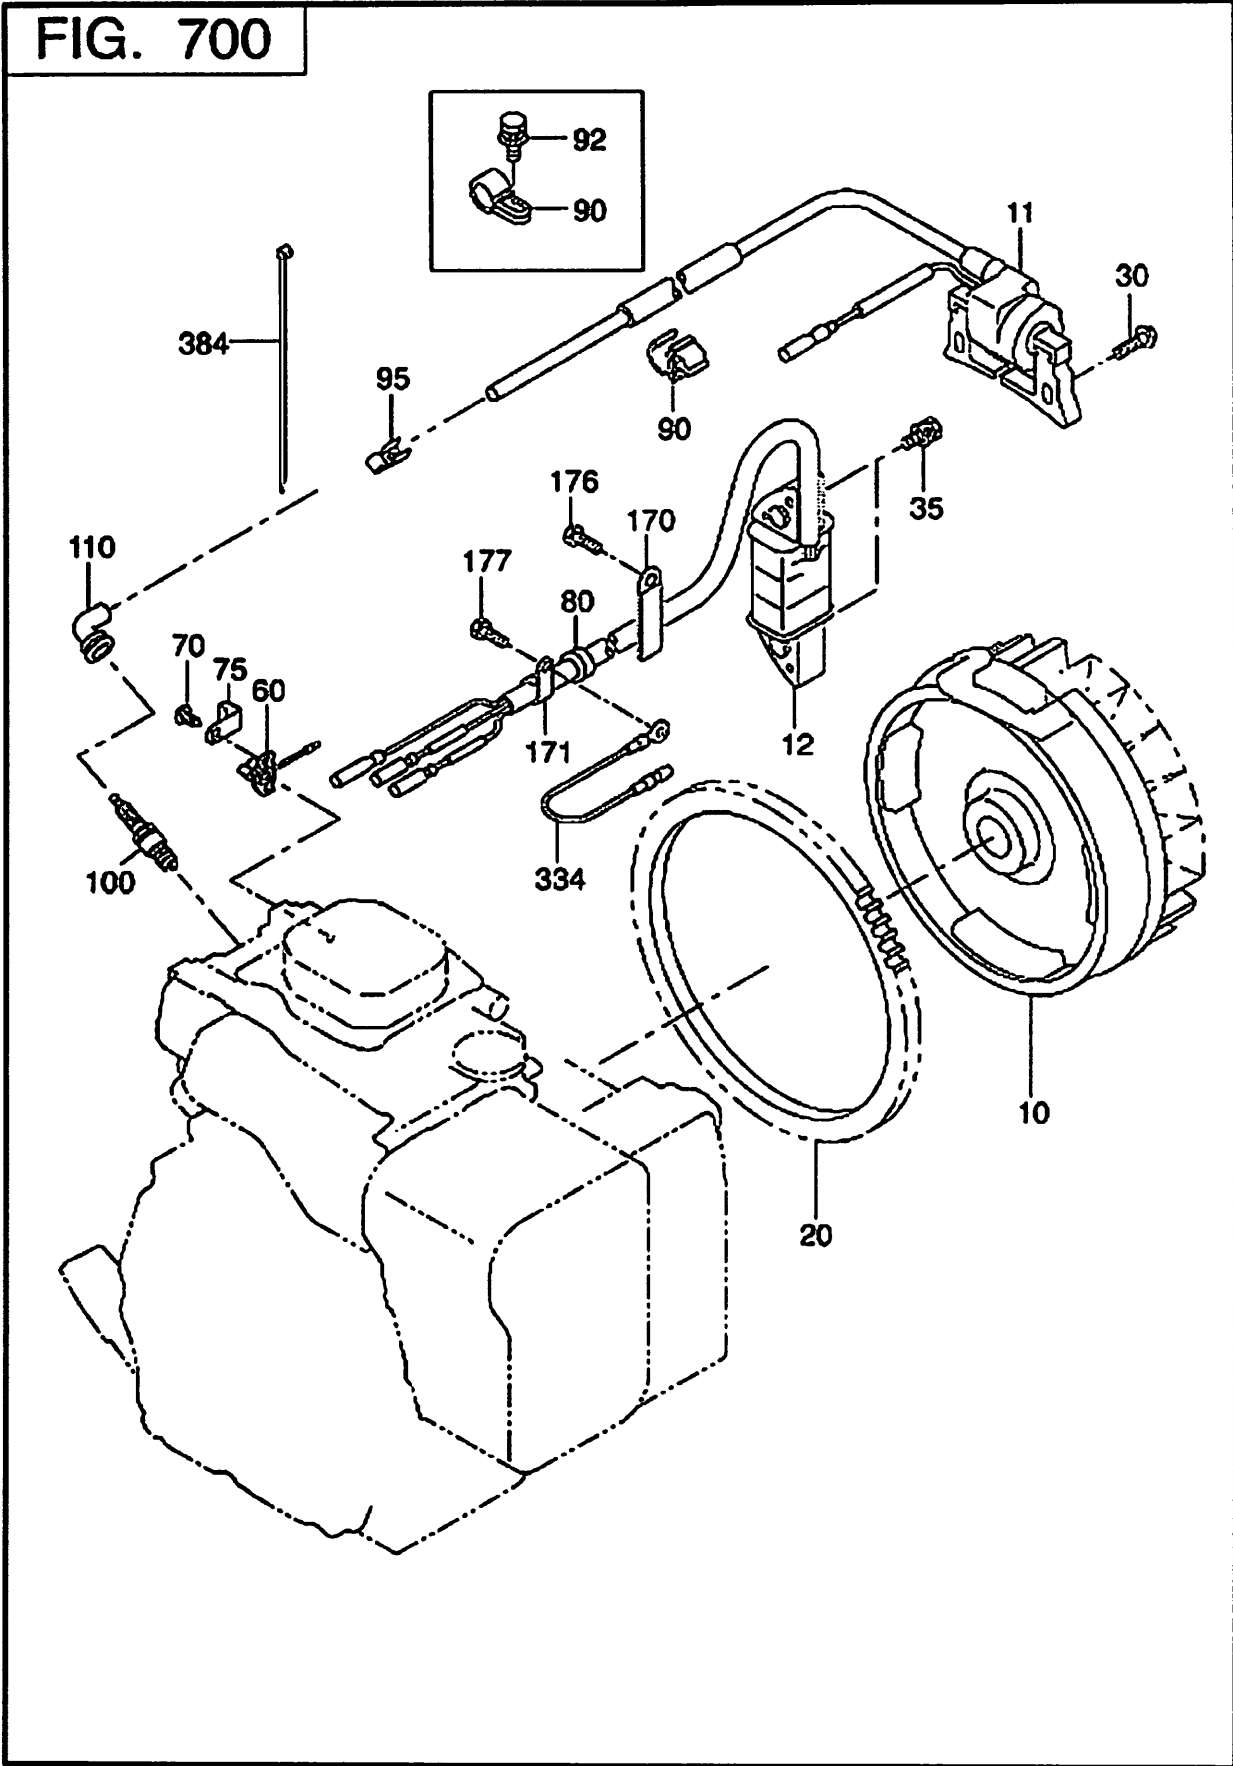

EH122

268070000W01

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	268-79332-01	FLYWHEEL CP	1	Remarks: MARK MF5210.	
11	269-79430-11	IGNITION COIL CP	1	Start Code: 5130. Remarks: MARK BM3745 A.	
11	269-79430-01	IGNITION COIL CP	1	End Code: 5129. Remarks: MARK BM3745. Interchangable with 269-79430-11.	
30	001-14062-50	BOLT AND WASHER ASSY	2	M6X1.0X25	
60	066-00003-71	SWITCH AY	1		
70	015-00400-90	TAPPING SCREW	2	M4X12	
75	056-60300-10	CLAMP	1	Remarks: 3.5DXM4X8BX0.8T.	
90	056-60002-50	CLAMP	1	Remarks: 6.5DX10BX95LX0.6T.	
95	065-50001-00	PLUG TERMINAL	1		
100	065-01405-80	SPARK PLUG	1	Remarks: NGK BR6ES.	
110	230-75101-13	SPARK PLUG CAP	1		

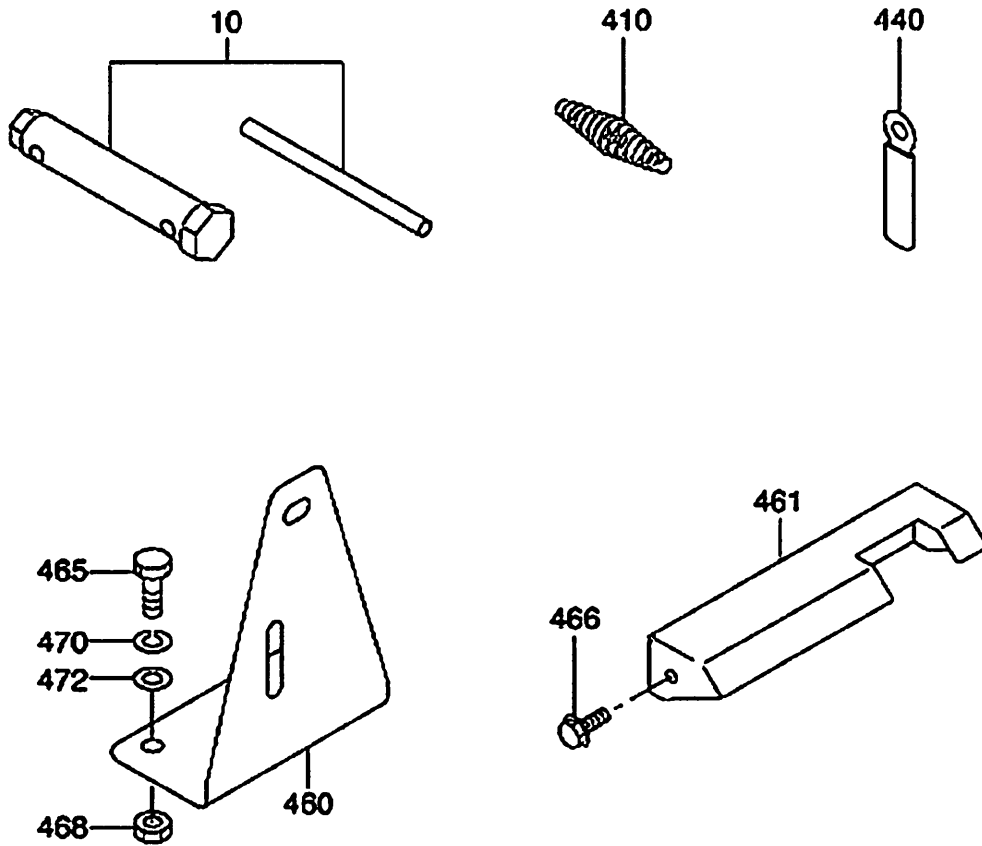FIG. 900

EH122

268090000W01

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	227-90301-10	ACCESSORY TOOL KIT	1		
410	083-00000-10	COIL SPRING	1		
460	268-14501-13	COVER(A)	1	Start Code: 4810.	
460	268-14501-03	COVER(A)	1	End Code: 4809.	
461	268-14502-01	COVER(B) CP	1		
465	001-65083-50	BOLT	2		
466	011-00600-30	FLANGE BOLT	2	M6X1.0X14	
468	002-17080-00	NUT	2		
470	003-20080-00	SPRING WASHER	2		
472	003-10080-00	WASHER (M8)	2		