

OEM PARTS MANUAL

Model

EC025GR6012

**Amida
ENGINE**

PUB-EP1381
Rev. 7/99

MANUAL LAYOUT

① — SECTION 6 FUEL GROUP ④

② — FIG. 600

① — SECTION 6 FUEL GROUP

REF.	PART NO.	DESCRIPTION	QTY	REMARKS	FROM-TO	FIG.
10	267-60103-01	FUEL TANK CP	1	YD, YS TYPE, BLACK	2101-	600
	267-60101-01	FUEL TANK CP	1	YELLOW	-2100	600
27	073-20039-00	LABEL, WARNING	1	YD, YS TYPE		600
30	043-04300-15	FUEL TANK CAP CP	1			600
31	267-95201-03	LABEL, EMISSION	1	YD, YS TYPE		600
40	064-13600-10	FUEL FILTER	1			600
50	064-20021-01	FUEL STRAINER AY	1			600
-1	064-20002-20	FILTER	1			600
-2	064-20002-30	GASKET	1			600
-3	064-20019-10	CUP	1			600
-4	064-20003-20	NUT	1			600


- SECTION NAME** Parts are broadly classified according to their functions. Refer to the Group Index (table of contents) for respective section name.
- FIG. No.** The FIG. number indexes the reference and part numbers to the illustration. Figure numbers that vary only in the tens place (i.e.: 700 and 710) are in a group of the same section (i.e.: Electrical Device Group).
- REF. No .** The Reference number identifies the part illustration with the corresponding part number in the part list.
- SUBASSEMBLY** SUBASSEMBLY parts of part assembly are listed below the assembly part. The subassembly part reference number is indicated by the number led by "-" such as "-1", "-2".
- PART NUMBER** It is the number assigned for sales unit. Use the PART No. when making an order.
- DESCRIPTION** It is designation of the part.
- QTY.** Quantity of each part used for each product.
- REMARKS** This gives a distinctive feature and/or a supplementary comment for the type, the specification, and the part concerned. It also shows part number(s) interchangeable for the part.
- FROM-TO** This section shows the CODE No. to indicate the history of progress in which improved parts have been introduced in the product. The FROM-TO CODE No. helps to identify PART No. being employed in the product concerned. See the examples below:
 - The part is used in the product irrespective of CODE No.
 - 2101- The part is used in the products with CODE No. of 2101 and after this number.
 - 2100 The part is used in the products with CODE No. of 2100 and before this number.

GROUP INDEX

Group Name	Page
CRANKCASE & CYLINDER GROUP	4
CRANKSHAFT GROUP	6
INTAKE and EXHAUST GROUP	8
COOLING and STARTING GROUP	10
FUEL GROUP	12
MAGNETO GROUP	14
CLUTCH GROUP	16
SHIP LOOSE ITEMS	18

INDEX OF DESCRIPTION SYMBOLS			
SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
AY	ASSEMBLY	P=	PITCH (in mm)
CP	COMPLETE	P.T.O. (PTO)	POWER TAKE OFF
EX	EXPORT (from Japan)	REF.	REFERENCE
FIG.	FIGURE	R.H. (RH)	RIGHT HAND SIDE
FR.	FRONT	RR.	REAR
"	INCH	STD.	STANDARD
INCL.	INCLUDE	SW	SWITCH
~L	LITER	T=	THICKNESS (in mm)
L=	LENGTH (in. mm)	UN	UNIT
L.H. (LH)	LEFT-HAND SIDE	U.S.	UNDER SIZE
MECH	MECHANICAL	~V	VOLTAGE
NO (NON)	NONE	~W	WATT
OPT.	OPTIONAL	W/	WITH
O.S.	OVER SIZE	W/O	WITHOUT

FIG. 100

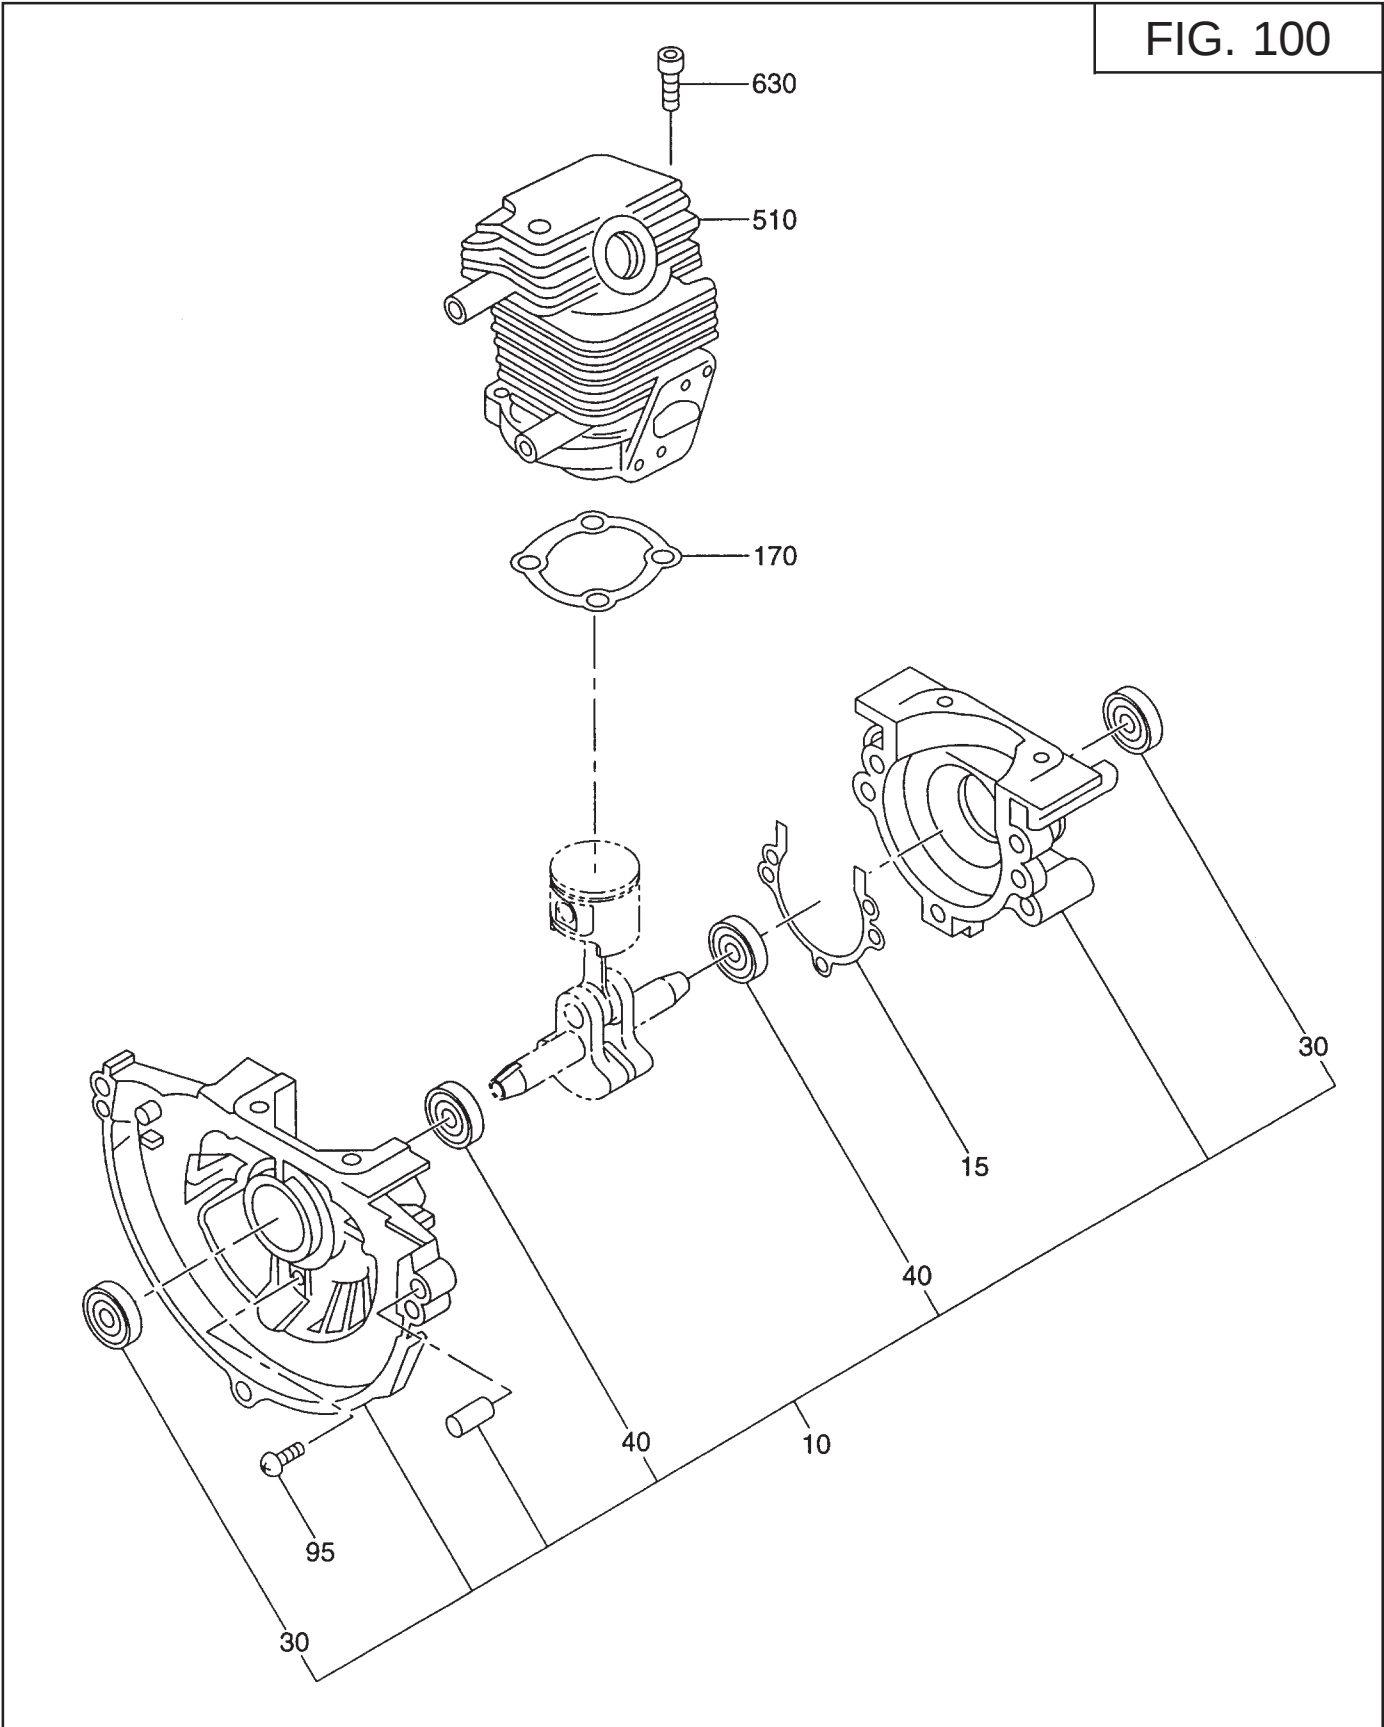


SECTION 1

CRANKCASE & CYLINDER GROUP

[illegible]


FIG. 200

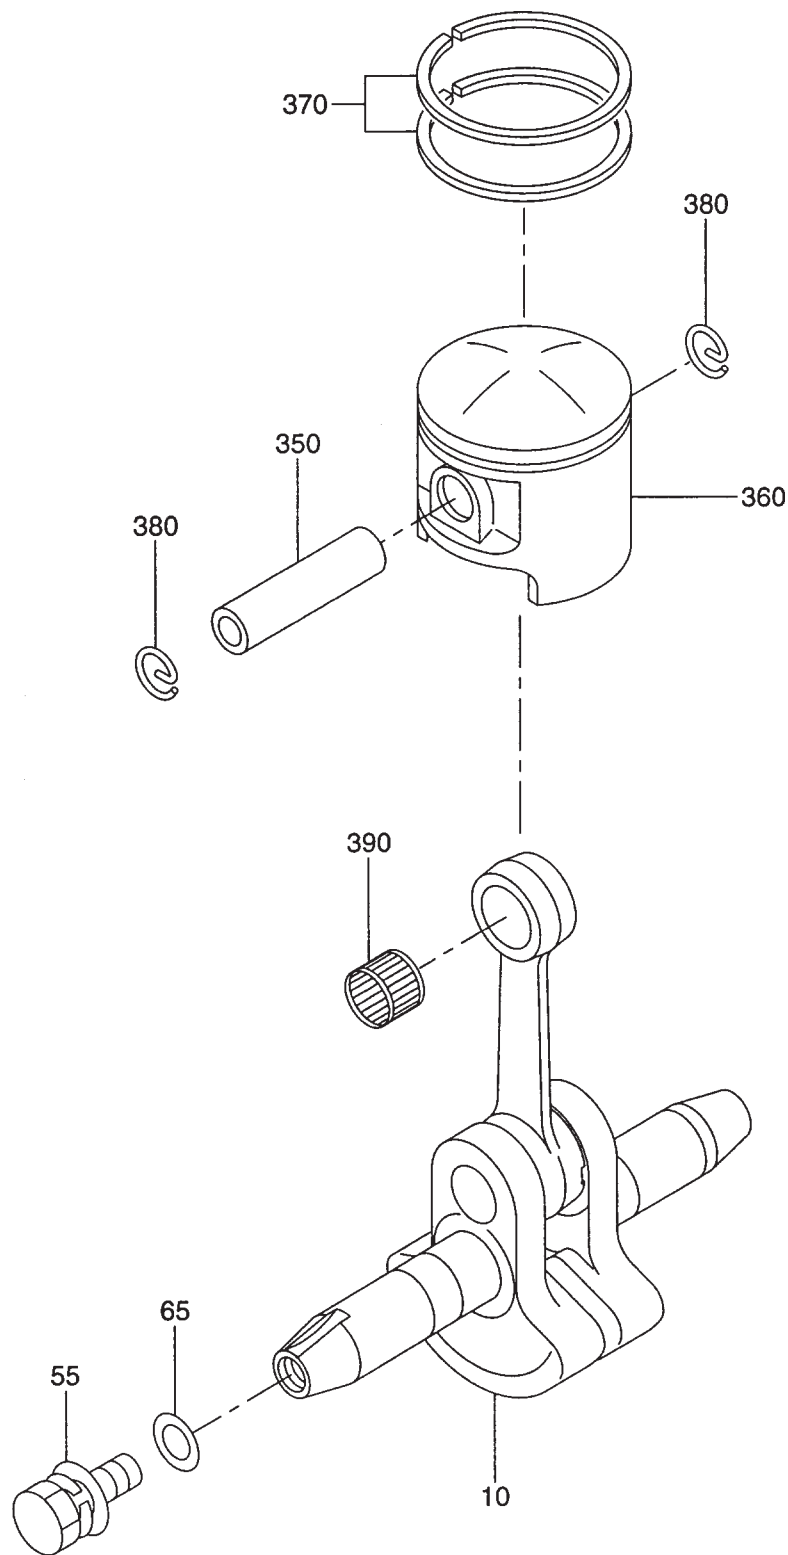

SECTION 2 CRANKSHAFT GROUP

[illegible]

SECTION 3 INTAKE and EXHAUST GROUP

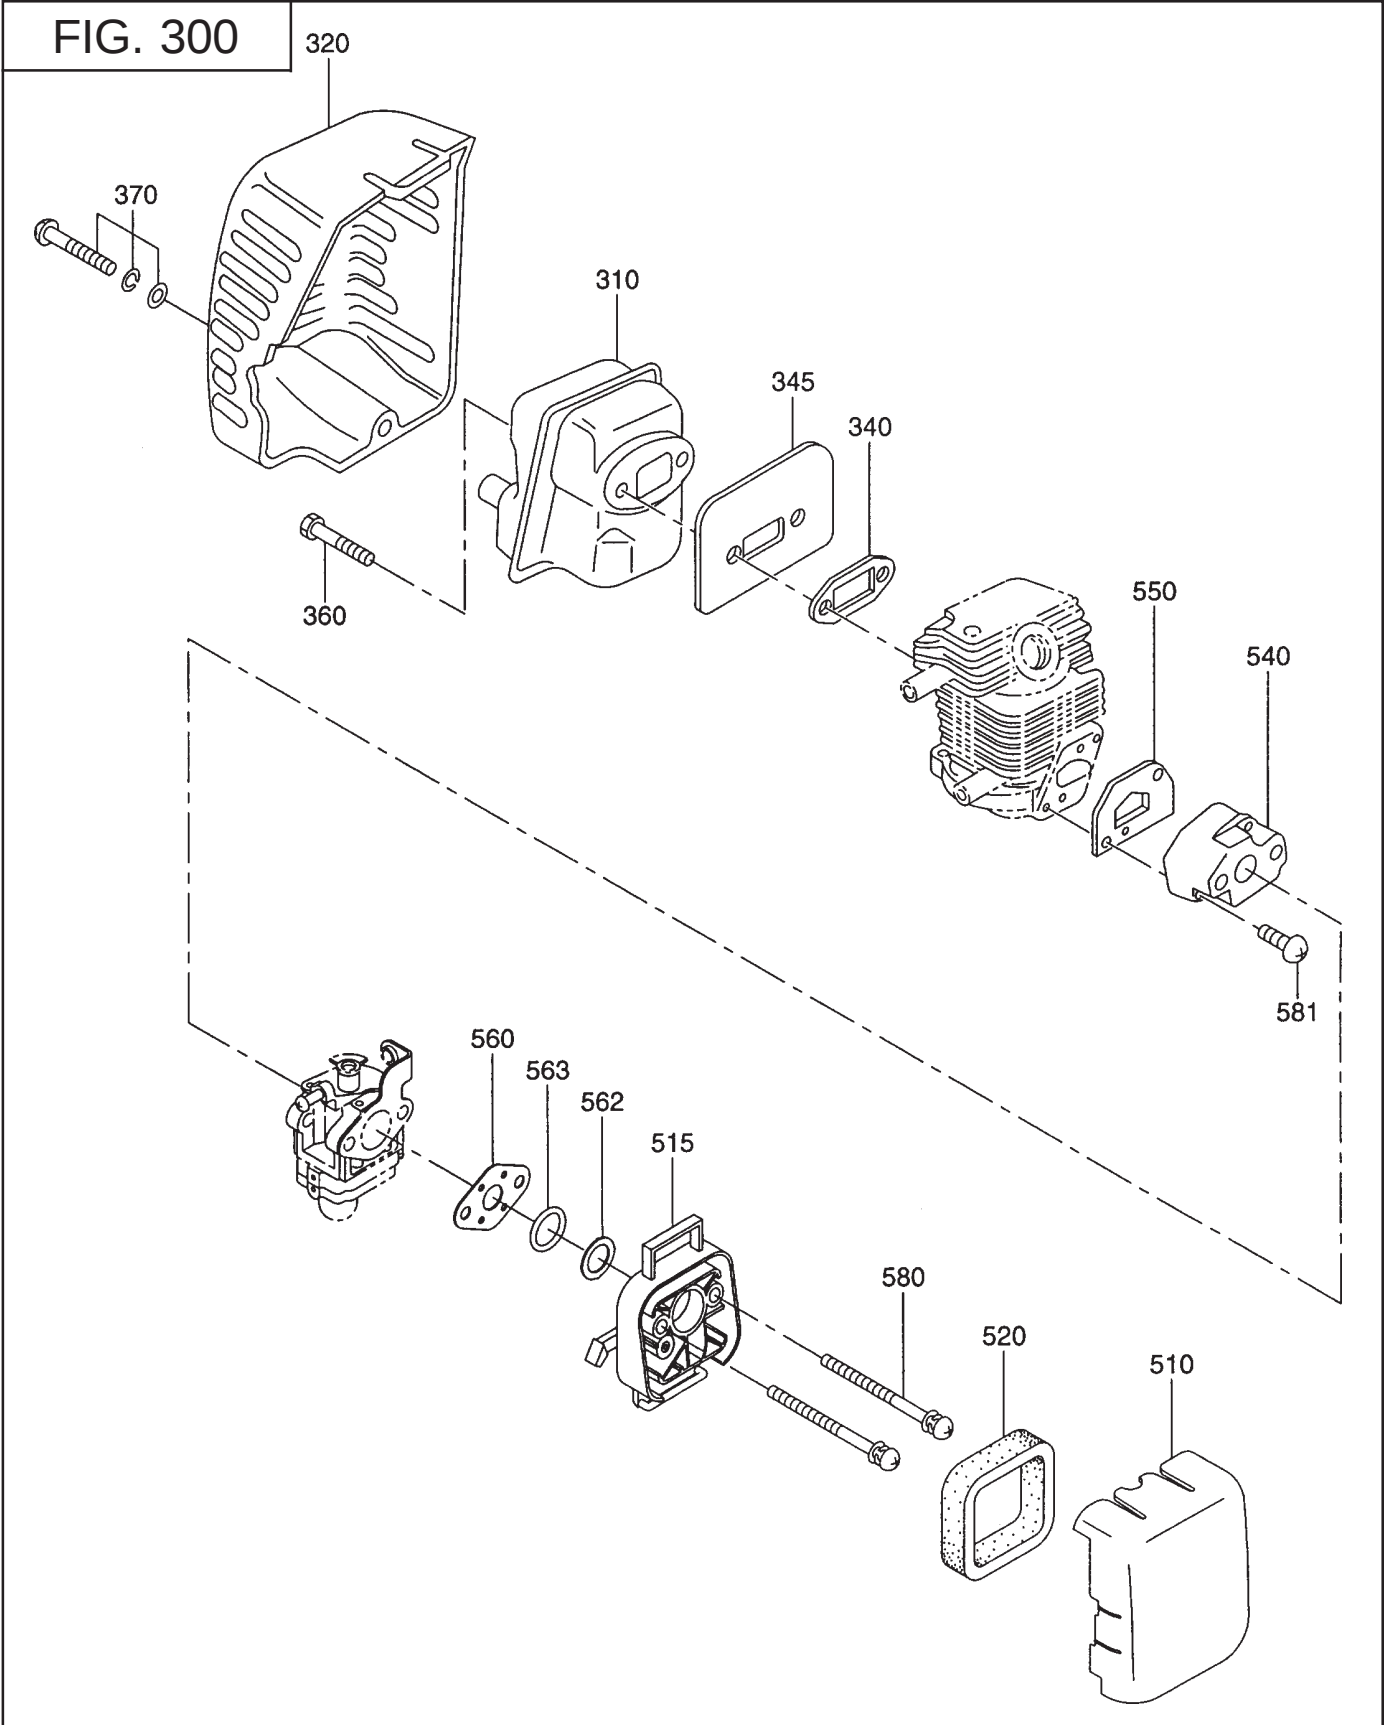


SECTION 3

INTAKE and EXHAUST GROUP

[illegible]

FIG. 500

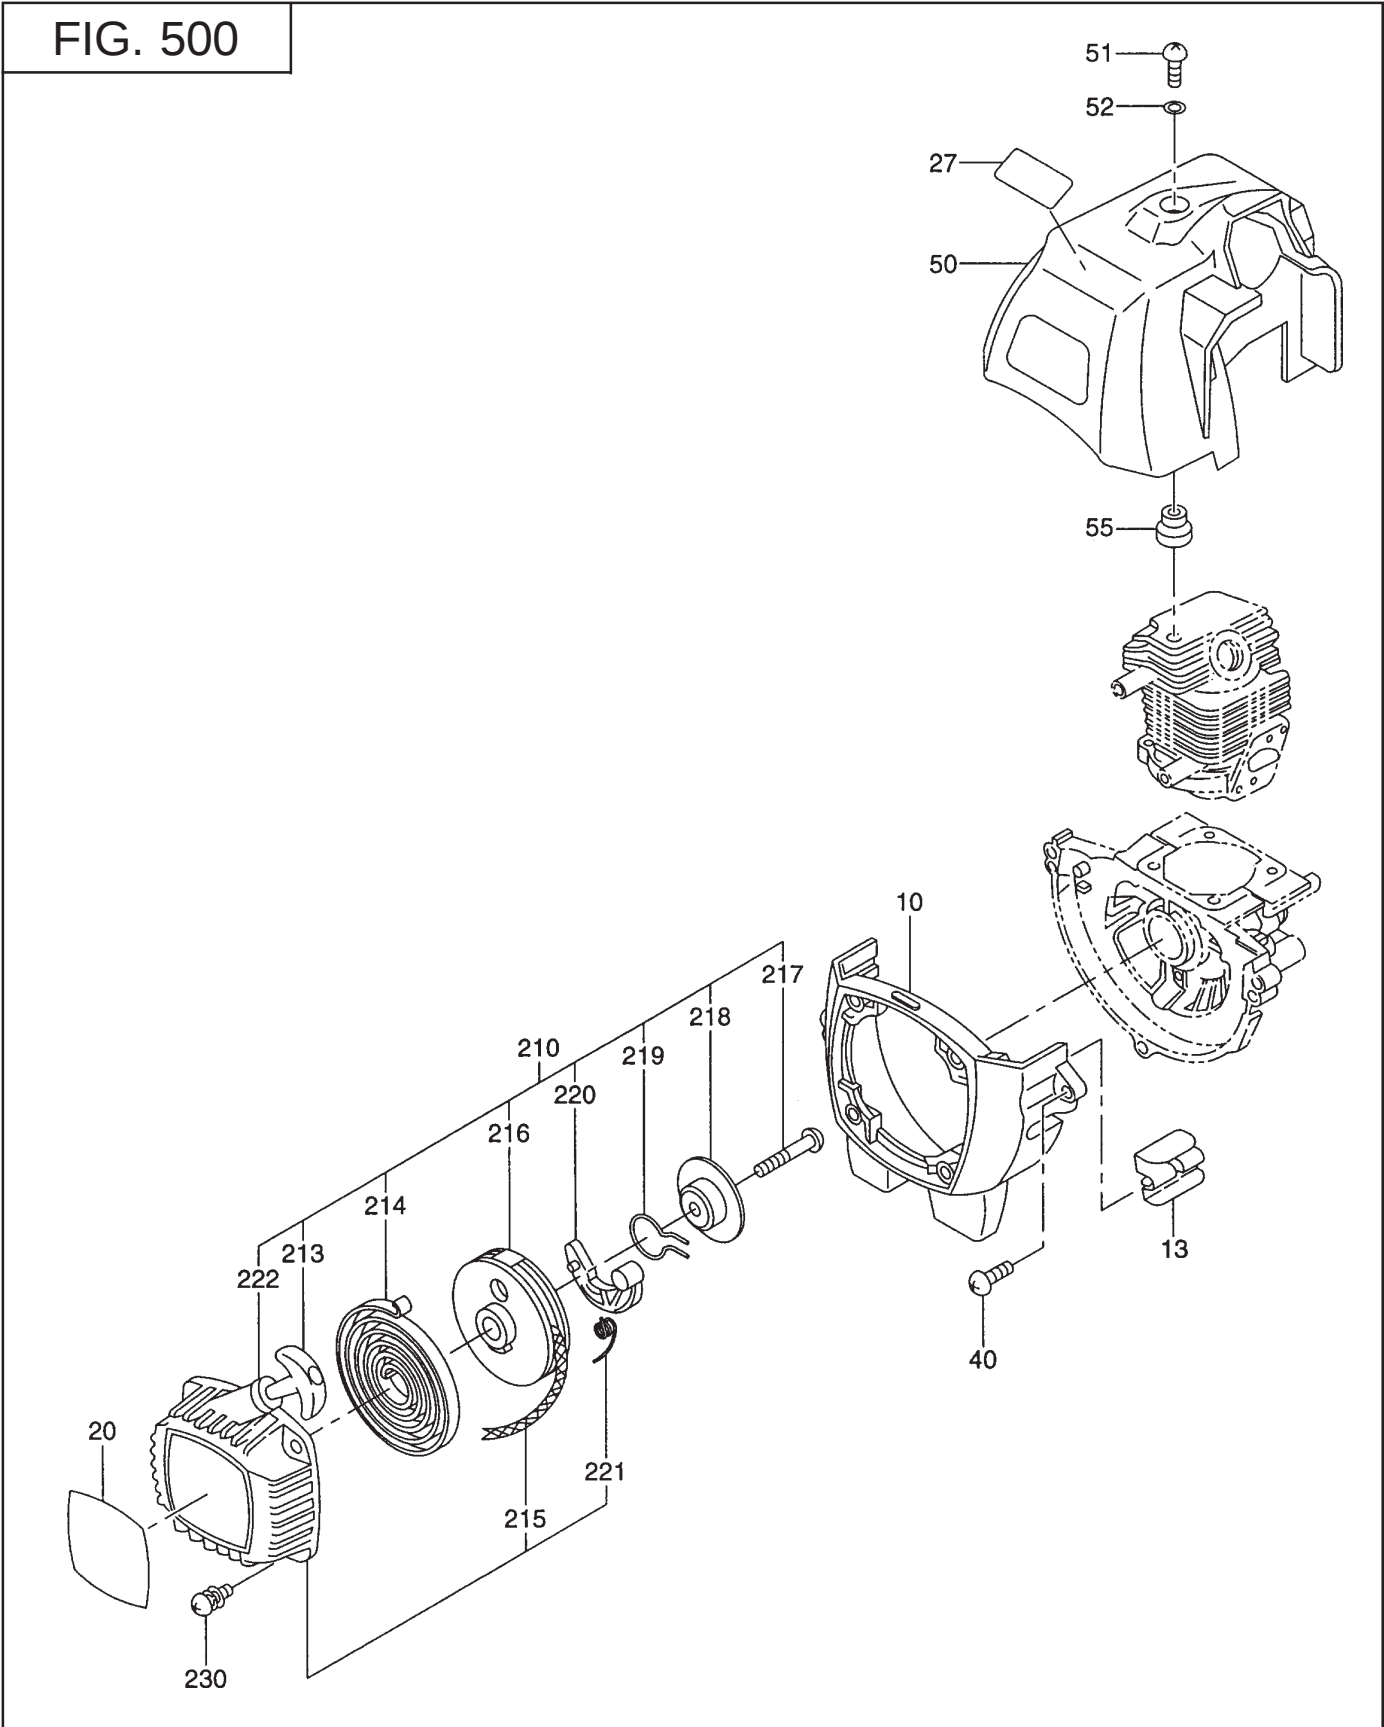


SECTION 5

COOLING and STARTING GROUP

[illegible]


FIG. 600

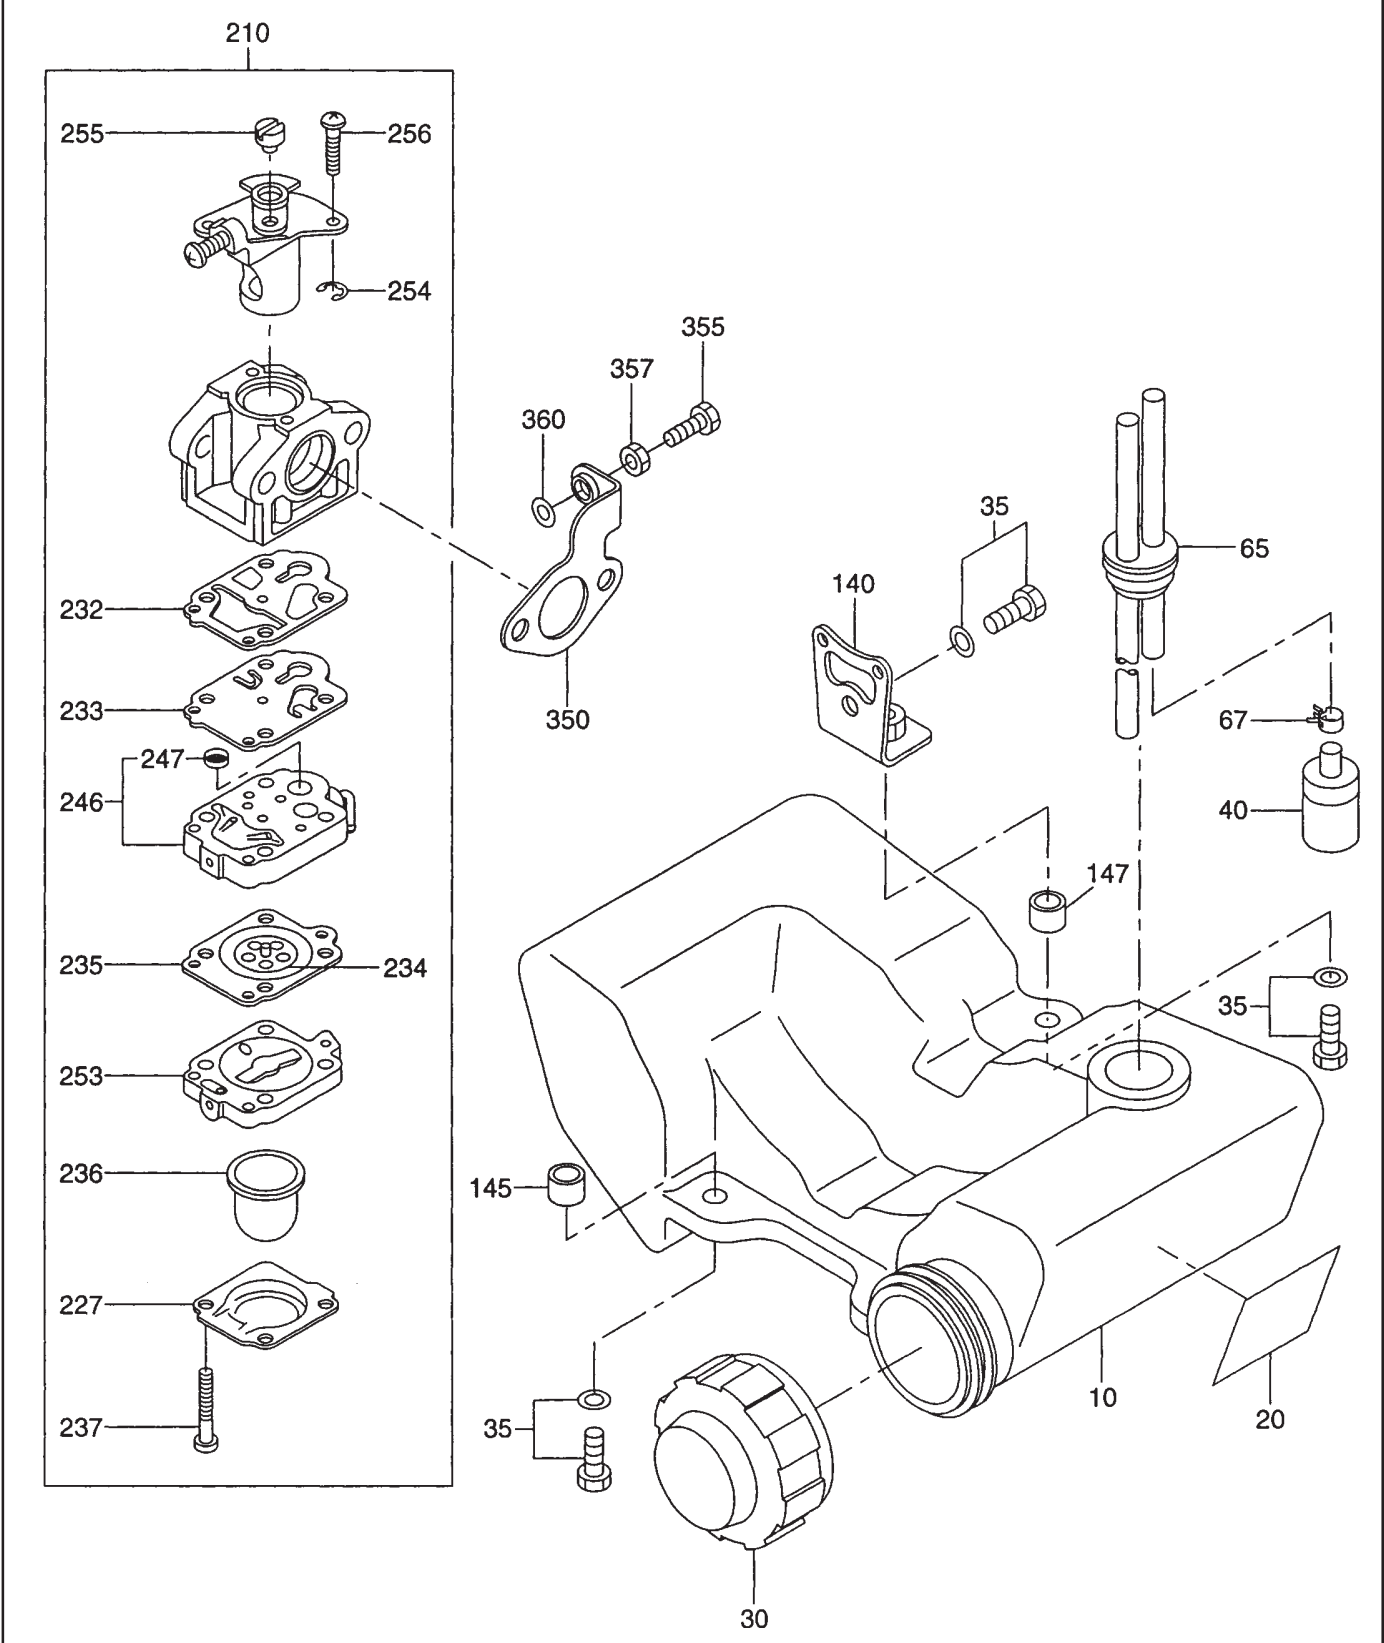

SECTION 6 FUEL GROUP

[illegible]

FIG. 700

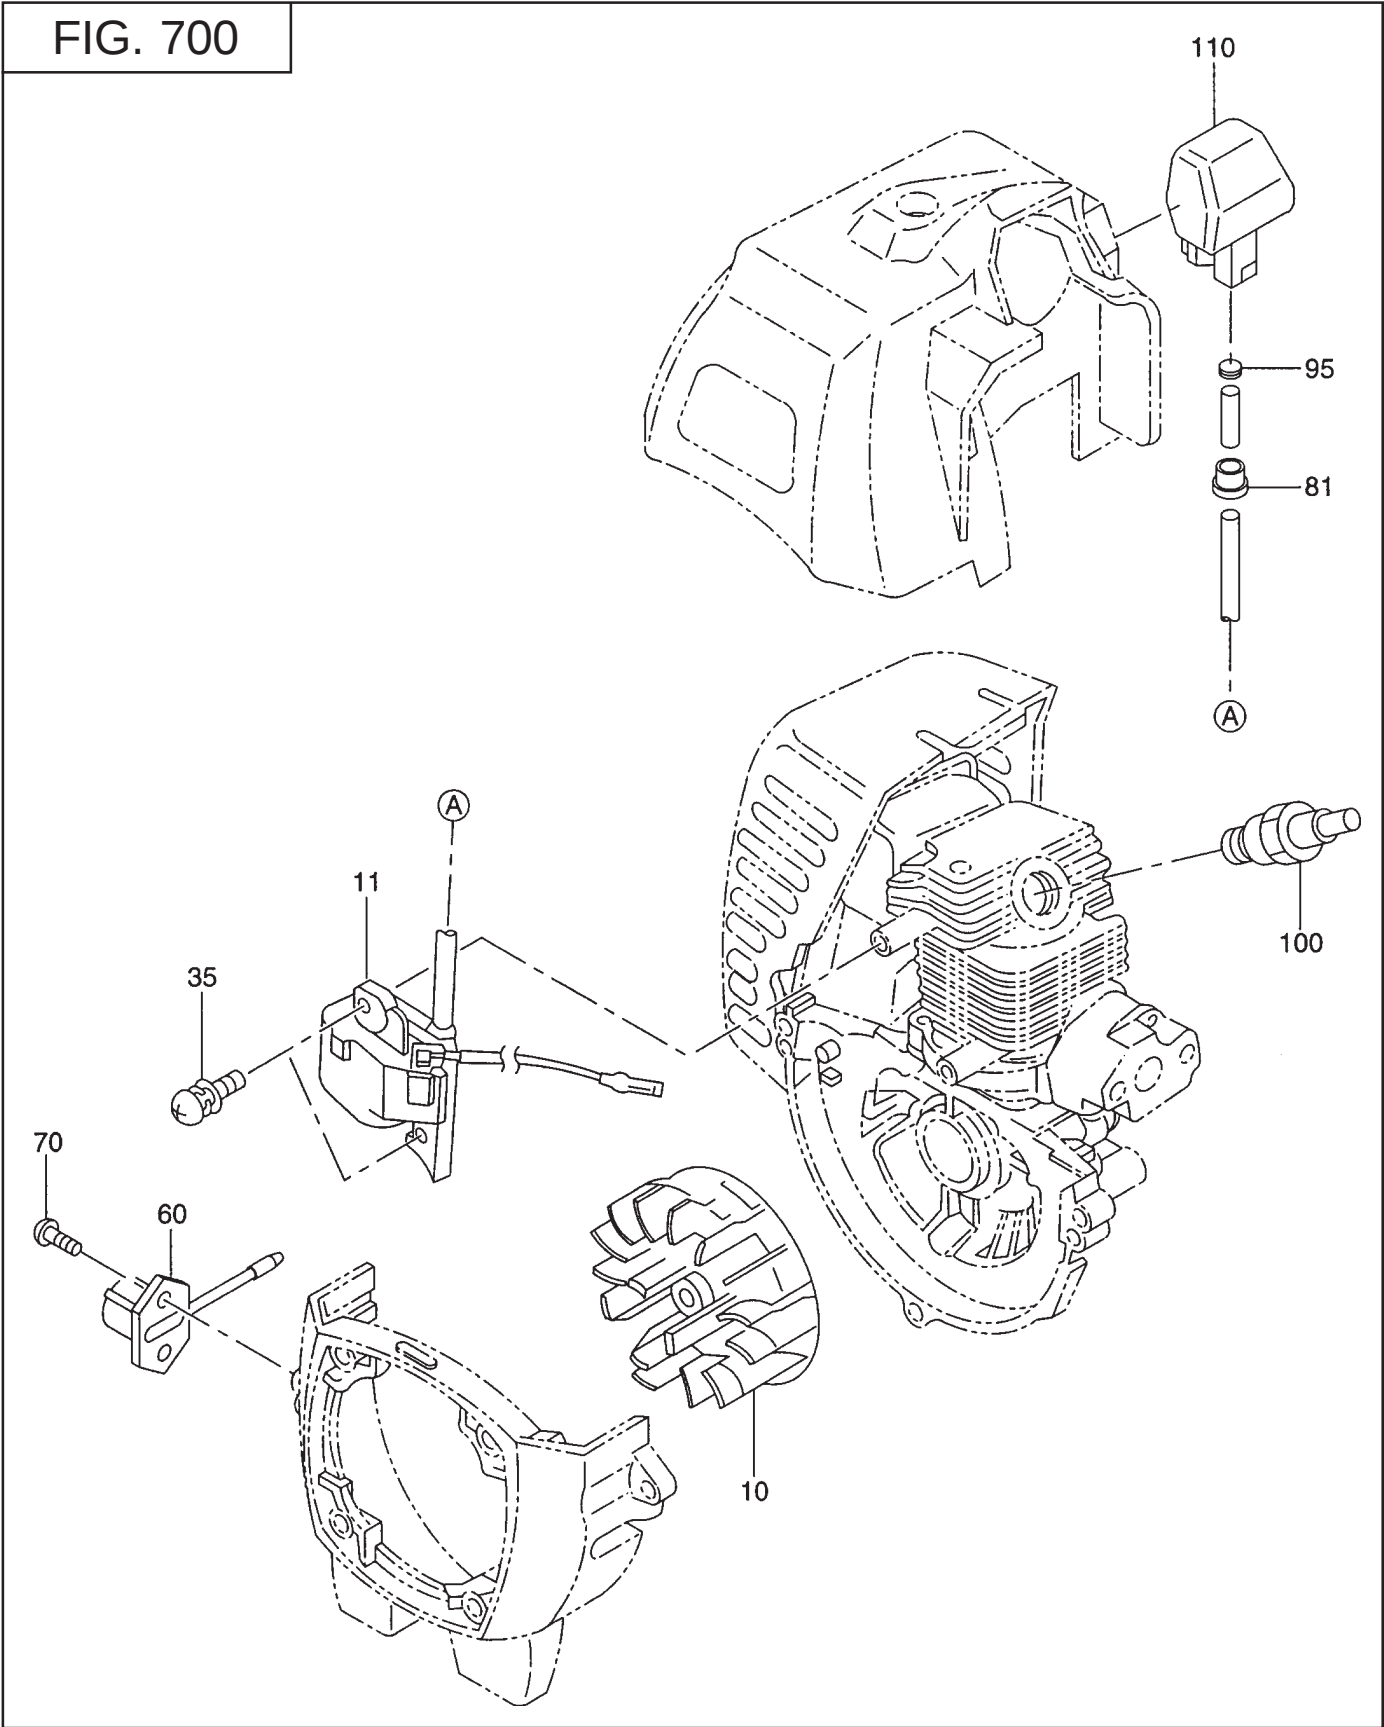


SECTION 7 MAGNETO GROUP

[illegible]

SECTION 8 CLUTCH GROUP

FIG. 800

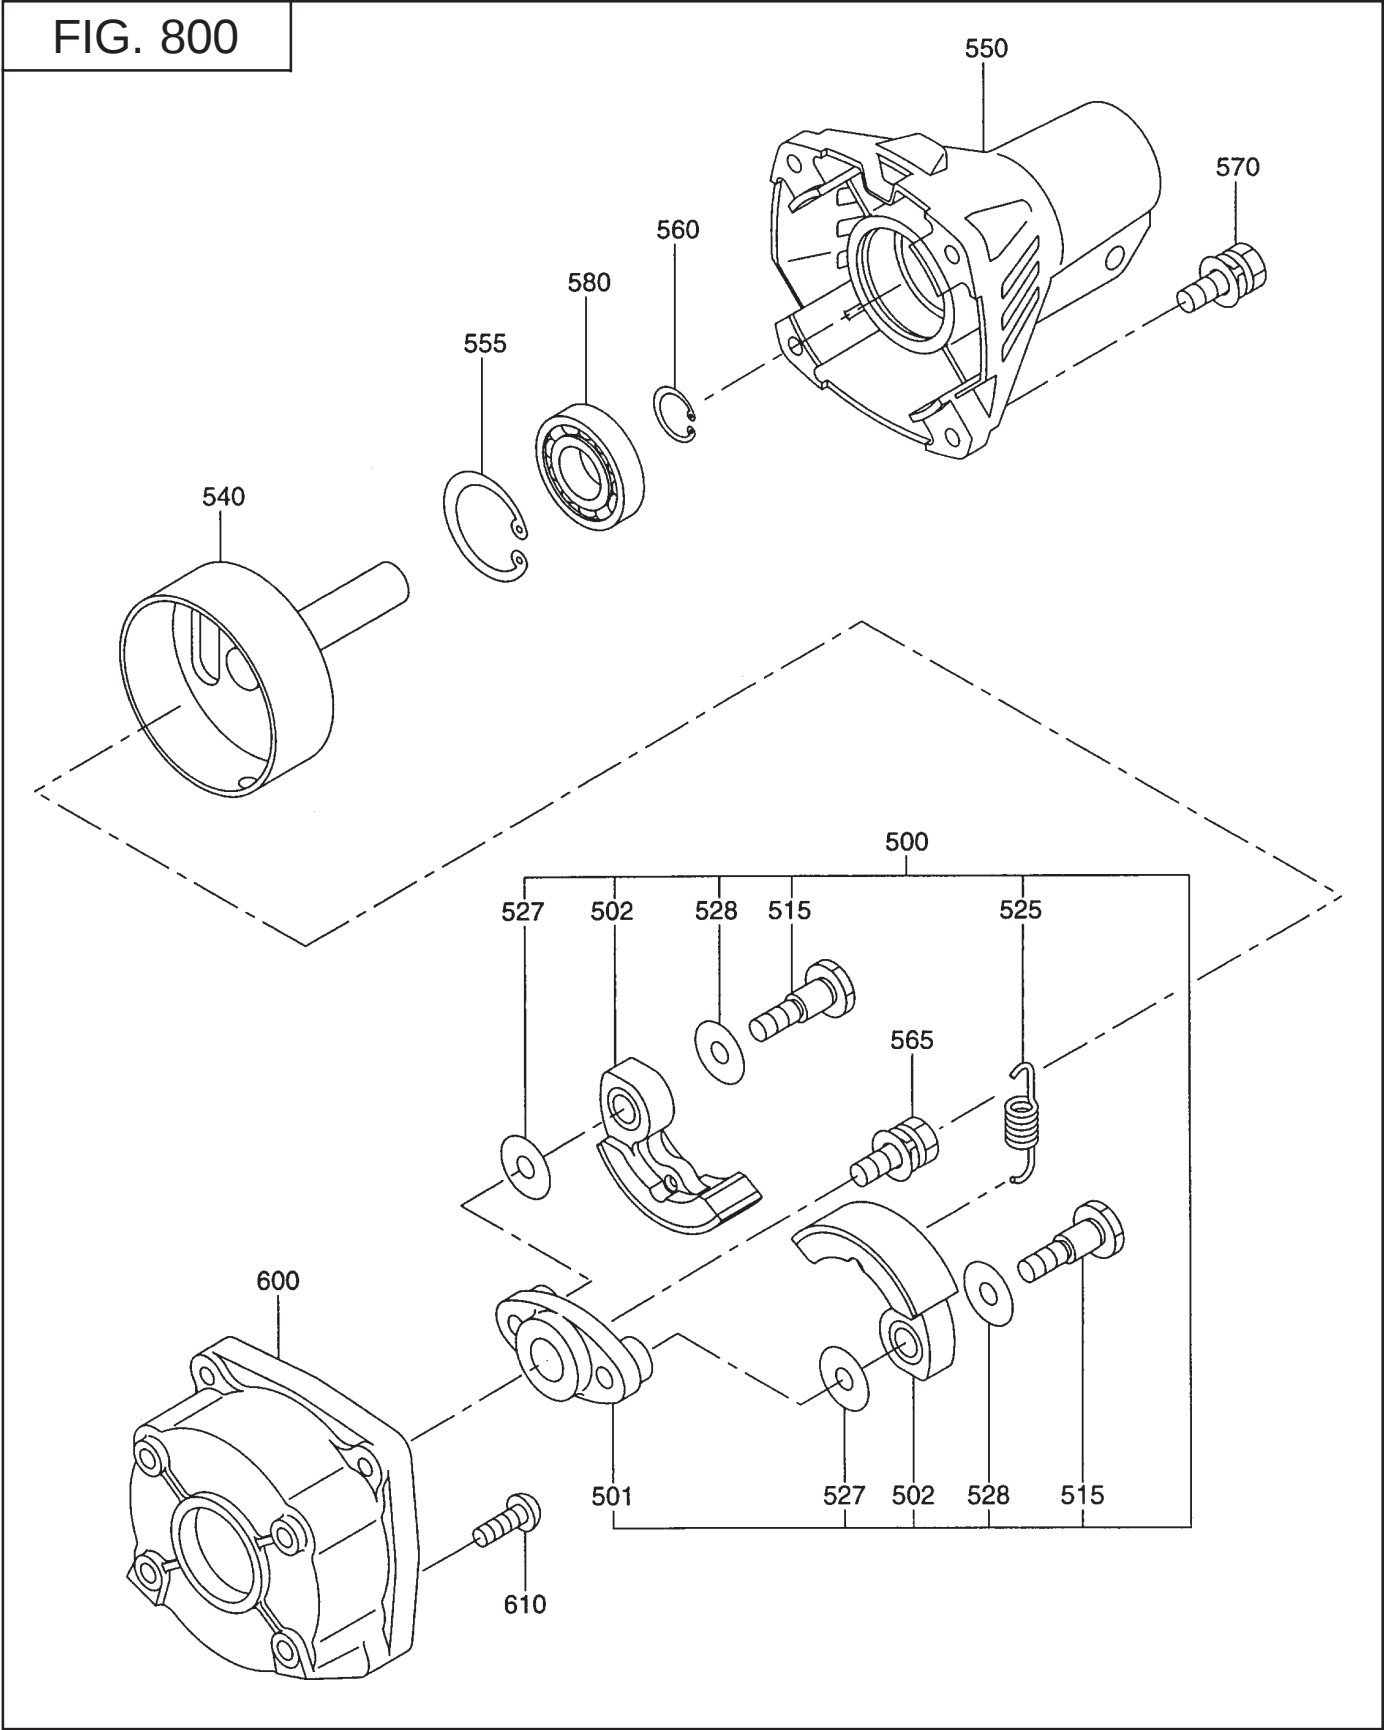

SECTION 8 CLUTCH GROUP

[illegible]

FIG. 900


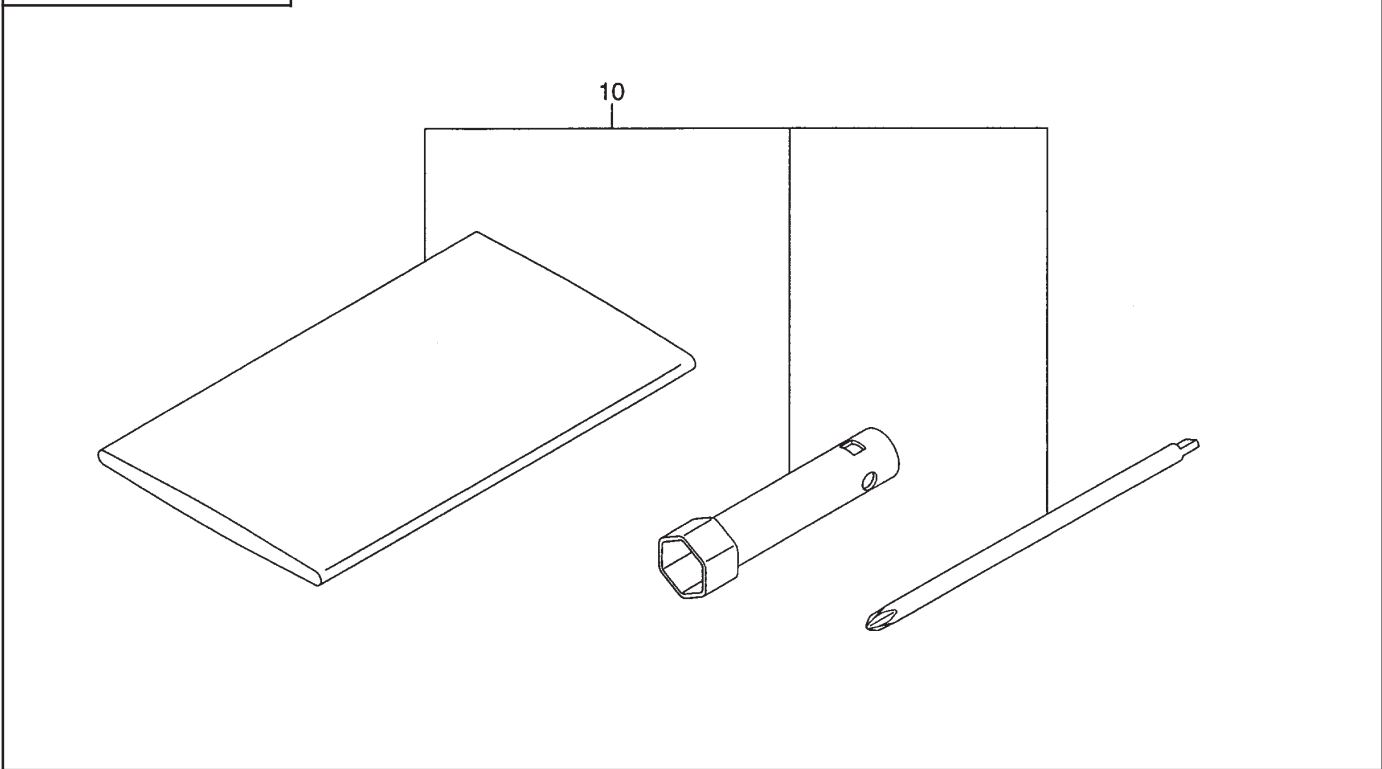


FIG. 1000

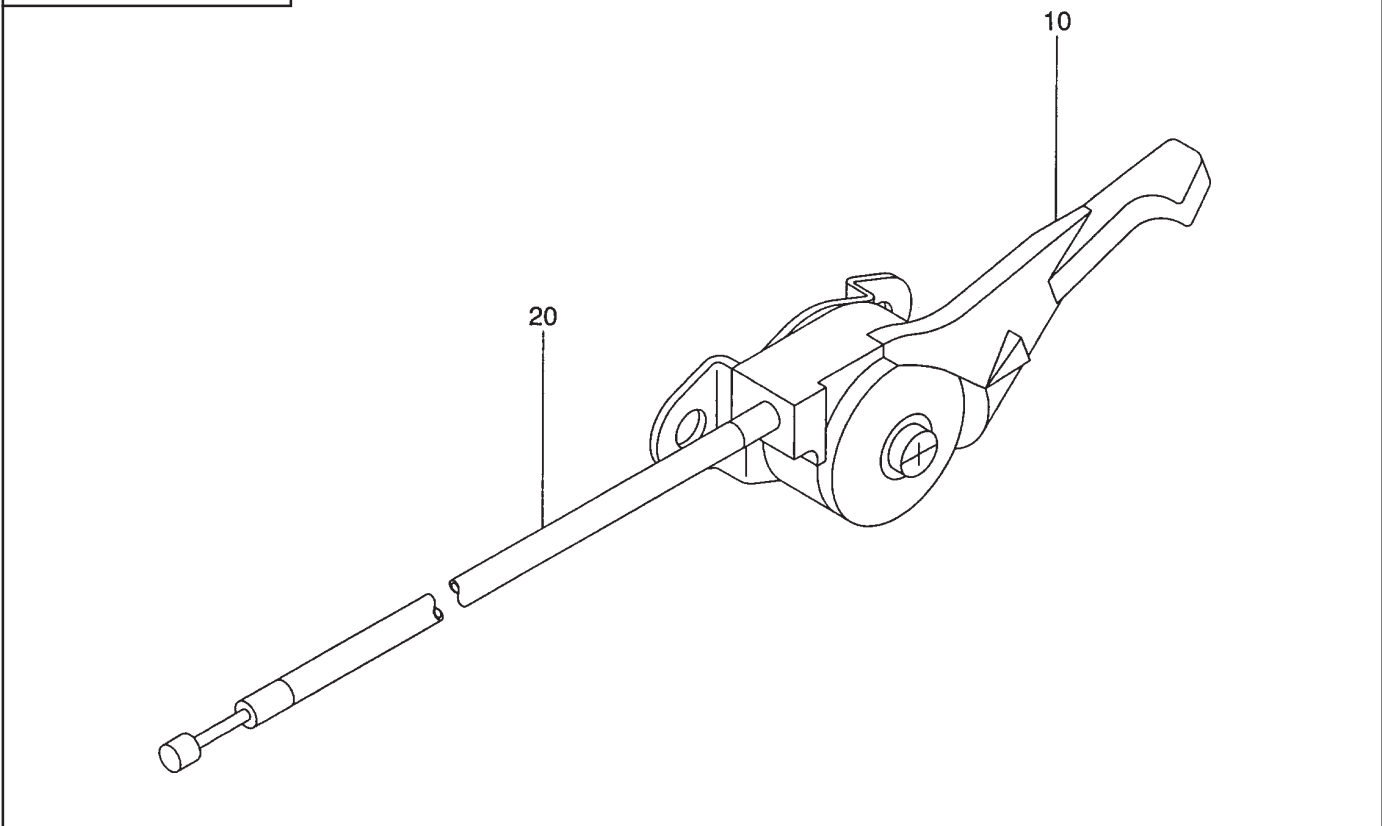

SECTION 9

SHIP LOOSE ITEMS

[illegible]

Robin America, Inc.

940 Lively Blvd. • Wood Dale, IL 60191 • Phone: 630-350-8200 • Fax: 630-350-8212
e-mail: sales@robinamerica.com • www.robinamerica.com

PRINTED IN THE USA