

PARTS MANUAL

MODEL
EH722

EH722DS5250

01/16



SUBARU

Industrial Power Products

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047 - Phone 847-540-7300 - Fax 847-438-5012

 
e-mail: sales@subarupower.com - www.subarupower.com

© 2015 Subaru Industrial Power Products

Group Index

Group Name	Page
100 Crankcase.....	4
200 Crankshaft.....	8
300 Intake & Exhaust.....	10
317 Intake.....	12
400 Governor.....	14
500 Cooling & Starting.....	16
600 Fuel & Lubricant.....	18
640 Carburetor.....	22
685 Oil Cooler.....	24
700 Electric Device.....	26
720 Starter Motor.....	28
 Part Number Index.....	 30
Part Description Index.....	31

100 Crankcase

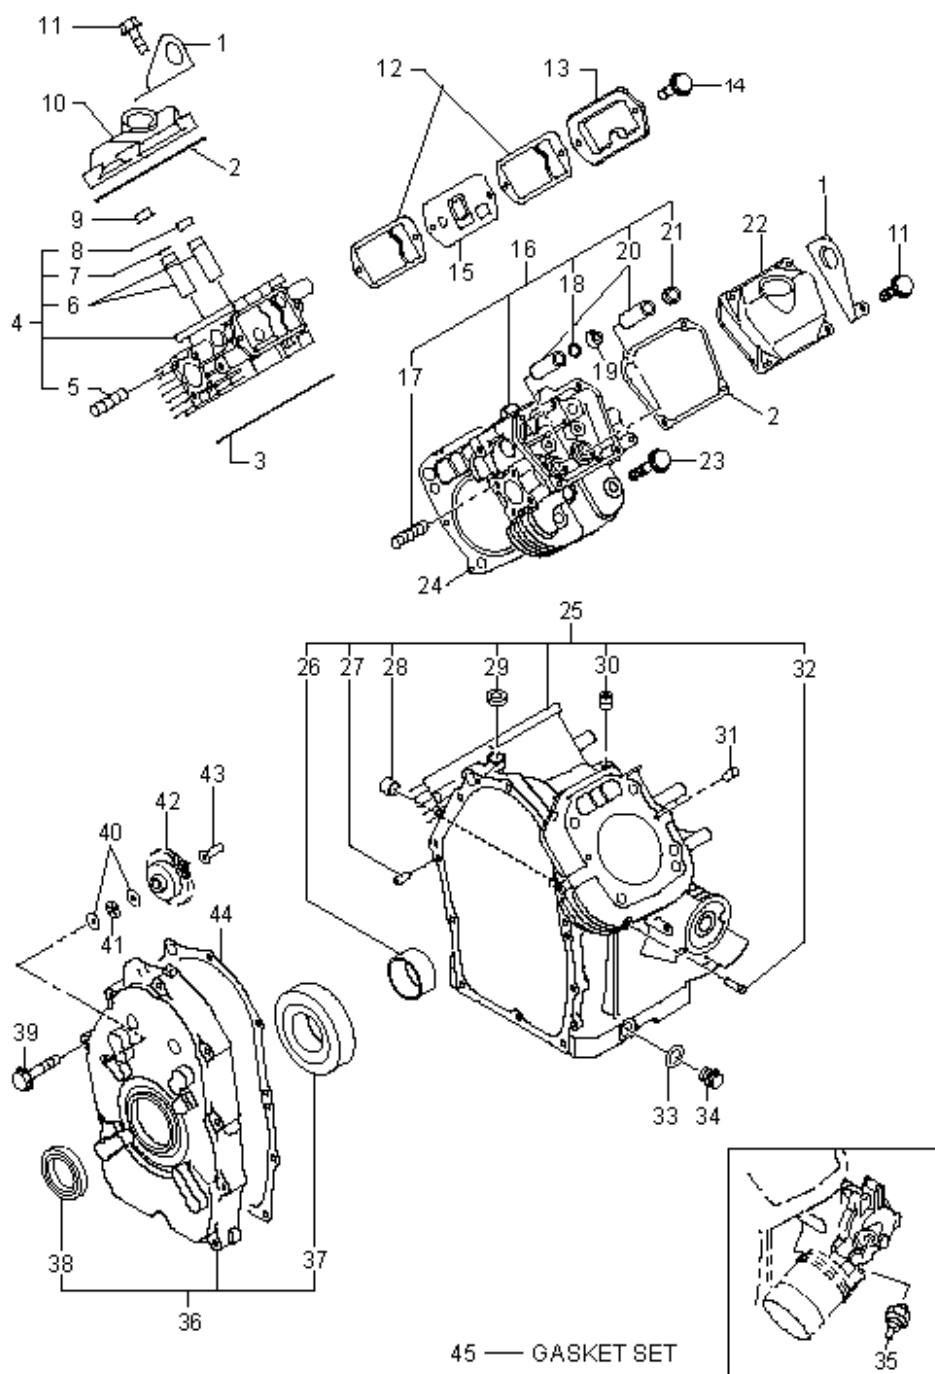

20K010001W00

100 Crankcase


Ref	Part Number.	Description	Qty	Remark
1	280-19001-03	HOOK	2	
2	263-16111-03	GASKET(ROCKER COVER)	2	
3	280-15001-23	GASKET 1 (CYL HEAD)	1	
4	20K-13001-11	CYLINDER HEAD 1 CP	1	
5	010-50802-90	STUD	4	
6	263-14202-03	VALVE GUIDE	2	
7	056-51000-50	CLIP	1	
8	132-11AA1-10	SEAL-EXH VALVE	1	
9	263-14412-A3	RETAINER PLATE	1	
10	263-15505-03	ROCKER COVER	1	
11	011-00601-01	FLANGE BOLT	8	
12	263-16007-03	GASKET(BREATHERPLATE	2	
13	263-14302-03	BREATHER COVER	1	
14	011-00600-30	FLANGE BOLT	2	
15	280-14411-01	BREATHER PLATE CP	1	
16	20K-13101-11	CYLINDER HEAD 2 CP	1	
17	010-50802-90	STUD	4	
18	056-51000-50	CLIP	1	
19	263-35341-03	RETAINER PLATE	1	
20	263-14202-03	VALVE GUIDE	2	
21	132-11AA1-10	SEAL-EXH VALVE	1	
22	263-15503-03	ROCKER COVER	1	
23	011-01000-70	FLANGE BOLT	8	
24	280-15101-23	GASKET 2 (CYL HEAD)	1	
25	280-10101-21	CRANKCASE CP	1	
26	263-15805-03	MAIN BEARING	1	
27	031-00801-10	DOWEL PIN	2	
28	263-55601-03	PIPE	2	
29	044-00800-10	OIL SEAL	1	
30	235-15421-03	BLIND PLUG CP	1	
31	031-00600-20	DOWEL PIN	4	
32	263-19111-03	PLUG (PULSE PIPE HOLE)	1	
33	021-11400-20	GASKET	2	
34	040-11400-30	PLUG	2	
35	263-76002-A1	SWITCH OIL PRESSURE	1	
36	263-11004-41	MAINBEARING COVER CP	1	
37	X60-04500-20	BALL BEARING	1	
38	044-04200-30	OIL SEAL	1	
39	011-00802-20	FLANGE BOLT	10	

100 Crankcase

Ref	Part Number.	Description	Qty	Remark
40	263-46214-03	WASHER	2	
41	263-46215-A3	THRUST BEARING	1	
42	263-45004-11	GOVERNOR GEAR CP	1	
43	277-41902-01	GOVERNOR SLEEVE CP	1	
44	263-16002-A3	GASKET (M.B COVER)	1	
45	280-99001-17	GASKET SET	1	

This Page Intentionally Left Blank

200 Crankshaft

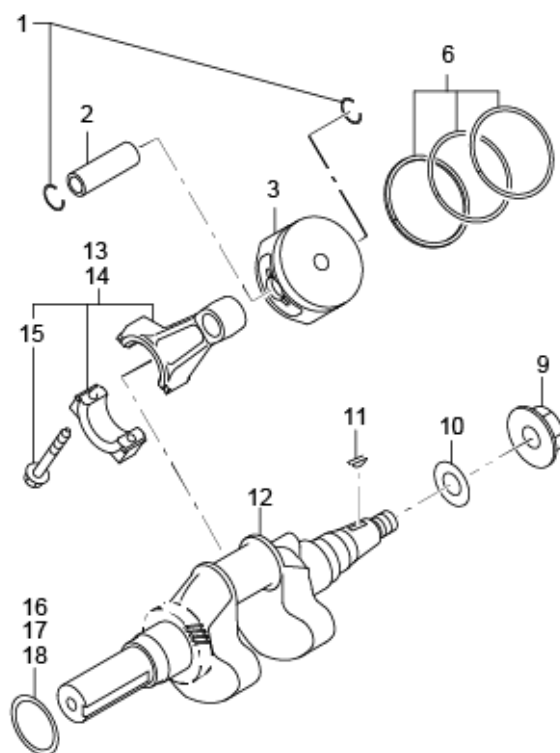


0200 0001 000

200 Crankshaft

Ref	Part Number.	Description	Qty	Remark
1	056-52100-20	CLIP	4	
2	263-23301-33	PISTON PIN	2	
3	280-23411-H3	PISTON	2	STANDARD
6	247-23501-17	PISTON RING SET	2	STANDARD
9	018-01800-10	FLANGE NUT	1	
10	003-10180-00	WASHER	1	
11	005-32054-01	WOODRUFF KEY	1	
12	263-21111-11	CRANKSHAFT CP	1	
13	263-22601-30	CONNECTING ROD AY	2	
15	001-05084-00	FLANGE BOLT	2	
16	263-25022-03	SPACER (0.8)	1	
17	263-25023-03	SPACER (1.0)	1	
18	263-25024-03	SPACER (1.2)	1	

300 Intake & Exhaust

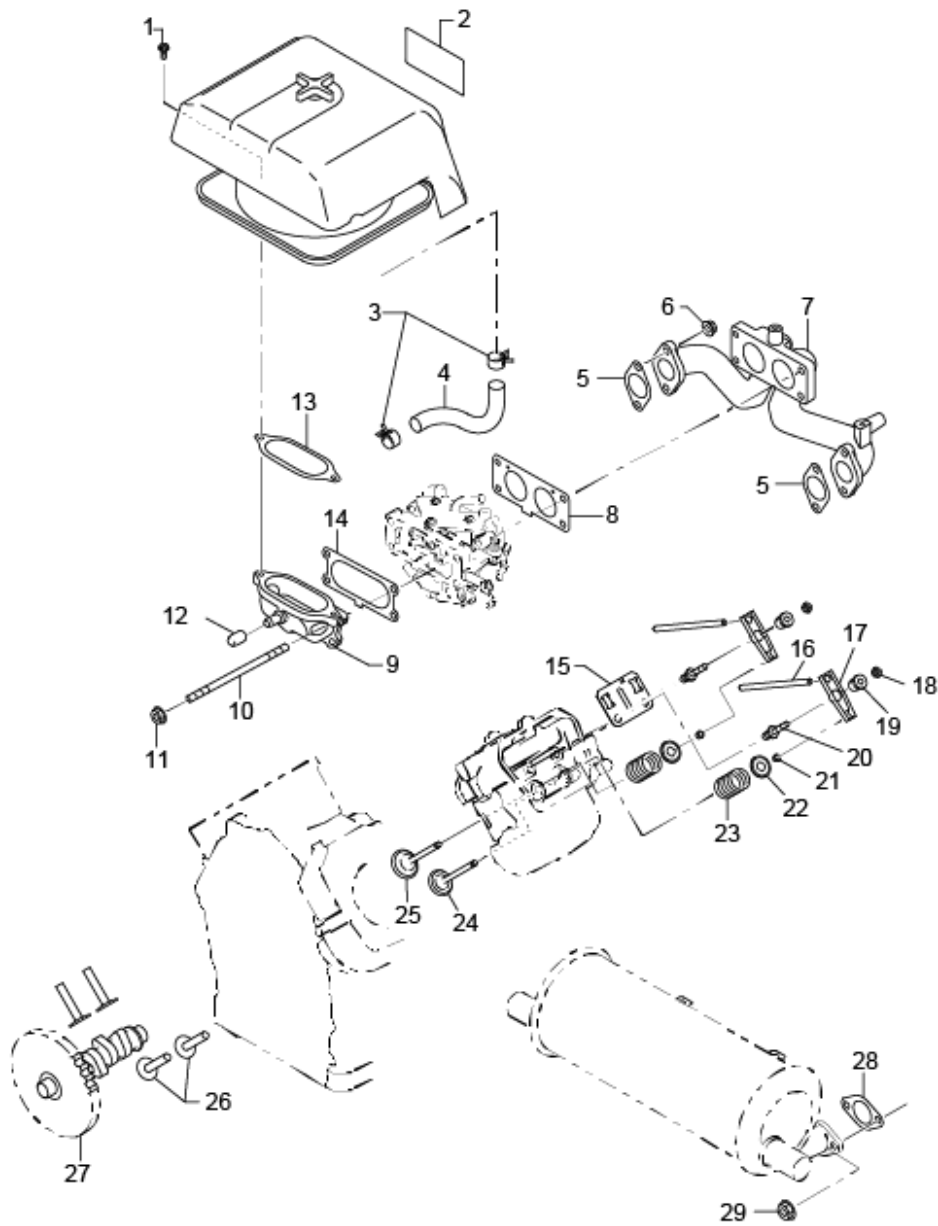


0300 0001 000

300 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
1	011-00600-20	FLANGE BOLT	3	
2	20K-91704-03	LABEL(TRADE MARK)	1	
3	056-12000-20	HOSE CLAMP	2	
4	280-18001-03	BREATHER PIPE	1	
5	263-35513-03	GASKET(IN MANIFOLD)	2	
6	002-38080-00	FLANGE NUT	4	
7	280-33005-H1	INTAKE MANIFOLD CP	1	
8	280-66202-03	GASKET(CARBURETOR)	1	
9	280-38001-03	CLEANER ADAPTER	1	
10	010-50601-91	STUD	4	
11	002-38060-00	FLANGE NUT	4	
12	X42-30600-30	CAP(VINYL)	1	
13	280-35622-03	GASKET(CLEANER)	1	
14	280-35501-03	GASKET(ADAPTER)	1	
15	263-37002-A3	GUIDE PLATE	2	
16	263-35331-01	PUSH ROD CP	4	
17	267-36102-03	ROCKER ARM	4	
18	017-00601-10	NUT	4	
19	267-35701-03	PIVOT	4	
20	263-35801-03	BOLT(PIVOT)	4	
21	246-35501-03	COLLET-VALVE	8	
22	246-33711-13	SPRING RETAINER	4	
23	246-33611-03	VALVE SPRING	4	
24	263-33401-H3	INTAKE VALVE	2	
25	263-33502-H3	EXHAUST VALVE	2	
26	263-33301-A3	TAPPET	4	
27	280-31801-03	CAM SHAFT	1	
28	270-35201-01	GASKET CP (MUFFLER)	2	
29	002-38080-00	FLANGE NUT	4	

317 Intake

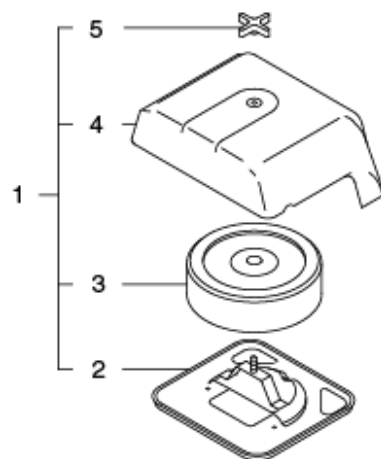


0317 0002 000

317 Intake

Ref	Part Number.	Description	Qty	Remark
1	20K-32601-A0	AIR CLEANER AY	1	
2	280-32626-A1	CLEANER BASE CP	1	
3	263-32610-A1	CLEANER ELEMENT CP	1	
4	263-32630-03	CLEANER COVER	1	
5	263-32640-01	WING NUT	1	

400 Governor

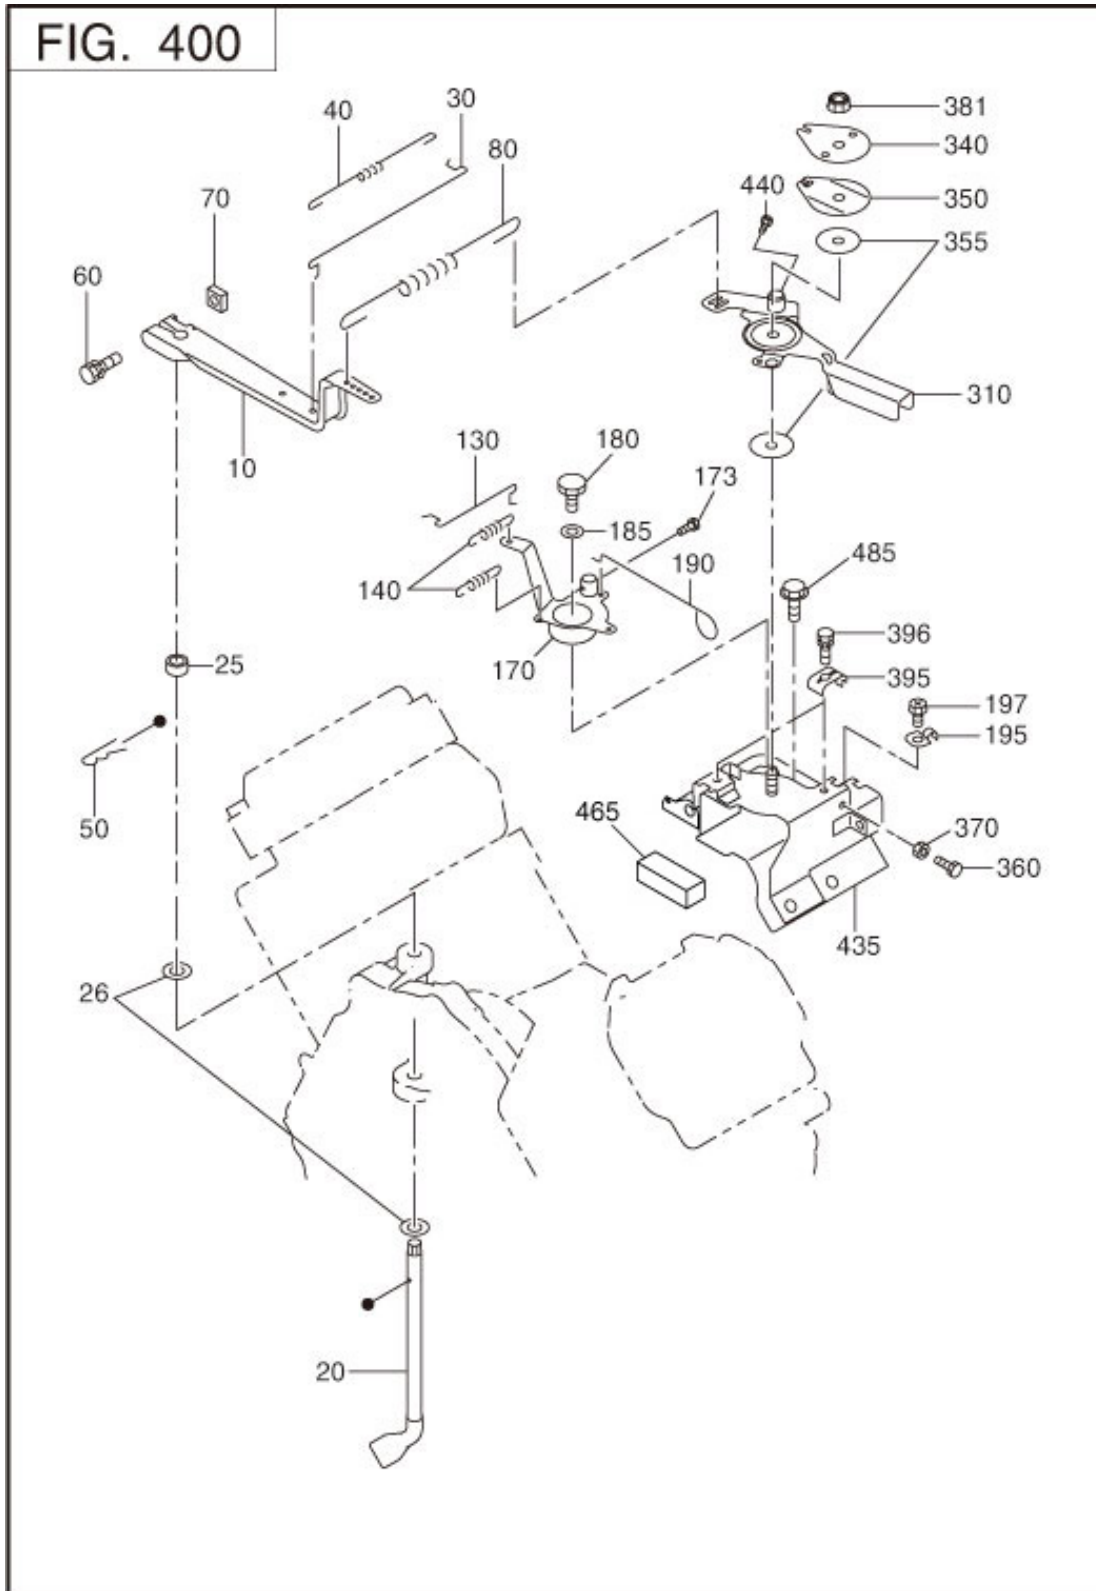


EH72

280040000W01

400 Governor

Ref	Part Number.	Description	Qty	Remark
10	263-42301-B3	GOVERNOR LEVER CP	1	
20	263-42201-A3	GOVERNOR SHAFT	1	
25	X23-00801-50	SPACER	1	
26	003-10080-00	WASHER	2	
30	20K-42701-03	GOVERNOR ROD	1	
40	20K-42801-03	GOVERNOR ROD SPRING	1	
50	005-11060-01	SNAP PIN	1	
60	001-14063-00	BOLT AND WASHER AY	2	
70	018-60600-20	NUT	1	
80	263-42501-13	GOVERNOR SPRING	1	
130	280-46011-A3	CHOKE CONTROL ROD	1	
140	261-45201-03	RETURN SPRING	1	
170	280-46001-03	CHOKE CONTROL LINK	1	
180	226-43101-01	LINK PIVOT CP	1	
190	263-43901-A3	CHOKE KNOB	1	
195	263-46010-03	CLAMP(CHOKE KNOB)	1	
197	015-20500-10	TAPPING SCREW	1	
310	20K-43301-A3	SPEED CONTROL LEVER	1	
340	227-43501-13	STOP PLATE	1	
350	227-45002-03	SPRING WASHER	1	
355	021-70600-30	FRICTION WASHER	2	
360	011-50500-20	BOLT	2	
370	002-27050-00	NUT	1	
381	002-35060-00	SELF LOCK NUT	1	
395	261-43901-03	CLAMP	2	
396	001-17052-00	BOLT AND WASHER AY	2	
435	263-45011-A2	BRACKET UN(SPD CTL)	1	
465	X84-14320-00	RUBBER FOAM	1	
485	011-00600-20	FLANGE BOLT	2	

 500 Cooling & Starting

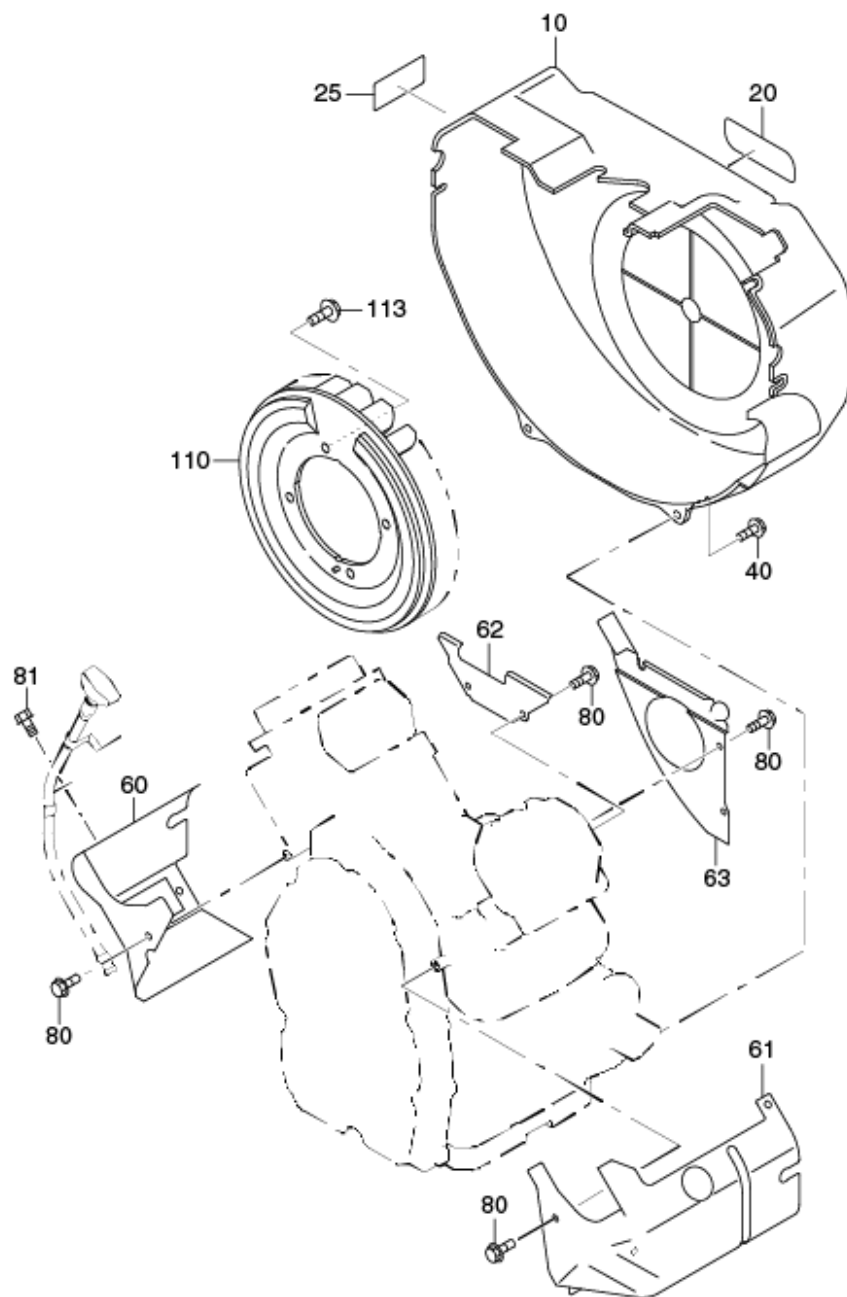


0500 0001 000

500 Cooling & Starting

Ref	Part Number.	Description	Qty	Remark
10	20K-51206-J2	BLOWER HOUSING UN	1	
20	073-20057-20	LABEL(FI)	1	
25	073-20058-60	LABEL(WARNING)	1	
25	073-20057-60	LABEL(WARNING)	1	
40	011-00600-30	FLANGE BOLT	8	M6X1.0X4DX14L
60	263-52622-01	CYLINDER BAFFLE 1 CP	1	
61	280-52721-01	CYLINDER BAFFLE 2 CP	1	
62	20K-52801-02	CYLINDER BAFFLE 3 UN	1	
63	263-52922-02	CYLINDER BAFFLE 4 UN	1	
80	011-00600-20	FLANGE BOLT	8	
81	011-00600-20	FLANGE BOLT	1	
110	263-54101-H2	COOLING BLOWER UN	1	
113	001-14061-60	BOLT AND WASHER AY	4	

 600 Fuel & Lubricant

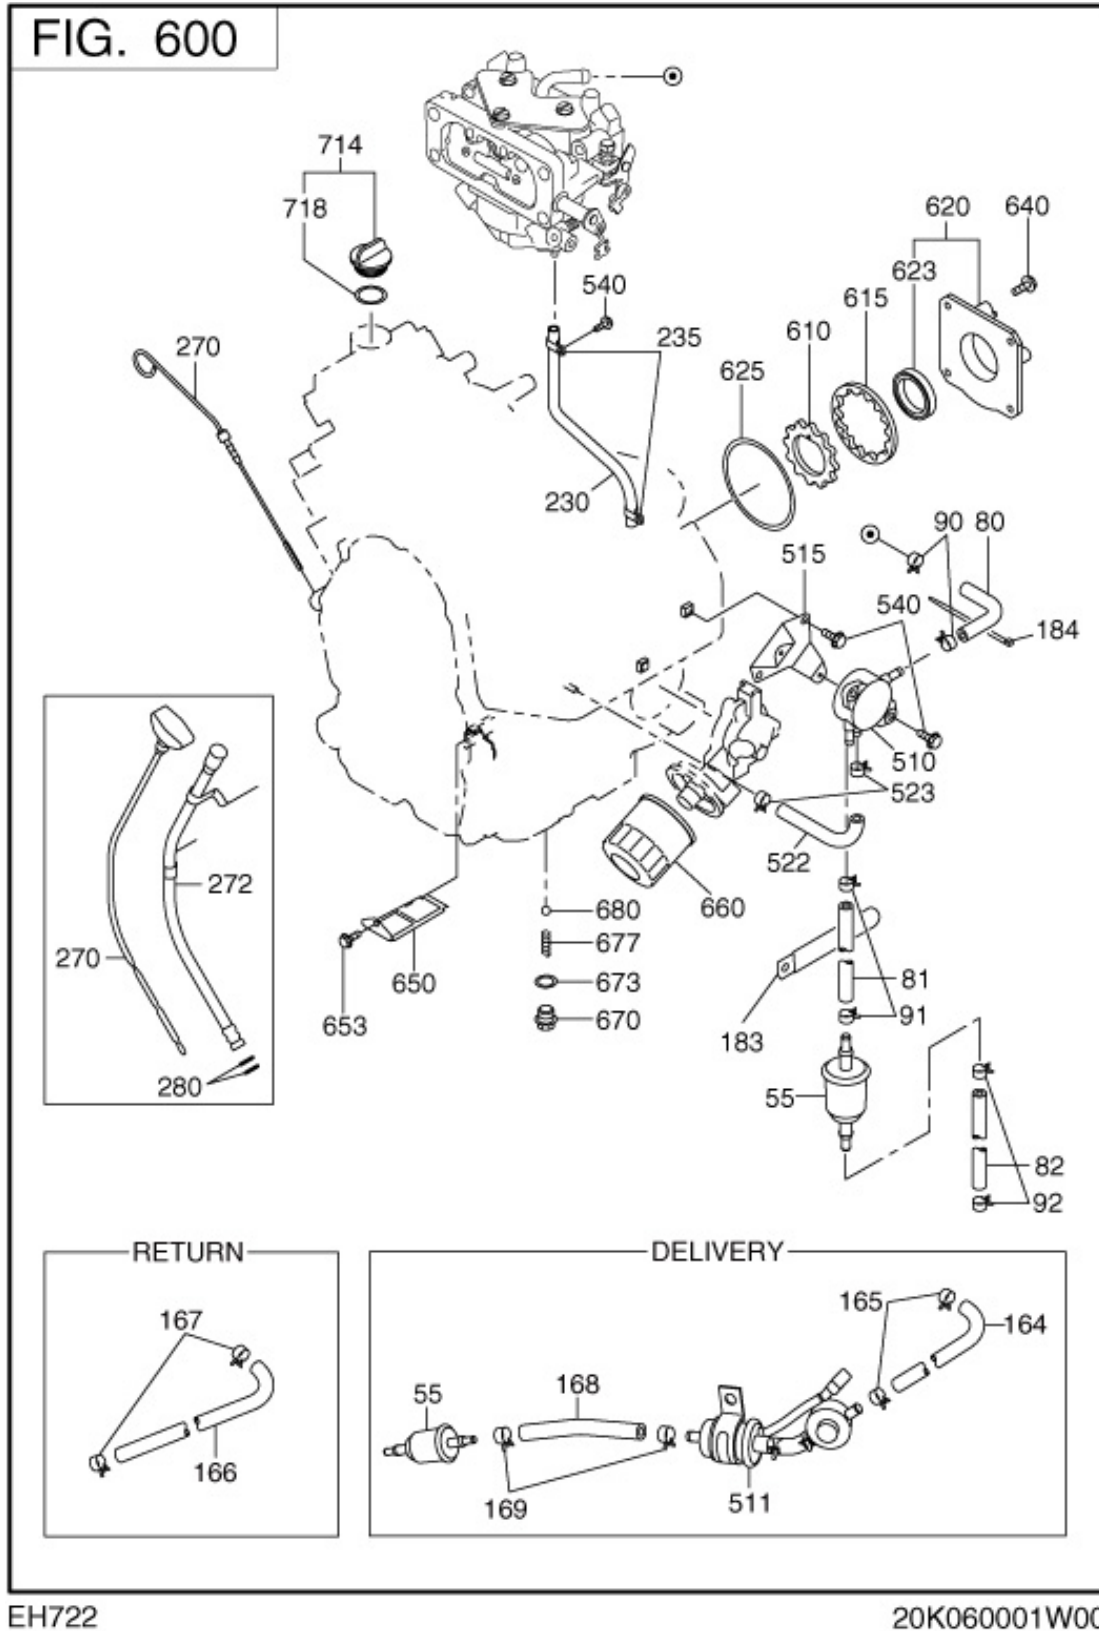

600 Fuel & Lubricant

Ref	Part Number.	Description	Qty	Remark
55	263-65012-A3	FILTER,FUEL	1.00	Start Date: 1/14/2009 0:00:00. Start Date: 12/31/9999 0:00:00.
80	X85-10615-42	RUBBER PIPE	1.00	Start Date: 7/7/2009 0:00:00. Start Date: 12/31/9999 0:00:00.
81	X85-10613-81	RUBBER PIPE	1.00	Start Date: 1/14/2009 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 6.4DX12.7DX80L. Interchangable with X85-10610-07.
90	263-68501-03	HOSE CLAMP	2	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 11.4DX7.9BX0.7T.
91	263-68501-03	HOSE CLAMP	2	Start Date: 1/14/2009 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 11.4DX7.9BX0.7T.
230	085-10301-10	RUBBER PIPE	1.00	Start Date: 11/22/2001 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 3DX6DX350L.
235	206-75501-01	CLAMP CP	1.00	Start Date: 1/14/2009 0:00:00. Start Date: 12/31/9999 0:00:00.
270	263-63603-01	GAUGE CP,OIL LEVEL	1.00	Start Date: 1/14/2009 0:00:00. Start Date: 12/31/9999 0:00:00.
510	267-62201-10	FUEL PUMP AY	1.00	Start Date: 8/1/2004 0:00:00. Start Date: 12/31/9999 0:00:00.
515	263-65002-A3	BRACKET(FUEL PUMP)	1.00	Start Date: 7/7/2009 0:00:00. Start Date: 12/31/9999 0:00:00.
522	X85-10616-30	RUBBER PIPE	1.00	Start Date: 11/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 6.4DX12.7DX160L. Interchangable with X85-10610-07.
523	263-68501-03	HOSE CLAMP	2	Start Date: 1/1/2008 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 11.4DX7.9BX0.7T.
540	011-00600-20	FLANGE BOLT	9	Start Date: 1/14/2009 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: M6X1.0X14DX12L.
610	263-63901-13	INNER ROTOR	1.00	Start Date: 4/1/2009 0:00:00. Start Date: 12/31/9999 0:00:00.
615	263-63902-13	OUTER ROTOR	1.00	Start Date: 4/1/2009 0:00:00. Start Date: 12/31/9999 0:00:00.
620	263-64002-01	OIL PUMP COVER CP	1.00	Start Code: 8433. Start Date: 2/1/2010 0:00:00. Start Date: 12/31/9999 0:00:00.
623	044-03501-70	OIL SEAL	1.00	Start Date: 6/1/2002 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 35DX48DX8B.
625	X24-08900-30	O RING	1.00	Start Date: 7/1/2003 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 88.2DX94.4D.


600 Fuel & Lubricant

Ref	Part Number.	Description	Qty	Remark
640	011-00600-30	FLANGE BOLT	4	Start Date: 1/14/2009 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: M6X1.0X14DX14L.
650	263-64302-02	OIL PUMP FILTER UN	1.00	Start Date: 11/22/2001 0:00:00. Start Date: 12/31/9999 0:00:00.
653	263-65011-A3	FLANGE BOLT	1.00	Start Date: 5/11/2005 0:00:00. Start Date: 12/31/9999 0:00:00.
660	248-65801-10	OIL FILTER AY	1.00	Start Date: 11/22/2001 0:00:00. Start Date: 12/31/9999 0:00:00.
670	263-65001-13	PLUG(OIL RELIEF)	1.00	Start Date: 1/14/2009 0:00:00. Start Date: 12/31/9999 0:00:00.
673	003-70140-00	GASKET,ALUMINUM	1	Start Date: 11/22/2001 0:00:00. Start Date: 12/31/9999 0:00:00.
677	263-66001-03	SPRING(RELIEF VALVE)	1.00	Start Date: 11/1/2004 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 7.8DX1DX25L N=8.5.
680	006-90308-00	STEEL BALL	1.00	Start Date: 11/22/2001 0:00:00. Start Date: 12/31/9999 0:00:00.
714	280-63602-A1	OIL FILLER CAP CP	1.00	Start Date: 11/22/2001 0:00:00. Start Date: 12/31/9999 0:00:00.
718	263-64414-A3	O RING	1.00	Start Date: 11/22/2001 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 26.6DX31.9D.

This Page Intentionally Left Blank

640 Carburetor

 FIG. 640

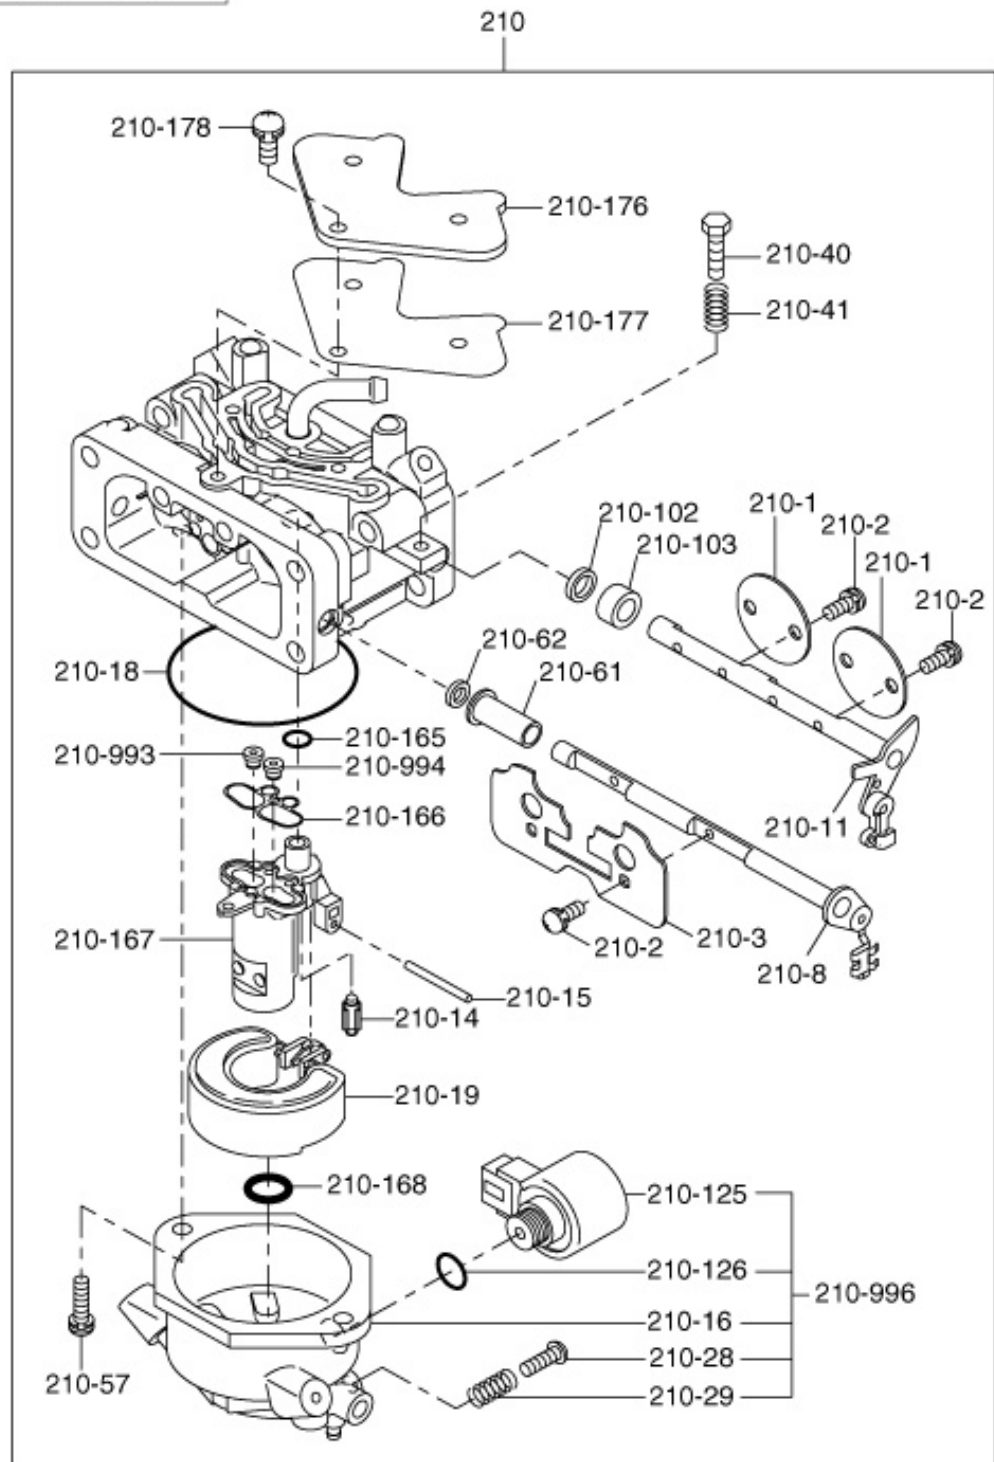


EH722

20K064000W00

640 Carburetor

Ref	Part Number.	Description	Qty	Remark
210	20K-62301-30	CARBURETOR AY	1	
1	20K-62536-08	VALVE,THROTTLE	2	
2	258-62555-08	SCREW SET(VALVE)	6	
3	20K-62525-08	VALVE,CHOKE	1	
8	20K-62520-08	SHAFT ASSY,CHOKE	1	
11	20K-62530-08	SHAFT COMPL,THROTTLE	1	
14	20K-62500-08	VALVE,FLOAT	1	
15	20K-62515-08	PIN,FLOAT	1	
16	20K-62556-08	CHAMBER ASSY,FLOAT	1	
18	20K-62540-08	GASKET,FLOAT CHAMBER	1	
19	263-62505-08	FLOAT	1	
28	215-62353-08	SCREW,DRAIN	1	
29	215-62446-08	SPRING,DRAIN	1	
40	20K-62553-08	SCREW,THROTTLE ADJUS	1	
41	258-62445-08	SPRING(ADJUST SCREW)	1	
57	20B-62453-08	SCREW	2	
61	20K-62560-08	COLLAR,CHOKE	1	
62	263-62574-08	SEAL,TH'SHAFT	1	
102	20K-62550-08	SEAL,THROTTLE	1	
103	20K-62551-08	COLLAR,THROTTLE	1	
125	20K-62557-08	VALVE COMPL,SOLENOID	1	
126	20B-62556-08	GASKET	1	
165	20B-62541-08	O RING	1	
166	20K-62541-08	GASKET,SPACER	1	
167	20K-62554-08	SPACER,CARB	1	
168	20K-62542-08	O-RING	1	
176	20K-62559-08	COVER,SLOW PASSAGE	1	
177	20K-62558-08	GASKET,SLOW PASSAGE	1	
178	107-62462-08	SCREW	3	
993	20K-62400-08	JET COML,MAIN(L)	1	
994	20K-62401-08	JET COML,MAIN(R)	1	
996	20K-62555-08	CHAMBER COMPL,FLOAT	1	

 685 Oil Cooler

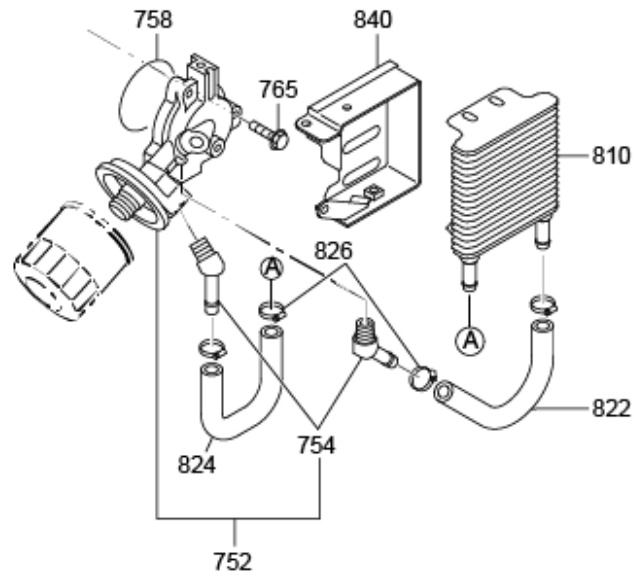


0685 0001 000

685 Oil Cooler

Ref	Part Number.	Description	Qty	Remark
752	280-65011-03	ADAPTER(OIL COOL) CP	1	
754	280-65025-A3	ELBOW ADAPTER 1	2	
758	024-05900-30	O RING	1	
765	011-00601-01	FLANGE BOLT	3	M6X1.0X13DX28L
810	280-65001-C1	OIL COOLER CP	1	
822	280-65037-03	HOSE 1, OIL COOLER	1	
824	280-65038-03	HOSE 2, OIL COOLER	1	
826	X56-10900-30	HOSE CLAMP	4	
840	280-65030-01	BRACKET CP, OIL COOLER	1	

700 Electric Device

 FIG. 700

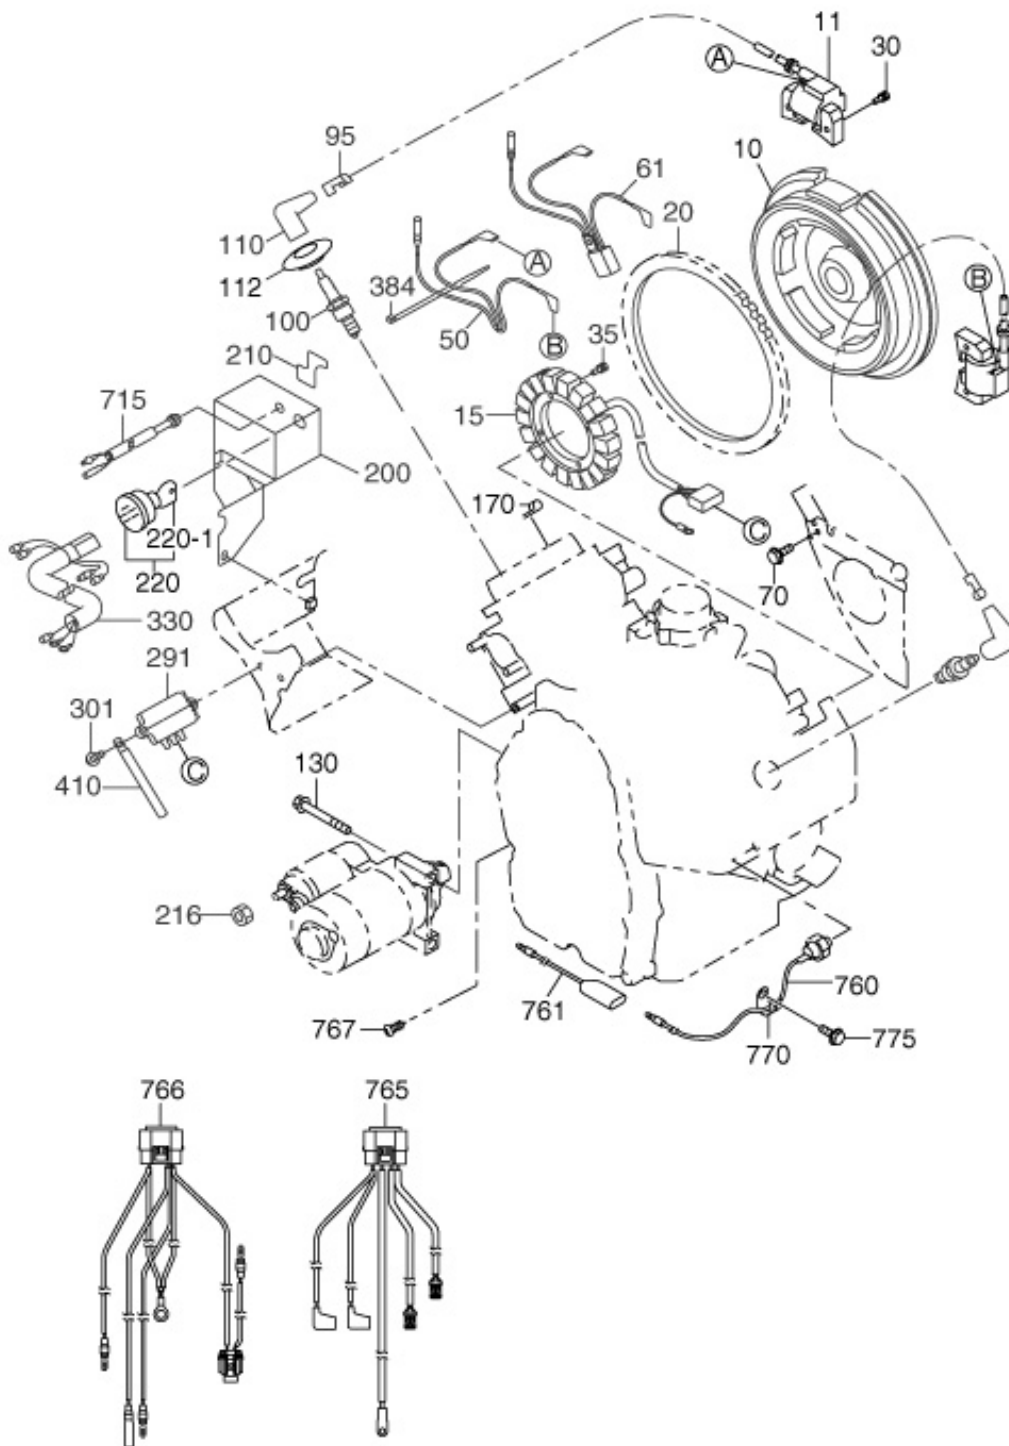

EH722


20K070000W00

700 Electric Device

Ref	Part Number.	Description	Qty	Remark
10	263-77207-01	FLYWHEEL CP	1	
11	263-78203-01	IGNITION COIL CP	2	
15	263-79402-B1	CHARGE COIL CP	1	
20	263-71002-H3	RING GEAR	1	
30	001-14062-50	BOLT AND WASHER AY	4	
35	001-16052-50	BOLT AND WASHER AY	4	
50	263-73126-H1	WIRE CP(IG.COIL)	1	
95	X65-91000-10	PLUG TERMINAL	2	
100	065-01402-80	SPARK PLUG	2	
110	X65-51000-10	SPARK PLUG CAP	2	
112	279-55201-03	GROMMET(PLUG CAP)	1	
130	011-00801-00	FLANGE BOLT	2	
216	002-38080-00	FLANGE NUT	1	
291	263-71902-A1	REGULATOR CP	1	
301	X11-00601-40	FLANGE BOLT	2	
330	263-73130-A1	WIRING HARNESS	1	
384	056-30000-10	WIRE BAND	3	
410	056-60002-50	CLAMP	1	
760	263-73102-11	WIRE AY(OIL PRE.SW.)	1	
761	280-73102-01	WIRE CP(FUEL CUT)	1	
770	206-75501-01	CLAMP CP	2	
775	011-00600-10	FLANGE BOLT	1	

720 Starter Motor

 FIG. 731

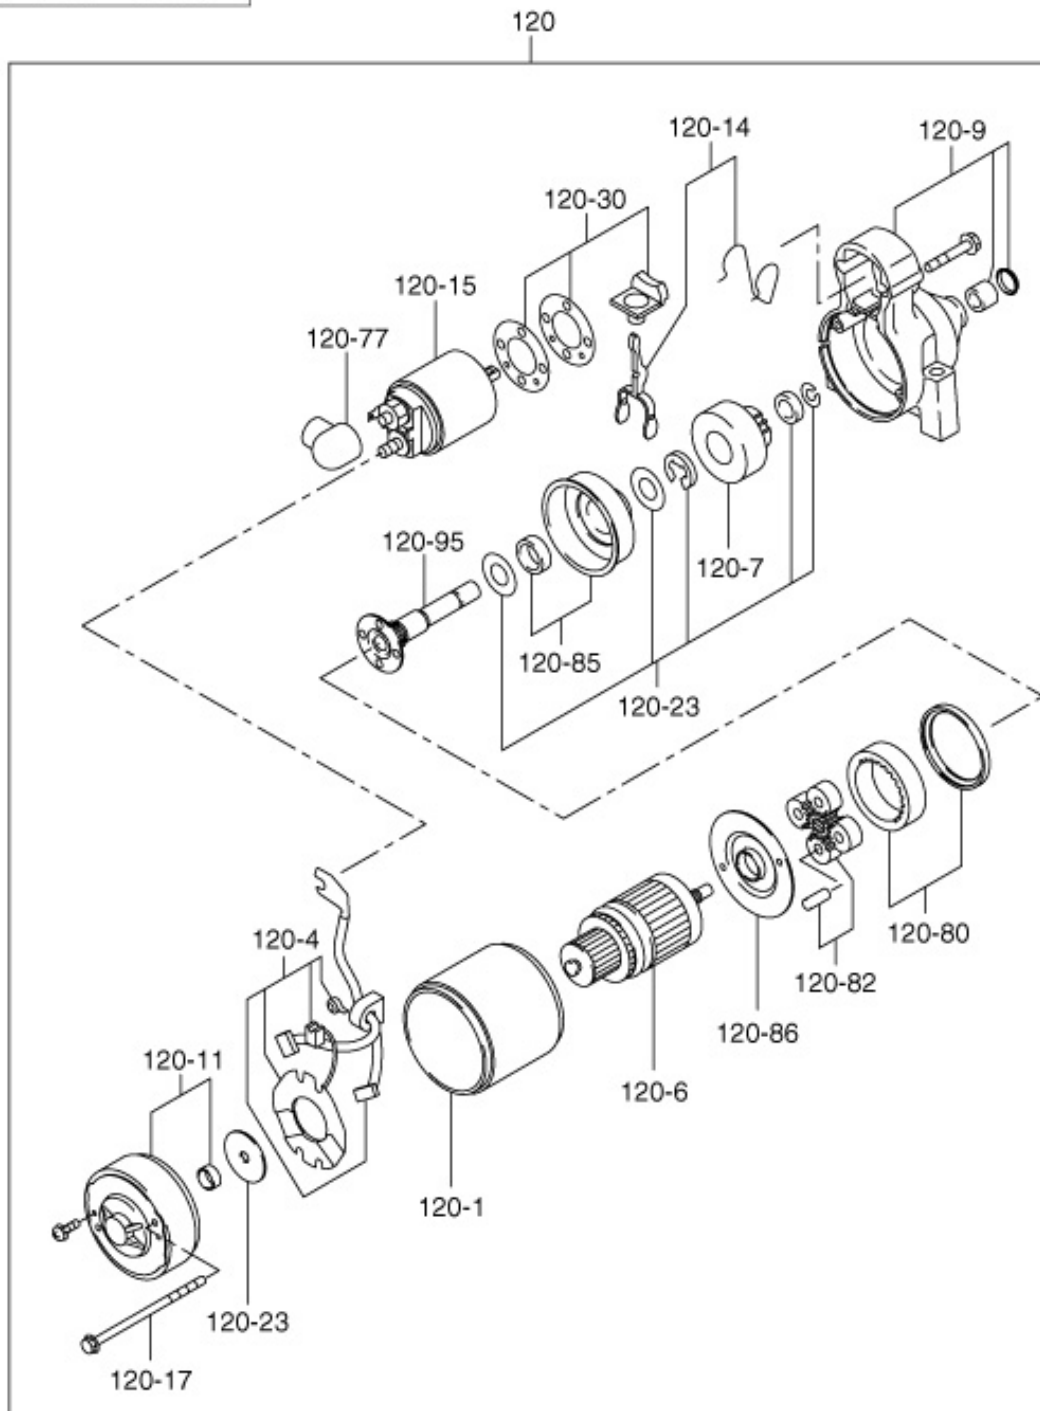

EH722

20K073100W00

720 Starter Motor

Ref	Part Number.	Description	Qty	Remark
120	263-70504-J0	STARTING MOTOR AY	1	
120	263-70561-08	YOKE AY	1	
120	245-70503-08	BRUSH HOLDER AY	1	
120	263-70512-08	ARMATURE AY	1	
120	263-70522-08	PINION AY	1	
120	263-70503-08	GEAR CASE AY	1	
120	263-70507-08	REAR COVER AY	1	
120	245-70518-08	SHIFT LEVER SET	1	
120	263-70515-08	MAGNETIC SWITCH AY	1	
120	207-70524-08	THROUGH BOLT	2	
120	245-70516-08	WASHER STOPPER SET	1	
120	245-70520-08	DUST COVER KIT	1	
120	207-70526-08	RUBBER CAP BS	1	
120	263-70596-08	INTERNAL GEAR	1	
120	263-70576-08	PLANET GEAR	3	
120	245-70509-08	CENTER BRACKET(P)	1	
120	263-70591-08	CENTER BRACKET (A)	1	
120	263-70571-08	PINION SHAFT	1	

Part Number Index

The Part Number Index is a numeric index of all part numbers included in this manual. The index shows what page(s) the part is used on.

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
001-05084-00	9	20K-62401-08	23	263-35801-03	11	280-38001-03	11
001-14061-60	17	20K-62500-08	23	263-37002-A3	11	280-46001-03	15
001-14062-50	27	20K-62515-08	23	263-42201-A3	15	280-46011-A3	15
001-14063-00	15	20K-62520-08	23	263-42301-B3	15	280-52721-01	17
001-16052-50	27	20K-62525-08	23	263-42501-13	15	280-63602-A1	20
001-17052-00	15	20K-62530-08	23	263-43901-A3	15	280-65001-C1	25
002-27050-00	15	20K-62536-08	23	263-45004-11	6	280-65011-03	25
002-35060-00	15	20K-62540-08	23	263-45011-A2	15	280-65025-A3	25
002-38060-00	11	20K-62541-08	23	263-46010-03	15	280-65030-01	25
002-38080-00	11, 27	20K-62542-08	23	263-46214-03	6	280-65037-03	25
003-10080-00	15	20K-62550-08	23	263-46215-A3	6	280-65038-03	25
003-10180-00	9	20K-62551-08	23	263-52622-01	17	280-66202-03	11
003-70140-00	20	20K-62553-08	23	263-52922-02	17	280-73102-01	27
005-11060-01	15	20K-62554-08	23	263-54101-H2	17	280-99001-17	6
005-32054-01	9	20K-62555-08	23	263-55601-03	5	X11-00601-40	27
006-90308-00	20	20K-62556-08	23	263-62505-08	23	X23-00801-50	15
010-50601-91	11	20K-62557-08	23	263-62574-08	23	X24-08900-30	19
010-50802-90	5	20K-62558-08	23	263-63603-01	19	X42-30600-30	11
011-00600-10	27	20K-62559-08	23	263-63901-13	19	X56-10900-30	25
011-00600-20	11, 15, 17, 19	20K-62560-08	23	263-63902-13	19	X60-04500-20	5
011-00600-30	5, 17, 20	20K-91704-03	11	263-64002-01	19	X65-51000-10	27
011-00601-01	5, 25	215-62353-08	23	263-64302-02	20	X65-91000-10	27
011-00801-00	27	215-62446-08	23	263-64414-A3	20	X84-14320-00	15
011-00802-20	5	226-43101-01	15	263-65001-13	20	X85-10613-81	19
011-01000-70	5	227-43501-13	15	263-65002-A3	19	X85-10615-42	19
011-50500-20	15	227-45002-03	15	263-65011-A3	20	X85-10616-30	19
015-20500-10	15	235-15421-03	5	263-65012-A3	19		
017-00601-10	11	245-70503-08	29	263-66001-03	20		
018-01800-10	9	245-70509-08	29	263-68501-03	19		
018-60600-20	15	245-70516-08	29	263-70503-08	29		
021-11400-20	5	245-70518-08	29	263-70504-J0	29		
021-70600-30	15	245-70520-08	29	263-70507-08	29		
024-05900-30	25	246-33611-03	11	263-70512-08	29		
031-00600-20	5	246-33711-13	11	263-70515-08	29		
031-00801-10	5	246-35501-03	11	263-70522-08	29		
040-11400-30	5	247-23501-17	9	263-70561-08	29		
044-00800-10	5	248-65801-10	20	263-70571-08	29		
044-03501-70	19	258-62445-08	23	263-70576-08	29		
044-04200-30	5	258-62555-08	23	263-70591-08	29		
056-12000-20	11	261-43901-03	15	263-70596-08	29		
056-30000-10	27	261-45201-03	15	263-71002-H3	27		
056-51000-50	5	263-11004-41	5	263-71902-A1	27		
056-52100-20	9	263-14202-03	5	263-73102-11	27		
056-60002-50	27	263-14302-03	5	263-73126-H1	27		
065-01402-80	27	263-14412-A3	5	263-73130-A1	27		
073-20057-20	17	263-15503-03	5	263-76002-A1	5		
073-20057-60	17	263-15505-03	5	263-77207-01	27		
073-20058-60	17	263-15805-03	5	263-78203-01	27		
085-10301-10	19	263-16002-A3	6	263-79402-B1	27		
107-62462-08	23	263-16007-03	5	267-35701-03	11		
132-11AA1-10	5	263-16111-03	5	267-36102-03	11		
206-75501-01	19, 27	263-19111-03	5	267-62201-10	19		
207-70524-08	29	263-21111-11	9	270-35201-01	11		
207-70526-08	29	263-22601-30	9	277-41902-01	6		
20B-62453-08	23	263-23301-33	9	279-55201-03	27		
20B-62541-08	23	263-25022-03	9	280-10101-21	5		
20B-62556-08	23	263-25023-03	9	280-14411-01	5		
20K-13001-11	5	263-25024-03	9	280-15001-23	5		
20K-13101-11	5	263-32610-A1	13	280-15101-23	5		
20K-32601-A0	13	263-32630-03	13	280-18001-03	11		
20K-42701-03	15	263-32640-01	13	280-19001-03	5		
20K-42801-03	15	263-33301-A3	11	280-23411-H3	9		
20K-43301-A3	15	263-33401-H3	11	280-31801-03	11		
20K-51206-J2	17	263-33502-H3	11	280-32626-A1	13		
20K-52801-02	17	263-35331-01	11	280-33005-H1	11		
20K-62301-30	23	263-35341-03	5	280-35501-03	11		
20K-62400-08	23	263-35513-03	11	280-35622-03	11		

Part Description Index

The Part Description Index is an alphabetical index of all part descriptions included in this manual. The index shows what page(s) the part is used on.

A

ADAPTER(OIL COOL) CP.....25
AIR CLEANER AY.....13
ARMATURE AY.....29

B

BALL BEARING.....5
BLIND PLUG CP.....5
BLOWER HOUSING UN.....17
BOLT.....15
BOLT AND WASHER AY.....15, 17, 27
BOLT(PIVOT).....11
BRACKET CP, OIL COOLER.....25
BRACKET UN(SPD CTL).....15
BRACKET(FUEL PUMP).....19
BREATHER COVER.....5
BREATHER PIPE.....11
BREATHER PLATE CP.....5
BRUSH HOLDER AY.....29

C

CAM SHAFT.....11
CAP(VINYL).....11
CARBURETOR AY.....23
CENTER BRACKET (A).....29
CENTER BRACKET(P).....29
CHAMBER ASSY,FLOAT.....23
CHAMBER COMPL,FLOAT.....23
CHARGE COIL CP.....27
CHOKE CONTROL LINK.....15
CHOKE CONTROL ROD.....15
CHOKE KNOB.....15
CLAMP.....15, 27
CLAMP CP.....19, 27
CLAMP(CHOKE KNOB).....15
CLEANER ADAPTER.....11
CLEANER BASE CP.....13
CLEANER COVER.....13
CLEANER ELEMENT CP.....13
CLIP.....5, 9
COLLAR,CHOKE.....23
COLLAR,THROTTLE.....23
COLLET-VALVE.....11
CONNECTING ROD AY.....9
COOLING BLOWER UN.....17
COVER,SLOW PASSAGE.....23
CRANKCASE CP.....5
CRANKSHAFT CP.....9
CYLINDER BAFFLE 1 CP.....17
CYLINDER BAFFLE 2 CP.....17
CYLINDER BAFFLE 3 UN.....17
CYLINDER BAFFLE 4 UN.....17
CYLINDER HEAD 1 CP.....5
CYLINDER HEAD 2 CP.....5

D

DOWEL PIN.....5

DUST COVER KIT.....29

E

ELBOW ADAPTER 1.....25
EXHAUST VALVE.....11

F

FILTER,FUEL.....19
FLANGE BOLT.....5, 9, 11, 15, 17, 19-20, 25, 27
FLANGE NUT.....9, 11, 27
FLOAT.....23
FLYWHEEL CP.....27
FRICTION WASHER.....15
FUEL PUMP AY.....19

G

GASKET.....5, 23
GASKET (M.B COVER).....6
GASKET 1 (CYL HEAD).....5
GASKET 2 (CYL HEAD).....5
GASKET CP (MUFFLER).....11
GASKET SET.....6
GASKET(ADAPTER).....11
GASKET(BREATHERPLATE).....5
GASKET(CARBURETOR).....11
GASKET(CLEANER).....11
GASKET(IN MANIFOLD).....11
GASKET(ROCKER COVER).....5
GASKET,ALUMINUM.....20
GASKET,FLOAT CHAMBER.....23
GASKET,SLOW PASSAGE.....23
GASKET,SPACER.....23
GAUGE C/OIL LEVEL.....19
GEAR CASE AY.....29
GOVERNOR GEAR CP.....6
GOVERNOR LEVER CP.....15
GOVERNOR ROD.....15
GOVERNOR ROD SPRING.....15
GOVERNOR SHAFT.....15
GOVERNOR SLEEVE CP.....6
GOVERNOR SPRING.....15
GROMMET(PLUG CAP).....27
GUIDE PLATE.....11

H

HOOK.....5
HOSE 1, OIL COOLER.....25
HOSE 2, OIL COOLER.....25
HOSE CLAMP.....11, 19, 25

I

IGNITION COIL CP.....27
INNER ROTOR.....19
INTAKE MANIFOLD CP.....11
INTAKE VALVE.....11
INTERNAL GEAR.....29

J

JET COML,MAIN(L).....23
JET COML,MAIN(R).....23

L

LABEL(FI).....17
LABEL(TRADE MARK).....11
LABEL(WARNING).....17
LINK PIVOT CP.....15

M

MAGNETIC SWITCH AY.....29
MAIN BEARING.....5
MAINBEARING COVER CP.....5

N

NUT.....11, 15

O

O RING.....19-20, 23, 25
O-RING.....23
OIL COOLER CP.....25
OIL FILLER CAP CP.....20
OIL FILTER AY.....20
OIL PUMP COVER CP.....19
OIL PUMP FILTER UN.....20
OIL SEAL.....5, 19
OUTER ROTOR.....19

P

PIN,FLOAT.....23
PINION AY.....29
PINION SHAFT.....29
PIPE.....5
PISTON.....9
PISTON PIN.....9
PISTON RING SET.....9
PIVOT.....11
PLANET GEAR.....29
PLUG.....5
PLUG (PULSE PIPE HOLE).....5
PLUG TERMINAL.....27
PLUG(OIL RELIEF).....20
PUSH ROD CP.....11

R

REAR COVER AY.....29
REGULATOR CP.....27
RETAINER PLATE.....5
RETURN SPRING.....15
RING GEAR.....27
ROCKER ARM.....11
ROCKER COVER.....5
RUBBER CAP BS.....29
RUBBER FOAM.....15

Part Description Index (continued)

RUBBER PIPE.....19

S

SCREW.....23
SCREW SET(VAIVE).....23
SCREW,DRAIN.....23
SCREW,THROTTLE ADJUS.....23
SEAL,TH'SHAFT.....23
SEAL,THROTTLE.....23
SEAL-EXH VALVE.....5
SELF LOCK NUT.....15
SHAFT ASSY,CHOKE.....23
SHAFT COMPL,THROTTLE.....23
SHIFT LEVER SET.....29
SNAP PIN.....15
SPACER.....15
SPACER (0.8).....9
SPACER (1.0).....9
SPACER (1.2).....9
SPACER,CARB.....23
SPARK PLUG.....27
SPARK PLUG CAP.....27
SPEED CONTROL LEVER.....15
SPRING RETAINER.....11
SPRING WASHER.....15
SPRING(ADJUST SCREW).....23
SPRING(RELIEF VALVE).....20
SPRING,DRAIN.....23
STARTING MOTOR AY.....29
STEEL BALL.....20
STOP PLATE.....15
STUD.....5, 11
SWITCH OIL PRESSURE.....5

T

TAPPET.....11
TAPPING SCREW.....15
THROUGH BOLT.....29
THRUST BEARING.....6

V

VALVE COMPL,SOLENOID.....23
VALVE GUIDE.....5
VALVE SPRING.....11
VALVE,CHOKE.....23
VALVE,FLOAT.....23
VALVE,THROTTLE.....23

W

WASHER.....6, 9, 15
WASHER STOPPER SET.....29
WING NUT.....13
WIRE AY(OIL PRE.SW.).....27
WIRE BAND.....27
WIRE CP(FUEL CUT).....27
WIRE CP(IG.COIL).....27
WIRING HARNESS.....27
WOODRUFF KEY.....9

Y

YOKE AY.....29

This Page Intentionally Left Blank

PRINTED IN THE USA

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047

Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com