

OEM PARTS MANUAL

Model

EC04ER*0209

**Coleman
ENGINE**

PUB-EP1343
Rev. 7/99

GROUP INDEX

Group Name	Page
CRANKCASE & CYLINDER GROUP	4
CRANKSHAFT & PISTON GROUP	6
AIR CLEANER GROUP	8
COOLING and STARTING GROUP	10
FUEL GROUP	12
ELECTRIC DEVICE GROUP	14

INDEX OF DESCRIPTION SYMBOLS			
SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
AY	ASSEMBLY	P=	PITCH (in mm)
CP	COMPLETE	P.T.O. (PTO)	POWER TAKE OFF
EX	EXPORT (from Japan)	REF.	REFERENCE
FIG.	FIGURE	R.H. (RH)	RIGHT HAND SIDE
FR.	FRONT	RR.	REAR
"	INCH	STD.	STANDARD
INCL.	INCLUDE	SW	SWITCH
~L	LITER	T=	THICKNESS (in mm)
L=	LENGTH (in. mm)	UN	UNIT
L.H. (LH)	LEFT-HAND SIDE	U.S.	UNDER SIZE
MECH	MECHANICAL	~V	VOLTAGE
NO (NON)	NONE	~W	WATT
OPT.	OPTIONAL	W/	WITH
O.S.	OVER SIZE	W/O	WITHOUT


Robin America, Inc.

940 Lively Blvd. • Wood Dale, IL 60191 • Phone: 630-350-8200 • Fax: 630-350-8212
e-mail: sales@robinamerica.com • www.robinamerica.com

© Robin America, Inc., 1999

SECTION 1 CRANKCASE & CYLINDER GROUP

FIG. 100

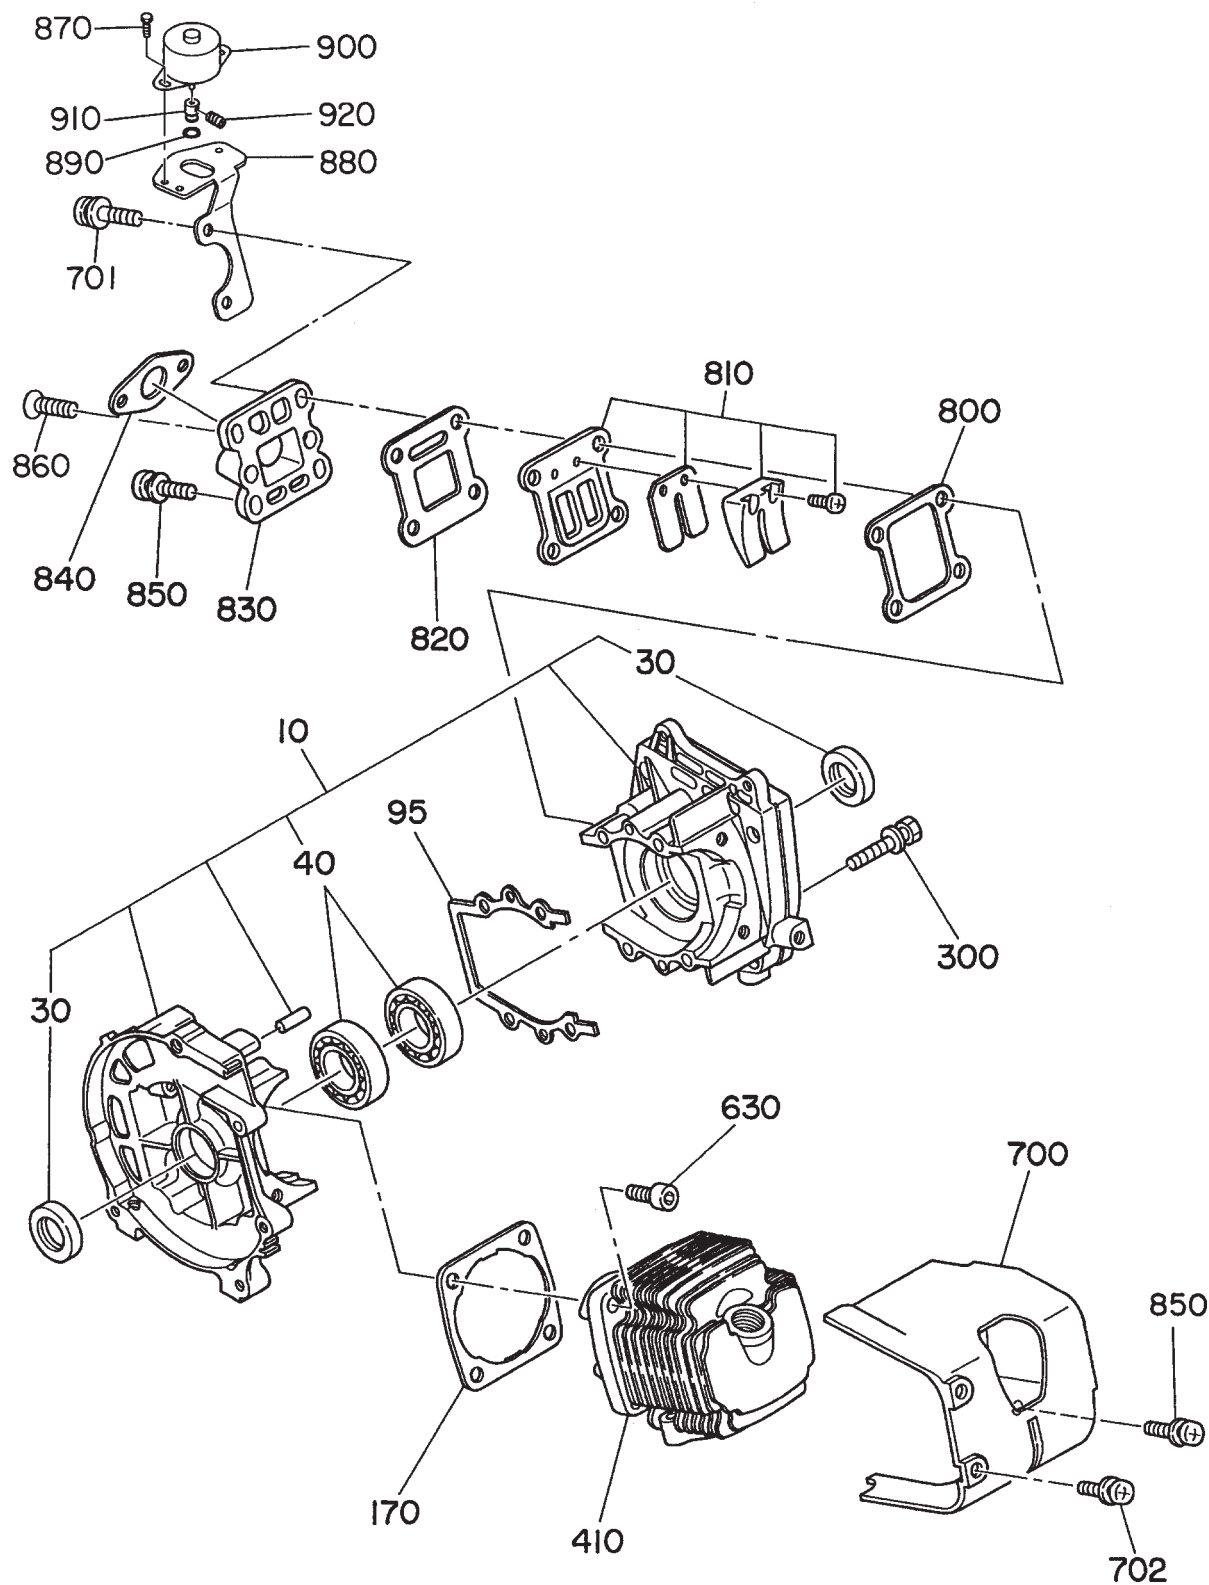


SECTION 1 CRANKCASE & CYLINDER GROUP

↯ Interchangeability

[illegible]

FIG. 200

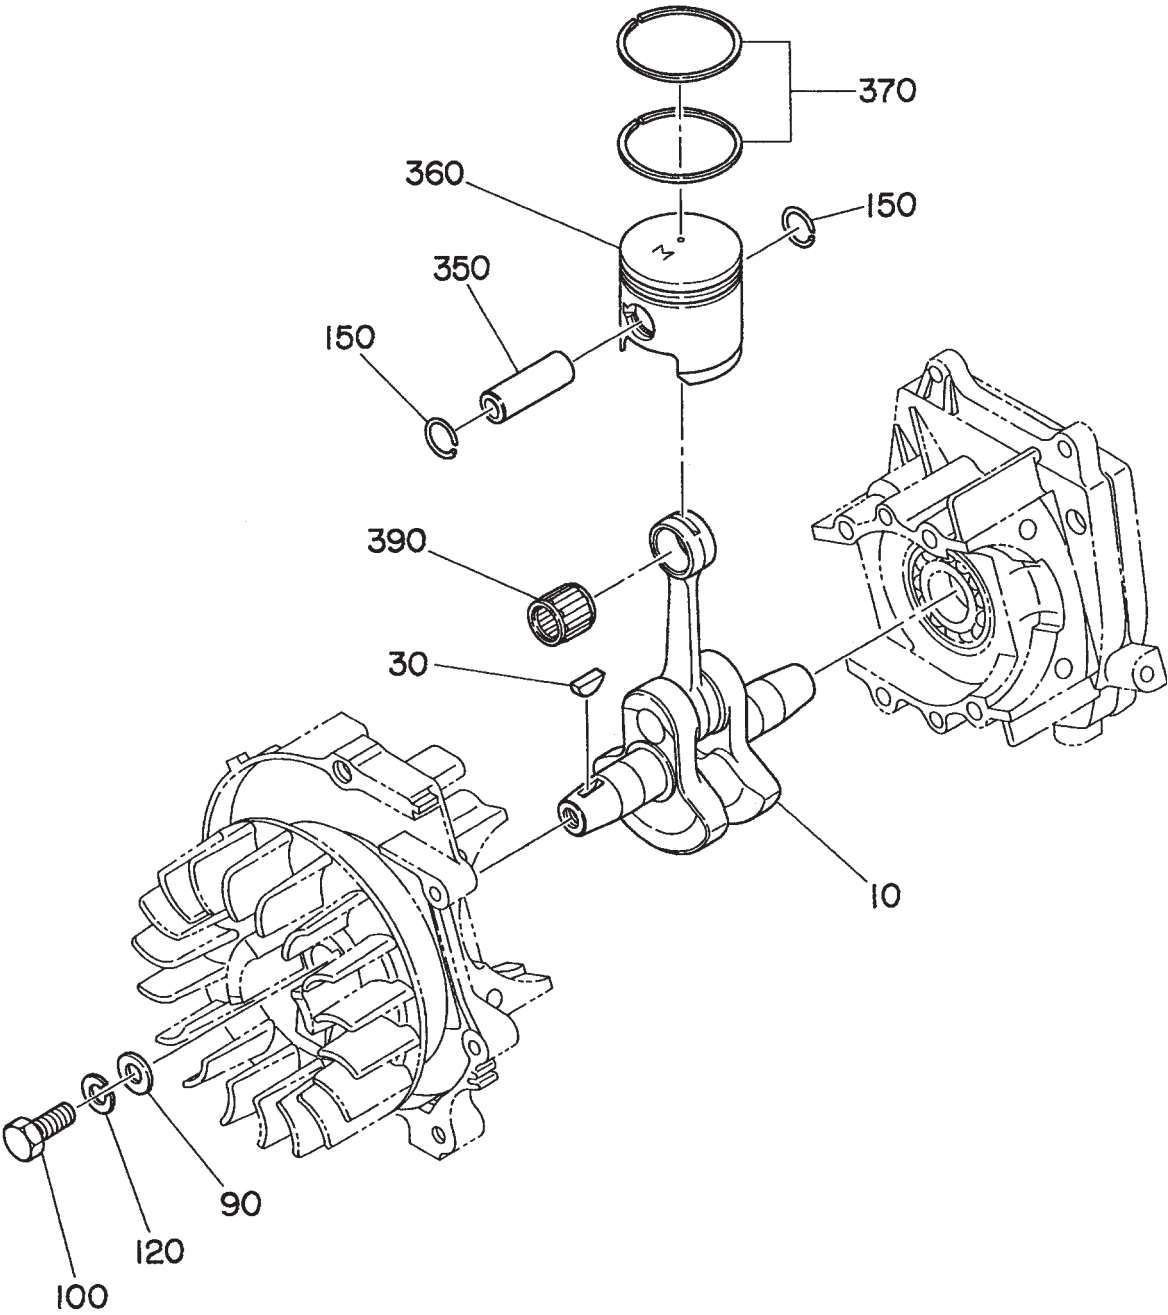


SECTION 2

CRANKSHAFT & PISTON GROUP

↯ Interchangeability

[illegible]

FIG. 300

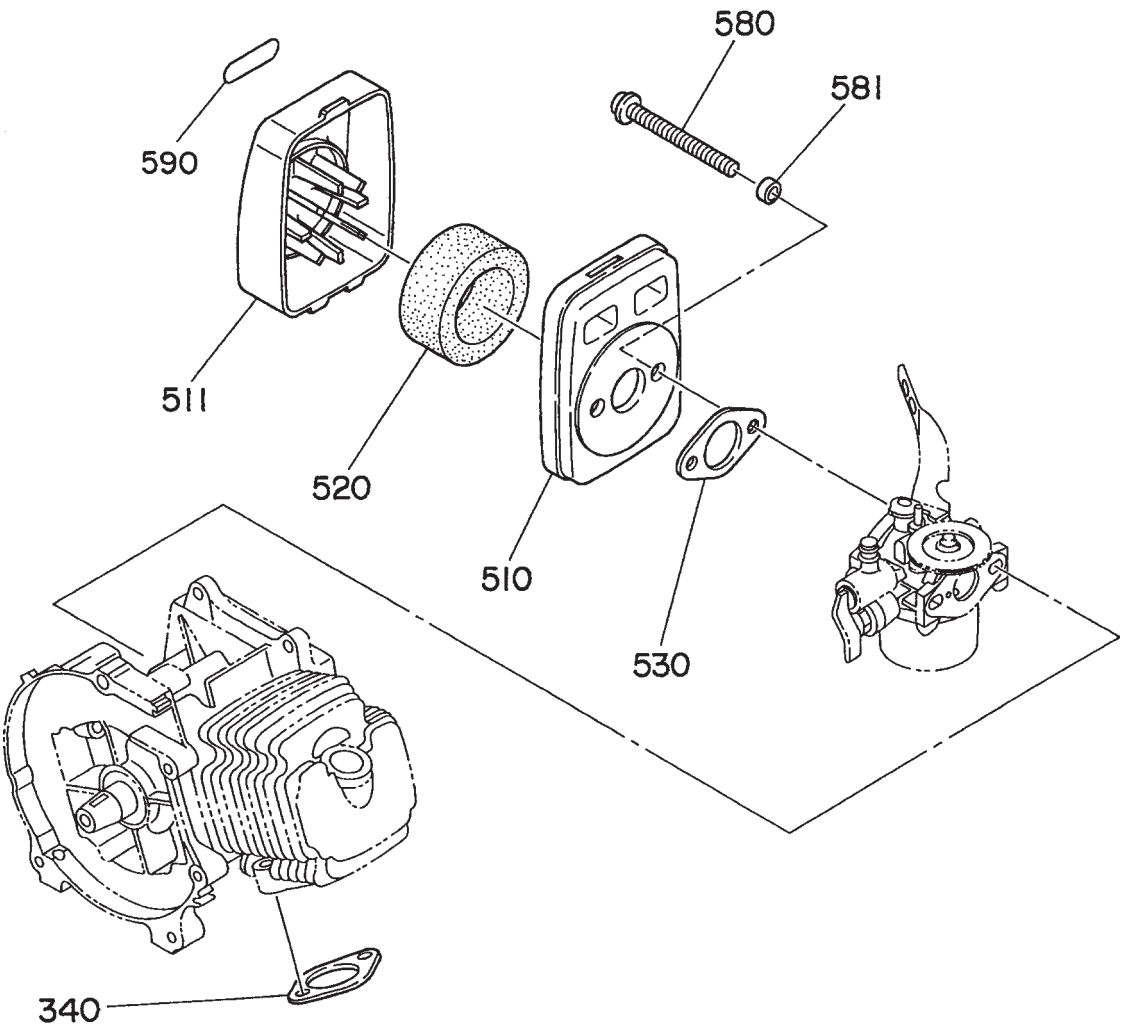


SECTION 3 AIR CLEANER GROUP

↯ Interchangeability

[illegible]

FIG. 500

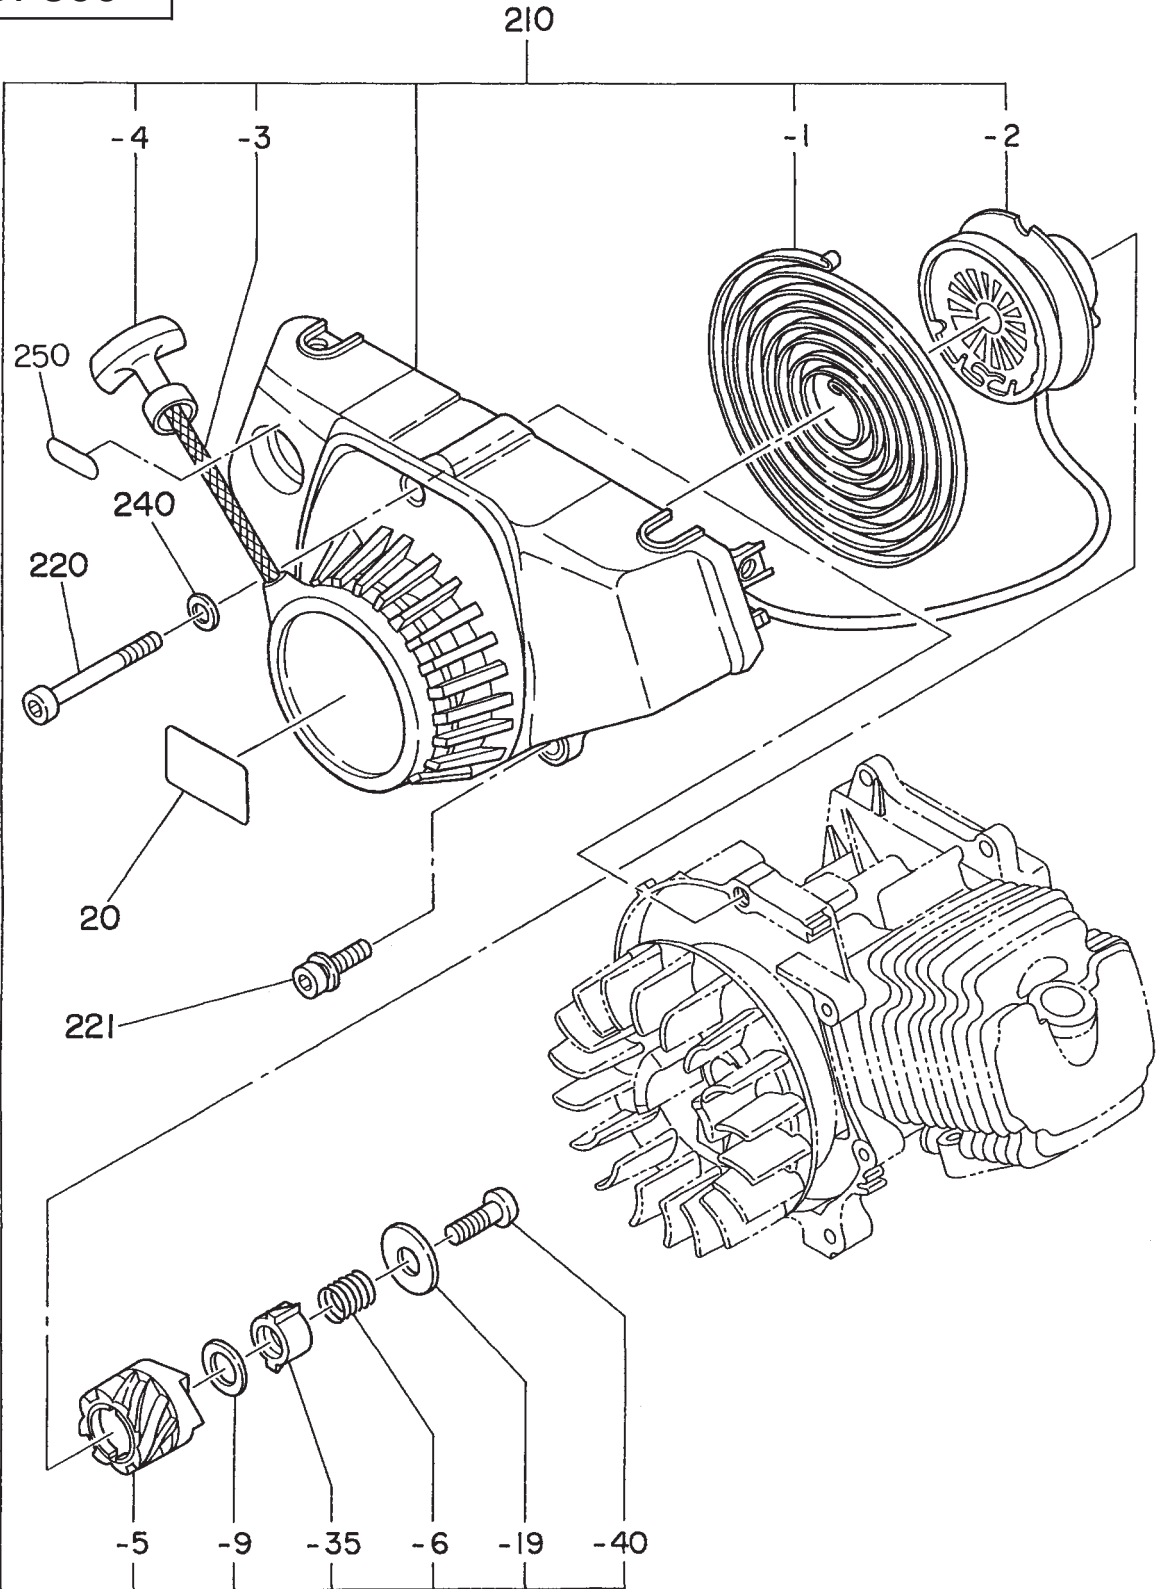


SECTION 5 COOLING and STARTING GROUP

↯ Interchangeability

[illegible]

FIG. 600

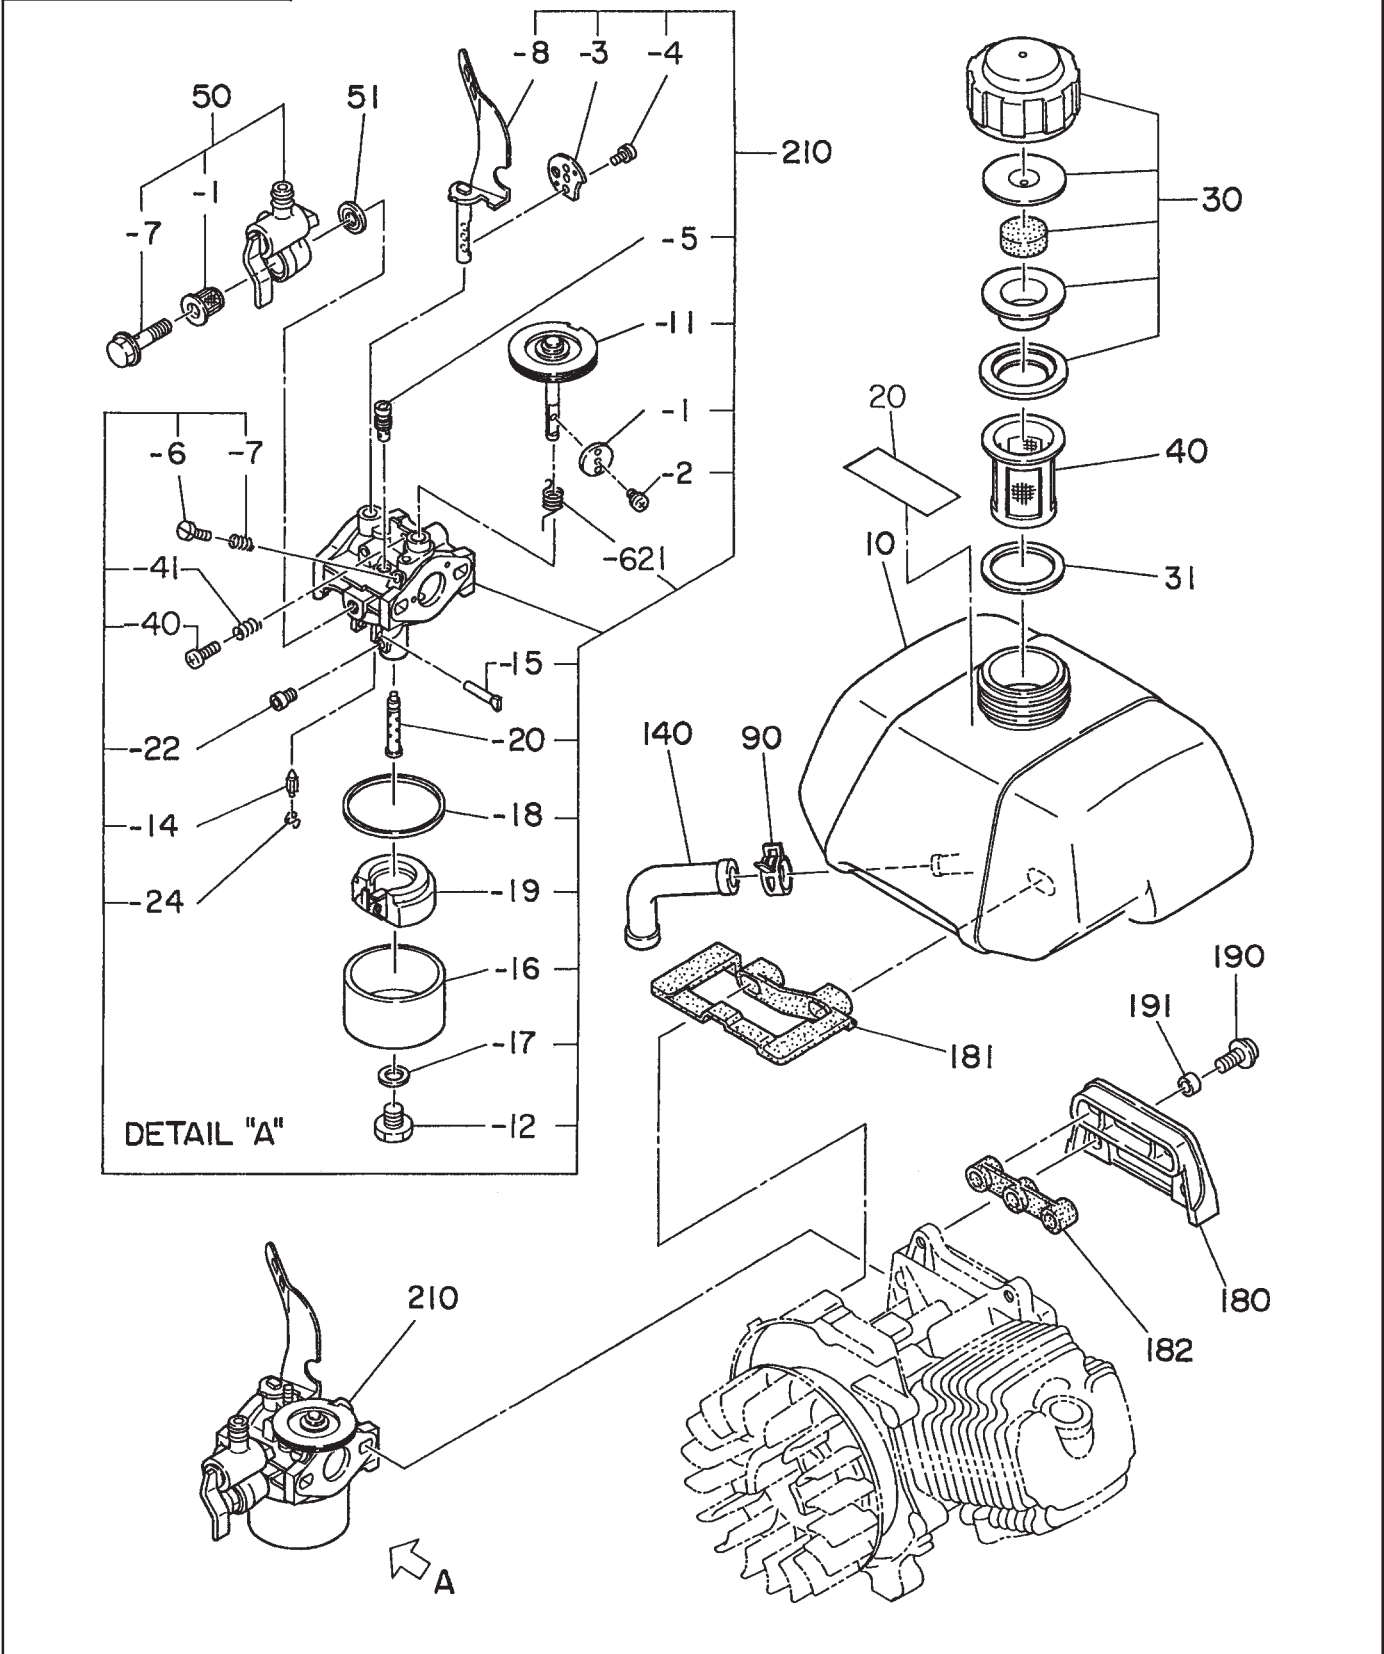


FUEL GROUP

↯ Interchangeability

[illegible]

FIG. 700

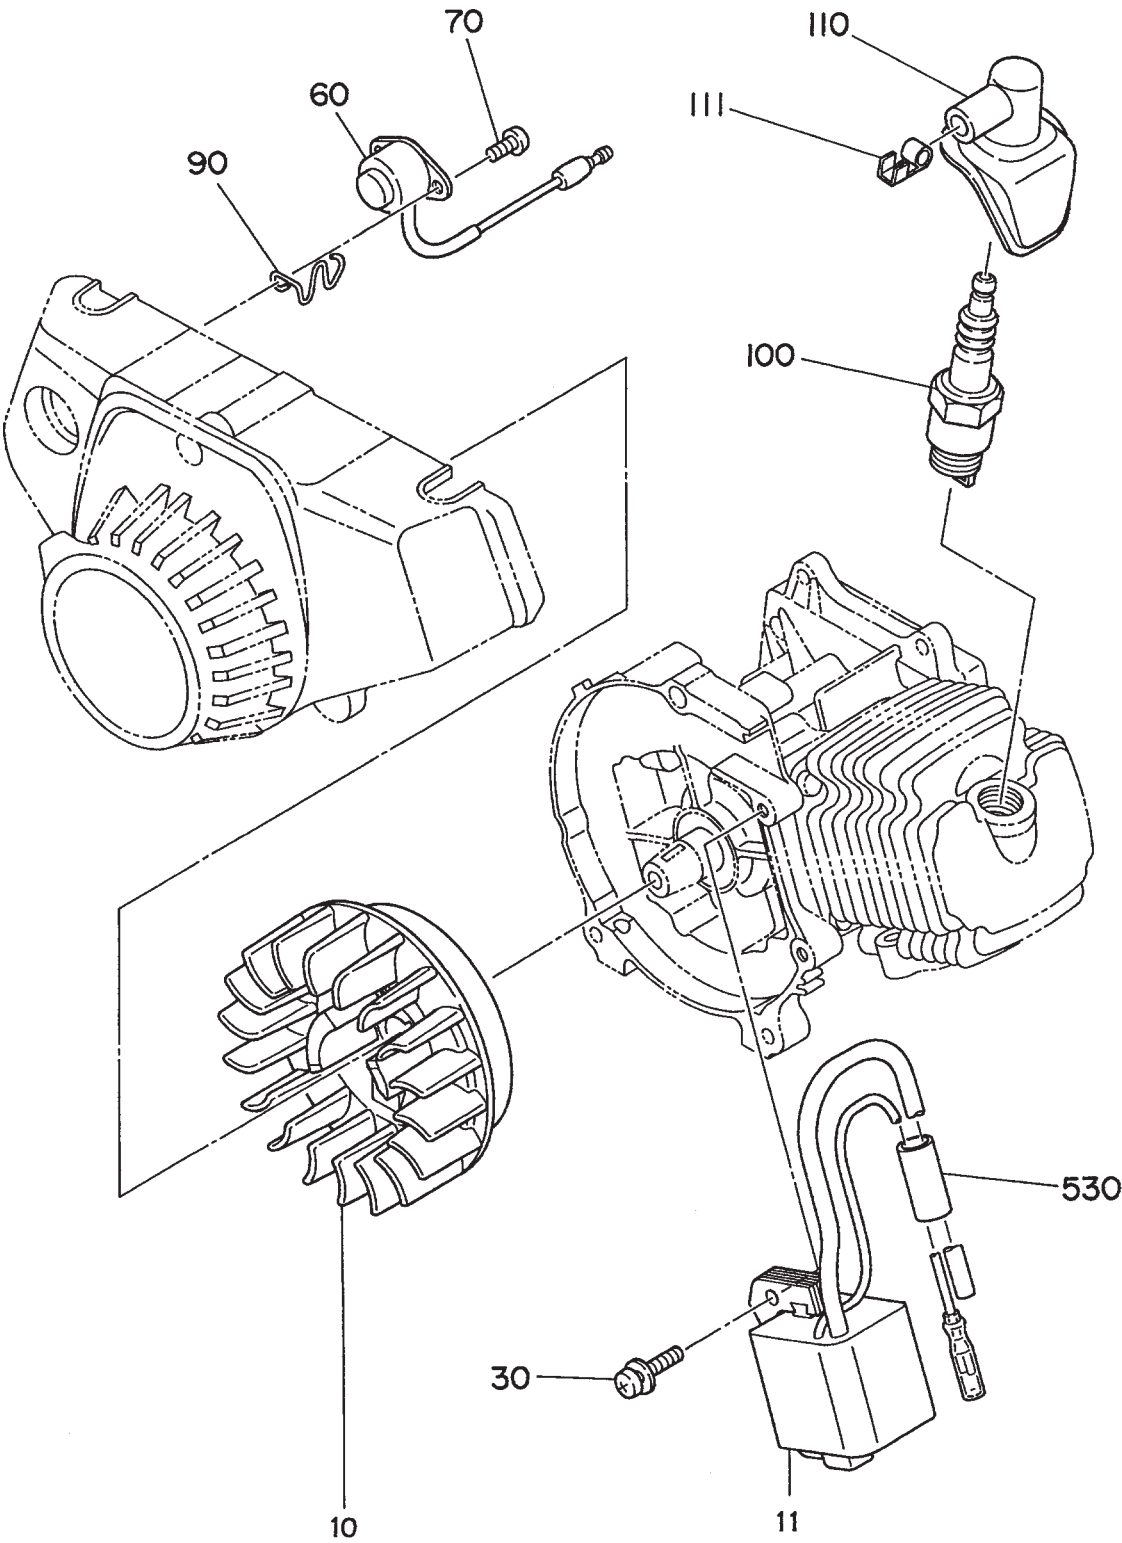

SECTION 7

ELECTRIC DEVICE GROUP

↓ Interchangeability

[illegible]

PRINTED IN THE USA