

PARTS MANUAL

MODEL
EH10

EH100F47003

12/15



SUBARU

Industrial Power Products

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047 - Phone 847-540-7300 - Fax 847-438-5012


e-mail: sales@subarupower.com - www.subarupower.com

© 2015 Subaru Industrial Power Products

Group Index

Group Name	Page
100 Crankcase.....	4
200 Crankshaft.....	6
300 Intake & Exhaust.....	8
400 Governor.....	10
500 Cooling & Starting.....	12
640 Fuel & Lubricant.....	14
700 Electric Device.....	16
900 Accessory.....	18
Part Number Index.....	20
Part Description Index.....	21

100 Crankcase

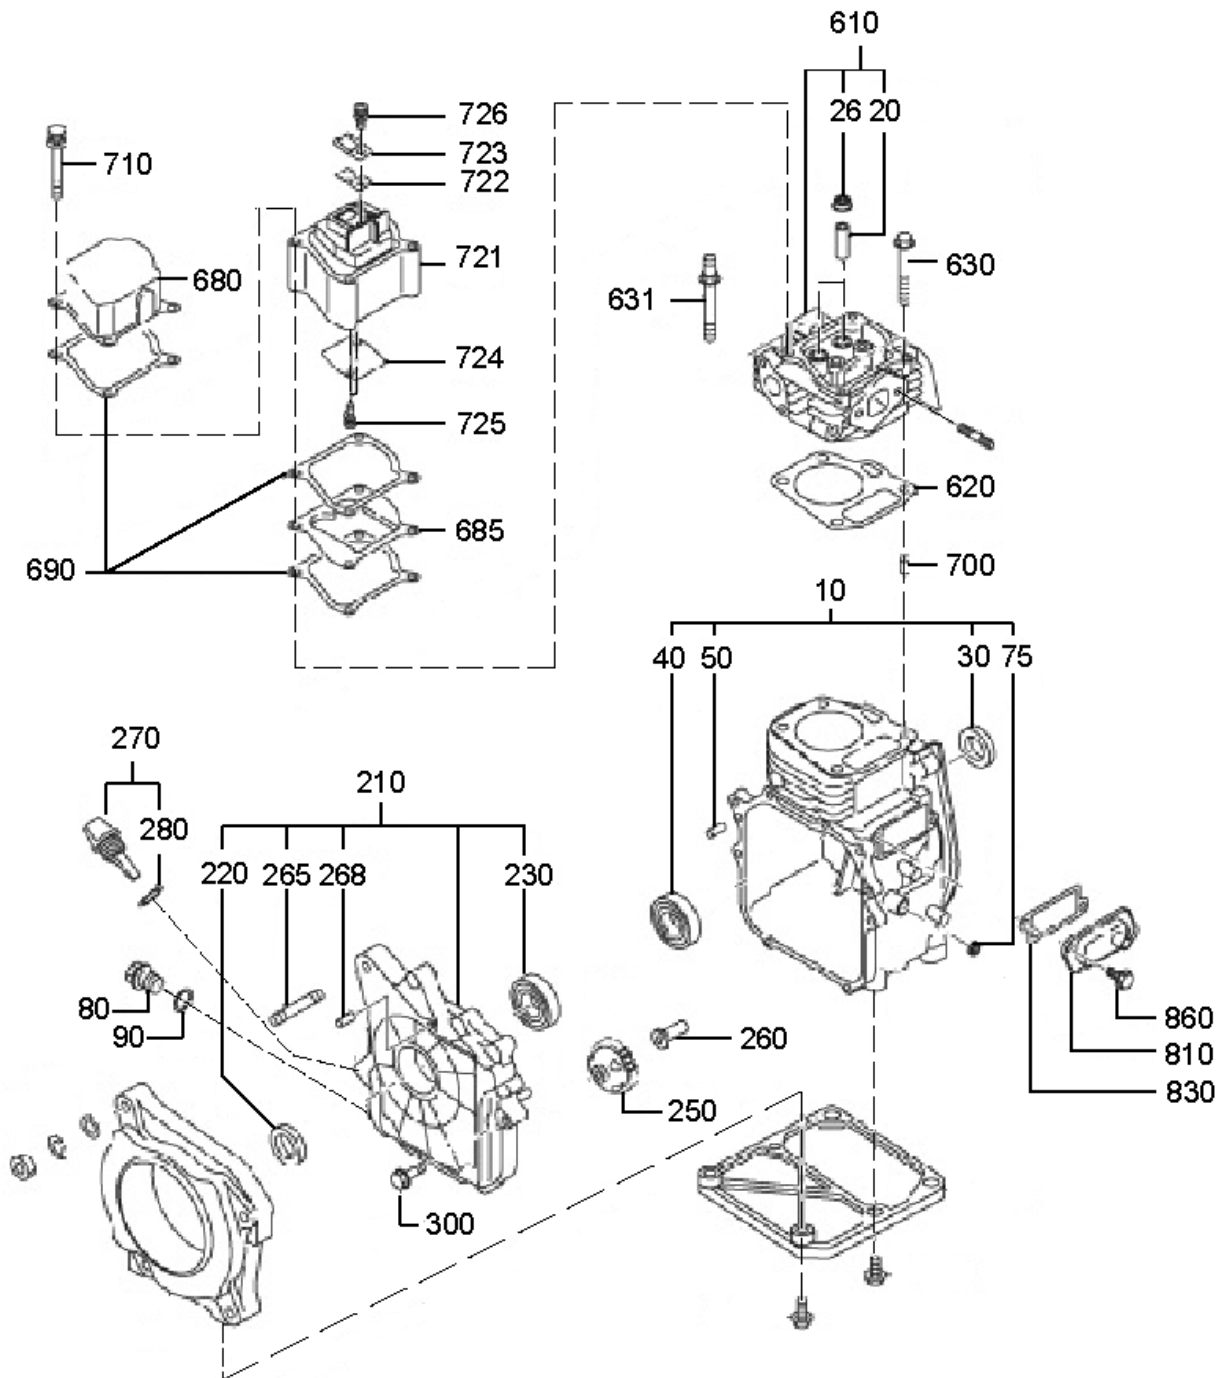


20G010000W00

100 Crankcase

Ref	Part Number.	Description	Qty	Remark
10	20G-10102-21	CRANKCASE CP	1	
20	237-14202-03	VALVE GUIDE	2	
26	20F-16010-01	STEM SEAL	1	
30	044-02000-70	OIL SEAL	1	
40	060-02001-40	BALL BEARING	1	
50	031-00600-20	DOWEL PIN	2	
75	044-00600-20	OIL SEAL	1	
80	040-11400-30	PLUG	1	
90	021-11400-20	GASKET	1	
210	20F-11101-41	MAINBEARING COVER CP	1	
220	044-02001-10	OIL SEAL	1	
230	060-02001-40	BALL BEARING	1	
250	230-45003-01	GOVERNOR GEAR CP	1	
260	205-41901-03	GOVERNOR SLEEVE	1	
265	001-39085-00	STUD	4	
268	031-00600-20	DOWEL PIN	2	
270	20F-63601-11	OIL GAUGE CP	1	
280	X21-31600-30	GASKET	1	
300	013-00602-00	BOLT AND WASHER AY	9	
610	20G-13002-20	CYLINDER HEAD AY	1	
620	293-15001-03	GASKET(HEAD)	1	
630	011-00700-10	FLANGE BOLT	2	
631	20G-00700-20	BOLT	2	
680	20F-15502-03	ROCKER COVER	1	
685	20F-14502-03	OIL SHELTER PLATE 2	1	
690	284-16007-03	GASKET (ROCKER COVER)	3	
700	20F-15011-03	PIPE KNOCK	2	
710	20F-00607-40	FLANGE BOLT	4	
721	20F-15602-13	BREATHER PLATE	1	
722	284-16001-03	LEAF VALVE	2	
723	284-16002-03	RETAINER PLATE	1	
724	20G-14501-03	OIL SHELTER PLATE 1	1	
725	013-10500-20	SCREW AND WASHER AY	2	
726	013-10500-20	SCREW AND WASHER AY	1	
810	284-17001-03	COVER (CASE)	1	
830	284-16008-03	GASKET(TAPPET COVER)	1	
860	001-14061-60	BOLT AND WASHER AY	2	

200 Crankshaft

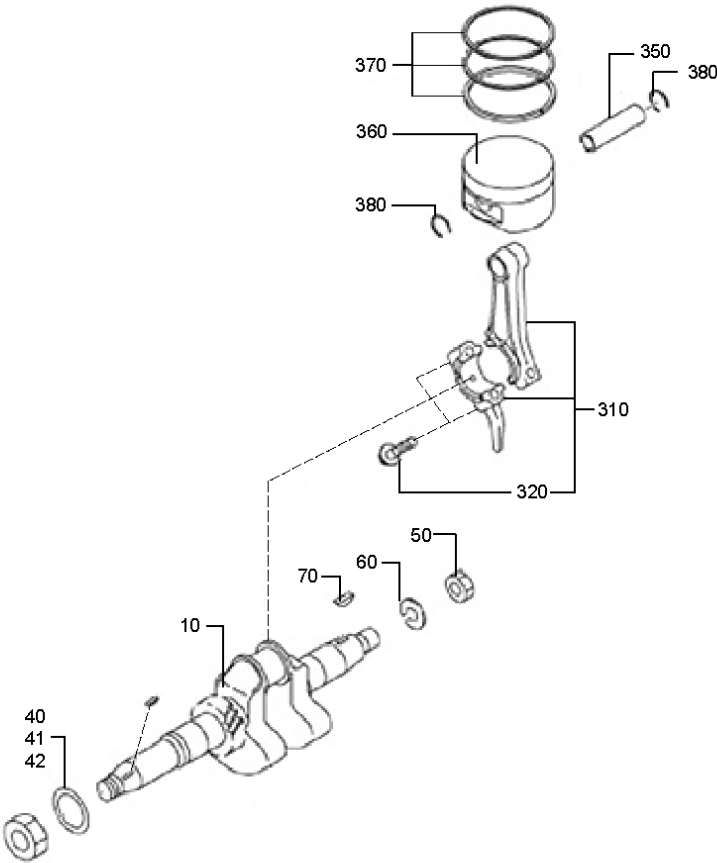


20G020000W00

200 Crankshaft

Ref	Part Number.	Description	Qty	Remark
10	20G-20201-31	CRANKSHAFT CP	1	
40	023-02001-00	SPACER	1	
41	023-02001-10	SPACER	1	
42	023-02001-20	SPACER	1	
50	002-18140-00	NUT	1	
60	X20-31400-20	SPRING WASHER	1	
70	005-32031-01	WOODRUFF KEY	1	
310	20F-22501-30	CONNECTING ROD AY	1	
320	20F-23001-03	CONNECTING ROD BOLT	2	
350	20F-23301-03	PISTON PIN	1	
360	20G-23401-H3	PISTON	1	
370	293-23511-07	PISTON RING SET	1	
380	056-51100-10	CLIP	2	

300 Intake & Exhaust

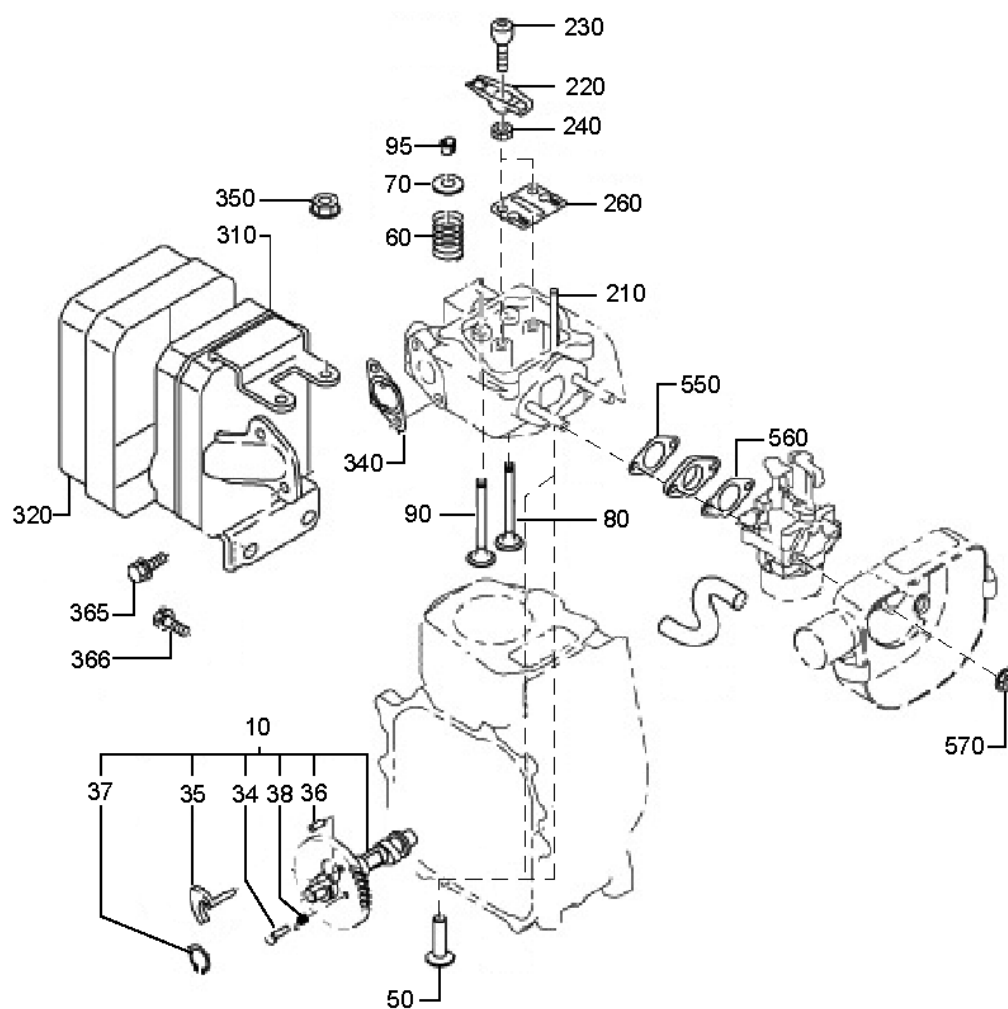


20G030000W00

300 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
10	20F-31702-21	CAMSHAFT CP	1	
34	227-38601-23	PIN (SPRING)	1	
35	20F-36401-03	RELEASE LEVER	1	
36	20F-19041-00	SPRING PIN	1	
37	20F-15170-00	SNAP RING OUT	1	
38	20F-38701-23	RETURN SPRING	1	
50	274-33301-03	TAPPET	2	
60	20F-33601-03	VALVE SPRING	2	
70	20F-33702-03	SPRING RETAINER	2	
80	293-33401-03	INTAKE VALVE	1	
90	274-33501-03	EXHAUST VALVE	1	
95	20F-10KA0-31	COLLET-VALVE	4	
210	274-35301-03	PUSH ROD	2	
220	20F-36001-13	ROCKER ARM	2	
230	269-35802-03	BOLT (PIVOT)	2	
240	017-00600-90	NUT	2	
260	274-36501-03	GUIDE PLATE	1	
310	20F-30106-01	MUFFLER CP	1	
320	20F-34201-11	MUFFLER COVER	1	
340	284-35201-03	GASKET (EXHAUST)	1	
350	002-38080-00	FLANGE NUT	2	
365	011-00604-60	FLANGE BOLT	2	
366	20F-14081-60	BOLT AND WASHER AY	2	
550	284-36501-03	GASKET (INTAKE)	1	
560	106-65002-03	GASKET (CARB)	2	
570	017-60500-10	SELF LOCK NUT	2	

400 Governor

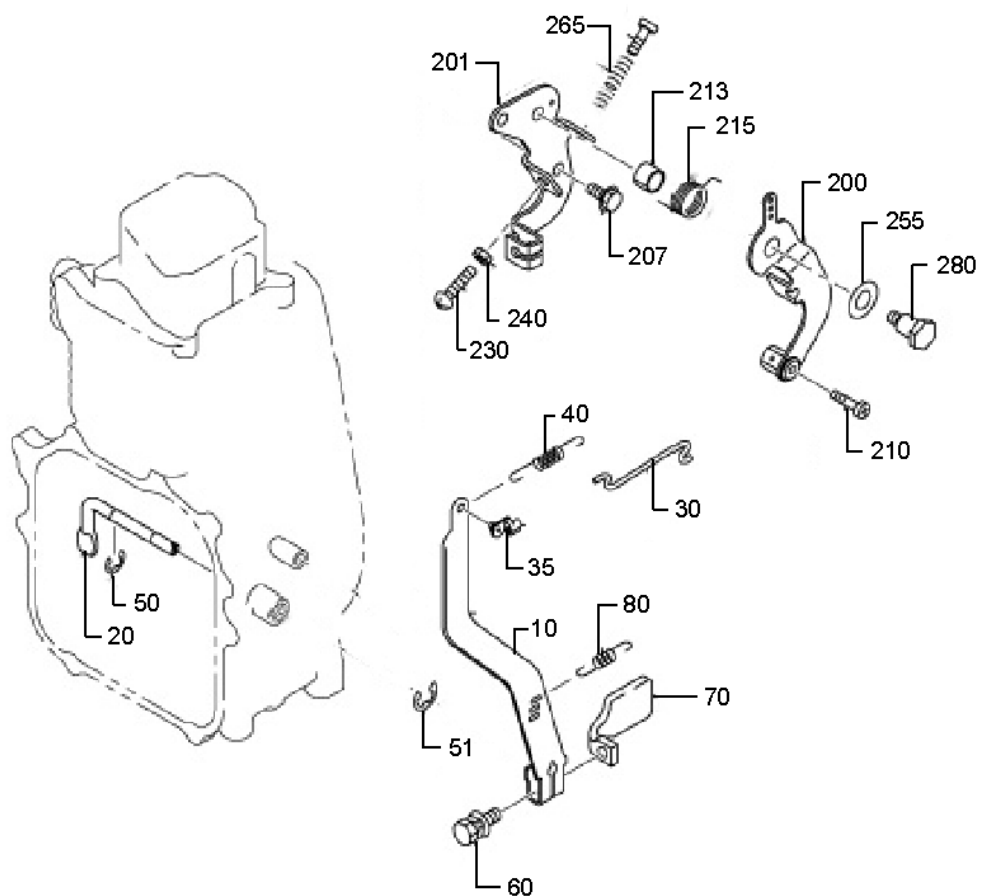


20G040000W00

400 Governor

Ref	Part Number.	Description	Qty	Remark
10	284-42304-03	GOVERNOR LEVER	1	
20	20F-42201-11	GOVERNOR SHAFT	1	
30	284-42701-01	GOVERNOR ROD	1	
35	284-45601-03	LINKAGE BUSHING	1	
40	293-42801-03	ROD SPRING	1	
50	003-13050-00	CLIP	1	
51	003-13050-00	CLIP	1	
60	20F-14063-00	BOLT AND WASHER AY	1	
70	20F-49002-01	WEIGHT CP	1	
80	284-42501-13	GOVERNOR SPRING	1	
200	230-43302-10	SPEED CONTROL AY	1	
201	284-45101-01	BASE PLATE CP	1	
207	20F-00600-10	FLANGE BOLT	2	
210	004-31041-40	SCREW, PANHEAD	1	
213	023-01000-40	SPACER	1	
215	226-45003-13	RETURN SPRING	1	
230	004-31063-00	SCREW	1	
240	002-27060-00	NUT	1	
255	021-71000-20	FRICTION WASHER	1	
265	268-45001-13	CONTROL SPRING	1	
280	226-43103-01	LINK PIVOT CP	1	

500 Cooling & Starting

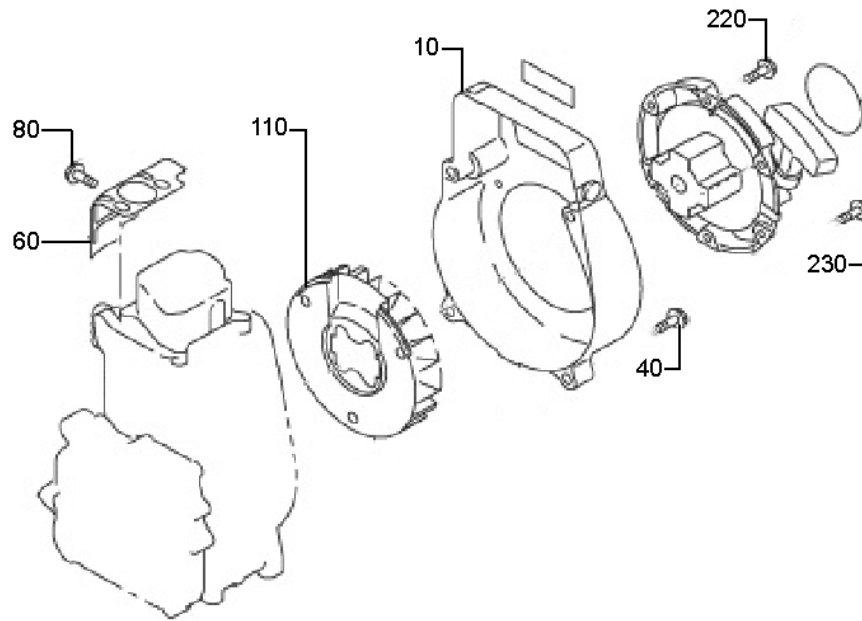


20G050000W00

500 Cooling & Starting

Ref	Part Number.	Description	Qty	Remark
10	20F-51103-03	BLOWER HOUSING CP	1	
40	20F-04083-50	FLANGE BOLT	4	
60	284-52601-23	CYLINDER BAFFLE	1	
80	20F-00600-10	FLANGE BOLT	1	
110	20F-54101-03	COOLING BLOWER	1	
220	20F-00600-10	FLANGE BOLT	3	
230	20F-00600-21	FLANGE BOLT	4	

640 Fuel & Lubricant

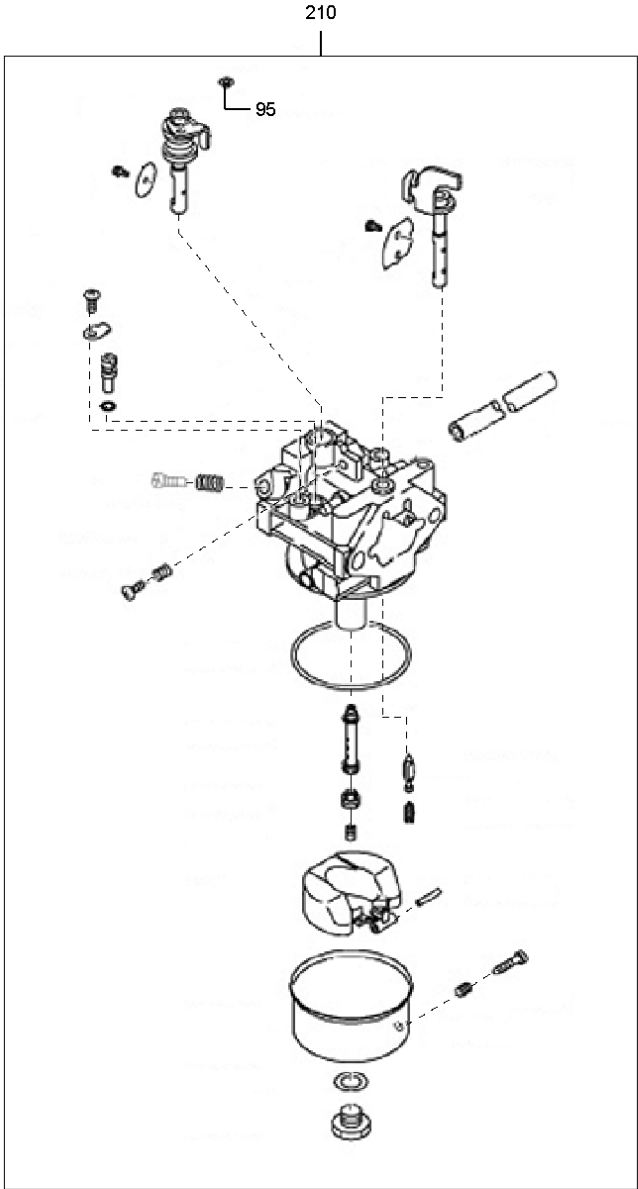


20G064000W00

640 Fuel & Lubricant

Ref	Part Number.	Description	Qty	Remark
210	293-62404-10	CARBURETOR AY	1	
95	284-45501-03	BUSH	1	

700 Electric Device

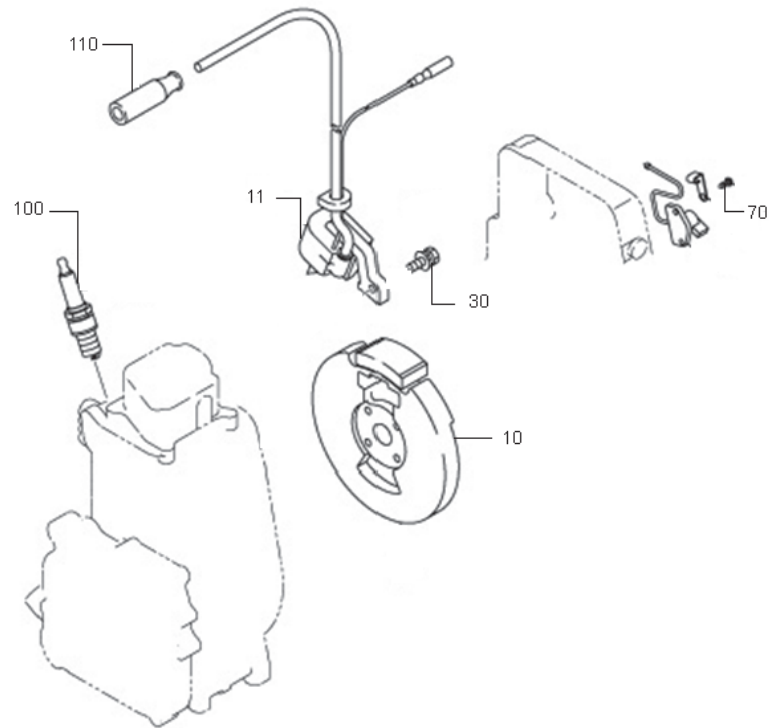


20G070000W00

700 Electric Device

Ref	Part Number.	Description	Qty	Remark
10	20G-79330-01	FLY WHEEL CP	1	
11	20F-79430-31	IGNITION COIL CP	1	
30	001-17062-50	BOLT & WASHER AY	2	
70	004-35041-20	SCREW AND WASHER AY	2	
100	065-01403-80	SPARK PLUG	1	
110	284-75102-03	SPARK PLUG CAP	1	

900 Accessory

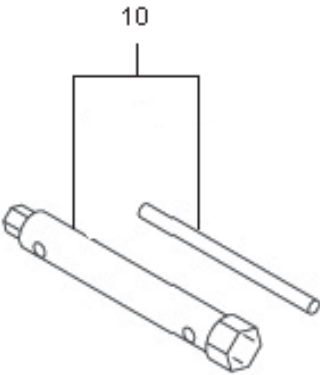

20G090000V000

900 Accessory

Ref	Part Number.	Description	Qty	Remark
10	226-90307-10	ACCESSORY TOOL KIT	1	

Part Number Index

The Part Number Index is a numeric index of all part numbers included in this manual. The index shows what page(s) the part is used on.

Part Number	Page	Part Number	Page
001-14061-60	5	20G-13002-20	5
001-17062-50	17	20G-14501-03	5
001-39085-00	5	20G-20201-31	7
002-18140-00	7	20G-23401-H3	7
002-27060-00	11	20G-79330-01	17
002-38080-00	9	226-43103-01	11
003-13050-00	11	226-45003-13	11
004-31041-40	11	226-90307-10	19
004-31063-00	11	227-38601-23	9
004-35041-20	17	230-43302-10	11
005-32031-01	7	230-45003-01	5
011-00604-60	9	237-14202-03	5
011-00700-10	5	268-45001-13	11
013-00602-00	5	269-35802-03	9
013-10500-20	5	274-33301-03	9
017-00600-90	9	274-33501-03	9
017-60500-10	9	274-35301-03	9
021-11400-20	5	274-36501-03	9
021-71000-20	11	284-16001-03	5
023-01000-40	11	284-16002-03	5
023-02001-00	7	284-16007-03	5
023-02001-10	7	284-16008-03	5
023-02001-20	7	284-17001-03	5
031-00600-20	5	284-35201-03	9
040-11400-30	5	284-36501-03	9
044-00600-20	5	284-42304-03	11
044-02000-70	5	284-42501-13	11
044-02001-10	5	284-42701-01	11
056-51100-10	7	284-45101-01	11
060-02001-40	5	284-45501-03	15
065-01403-80	17	284-45601-03	11
106-65002-03	9	284-52601-23	13
205-41901-03	5	284-75102-03	17
20F-00600-10	11, 13	293-15001-03	5
20F-00600-21	13	293-23511-07	7
20F-00607-40	5	293-33401-03	9
20F-04083-50	13	293-42801-03	11
20F-10KA0-31	9	293-62404-10	15
20F-11101-41	5	X20-31400-20	7
20F-14063-00	11	X21-31600-30	5
20F-14081-60	9		
20F-14502-03	5		
20F-15011-03	5		
20F-15170-00	9		
20F-15502-03	5		
20F-15602-13	5		
20F-16010-01	5		
20F-19041-00	9		
20F-22501-30	7		
20F-23001-03	7		
20F-23301-03	7		
20F-30106-01	9		
20F-31702-21	9		
20F-33601-03	9		
20F-33702-03	9		
20F-34201-11	9		
20F-36001-13	9		
20F-36401-03	9		
20F-38701-23	9		
20F-42201-11	11		
20F-49002-01	11		
20F-51103-03	13		
20F-54101-03	13		
20F-63601-11	5		
20F-79430-31	17		
20G-00700-20	5		
20G-10102-21	5		

Part Description Index

The Part Description Index is an alphabetical index of all part descriptions included in this manual. The index shows what page(s) the part is used on.

A	GUIDE PLATE.....9	STUD.....5
ACCESSORY TOOL KIT.....19	I	T
B	IGNITION COIL CP.....17	TAPPET.....9
BALL BEARING.....5	INTAKE VALVE.....9	V
BASE PLATE CP.....11	L	VALVE GUIDE.....5
BLOWER HOUSING CP.....13	LEAF VALVE.....5	VALVE SPRING.....9
BOLT.....5	LINK PIVOT CP.....11	W
BOLT & WASHER AY.....17	LINKAGE BUSHING.....11	WEIGHT CP.....11
BOLT (PIVOT).....9	M	WOODRUFF KEY.....7
BOLT AND WASHER AY.....5, 9, 11	MAINBEARING COVER CP.....5	
BREATHING PLATE.....5	MUFFLER COVER.....9	
BUSH.....15	MUFFLER CP.....9	
C	N	
CAMSHAFT CP.....9	NUT.....7, 9, 11	
CARBURETOR AY.....15	O	
CLIP.....7, 11	OIL GAUGE CP.....5	
COLLET-VALVE.....9	OIL SEAL.....5	
CONNECTING ROD AY.....7	OIL SHELTER PLATE 1.....5	
CONNECTING ROD BOLT.....7	OIL SHELTER PLATE 2.....5	
CONTROL SPRING.....11	P	
COOLING BLOWER.....13	PIN (SPRING).....9	
COVER (CASE).....5	PIPE KNOCK.....5	
CRANKCASE CP.....5	PISTON.....7	
CRANKSHAFT CP.....7	PISTON PIN.....7	
CYLINDER BAFFLE.....13	PISTON RING SET.....7	
CYLINDER HEAD AY.....5	PLUG.....5	
D	PUSH ROD.....9	
DOWEL PIN.....5	R	
E	RELEASE LEVER.....9	
EXHAUST VALVE.....9	RETAINER PLATE.....5	
F	RETURN SPRING.....9, 11	
FLANGE BOLT.....5, 9, 11, 13	ROCKER ARM.....9	
FLANGE NUT.....9	ROCKER COVER.....5	
FLY WHEEL CP.....17	ROD SPRING.....11	
FRICTION WASHER.....11	S	
G	SCREW.....11	
GASKET.....5	SCREW AND WASHER AY.....5, 17	
GASKET (CARB).....9	SCREW, PANHEAD.....11	
GASKET (EXHAUST).....9	SELF LOCK NUT.....9	
GASKET (INTAKE).....9	SNAP RING OUT.....9	
GASKET (ROCKER COVER).....5	SPACER.....7, 11	
GASKET(HEAD).....5	SPARK PLUG.....17	
GASKET(TAPPET COVER).....5	SPARK PLUG CAP.....17	
GOVERNOR GEAR CP.....5	SPEED CONTROL AY.....11	
GOVERNOR LEVER.....11	SPRING PIN.....9	
GOVERNOR ROD.....11	SPRING RETAINER.....9	
GOVERNOR SHAFT.....11	SPRING WASHER.....7	
GOVERNOR SLEEVE.....5	STEM SEAL.....5	
GOVERNOR SPRING.....11		

PRINTED IN THE USA

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047

Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com