

PARTS MANUAL

Models

**EH035V for Wacker
ENGINE**

PUB-EP
Rev. 06/05

Robin America, Inc.

940 Lively Blvd. • Wood Dale, IL 60191 • Phone: 630-350-8200 • Fax: 630-350-8212
e-mail: sales@robinamerica.com • www.robinamerica.com


© Copyright 2005 Robin America, Inc.

HOW TO USE THIS MANUAL


Robin engines are identified by MODEL, SPECIFICATION, and CODE NUMBER. For each model there may be many different versions called specifications. Each specification will be unique in some way. The difference may only be the paint color or it may have a different type of PTO or some other significant difference.

In order to identify the correct service part number, it is important to confirm the specification and code numbers for your engine. The specification and code number together are known as the PRODUCT NUMBER.

All Robin 4 cycle engines have a Product Number label similar to the label illustrated below.

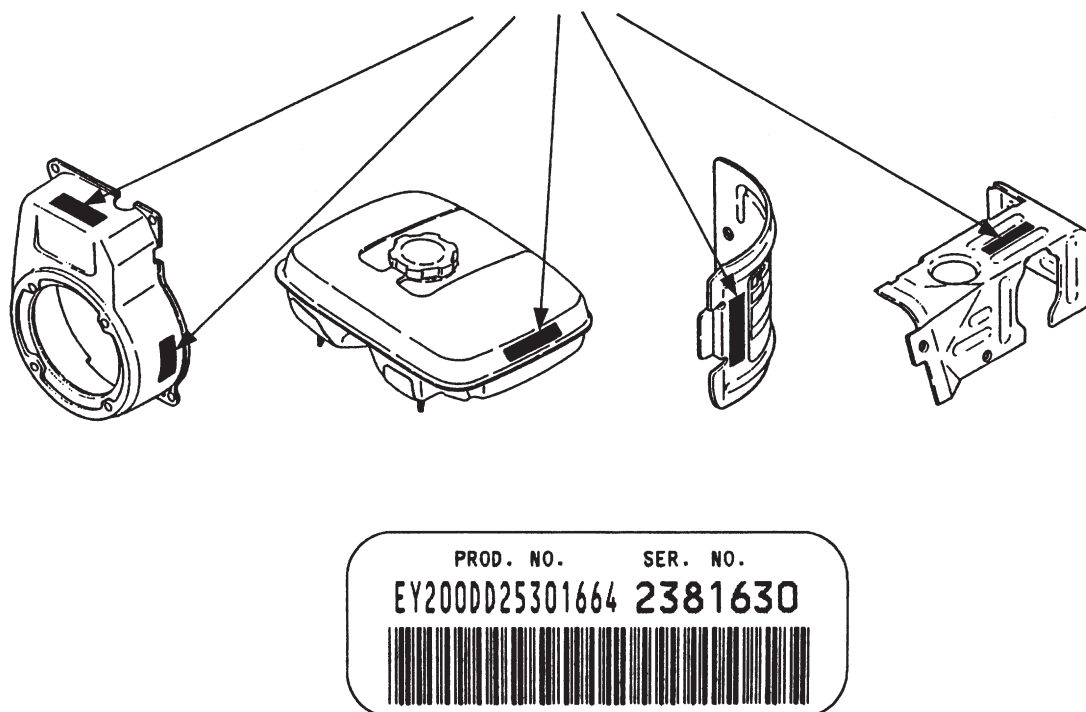

The Product Number Label has a 15 digit alphanumeric string that consists of the SPECIFICATION (SPEC) number (11 digits) and the CODE number (4 digits). Please note the illustration below:

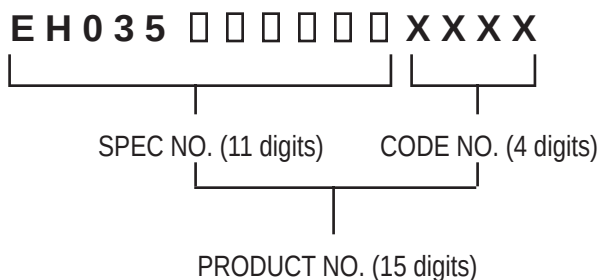

1— SECTION 6 FUEL GROUP

2— **FIG. 600**

DETAIL A

3—

4—

5—

6—

7—

8—

9—

1— SECTION 6 FUEL GROUP

REF.	PART NO.	DESCRIPTION	QTY.	REMARKS	FROM-TO	FIG.
10	267-60103-01	FUEL TANK CP	1	YD, YS TYPE, BLACK		600
27	267-60101-01	FUEL TANK CP	1	YELLOW		600
30	073-20039-00	LABEL, WARNING	1	YD, YS TYPE		600
31	043-04300-15	FUEL TANK CAP CP	1			600
40	267-95201-03	LABEL, EMISSION	1	YD, YS TYPE		600
50	064-13600-10	FUEL FILTER	1			600
-1	064-20021-01	FUEL STRAINER AY	1			600
-2	064-20002-20	FILTER	1			600
-3	064-20002-30	GASKET	1			600
-4	064-20019-10	CUP	1			600

2—

3—

4—

5—

6—

7—

8—

9—

- 06-05


GROUP INDEX

Group Name	Page
CRANKCASE GROUP	6
CRANKSHAFT, PISTON GROUP	8
INTAKE and EXHAUST GROUP	10
COOLING and STARTING GROUP	12
FUEL, LUBRICANT GROUP	14
ELECTRIC DEVICE GROUP	16
CLUTCH GROUP	18
ACCESSORY GROUP	20

INDEX OF DESCRIPTION SYMBOLS			
SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
AY	ASSEMBLY	P=	PITCH (in mm)
CP.....	COMPLETE	P.T.O. (PTO)	POWER TAKE OFF
EX.....	EXPORT (from Japan)	REF.....	REFERENCE
FIG.....	FIGURE	R.H. (RH).....	RIGHT HAND SIDE
FR.....	FRONT	RR.	REAR
"	INCH	STD.	STANDARD
INCL.	INCLUDE	SW.....	SWITCH
~L.....	LITER	T=	THICKNESS (in mm)
L=	LENGTH (in. mm)	UN	UNIT
L.H. (LH).....	LEFT-HAND SIDE	U.S.....	UNDER SIZE
MECH.....	MECHANICAL	~V	VOLTAGE
NO (NON).....	NONE	~W	WATT
OPT.....	OPTIONAL	W/	WITH
O.S.	OVER SIZE	W/O	WITHOUT

SECTION 1 CRANKCASE GROUP


FIG. 100

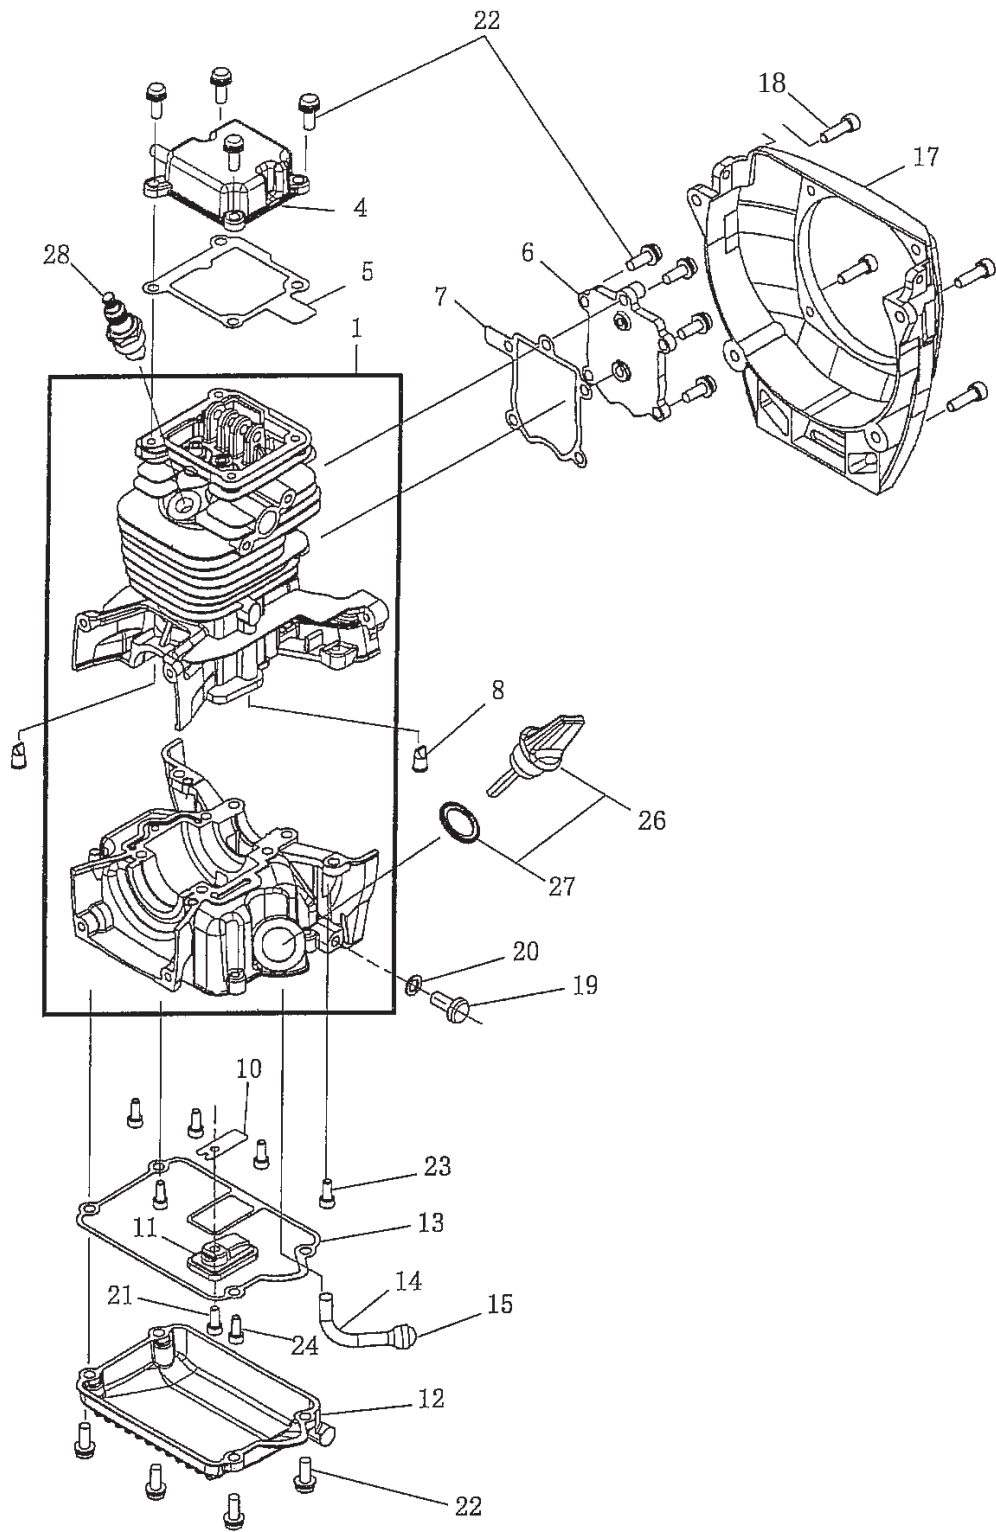

SECTION 1 CRANKCASE GROUP

[illegible]

FIG. 200

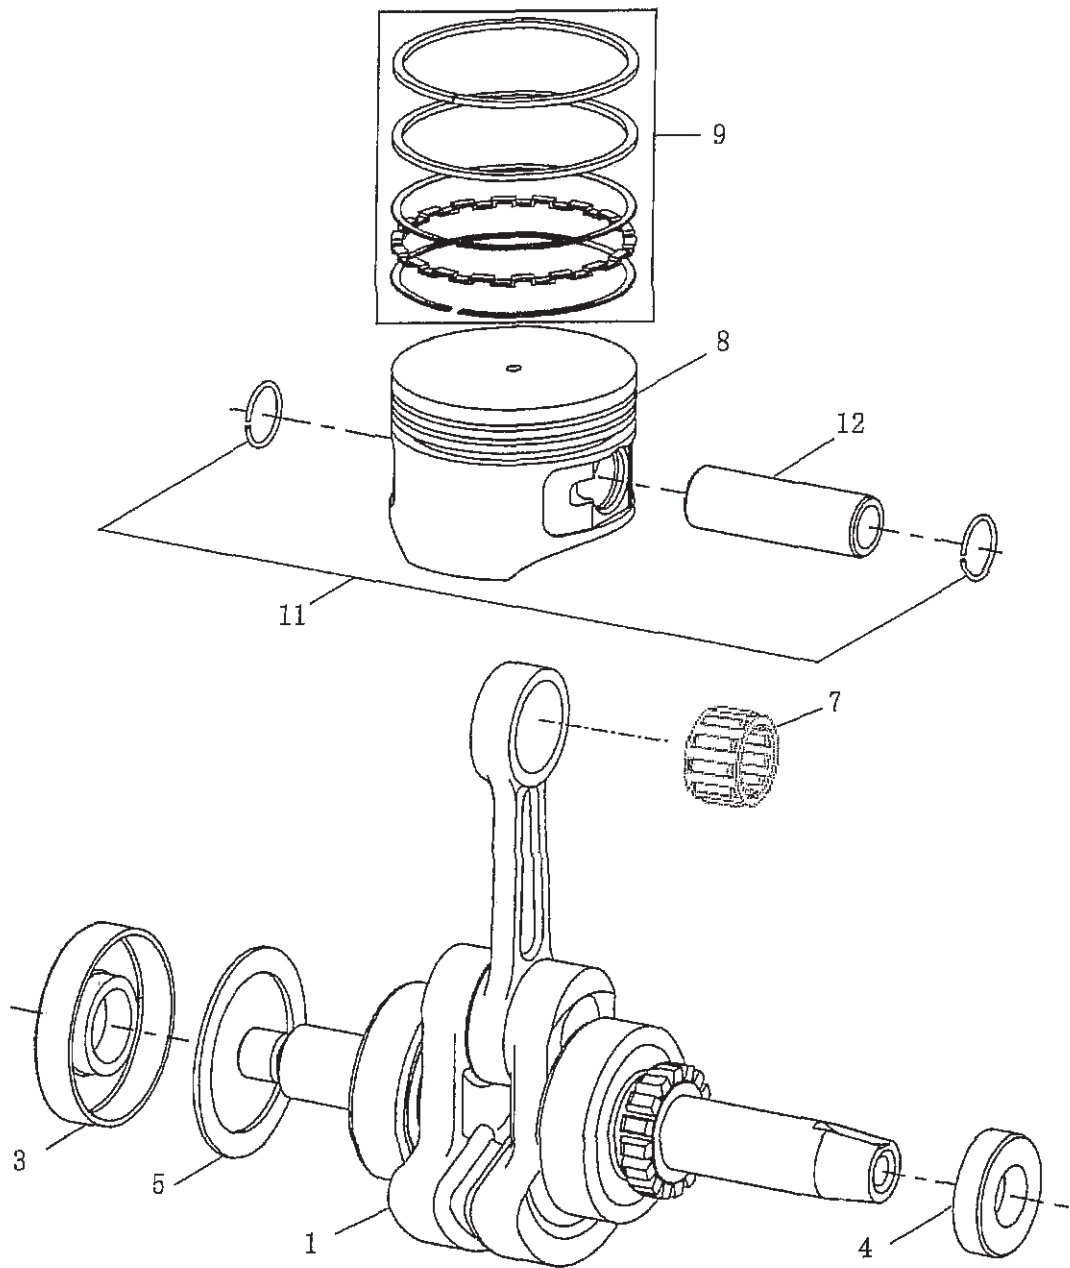


SECTION 2

CRANKSHAFT, PISTON GROUP

[illegible]


SECTION 3 CAMSHAFT GROUP

FIG. 300

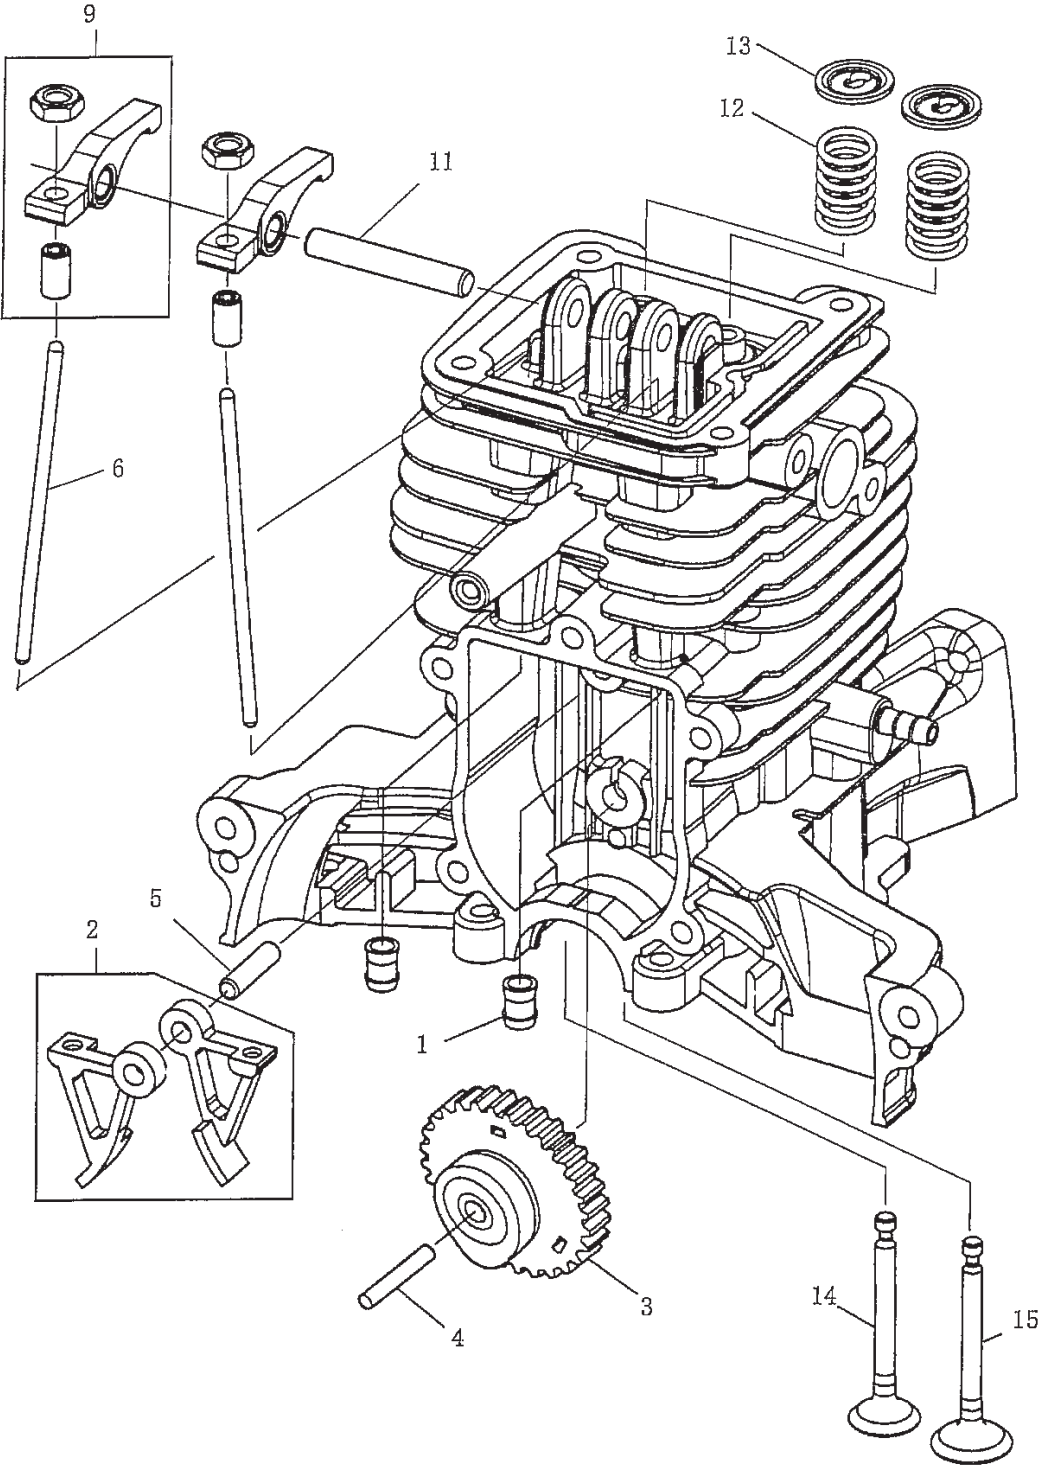

SECTION 4 RECOIL STARTER GROUP


FIG. 400

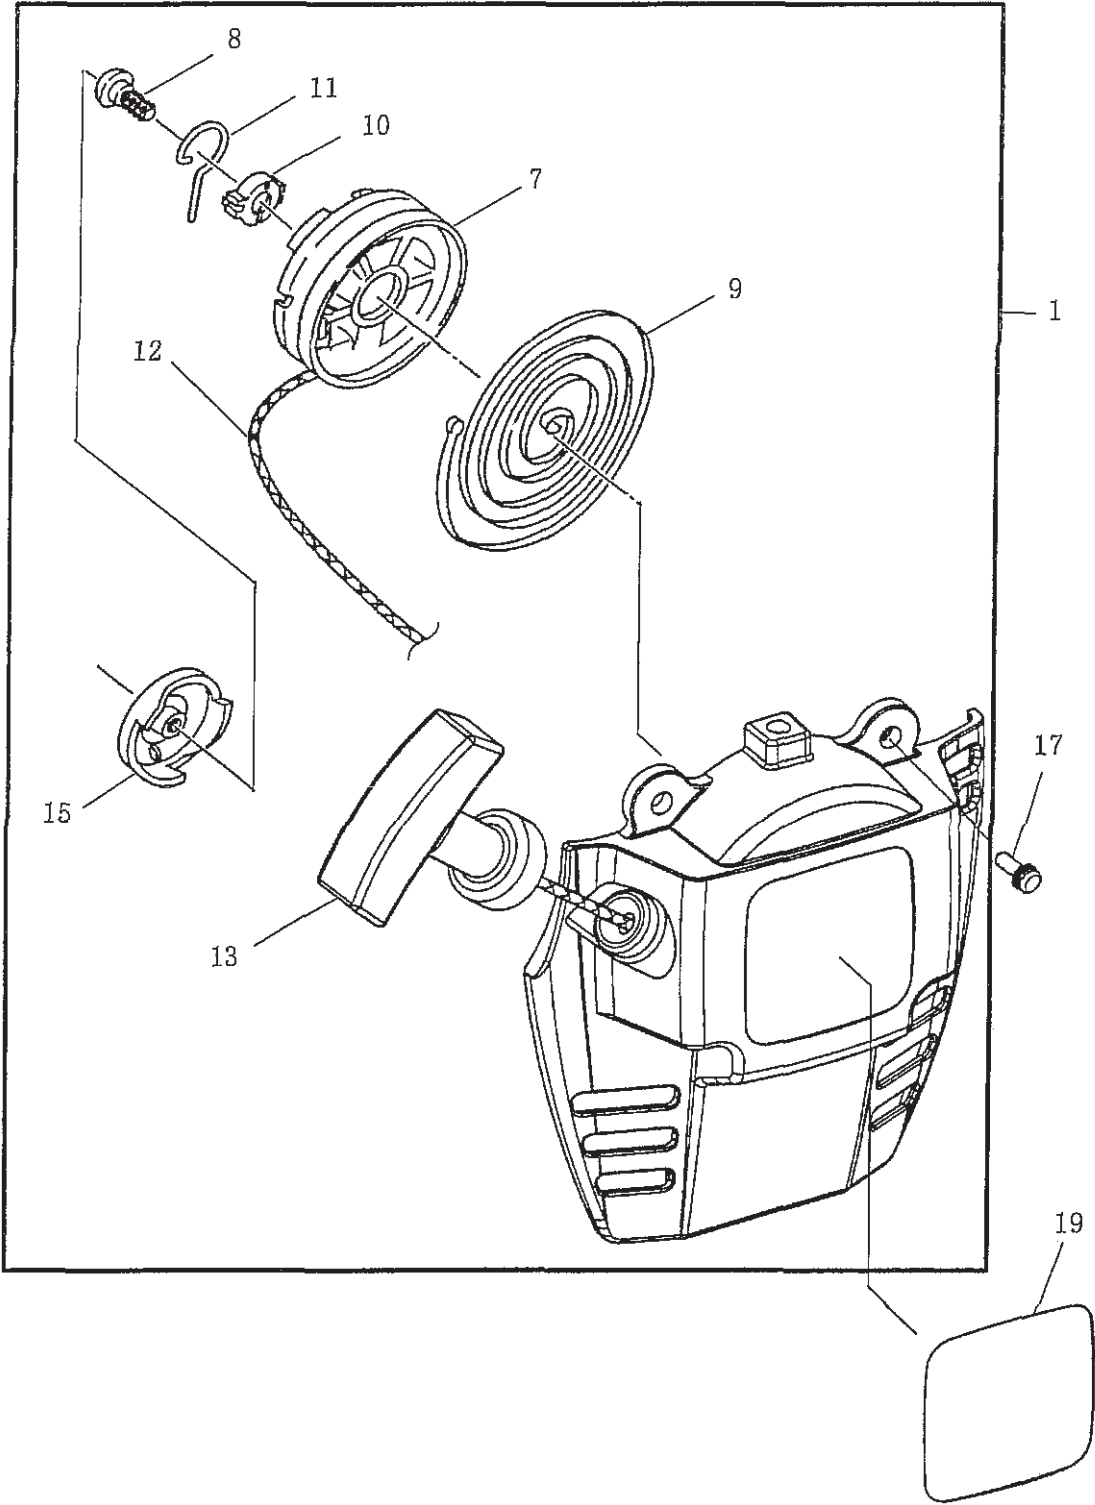

MUFFLER & INSULATOR GROUP

[illegible]


FIG. 600

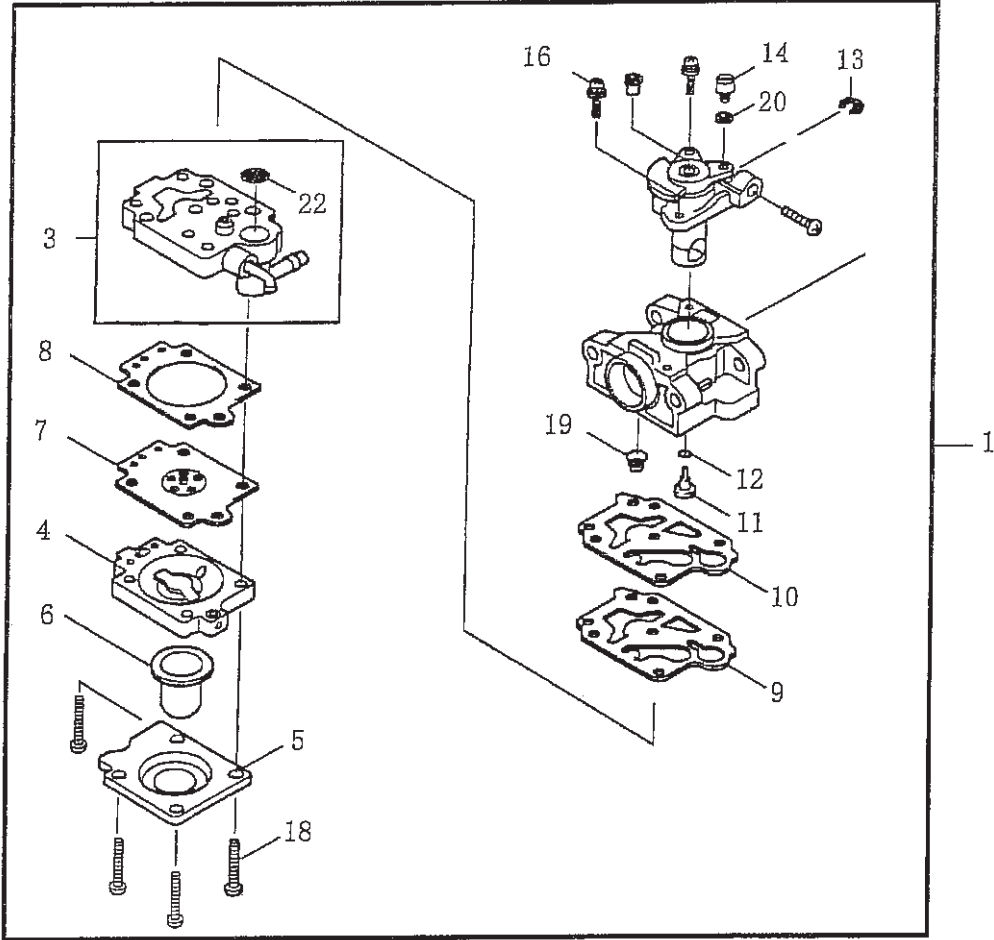

SECTION 6 CARBURETOR GROUP

[illegible]

FIG. 700

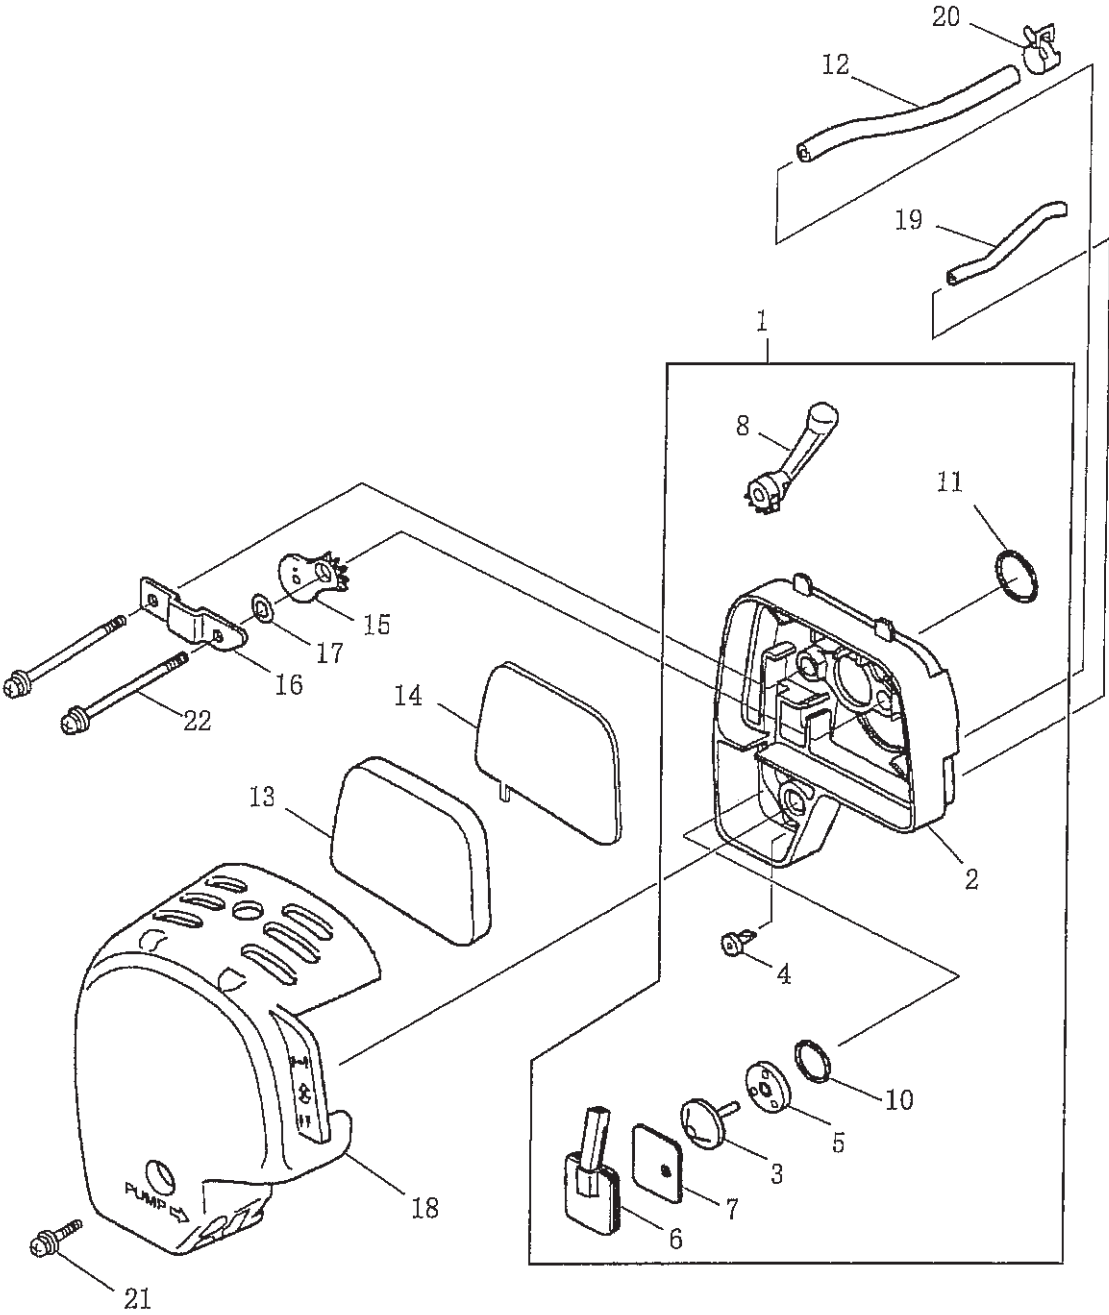


SECTION 7 AIR CLEANER GROUP

[illegible]

SECTION 8 CYLINDER COVER GROUP

FIG. 800

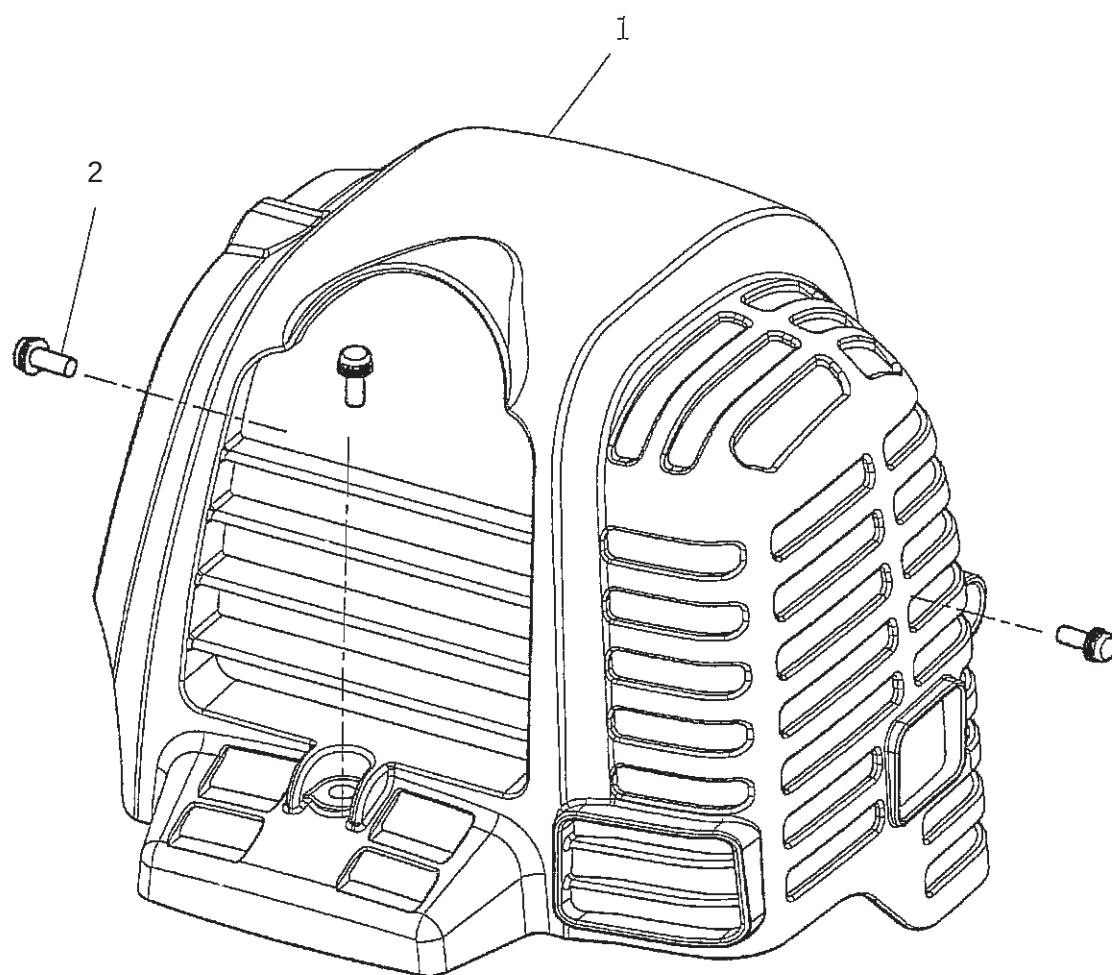


SECTION 8 CYLINDER COVER GROUP

[illegible]

SECTION 9 FUEL TANK GROUP

FIG. 900

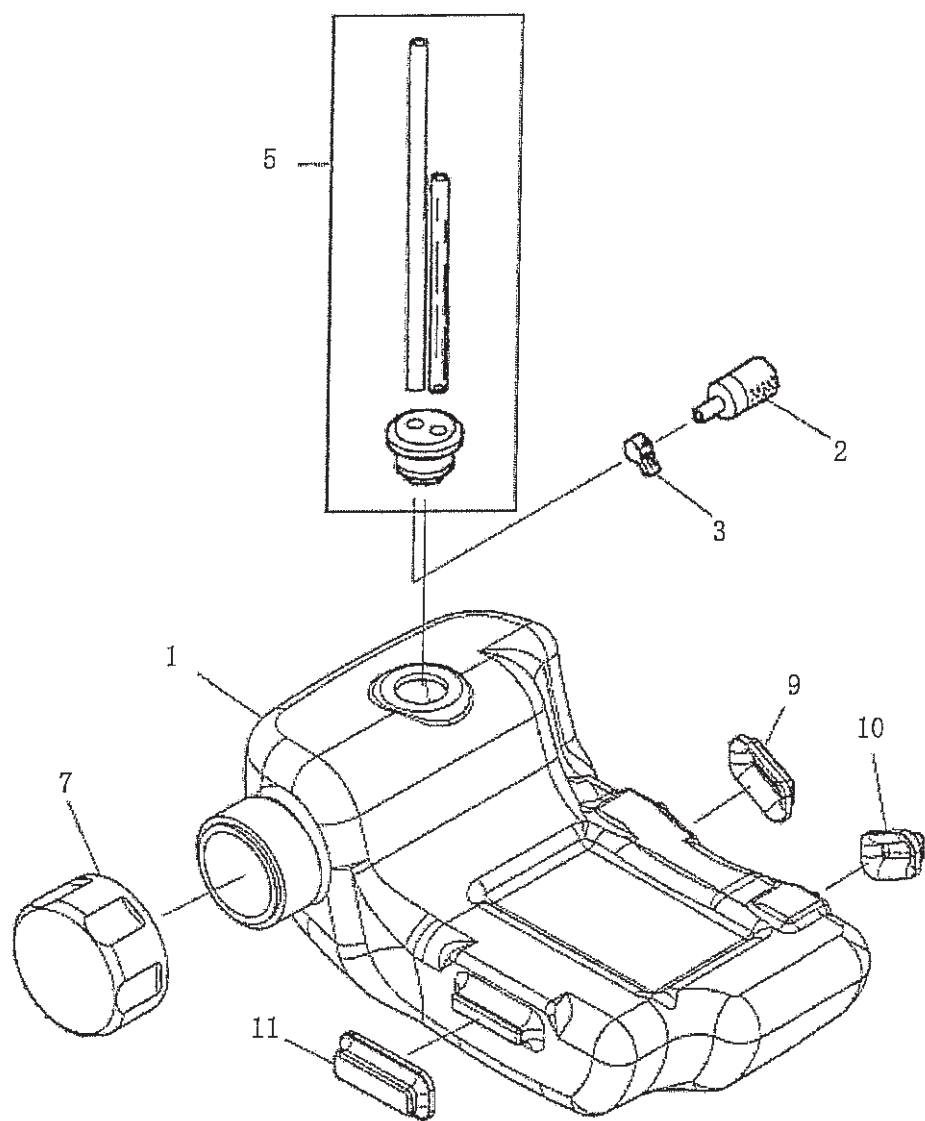


SECTION 9 FUEL TANK GROUP

[illegible]

SECTION 10 FLYWHEEL & CLUTCH GROUP

FIG. 1000

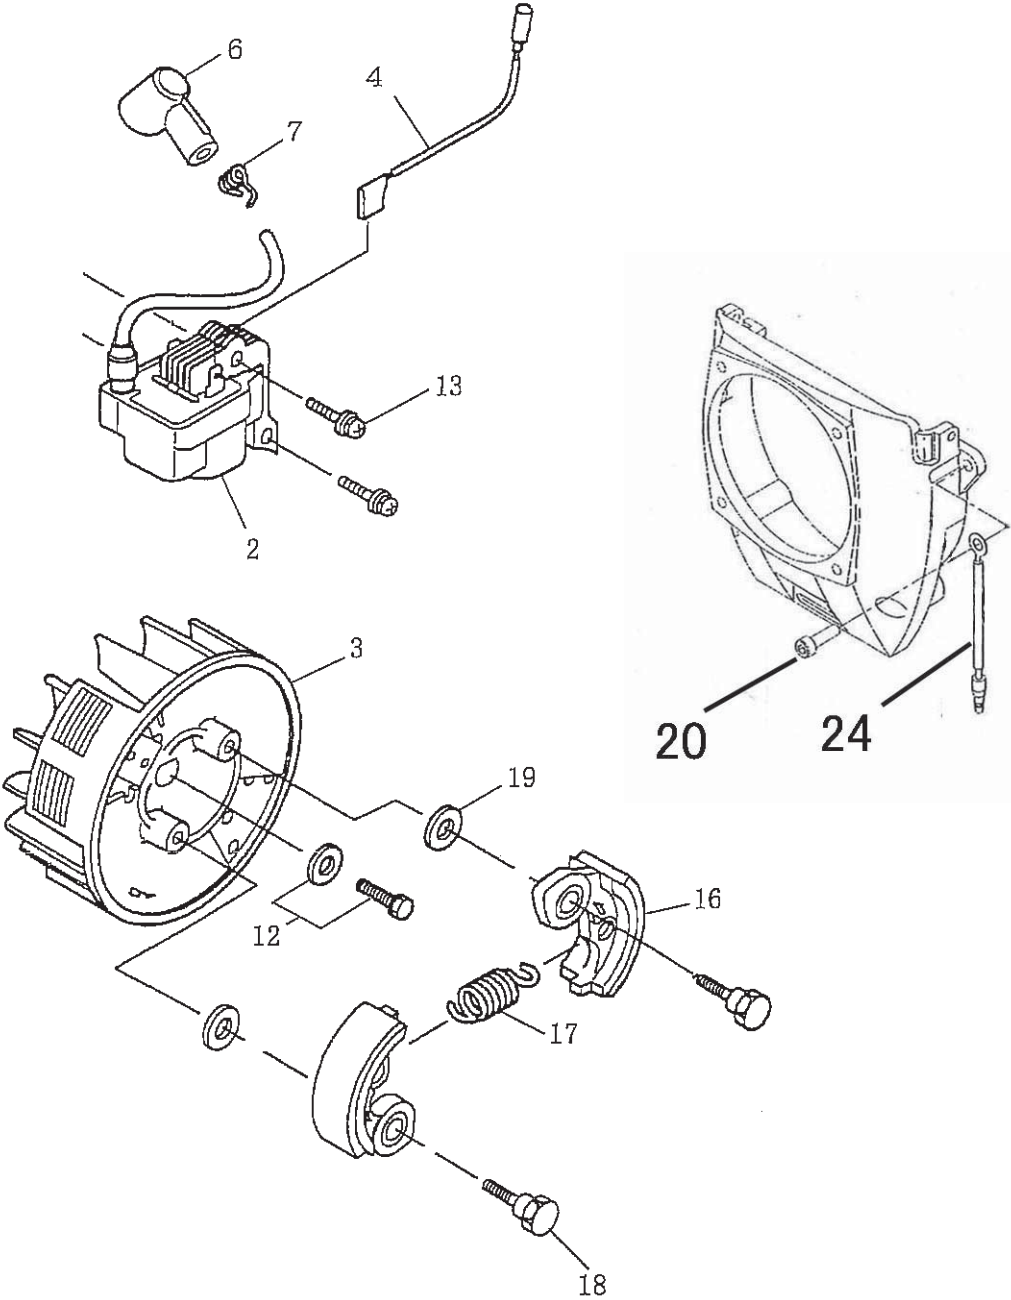


SECTION 10 FLYWHEEL & CLUTCH GROUP

[illegible]

SECTION 11 CLUTCH CASE GROUP


FIG. 1100

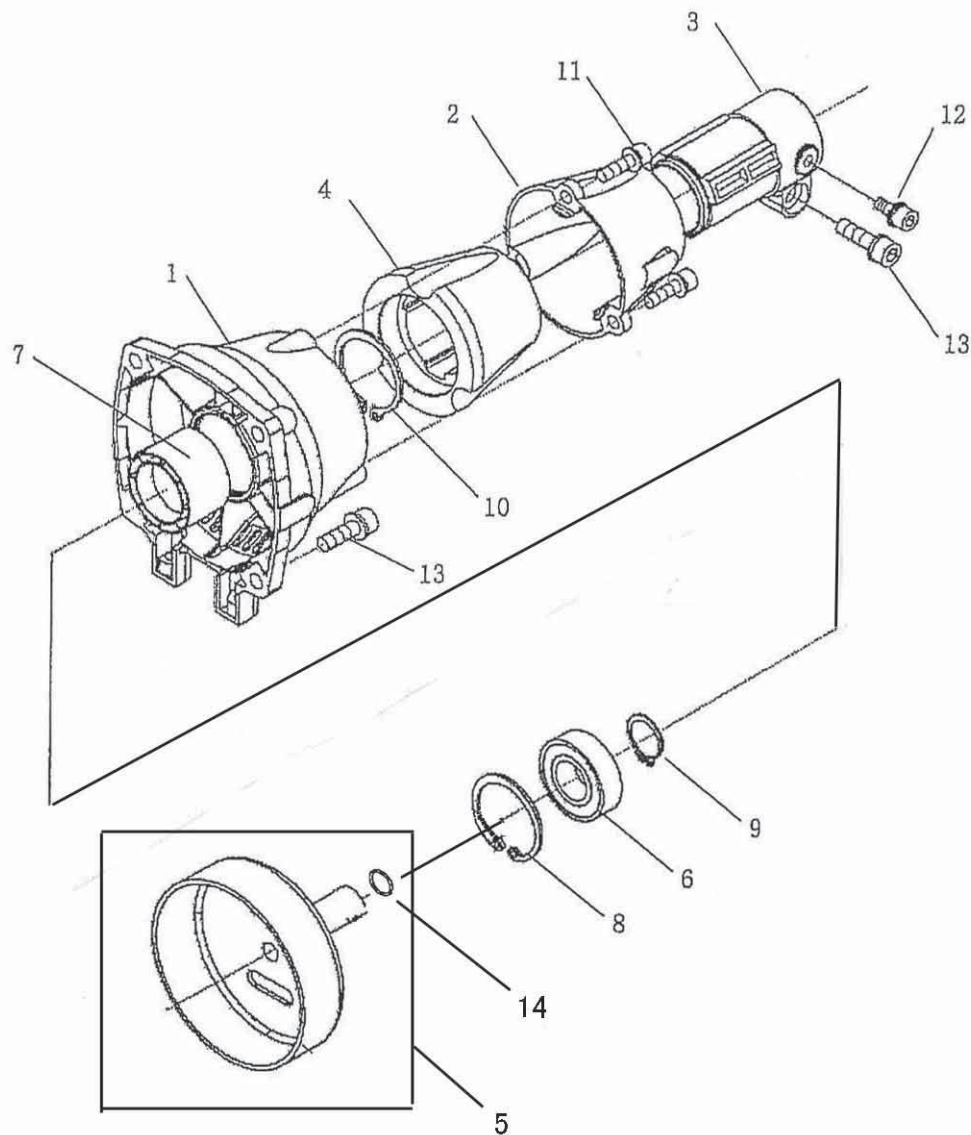

SECTION 11 CLUTCH CASE GROUP

[illegible]

FIG. 1200

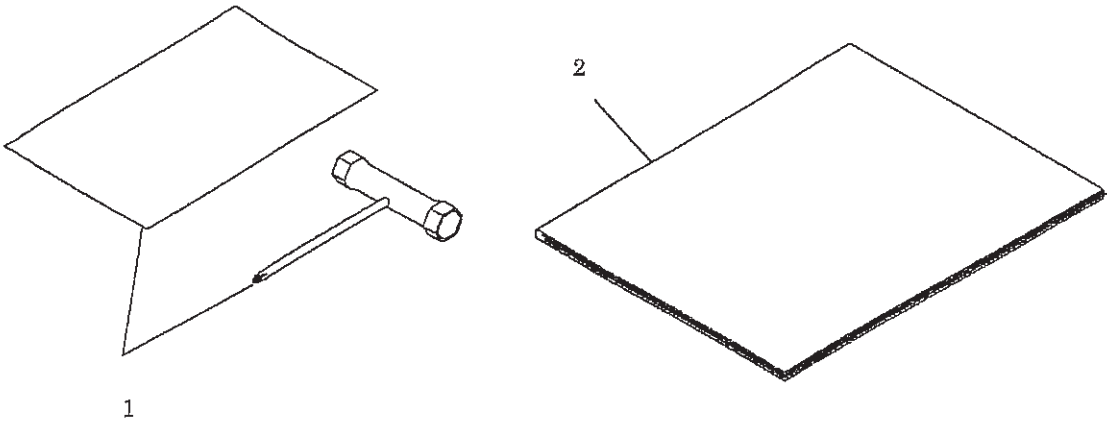

SECTION 12 ACCESSORIES GROUP

[illegible]

PRINTED IN THE USA