


FIG. 100

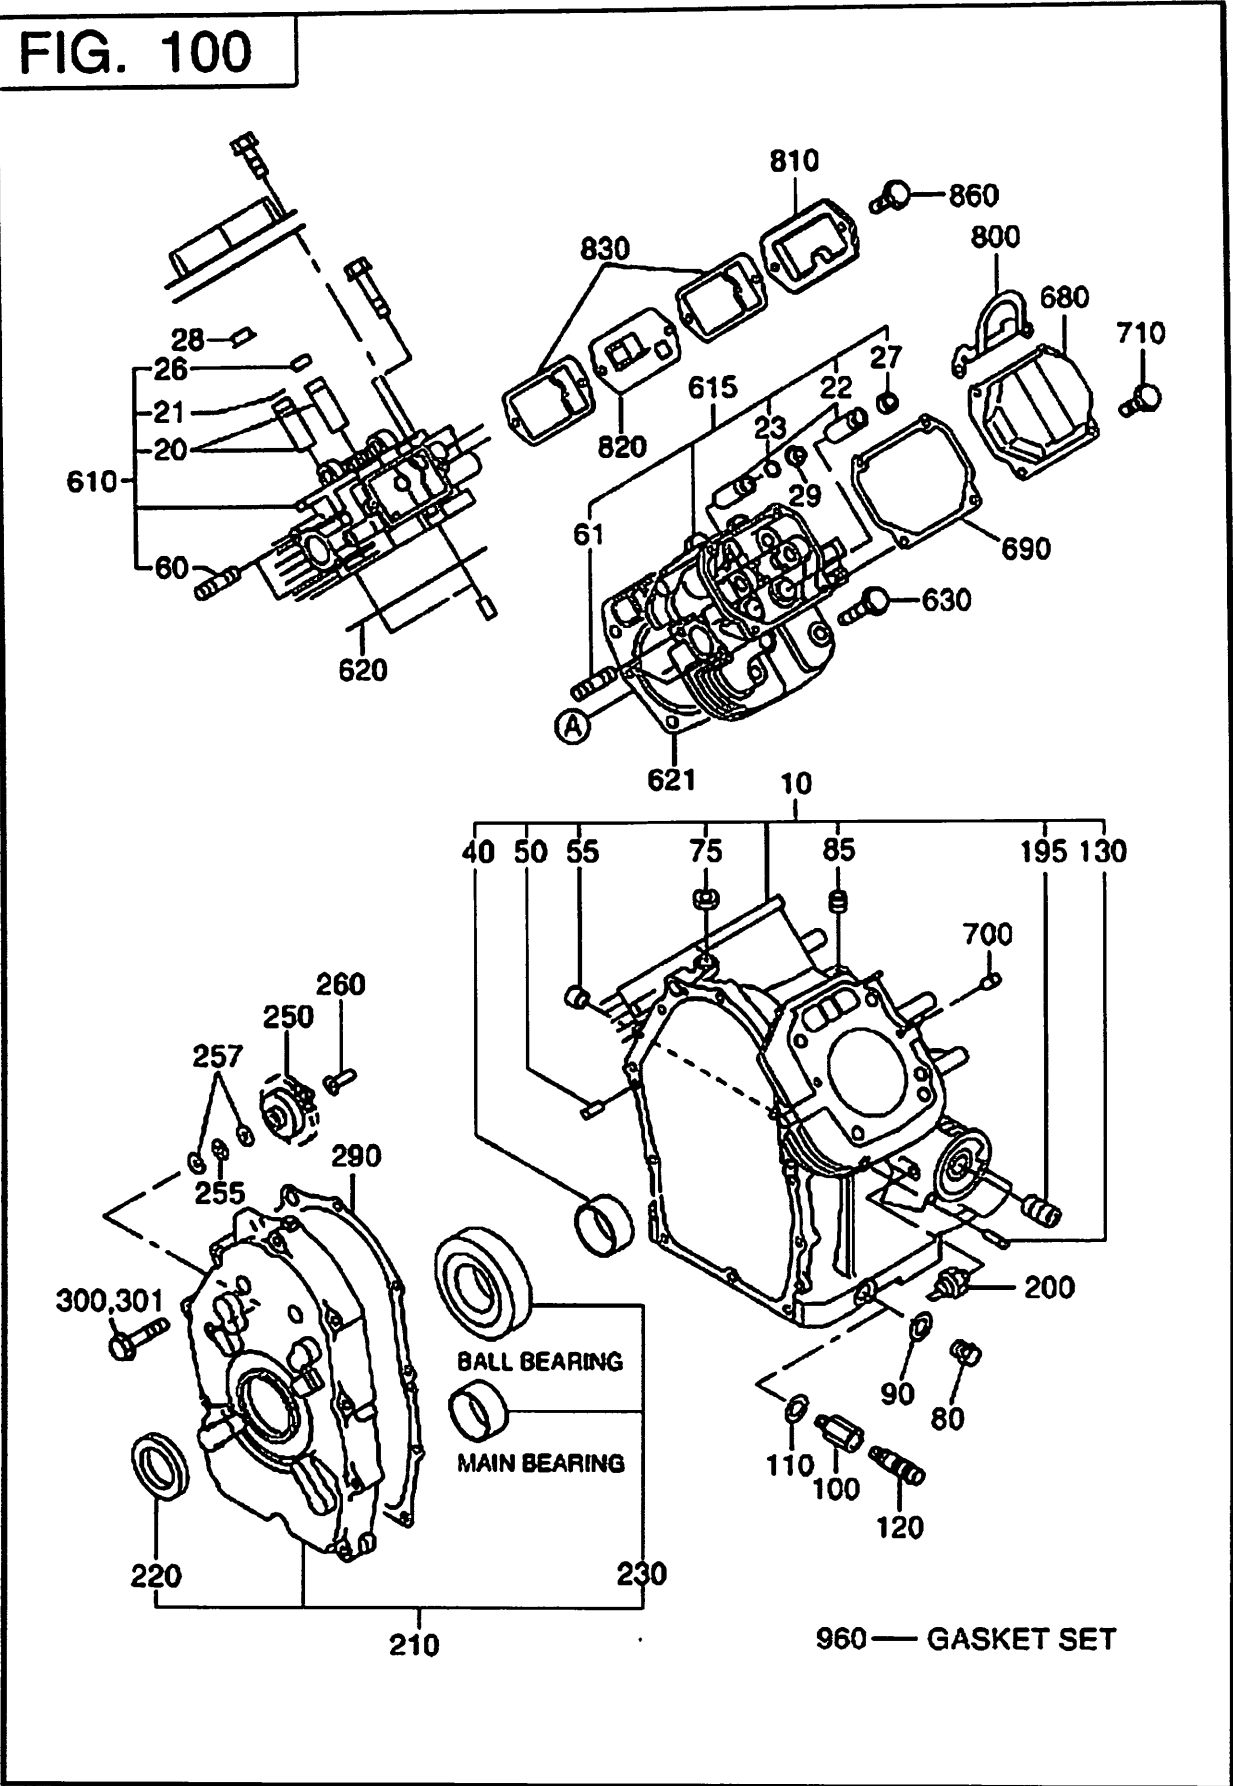

EH65/64/63

263010000W01

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	263-10101-21	CRANKCASE CP	1	Start Code: 5084.	
10	263-10101-11	CRANKCASE CP	1	Start Code: 4962. End Code: 5083.	
10	263-10101-01	CRANKCASE CP	1	End Code: 4961.	
26	132-07AA0-50	INTAKE VALVE SEAL	1		
27	132-07AA0-50	INTAKE VALVE SEAL	1		
40	263-15802-03	MAIN BEARING	1	Start Code: 5023.	
40	263-15801-03	MAIN BEARING	1	End Code: 5022.	
50	005-26081-80	DOWEL PIN	2		
55	142-55601-03	PIPE	2		
60	010-50802-90	STUD	4	M8X1.25X30	
61	010-50802-90	STUD	4	M8X1.25X30	
75	044-00800-10	OIL SEAL	1	Remarks: VC8144.	
80	040-11400-30	PLUG	2		
85	235-15421-03	BLIND PLUG	1	Start Code: 4688.	
85	212-15008-13	BLIND PLUG	1	End Code: 4687.	
90	021-11400-20	GASKET	2		
130	159-65401-03	PIPE(PULSE)	1		
195	263-15901-03	UNION	1		
200	248-76301-01	SWITCH OIL PRESSURE	1		
210	263-11101-11	MAINBEARING COVER CP	1	Start Code: 4870.	
210	263-11101-B1	MAINBEARING COVER CP	1	Start Code: 4780. End Code: 4869.	
210	263-11101-01	MAINBEARING COVER CP	1	End Code: 4779.	
220	044-04200-30	OIL SEAL	1	Start Code: 4780.	
220	044-04200-20	OIL SEAL	1	End Code: 4779.	
230	263-15802-03	MAIN BEARING	1	Start Code: 5084.	
230	263-15801-03	MAIN BEARING	1	End Code: 5083.	
250	263-45001-A1	GOVERNOR GEAR CP	1	Start Code: 4750.	
250	263-45001-01	GOVERNOR GEAR CP	1	End Code: 4749.	
255	263-46215-A3	THRUST BEARING	1	Start Code: 5174.	
255	263-46213-A3	THRUST BEARING	1	End Code: 5173.	
257	263-46214-A3	WASHER	2		
260	263-41901-03	GOVERNOR SLEEVE	1		
290	263-16001-03	GASKET (M.B COVER)	1	End Code: 5145.	
290	263-16001-A3	GASKET (M.B COVER)	1	Start Code: 5146.	
300	011-00800-90	FLANGE BOLT	10		
610	263-13001-11	CYLINDER HEAD 1 CP	1	Start Code: 4750.	
610	263-13001-01	CYLINDER HEAD 1 CP	1	End Code: 4749.	
615	263-13101-11	CYLINDER HEAD 2 CP	1	Start Code: 4750.	
615	263-13101-01	CYLINDER HEAD 2 CP	1	End Code: 4749.	

620	263-15001-13	GASKET 1 (CYL HEAD)	1	Start Code: 4504.
620	263-15001-03	GASKET 1 (CYL HEAD)	1	End Code: 4503.
621	263-15101-13	GASKET 2 (CYL HEAD)	1	Start Code: 4504.
621	263-15101-03	GASKET 2 (CYL HEAD)	1	End Code: 4503.
630	011-01000-30	FLANGE BOLT	8	
680	246-15501-01	ROCKER COVER CP	2	
690	246-16002-13	GASKET(ROCKER COV)	2	
700	031-00600-20	DOWEL PIN	4	
710	011-00600-30	FLANGE BOLT	10	M6X1.0X14
800	263-19001-A3	LIFT HOOK	2	Start Code: 4627.
800	263-19001-03	HOOK	2	End Code: 4626.
810	263-14301-03	BREATHER COVER	1	
820	263-14401-01	BREATHER PLATE CP	1	
830	263-16006-03	GASKET(BREATHERPLATE	2	
850	263-18001-03	RUBBER PIPE	1	
853	056-11800-20	HOSE CLAMP	2	Start Code: 4292.
853	263-68511-03	HOSE CLAMP	2	End Code: 4291.
960	263-99001-07	GASKET SET	1	

FIG. 1000

(Illustrations are excluded.)


(**FIG 1000**は単独発送部品につき、
イラストは省略します。)

EH65/64/63

263100000W01

Ref #	Part #	Description	Qty	Context Note	Foot Note
30	31F-35002-01	MOUNT CP	4	Start Code: 5023.	
30	31F-35001-01	MOUNT CP	4	End Code: 5022.	
710	066-00003-30	SWITCH	1		
710	066-00099-80	SWITCH KEY	2	MARK 103	
733	KU3-11062-11	ECU(O/S & R/C) CP	1	Start Code: 4809.	
733	KU3-11062-01	ECU(O/S & R/C) CP	1	End Code: 4808.	
734	KU3-11055-01	IDLE CONTROL UN CP	1		
930	073-20048-60	LABEL(HOT & GAS)	1		
932	073-20050-80	LABEL(F.STRAINER)	1		
934	073-20045-10	LABEL (SYMBOL-TANK)	1		

FIG. 200

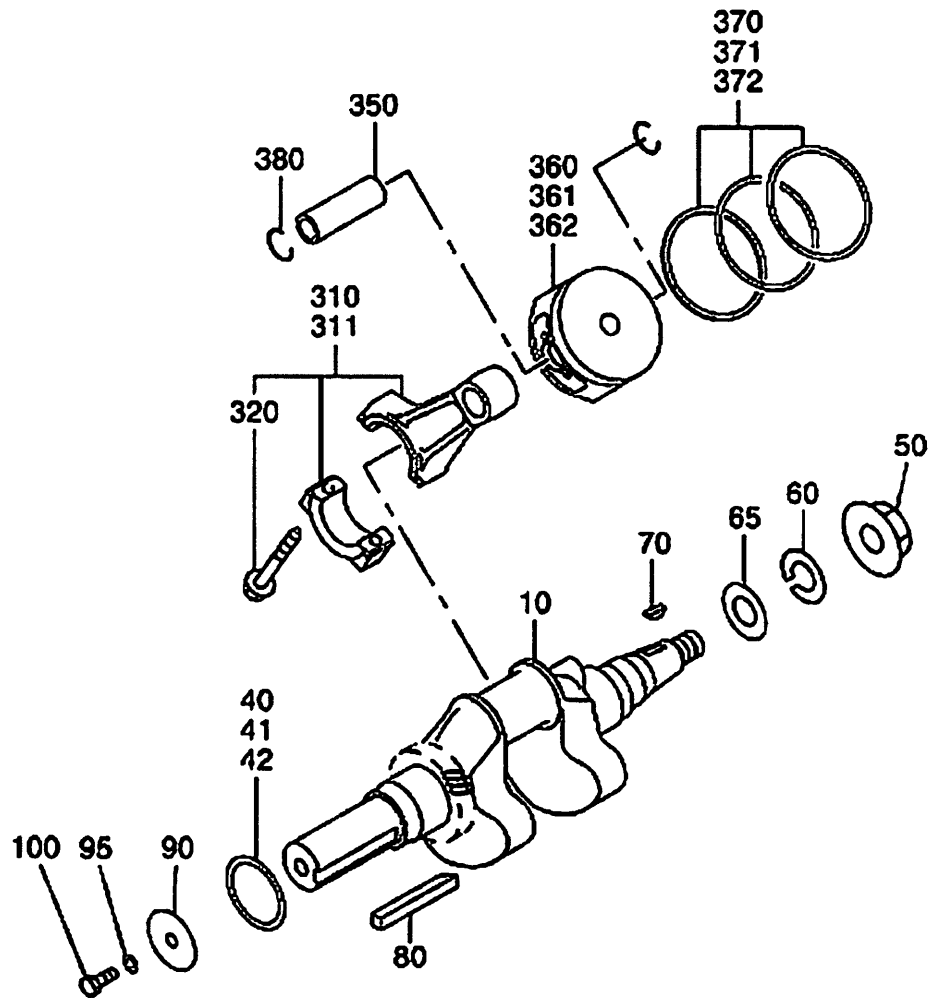


EH65/64/63

263020000W01

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	263-21201-01	CRANKSHAFT CP	1		
40	263-25011-A3	SPACER	1	Start Code: 5023. Remarks: T=0.6.	
40	263-25001-03	SPACER	1	End Code: 5022. Remarks: T=0.6.	
41	263-25012-A3	SPACER	1	Start Code: 5023. Remarks: T=0.8.	
41	263-25002-03	SPACER	1	End Code: 5022. Remarks: T=0.8.	
42	263-25013-A3	SPACER	1	Start Code: 5023. Remarks: T=1.0.	
42	263-25003-03	SPACER	1	End Code: 5022. Remarks: T=1.0.	
50	002-18180-00	NUT	1		
60	003-20180-00	SPRING WASHER	1		
65	003-10180-00	WASHER	1		
70	005-32054-01	WOODRUFF KEY	1		
310	263-22501-00	CONNECTING ROD AY	2		
320	246-23001-13	CONNECTING ROD BOLT	4	Start Code: 5023.	
320	246-23001-03	CONNECTING ROD BOLT	4	End Code: 5022.	
350	263-23301-03	PISTON PIN	2		
360	263-23401-03	PISTON	2	Remarks: STD..	
361	263-23402-03	PISTON	2	Remarks: 0.25 O.S..	
362	263-23403-03	PISTON	2	Remarks: 0.50 O.S..	
370	263-23501-07	PISTON RING SET	2	Remarks: STD..	
371	263-23502-07	PISTON RING SET	2	Remarks: 0.25 O.S..	
372	263-23503-07	PISTON RING SET	2	Remarks: 0.50 O.S..	
380	056-52100-20	CLIP	4		

FIG. 300

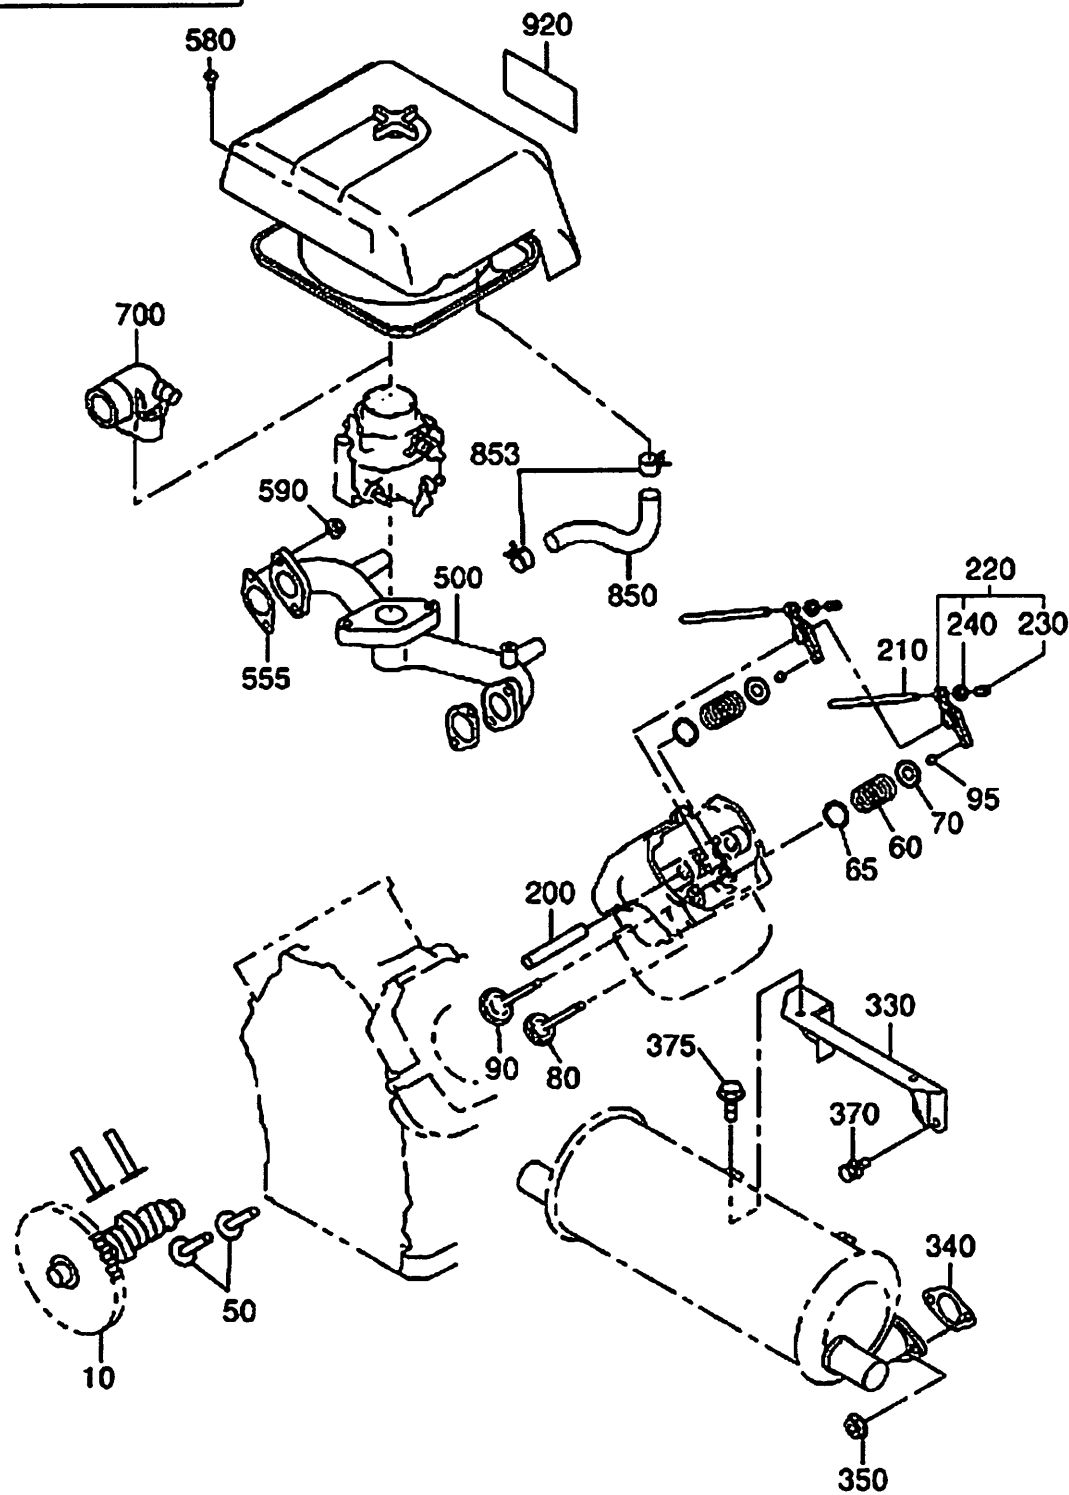


EH65/64/63

263030000W01

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	263-31701-03	CAM SHAFT	1		
50	263-33301-A3	TAPPET	4	Start Code: 5084.	
50	246-33301-03	TAPPET	4	End Code: 5083.	
60	246-33611-03	VALVE SPRING	4	Start Code: 4474.	
60	263-33601-03	VALVE SPRING	4	End Code: 4473.	
65	020-02000-10	WASHER	4		
70	246-33711-03	SPRING RETAINER	4		
80	263-33401-03	INTAKE VALVE	2		
90	263-33502-03	EXHAUST VALVE	2	Start Code: 4931.	
90	263-33501-03	EXHAUST VALVE	2	End Code: 4930.	
95	246-35501-03	VALVE COLLET	8		
200	239-35001-03	ROCKER SHAFT	2		
210	263-35311-01	PUSH ROD CP	4	Start Code: 4688.	
210	263-35302-03	PUSH ROD	4	End Code: 4687.	
220	246-36101-10	ROCKER ARM AY	4		
230	014-90800-21	ADJUSTING SCREW	4		
240	017-00800-90	NUT	4		
310	263-30102-A1	MUFFLER AY	1		
315	263-37321-A2	SPARK ARRESTER	1		
330	263-37001-A1	BRACKET MUFFLER	1		
340	263-35201-A1	GASKET EXHAUST	2		
350	018-00800-10	NUT (M8)	4		
370	001-14082-00	BOLT AND WASHER AY	2	Start Code: 4870.	
370	001-14081-60	BOLT AND WASHER ASSY (M8X16)	2		Start Code: 4565, End Code: 4869
370	013-00801-60	BOLT & WASHER AY	2	End Code: 4564.	
375	011-00600-30	FLANGE BOLT	2	M6X1.0X14	
375	011-00600-50	FLANGE BOLT	2	M6X1.0X20	End Code: 5022
390	263-37302-A3	CLAMP AY	1		
500	263-33001-03	INTAKE MANIFOLD	1		
510	263-32601-00	AIR CLEANER AY	1		
512	263-32620-01	CLEANER BASE CP	1		
514	263-32630-03	CLEANER COVER	1		

517	263-32640-01	WING NUT	1	
520	263-32610-A1	CLEANER ELEMENT CP	1	Start Code: 4931.
520	263-32610-01	CLEANER ELEMENT CP	1	End Code: 4930.
555	263-35503-A3	GASKET(IN MANIFOLD)	2	Start Code: 4993.
555	246-35201-03	GASKET(MUFFLER)	2	End Code: 4992.
580	X10-10500-10	FLANGE BOLT	3	
590	002-38080-00	FLANGE NUT	4	M8X1.25
920	073-20050-00	LABEL(MAKITA)	1	

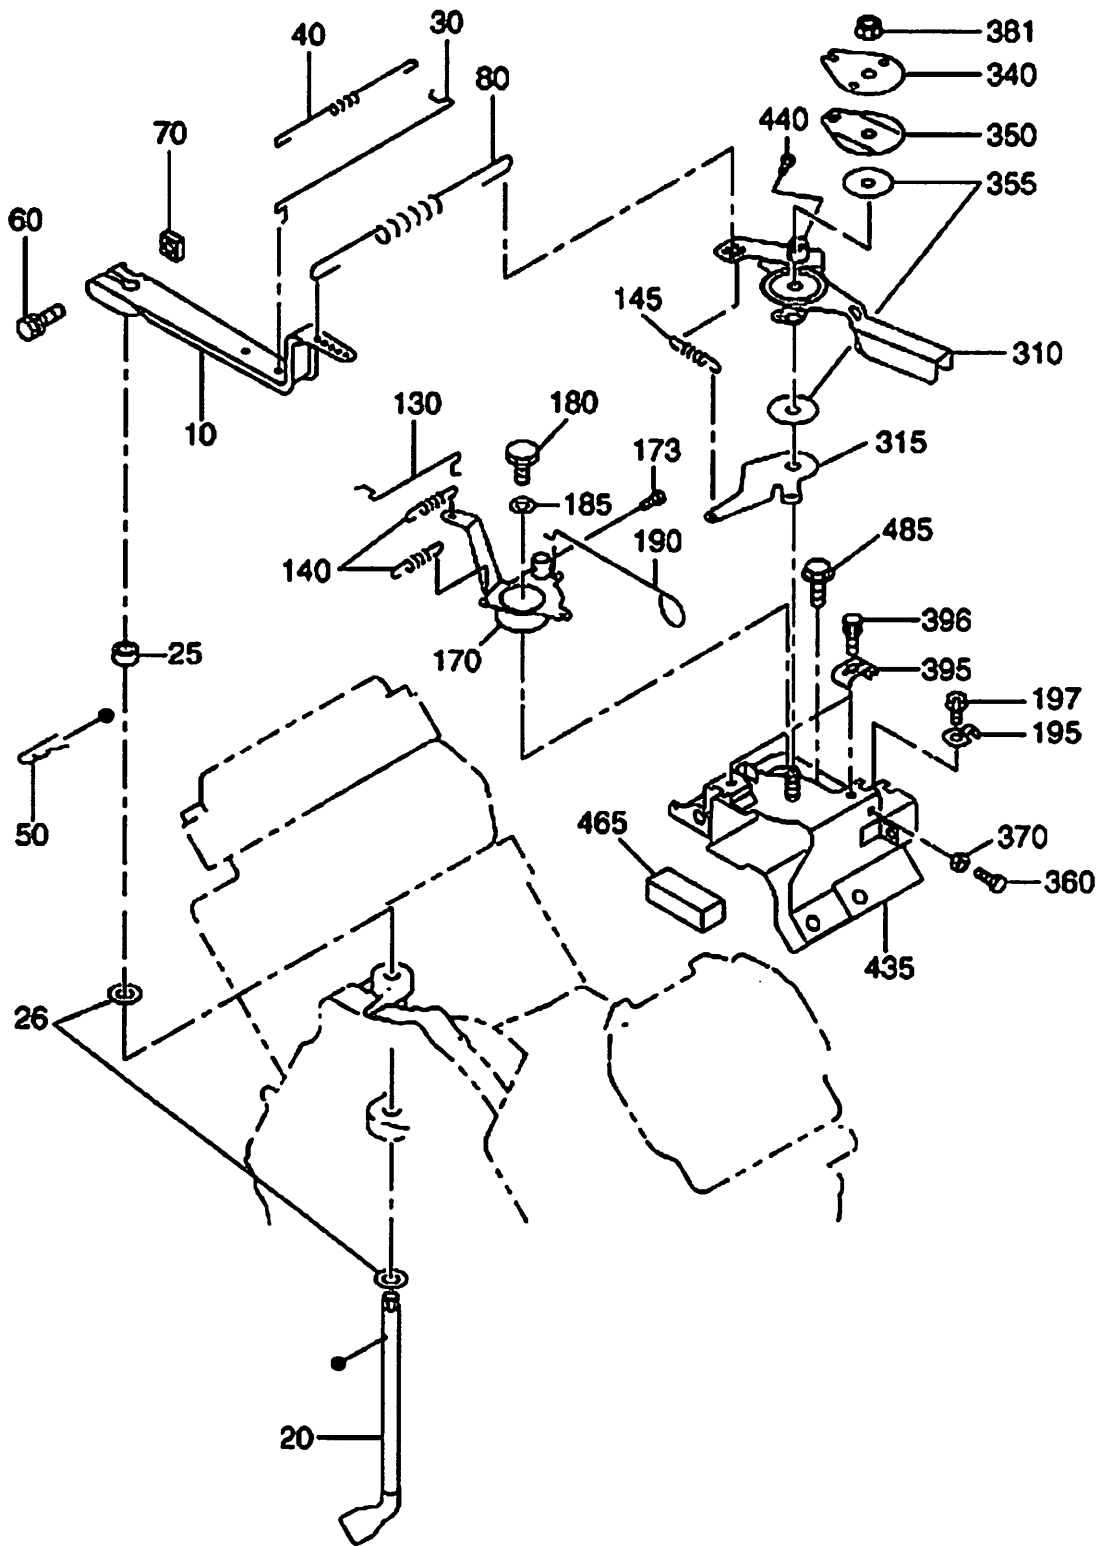
FIG. 400

EH65/64/63

263040001W01

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	263-42301-A3	GOVERNOR LEVER	1	Start Code: 4750.	
10	263-42301-03	GOVERNOR LEVER	1	End Code: 4749.	
20	263-42201-A3	GOVERNOR SHAFT	1	Start Code: 4688.	
20	263-42201-03	GOVERNOR SHAFT	1	End Code: 4687.	
25	X23-00801-50	SPACER	1		
26	003-10080-00	WASHER (M8)	2		
26	003-10080-00	WASHER (M8)	1		
30	263-42701-01	GOVERNOR ROD	1		
40	263-42801-03	ROD SPRING	1		
50	005-11060-01	SNAP PIN	1		
60	001-14063-00	BOLT & WASHER ASSY (M6X30)	1		
70	018-60600-20	SQUARE NUT	1	M6X1.0X4.9	
80	263-42505-03	GOVERNOR SPRING	1		
180	261-43101-01	LINK PIVOT	1		
185	003-22100-00	WAVED WASHER	1		
228	015-20500-10	TAPPING SCREW	1		
310	263-43301-A3	SPEED CONTROL LEVER	1	Start Code: 4750.	
310	263-43301-03	SPEED CONTROL LEVER	1	End Code: 4749.	
340	227-43501-13	STOP PLATE	1		
350	263-45002-03	SPRING WASHER	1		
355	021-70600-30	FRICTION WASHER	2		
360	011-50500-20	BOLT	1		
370	002-27050-00	NUT	1		
381	017-60600-20	SELF LOCK NUT	1		
435	263-45011-02	BRACKET UN(SPD CTL)	1		
485	011-00600-20	FLANGE BOLT	2	M6X1.0X12	


FIG. 500

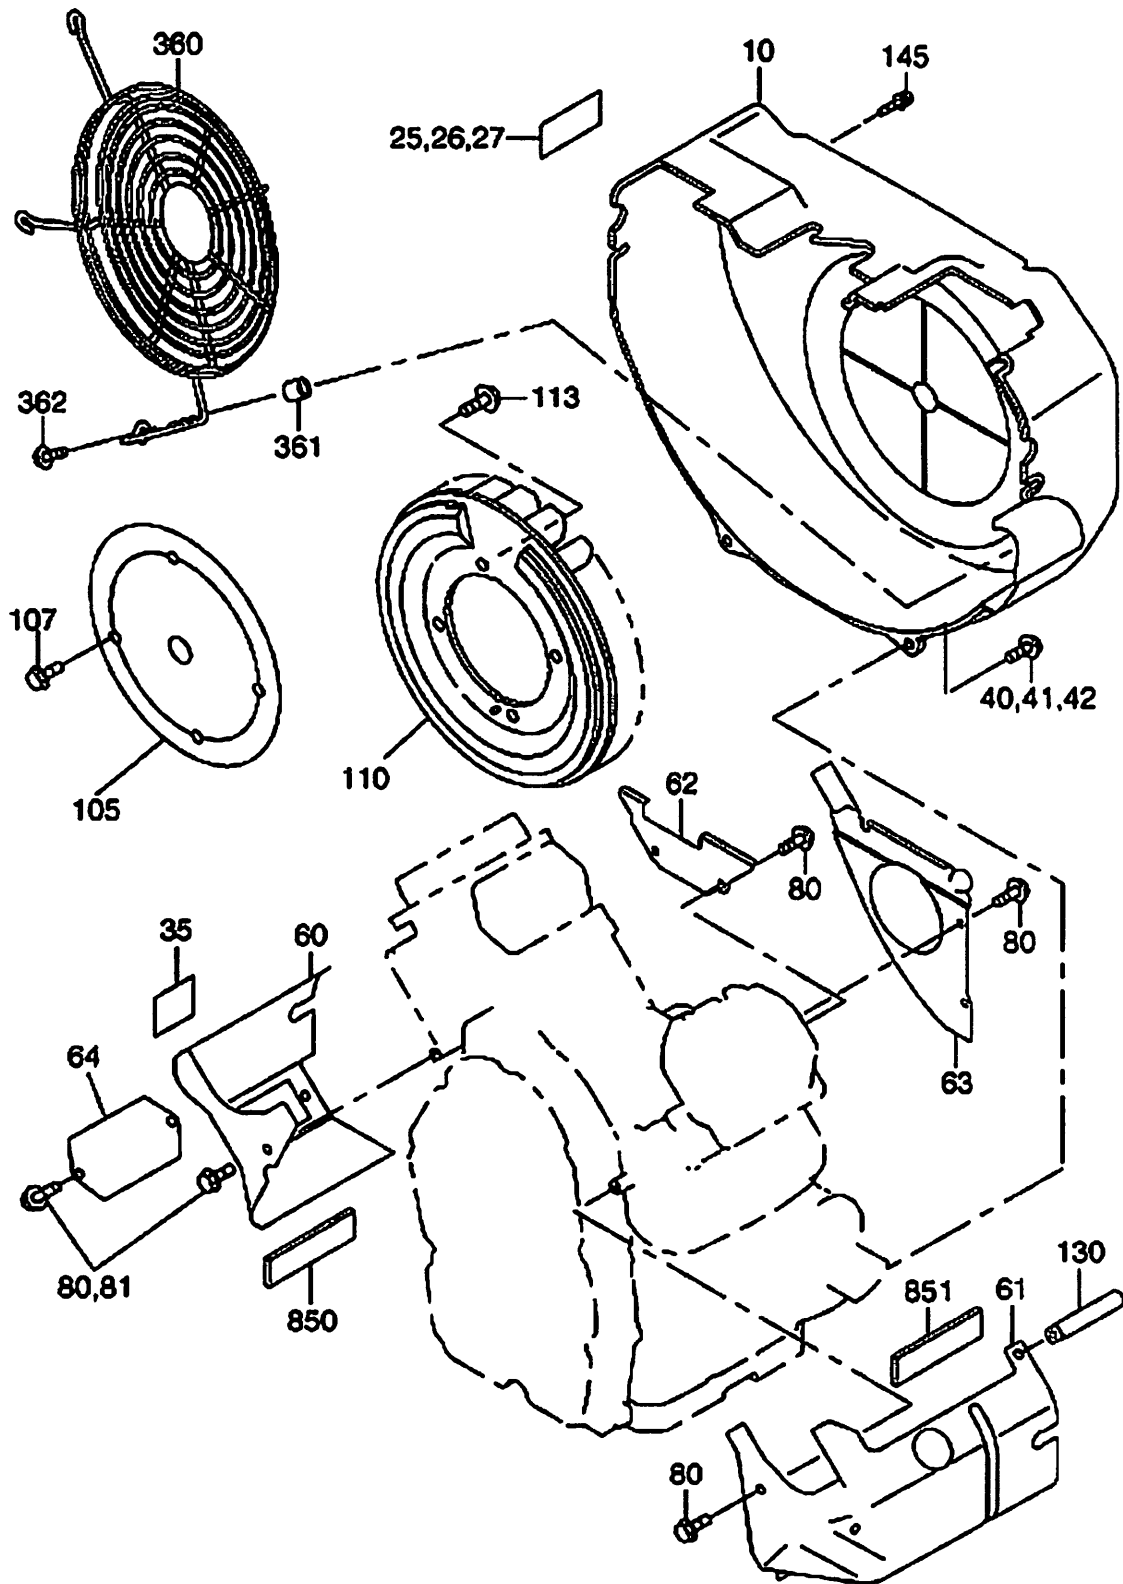

EH65/64/63

263050001W00

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	263-51101-A2	BLOWER HOUSING UN	1	Start Code: 5146.	
10	263-51101-02	BLOWER HOUSING UN	1	End Code: 5145.	
40	011-00600-30	FLANGE BOLT	7	M6X1.0X14	
41	011-00601-40	FLANGE BOLT	2		
60	263-52601-01	CYLINDER BAFFLE 1 CP	1		
61	263-52704-A1	CYLINDER BAFFLE 2 CP	1	Start Code: 5084.	
61	263-52701-01	CYLINDER BAFFLE 2 CP	1	End Code: 5083.	
62	263-52801-03	CYLINDER BAFFLE 3	1		
63	263-52911-B2	CYLINDER BAFFLE 4 UN	1	Start Code: 4688.	
63	263-52911-A2	CYLINDER BAFFLE 4 UN	1	Start Code: 4353. End Code: 4687.	
63	263-52901-02	CYLINDER BAFFLE 4 UN	1	End Code: 4352.	
80	011-00600-20	FLANGE BOLT	7	M6X1.0X12	
80	011-00600-20	FLANGE BOLT	13	M6X1.0X12	
110	263-54101-02	COOLING BLOWER UN	1		
113	001-14061-60	BOLT & WASHER ASSY (M6X16)	4		
130	056-60002-50	CLAMP	1		
145	001-11063-50	BOLT AND WASHER AY	1		

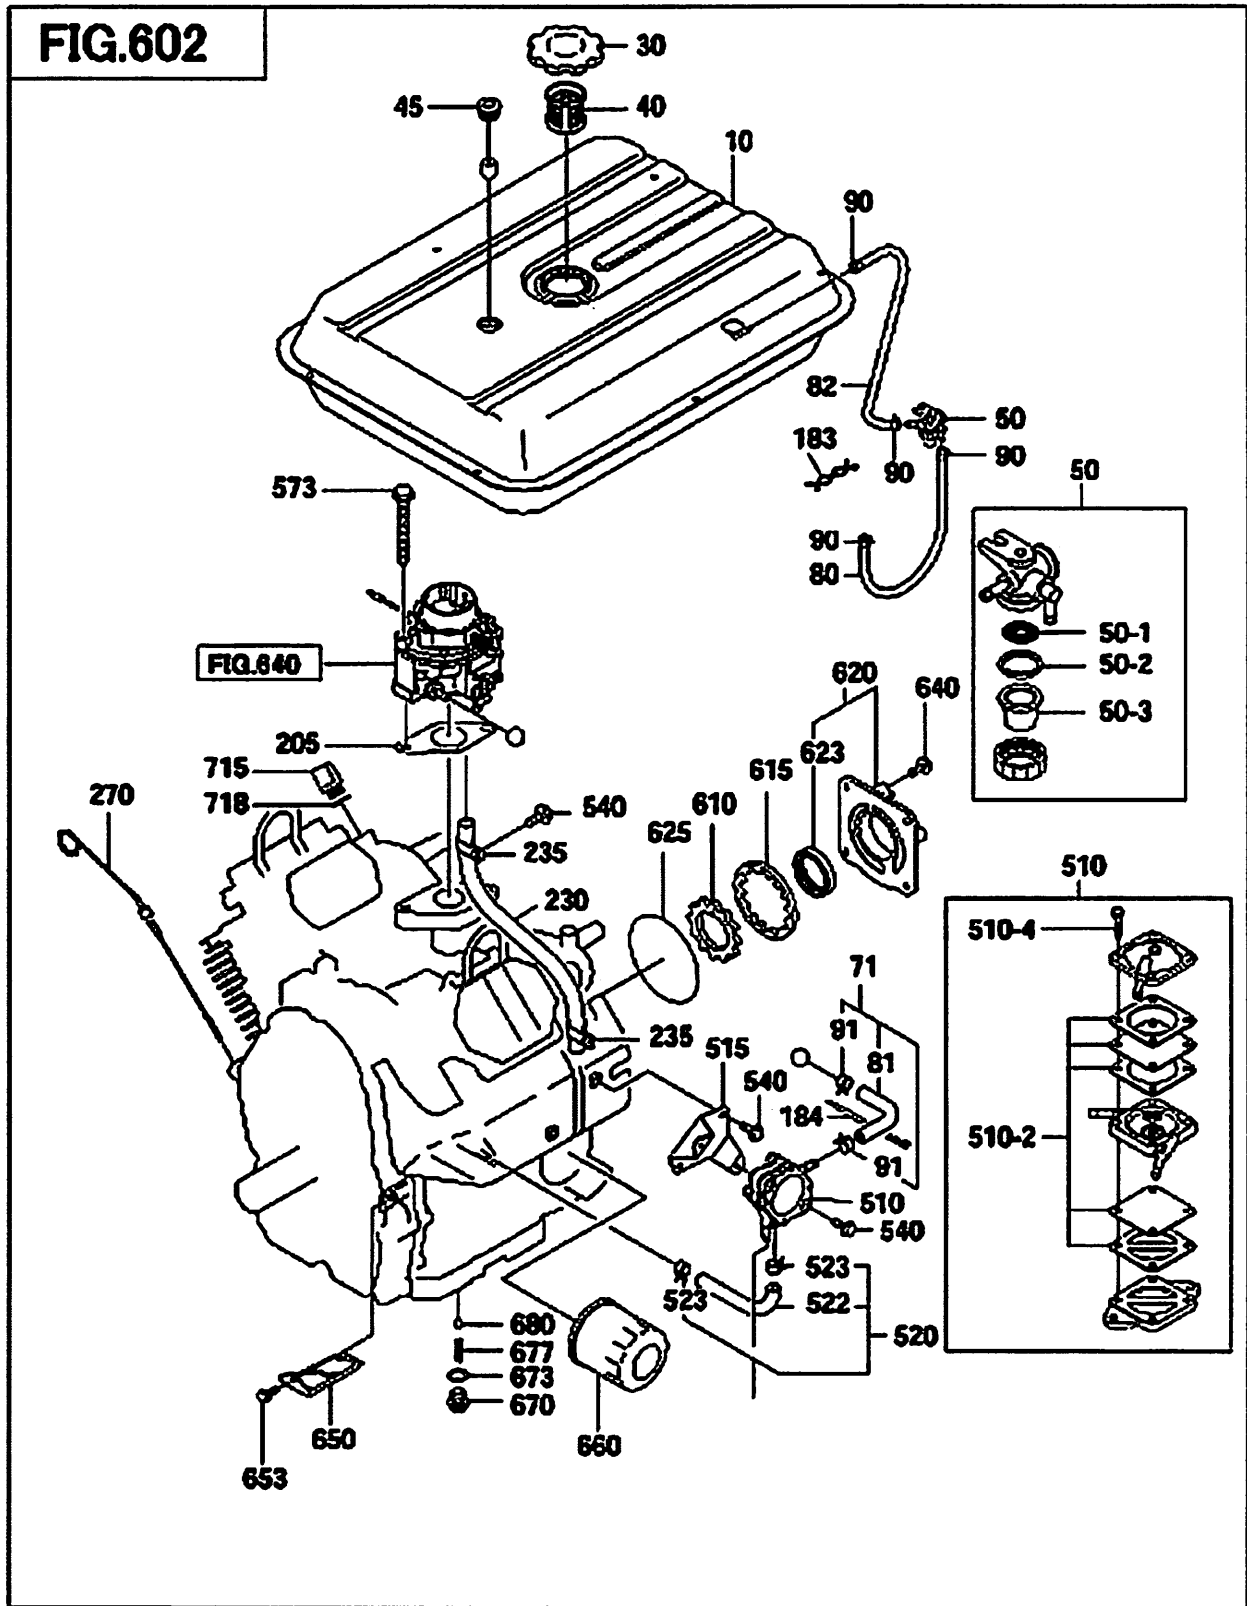


EH65/64/63

263060200E

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	31G-36103-01	FUEL TANK CP	1		
30	043-05900-11	FUEL TANK CAP AY	1		
40	064-15400-11	FUEL FILTER	1		
45	064-80015-00	FUEL GAUGE CP	1		
50	064-20036-01	FUEL STRAINER AY	1		
50	064-20002-20	FILTER	1		
50	064-20030-30	RUBBER PACKING	1		
50	064-20036-10	CUP	1		
71	263-62601-01	FUEL PIPE CP	1		
80	085-10600-00	RUBBER PIPE	1	Remarks: 6X12XM.	
81	263-68001-A3	RUBBER PIPE	1	Start Code: 5115.	
81	263-68001-03	RUBBER PIPE	1	End Code: 5114.	
82	085-10600-00	RUBBER PIPE	1	Remarks: 6X12XM.	
90	056-11100-20	HOSE CLAMP	4		
91	263-68501-03	HOSE CLAMP	2		
183	31F-39002-03	PURSE LOCK	1		
184	056-30000-40	WIRE BAND	1		
205	263-66201-A3	GASKET(CARBURETOR)	1	Start Code: 5146.	
205	263-66201-03	GASKET(CARBURETOR)	1	End Code: 5145.	
230	160-67402-A3	VINYL PIPE	1		
235	206-75501-01	CLAMP CP	2		
270	263-63603-01	OIL GAUGE CP	1	Start Code: 4323.	
270	263-63602-A1	OIL GAUGE CP	1	End Code: 4322.	
510	248-62201-00	FUEL PUMP AY	1		
510	251-62251-08	DIAPHRAGM,GASKET SET	1		
510	251-62250-08	SCREW	4		
515	263-65002-A3	BRACKET(FUEL PUMP)	1	Start Code: 5115.	
515	263-65002-02	BRACKET(FUEL PUMP)	1	End Code: 5114.	
520	263-62650-01	PULSE PIPE CP	1		
522	263-68051-A3	RUBBER PIPE	1	Start Code: 5115.	
522	263-68051-03	RUBBER PIPE	1	End Code: 5114.	
523	263-68501-03	HOSE CLAMP	2		
540	011-00600-20	FLANGE BOLT	5	M6X1.0X12	
573	011-00801-10	FLANGE BOLT	2		
610	263-63901-03	INNER ROTOR	1		
615	263-63902-03	OUTER ROTOR	1		
620	263-64001-01	OIL PUMP COVER CP	1		
623	044-03500-90	OIL SEAL	1	Remarks: 35X48X8.	
625	X24-08900-20	O-RING	1		

640	011-00601-40	FLANGE BOLT	4	
650	263-64302-02	OIL PUMP FILTER UN	1	Start Code: 5023.
650	263-64301-02	OIL PUMP FILTER UN	1	End Code: 5022.
653	263-65011-A3	FLANGE BOLT	1	Start Code: 5023.
653	X10-10500-10	FLANGE BOLT	1	Start Code: 4627. End Code: 5022.
653	X11-60500-20	BOLT	1	End Code: 4626.
660	248-65801-00	OIL FILTER AY	1	Start Code: 5146.
660	261-65902-A0	OIL FILTER AY	1	End Code: 5145.
670	263-65001-13	PLUG(OIL RELIEF)	1	
673	003-70140-00	GASKET,ALUMINUM	1	
677	248-65601-03	SPRING(RELIEF.VALVE)	1	
680	006-90308-00	STEEL BALL	1	
715	263-63602-03	OIL FILLER CAP	1	
718	021-31600-10	GASKET	1	Interchangable with 021-31600-20.

FIG. 700

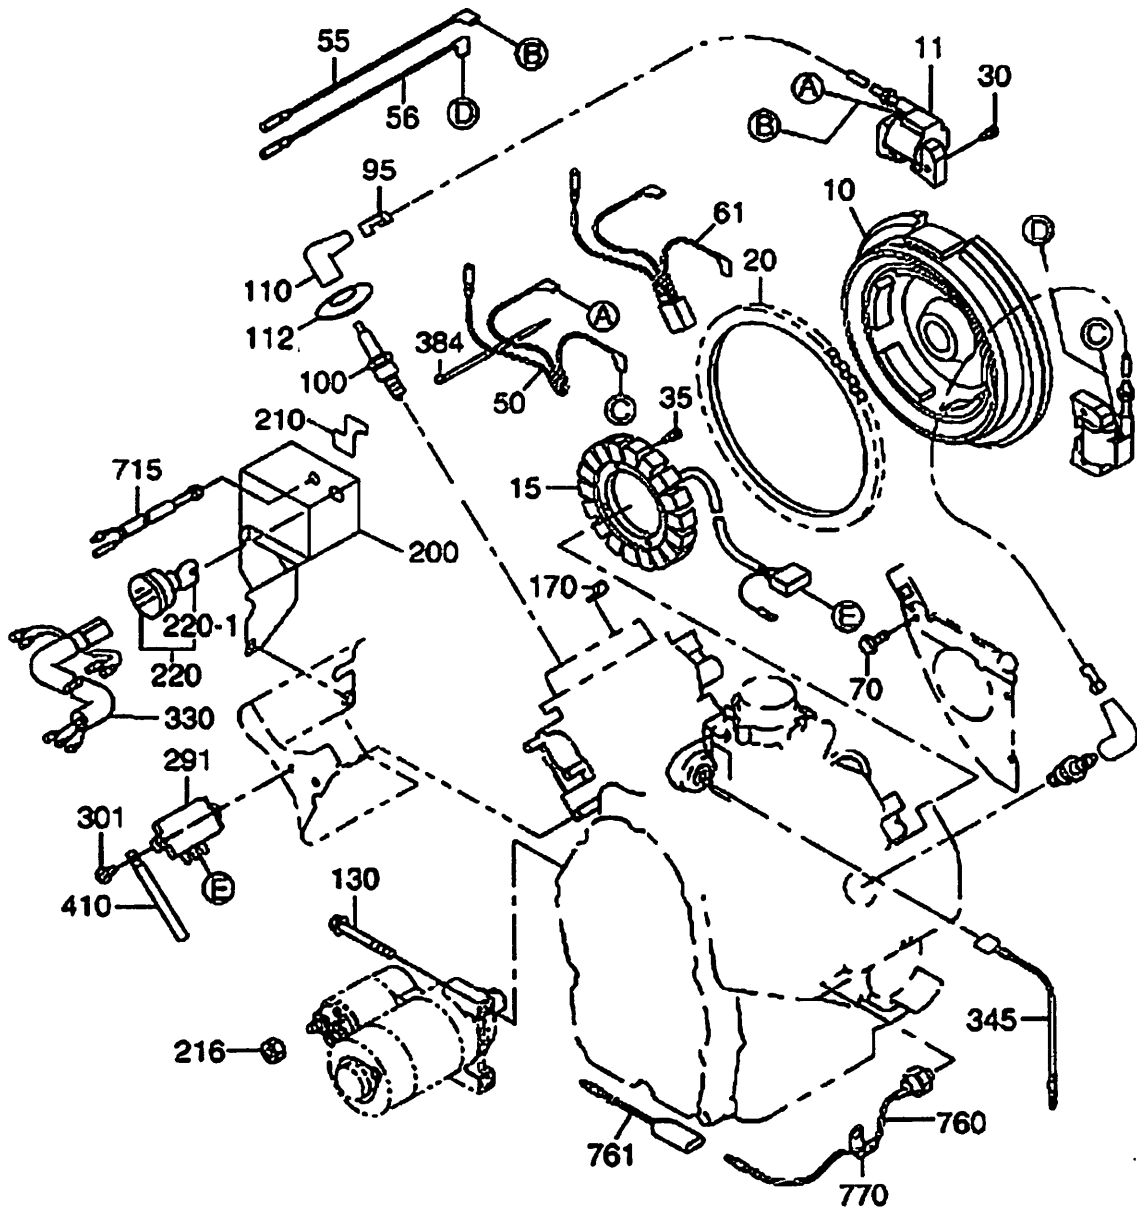


263070001W00

EH65/64/63


Ref #	Part #	Description	Qty	Context Note	Foot Note
10	263-77202-11	FLYWHEEL CP	1	Start Code: 4780.	
10	263-77202-01	FLYWHEEL CP	1	End Code: 4779.	
11	263-78201-01	IGNITION COIL CP	2		
15	263-79403-C1	CHARGE COIL CP	1	Start Code: 4870.	
15	263-79403-B1	CHARGE COIL CP	1	End Code: 4869.	
20	263-71001-03	RING GEAR	1		
30	001-14063-00	BOLT & WASHER ASSY (M6X30)	4		
35	013-10500-40	SCREW AND WASHER AY	4		
55	263-73016-01	WIRE 4 CP	1		
56	263-73017-01	WIRE 5 CP	1		
95	065-90000-10	PLUG TERMINAL	2		
100	065-01404-80	SPARK PLUG	2		
100	RN9YC	SPARK PLUG	2		
110	065-50001-40	SPARK PLUG CAP	2		
130	011-00801-00	FLANGE BOLT	2		
175	206-75501-01	CLAMP CP	1		
211	011-00600-30	FLANGE BOLT	2	M6X1.0X14	
212	002-38060-00	FLANGE NUT	2	M6X1.0	
214	X20-70600-30	LOCK WASHER	1	End Code: 4352.	
216	002-38080-00	FLANGE NUT	1	M8X1.25	
291	263-71901-01	REGULATOR CP	1		
296	X17-10600-10	NUT	3	End Code: 4352.	
301	011-00601-40	FLANGE BOLT	2		
345	263-73112-01	WIRE 6 CP	1		
384	056-30000-10	WIRE BAND	4	Start Code: 4627. Interchangeable with 056-30000-40.	
384	056-30000-60	WIRE BAND	4	Start Code: 4596. End Code: 4626.	
384	056-30000-40	WIRE BAND	4	End Code: 4595.	
410	056-60002-50	CLAMP	3	Start Code: 4565.	
410	056-60002-50	CLAMP	2	End Code: 4564.	
411	206-75501-01	CLAMP CP	1		
760	263-73102-A1	WIRE AY(OIL PRE.SW.)	1		

FIG.720

(-4352)

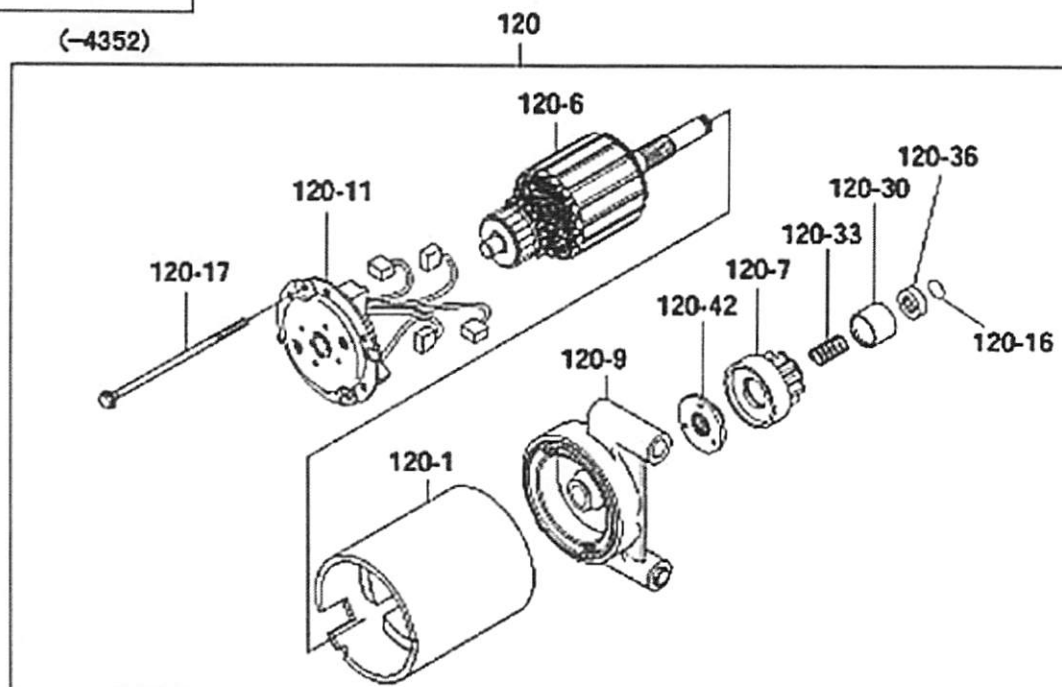

(4353-)

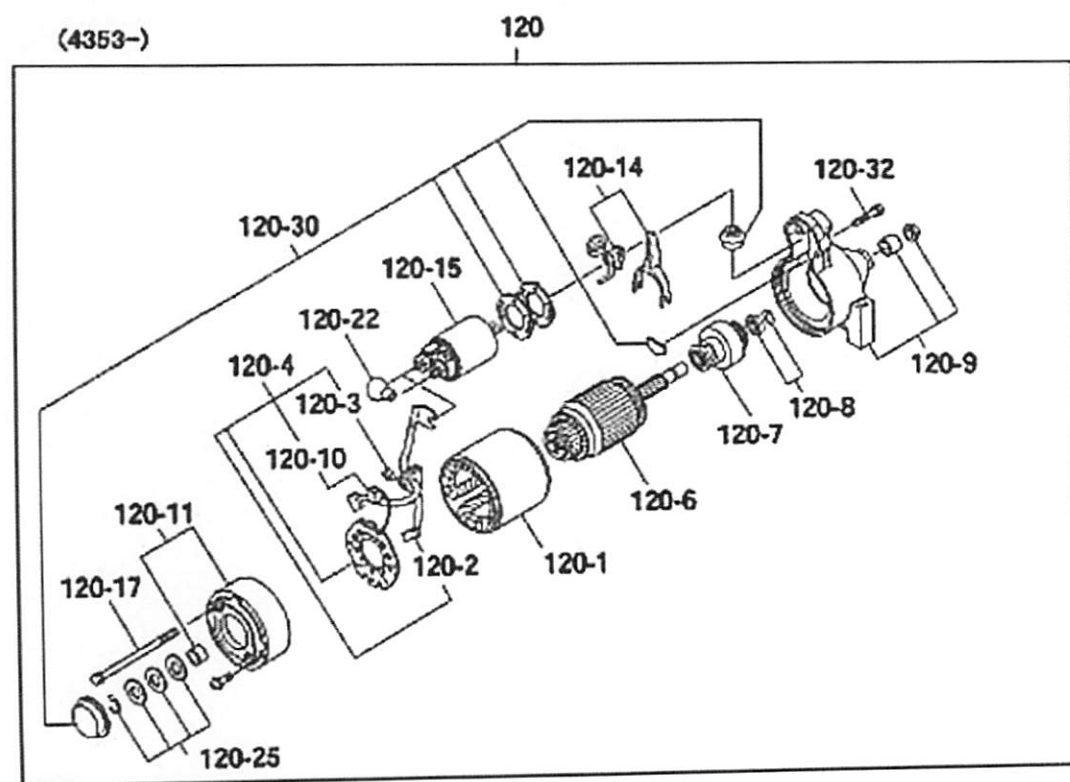


EH65/64/63

263072000E

Ref #	Part #	Description	Qty	Context Note	Foot Note
120	255-70551-08	BRUSH SET	1	Start Code: 4353.	
120	228-70516-08	BRUSH SPRING	4	Start Code: 4353.	
120	255-70531-08	BRUSH HOLDER AY	1	Start Code: 4353.	
120	263-70510-08	ARMATURE ASSY	1	Start Code: 4353.	
120	255-70521-08	PINION AY	1	Start Code: 4353.	
120	210-70534-08	PINION STOPPER SET	1	Start Code: 4353.	
120	263-70500-08	GEAR CASE ASSY	1	Start Code: 4353.	
120	228-70514-08	BRUSH (-)	2	Start Code: 4353.	
120	263-70505-08	REAR COVER ASSY	1	Start Code: 4353.	
120	243-70525-08	SHIFT LEVER KIT	1	Start Code: 4353.	
120	263-70515-08	MAGNETIC SWITCH AY	1	Start Code: 4353.	
120	207-70524-08	THROUGH BOLT	2	Start Code: 4353.	
120	207-70526-08	RUBBER CAP BS	1	Start Code: 4353.	
120	263-70550-08	THRUST WASHER KIT	1	Start Code: 4353.	
120	255-70570-08	DUST COVER KIT	1	Start Code: 4353.	
120	263-70551-08	BOLT(M6X37)	2	Start Code: 4353.	
120	263-70501-00	STARTING MOTOR AY	1	End Code: 4352.	
120	263-70560-08	YOKE AY	1	End Code: 4352.	
120	263-70511-08	ARMATURE AY	1	End Code: 4352.	
120	263-70521-08	PINION AY	1	End Code: 4352.	
120	263-70501-08	END FRAME AY	1	End Code: 4352.	
120	263-70506-08	END FRAME AY	1	End Code: 4352.	
120	263-70582-08	RETAINER RING	1	End Code: 4352.	
120	263-70575-08	CASE BOLT	2	End Code: 4352.	
120	263-70583-08	DUST COVER	1	End Code: 4352.	
120	263-70585-08	SPRING	1	End Code: 4352.	
120	263-70502-A0	STARTING MOTOR AY	1	Start Code: 4353.	
120	255-70580-08	YOKE AY	1	Start Code: 4353.	
120	263-70581-08	SPRING RETAINER	1	End Code: 4352.	
120	263-70584-08	NUT	1	End Code: 4352.	

FIG. 760

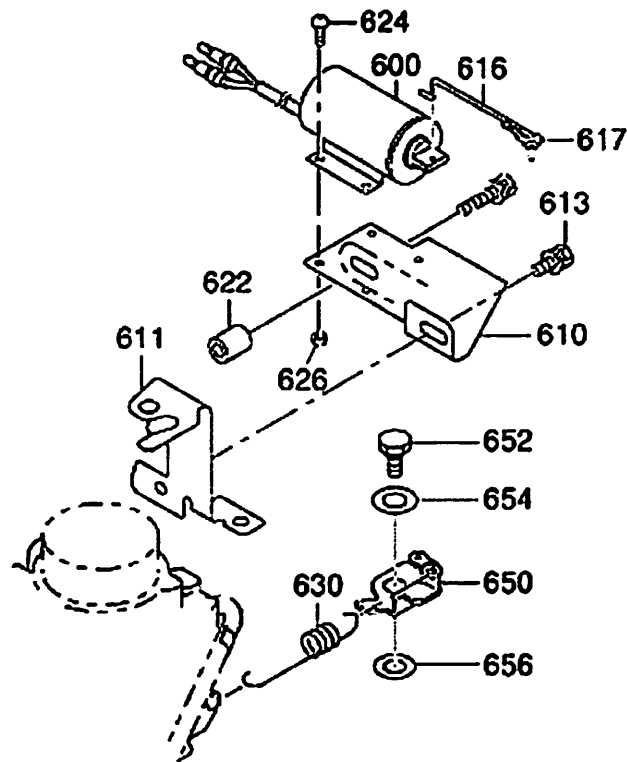


263076000W01

EH65/64/63

Ref #	Part #	Description	Qty	Context Note	Foot Note
600	263-75301-01	SOLENOID CP	1		
610	263-75401-01	BRACKET 1	1		
611	263-75402-01	BRACKET 2	1		
613	001-14061-20	BOLT AND WASHER AY	1		
616	263-75442-03	ROD	1	Start Code: 4565.	
616	263-75442-01	ROD CP	1	End Code: 4564.	
617	235-44701-03	HOLDER (ROD)	1		
622	023-00603-50	SPACER	1		
624	014-00300-20	SCREW	4		
626	017-00300-10	NUT	4		
630	263-75462-03	SPRING	1		
650	263-75423-01	LINK 2 CP	1		
652	261-43101-01	LINK PIVOT	1		
654	021-71000-20	FRICTION WASHER	1		
656	263-46214-A3	WASHER	1		

FIG. 900

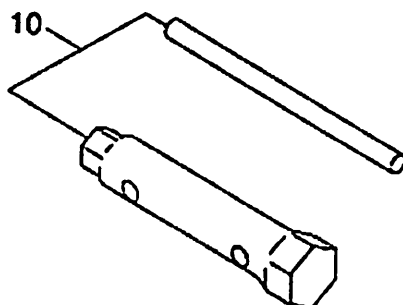


EH65/64/63

263090000W01

Ref #	Part #	Description	Qty	Context	Note	Foot	Note
10	227-90301-10	ACCESSORY TOOL KIT	1				

FIG.641

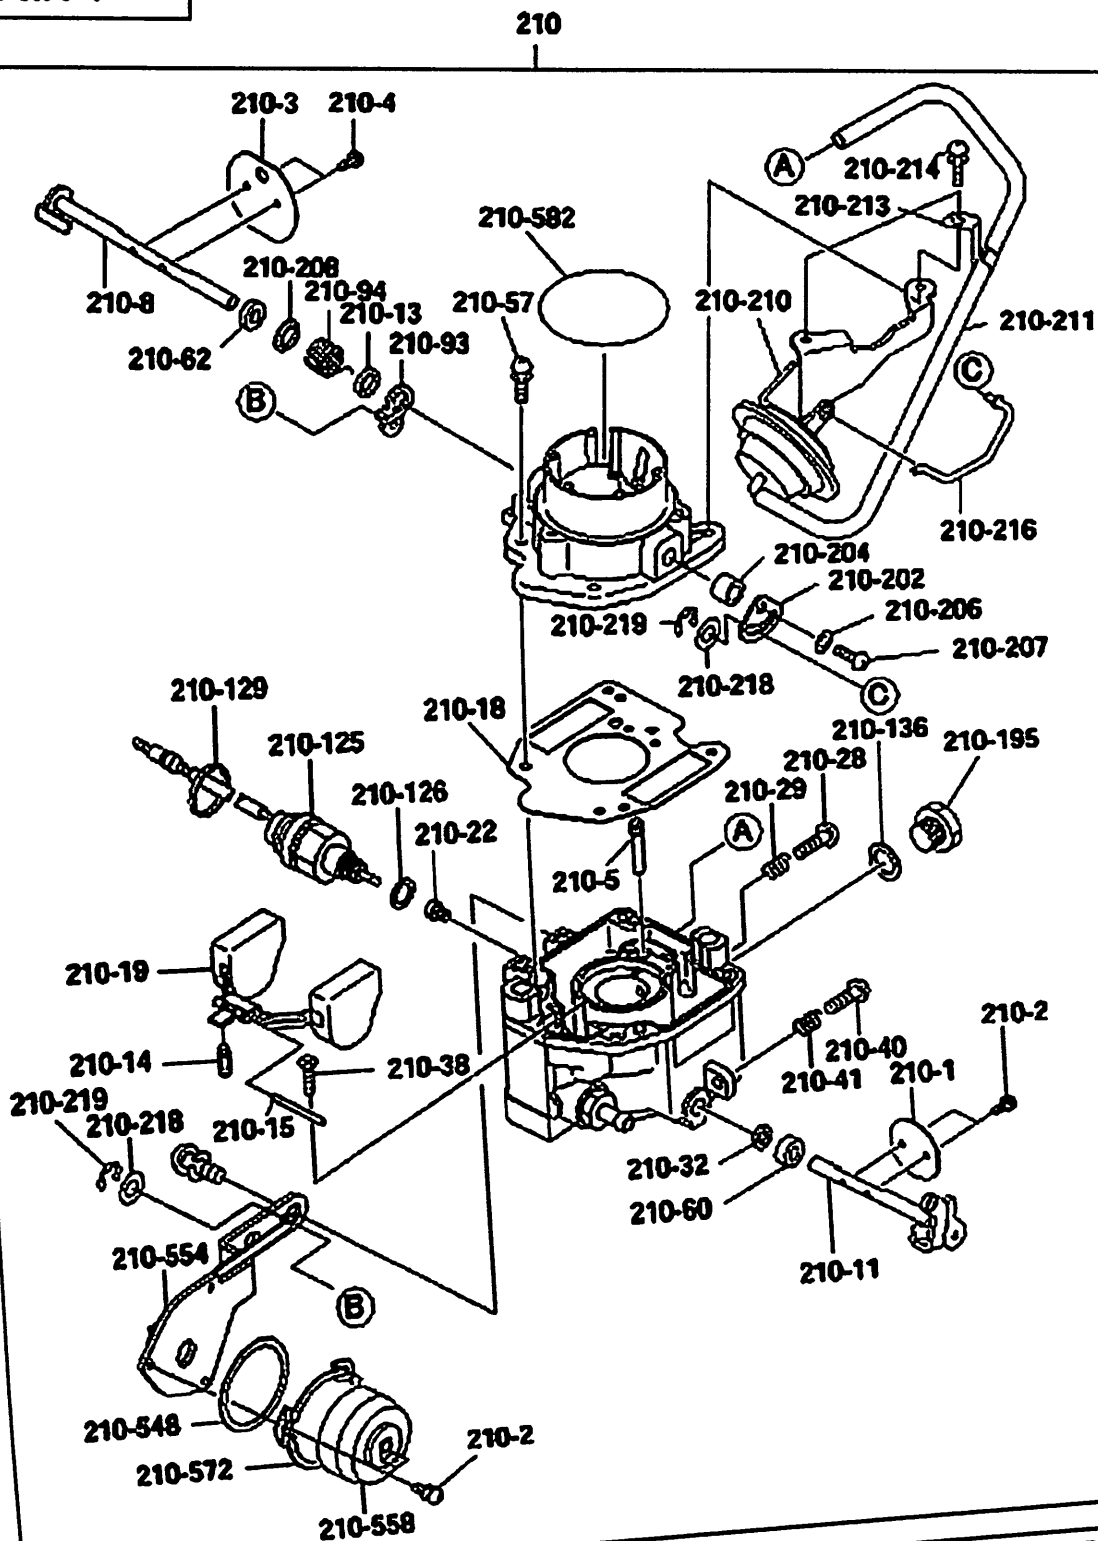

263064100E

EH65/64/63

Ref #	Part #	Description	Qty	Context	Note	Foot	Note
210-0	263-62312-00	CARBURETOR AY	1				
210-136	263-62555-08	GASKET	1				
210-195	263-62552-08	PLUG	1				
210-202	263-62506-08	ARM,CHOKE	1				
210-204	263-62591-08	FILTER,AIR	1				
210-206	263-62595-08	WASHER	1				
210-207	161-62345-08	SCREW,LEVER SET	1				
210-208	258-62553-08	COLLER,CHOKE	1				
210-210	263-62352-08	OPENER ASSY,CHOKE	1				
210-211	263-62567-08	PIPE,RUBBER	1				
210-213	263-62568-08	HOLDER,VACUUM HORSE	1				
210-214	263-62589-08	SCREW,HOLDER SET	2				
210-216	263-62353-08	ROD,CHOKE PISTON	1				
210-218	263-62596-08	WASHER	2				
210-219	107-62377-08	RING,E STOP	2				
210-548	107-62373-08	GASKET,THERMO.CASE	1				
210-554	263-62562-08	HOLDER CP.BI-METAL	1				
210-558	107-62376-08	COVER ASSY,THERMO	1				
210-572	107-62375-08	PLAT,BIMETAL SET	1				
210-582	263-62560-08	O-RING	1				
210-1	263-62535-08	VALVE,THROTTLE	1				
210-2	261-62352-08	SCREW,VALVE SET	5				
210-3	258-62525-08	VALVE,CHOKE	1				
210-4	258-62555-08	SCREW,VALVE SET	2				
210-5	258-62420-08	JET,SLOW	1				
210-8	263-62523-08	SHAFT ASSY,CHOKE	1				
210-11	263-62534-08	SHAFT ASSY,THROTTLE	1				
210-13	258-62551-08	RING,CHOKE LEVER	1				
210-14	226-62501-08	VALVE,FLOAT	1				
210-15	258-62515-08	PIN,FLOAT	1				
210-18	258-62545-08	GASKET,AIR HORN	1				
210-19	258-62505-08	FLOAT AY	1				
210-22	263-62400-08	JET,MAIN	1				
210-28	215-62353-08	SCREW,DRAIN	1				
210-29	215-62446-08	SPRING,DRAIN SCREW	1				
210-32	226-62580-08	GASKET (FELT)	1				
210-38	258-62556-08	SCREW,FLOAT PIN SET	1				
210-40	258-62451-08	SCREW,THRO ADJUST	1				
210-41	258-62445-08	SPRING,ADJUST SCREW	1				

210-57	258-62450-08	SCREW,AIR HORN SET	2
210-60	258-62570-08	COLLAR,THRO.SHAFT	1
210-62	258-62554-08	GASKET (FOAM)	1
210-93	263-62527-08	LEVER ASSY,CHOKE	1
210-94	263-62447-08	SPRING,CHOKE	1
210-125	258-62557-18	SOLENOID VALVE ASSY	1
210-126	258-62546-08	GASKET,SOLENOID	1
210-129	258-62566-08	CLAMP,SOLENOID	1