


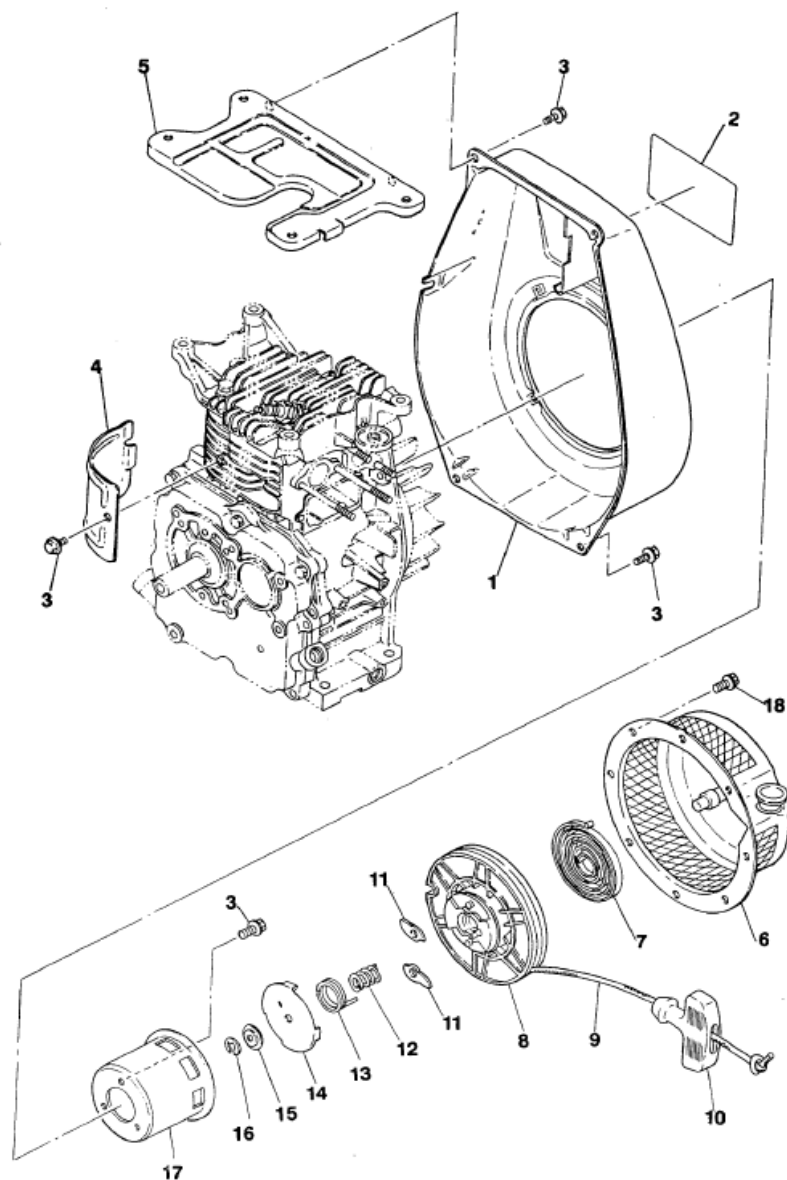

AIR SHROUD, CYLINDER HEAD AND RECOIL START

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	EY234 51201 07	Air shroud	1
2	EY234 91703 03	Label	1
3	EY011 00600 20	Flange bolt	9
4	EY234 52601 03	Cylinder baffle	1
5	EY234 52701 03	Head cover	1
6	EY234 50211 00 2110	Recoil starter assembly (includes 7 - 17)	1
7	EY106 50116 08	Power spring	1
8	EY207 50122 18	Reel assembly	1
—	EY106 50108 08	Rope assembly (includes 9 and 10)	1
9	—	Rope	1
10	—	Handle	1
—	EY232 50111 07	Recoil hardware kit (includes 11 - 16)	1
11	—	Ratchet	2
12	—	Friction spring	1
13	—	Return spring	1
14	—	Friction plate	1
15	—	Thrust washer	1
16	EY106 50186 08	Clip	1
17	EY234 50145 08	Starting pulley	1
18	EY011 00600 10	Flange bolt	4

*Not serviced separately.