

PARTS MANUAL

MODEL
EX13
Engine

EX130D50030

10/15



SUBARU

Industrial Power Products

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047 - Phone 847-540-7300 - Fax 847-438-5012


e-mail: sales@subarupower.com - www.subarupower.com

© 2015 Subaru Industrial Power Products

Group Index

Group Name	Page
100 Crankcase.....	4
200 Crankshaft.....	8
300 Intake & Exhaust.....	10
315 Air Cleaner.....	14
400 Governor.....	16
500 Cooling & Starting.....	18
520 Cooling & Starting.....	20
600 Fuel & Lubricant.....	22
640 Carburetor.....	24
700 Electric Device.....	28
770 Electric Device.....	30
900 Accessory.....	32
 Part Number Index.....	 34
Part Description Index.....	35

100 Crankcase

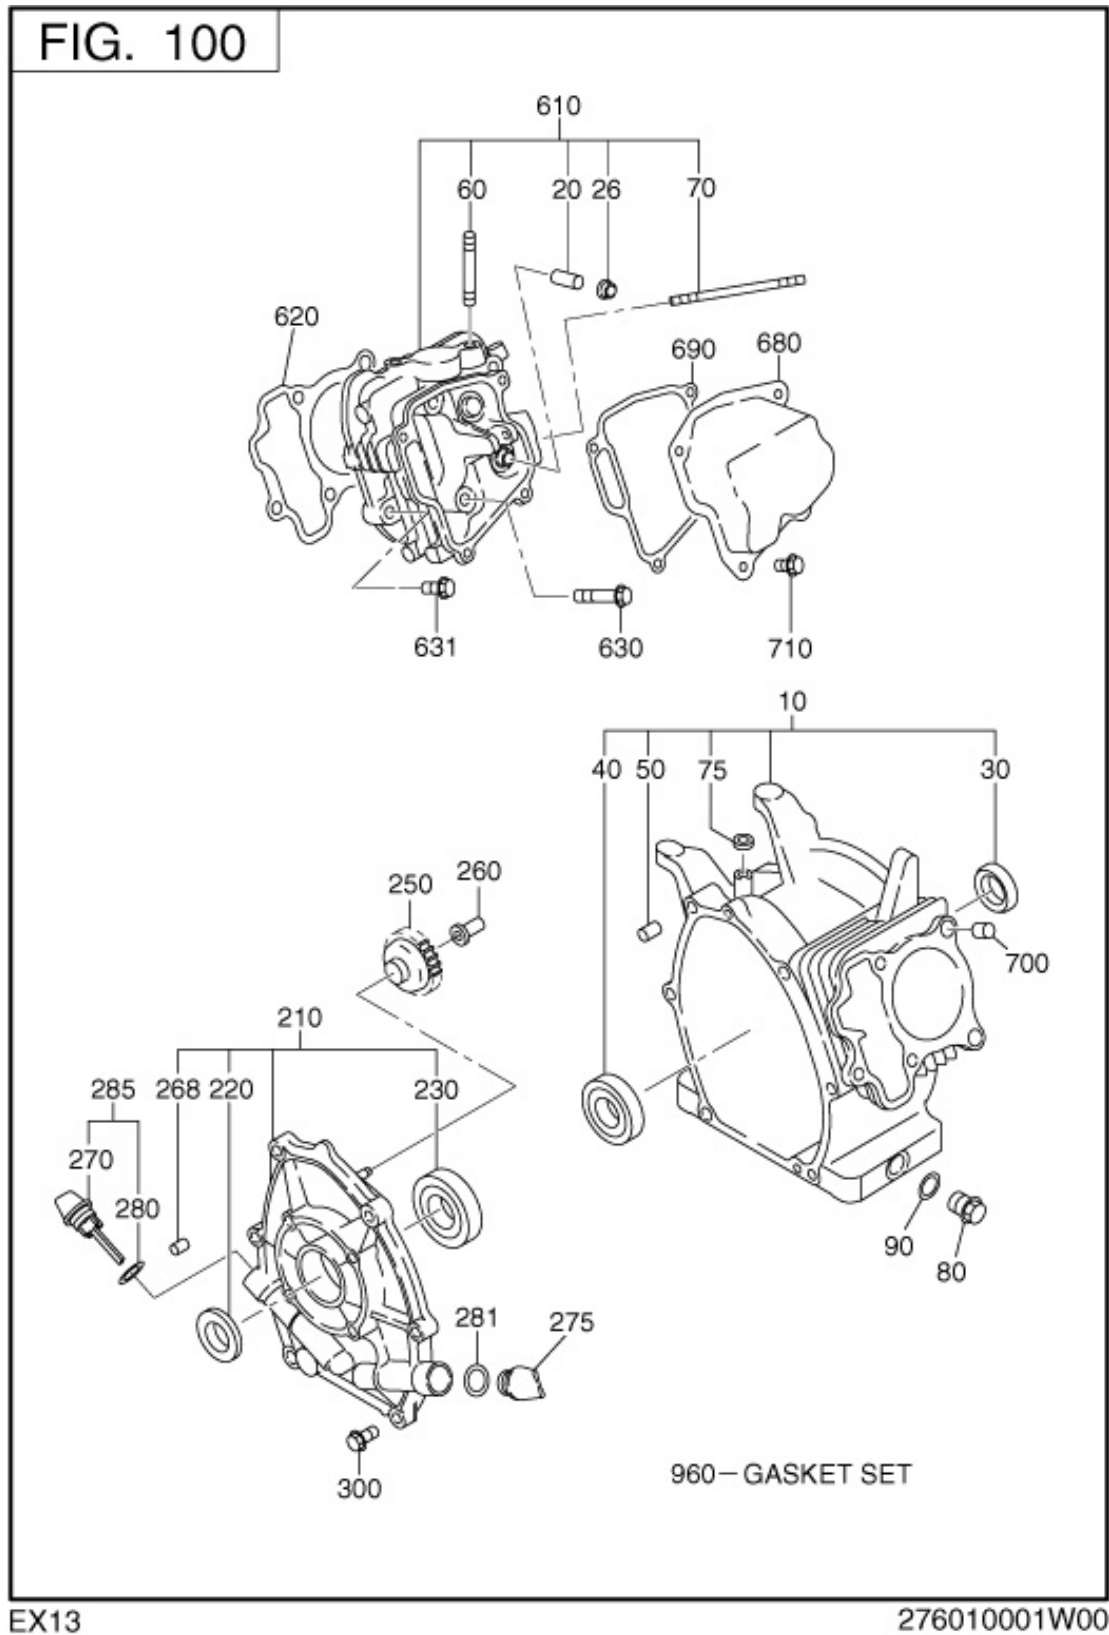

100 Crankcase


Ref	Part Number.	Description	Qty	Remark
10	276-10102-21	CRANKCASE CP	1	End Code: 5722. Remarks: W/OIL SENSOR. Interchangeable with 276-10101-31.
10	276-10102-41	CRANKCASE CP	1	Start Code: 5904. Remarks: W/OIL SENSOR.
10	276-10102-31	CRANKCASE CP	1	Start Code: 5723. End Code: 5903. Remarks: W/OIL SENSOR. Interchangeable with 276-10102-41.
20	237-14202-03	VALVE GUIDE	2	Remarks: 5.5DX9.5DX27L.
26	277-16010-01	STEM SEAL	1	Remarks: 5.5DX9.5DX15DX7.8B.
30	044-02502-00	OIL SEAL	1	Remarks: 25DX38DX7B.
40	060-02800-21	BALL BEARING	1	Start Code: 5784. Remarks: 28DX58DX16B.
40	060-02800-20	BALL BEARING	1	End Code: 5783. Remarks: 28DX58DX16B. Interchangeable with 060-02800-21.
50	277-15011-03	PIPE KNOCK	2	Remarks: 10.3DX8.5DX14L.
60	010-50802-50	STUD (M8X1.25X25)	2	
70	010-50603-51	STUD	2	Remarks: M6X1.0X98L.
75	044-00600-20	OIL SEAL	1	Remarks: 6DX10DX2.5B.
80	040-11400-30	PLUG	2	Remarks: M14X1.5X20DX12L.
90	021-11400-20	GASKET	2	Remarks: 14.1DX19DX2.3T.
210	277-11002-21	MAIN BEARING COVER C	1	Start Code: 5753. Remarks: FLANGE 4-5/16-24UNF.
210	277-11002-11	MAIN BEARING COVER C	1	Start Code: 5723. End Code: 5752. Remarks: FLANGE 4-5/16-24UNF. Interchangeable with 277-11002-21.
210	277-11002-01	MAIN BEARING COVER C	1	End Code: 5722. Remarks: FLANGE 4-5/16-24UNF. Interchangeable with 277-11002-11.
220	044-02502-10	OIL SEAL	1	Remarks: 25DX41.25DX6B.
230	060-02500-10	BALL BEARING	1	End Code: 5783. Remarks: 6205 25DX52DX15B.
230	060-02501-40	BALL BEARING	1	Start Code: 5784. Remarks: 6205 25DX52DX15B.
250	277-45004-21	GOVERNOR GEAR CP	1	Remarks: 53DX28.8T N=33.
260	263-41901-03	GOVERNOR SLEEVE	1	Remarks: 6DX7.6DX16DX26L.
270	277-63601-03	OIL GAUGE ASSY	1	End Code: 5813. Remarks: M18X1.5 L=70+18. Interchangeable with 277-63601-13.
270	277-63601-13	OIL GAUGE	1	Start Code: 5814. Remarks: M18X1.5 L=70+18.
275	277-65001-03	FILLER PLUG	1	Remarks: M18X1.5 L=12+18.
280	021-31600-20	GASKET	1	Remarks: 16DX23DX1.2T RUBBER.

100 Crankcase

Ref	Part Number.	Description	Qty	Remark
281	021-31600-20	GASKET	1	Remarks: 16DX23DX1.2T RUBBER.
300	001-04083-50	FLANGE BOLT (M8X35)	6	
610	276-13001-01	CYLINDER HEAD CP	1	
620	276-15001-13	GASKET (HEAD)	1	Remarks: T=0.2.
630	011-00802-40	FLANGE BOLT (M8X68)	4	
631	001-04083-50	FLANGE BOLT (M8X35)	1	
680	277-15501-01	ROCKER COVER CP	1	
690	277-16001-03	GASKET(ROCKER COVER)	1	Remarks: T=0.7.
700	277-15011-03	PIPE KNOCK	2	Remarks: 10.3DX8.5DX14L.
710	011-00600-20	FLANGE BOLT	4	M6X1.0X12
960	276-99001-07	GASKET SET	1	

This Page Intentionally Left Blank


200 Crankshaft

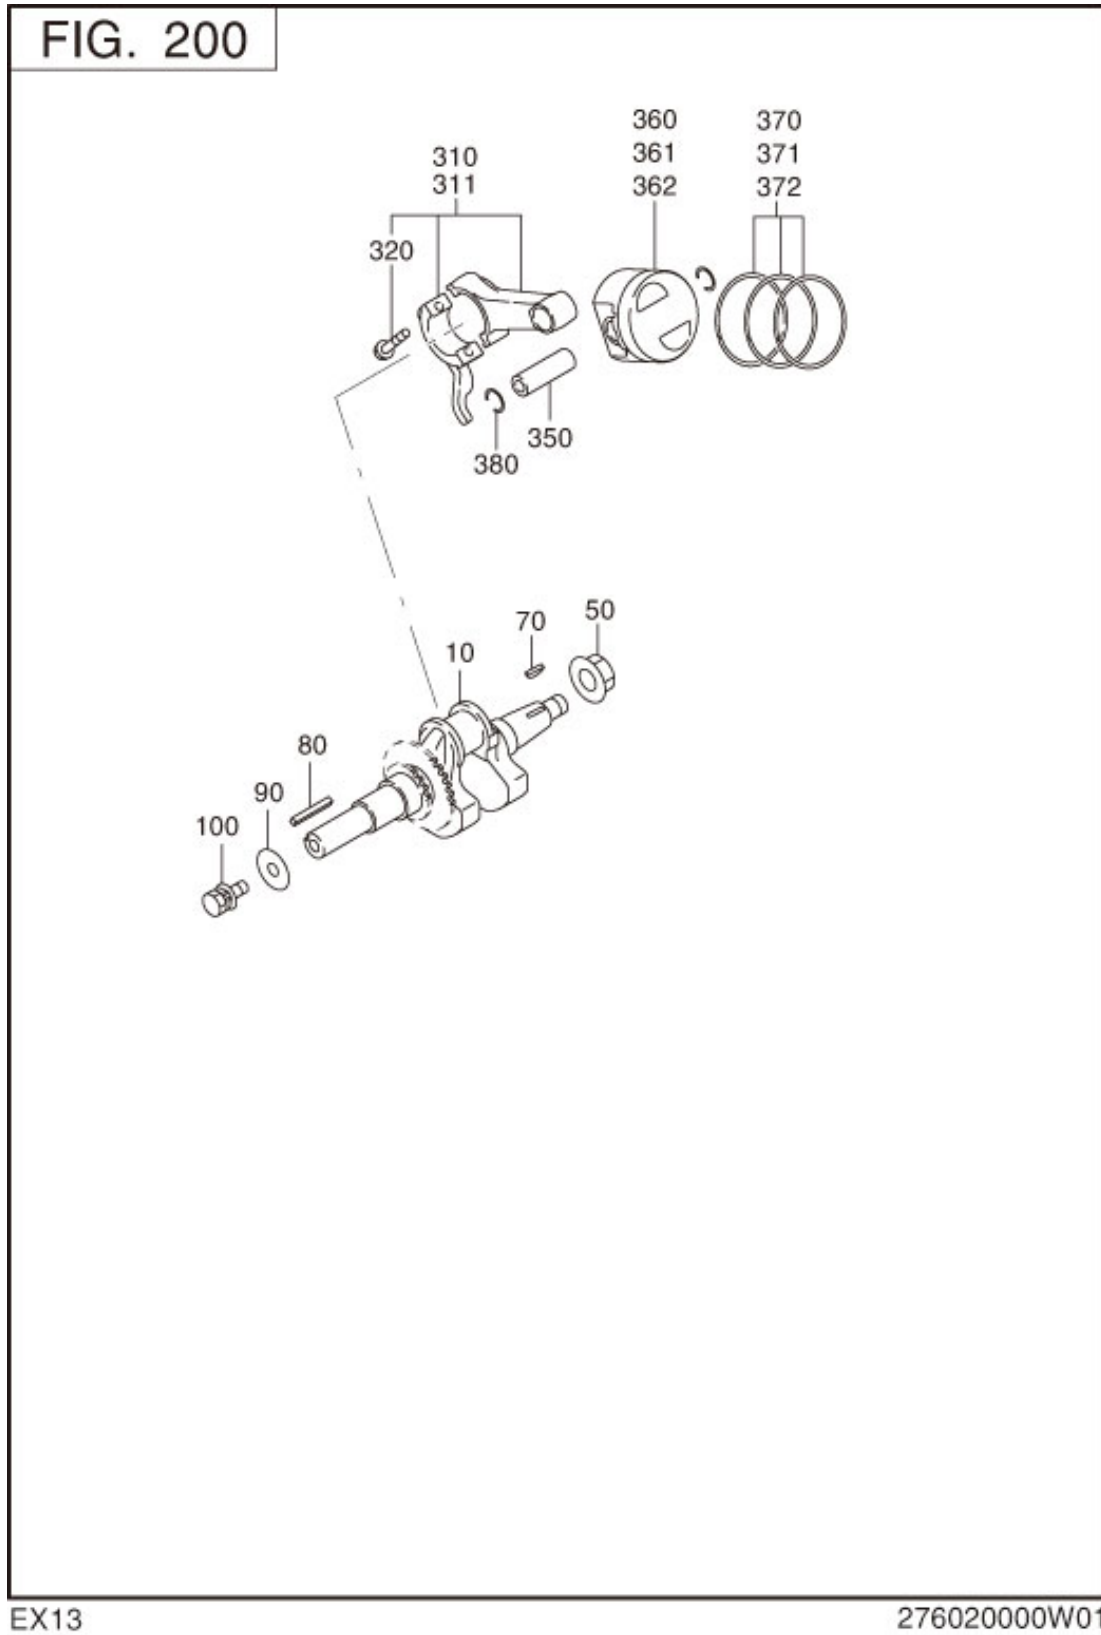

200 Crankshaft

Ref	Part Number.	Description	Qty	Remark
10	276-20901-11	CRANKSHAFT CP	1	Start Code: 5692. Remarks: L=260 DU 19.05DX58.5.
10	276-20901-01	CRANKSHAFT CP	1	End Code: 5691. Remarks: L=260 DU 19.05DX58.5. Interchangeable with 276-20901-11.
50	018-01400-20	FLANGE NUT (M14)	1	
70	032-30300-10	WOODRUFF KEY (3X6X16)	1	
310	276-22501-10	CONNECTING ROD AY	1	Remarks: 80.2CDX25B 30D&13D.
320	277-23001-03	FLANGE BOLT (M6X33)	2	
350	276-23301-03	PISTON PIN	1	Remarks: 13DX9DX44L.
360	276-23401-03	PISTON	1	Remarks: STD.(58DX35H).
361	276-23403-03	PISTON	1	Remarks: 0.25 O.S.(58DX35H).
362	276-23404-03	PISTON	1	Remarks: 0.50 O.S.(58DX35H).
370	276-23511-07	PISTON RING SET	1	Remarks: STD. OIL:EXPANDER.
371	276-23512-07	PISTON RING SET	1	Remarks: 0.25 O.S. OIL:EXPAND.
372	276-23513-07	PISTON RING SET	1	Remarks: 0.50 O.S. OIL:EXPAND.
380	215-25004-03	CLIP	2	Remarks: 12.9DX1.2D.

300 Intake & Exhaust

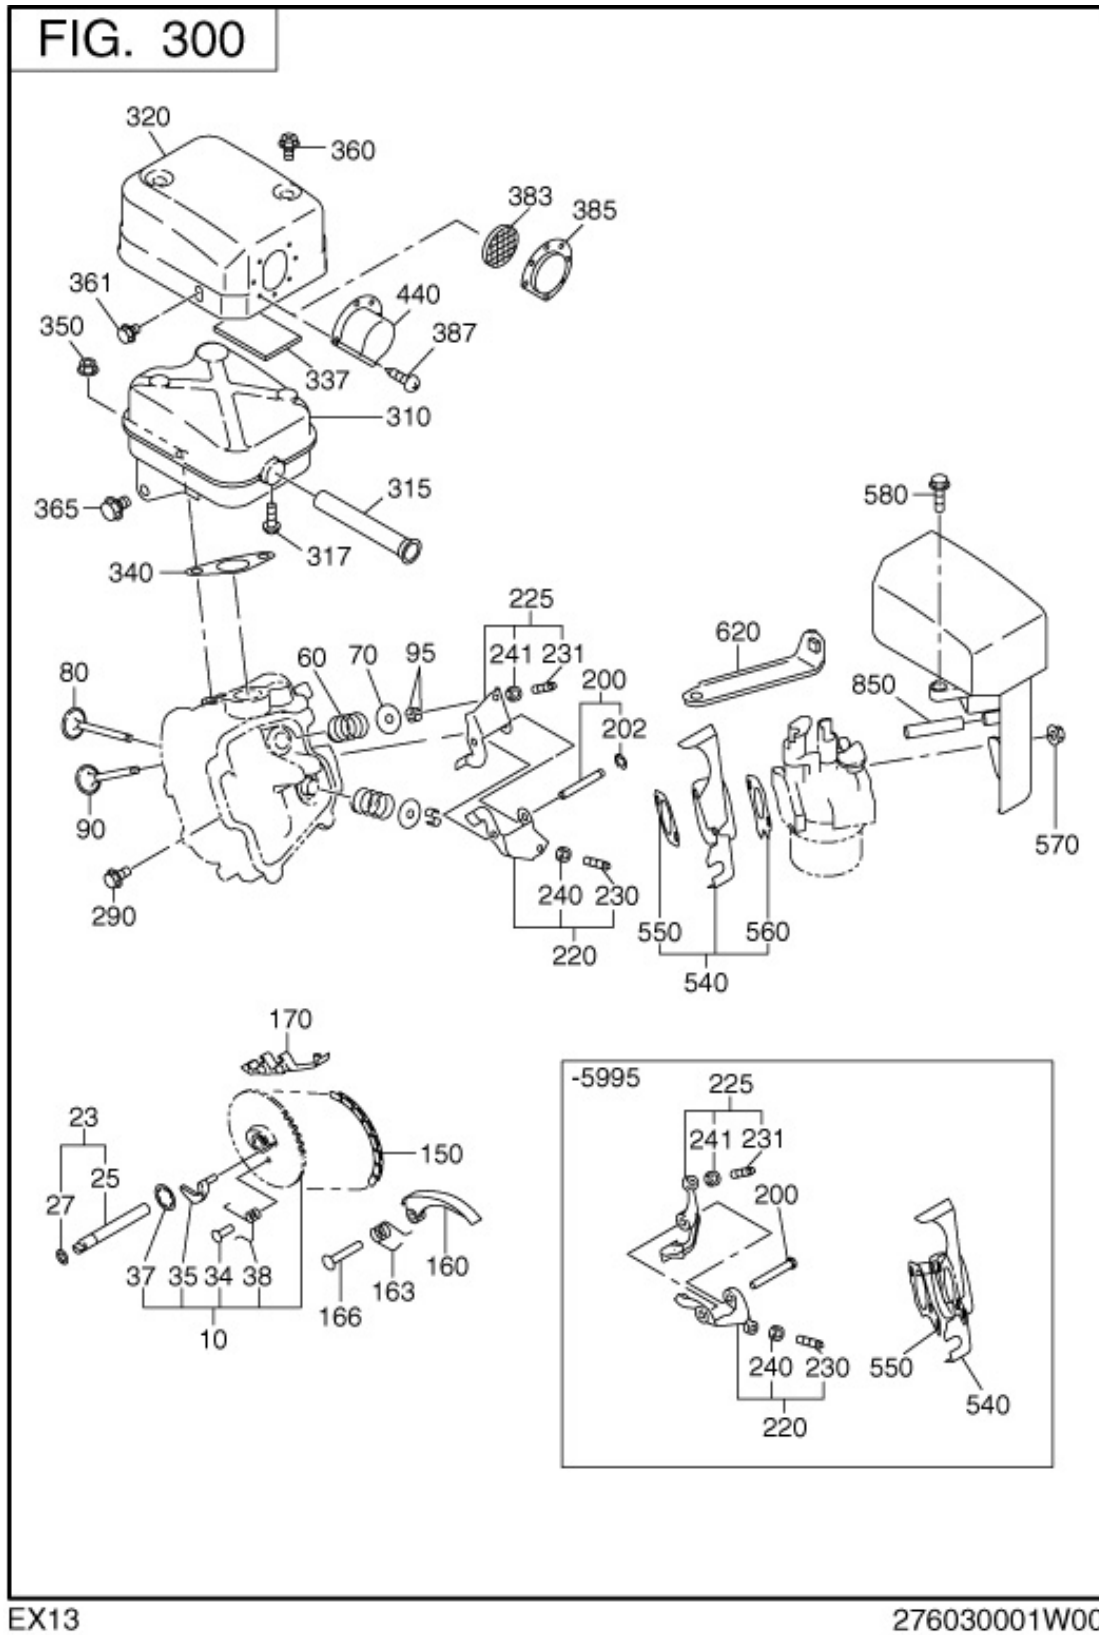

300 Intake & Exhaust


Ref	Part Number.	Description	Qty	Remark
10	277-31601-01	CAM SHAFT CP	1	Remarks: 85DX2.9B N=40.
25	277-35101-03	PIN(CAM SHAFT)	1	Remarks: 9DX78.5L.
27	024-00600-10	O-RING	1	
34	277-38601-03	SPRING PIN	1	
35	277-36401-03	RELEASE LEVER	1	
37	277-36501-03	CLIP	1	Remarks: 13.8DX20.3DX0.4T.
38	277-38701-03	RETURN SPRING	1	Remarks: 5.3DX0.6DX6L N=6.
60	279-33601-03	VALVE SPRING	2	Remarks: 19.2DX2.3DX27L N=6.
70	269-33701-03	SPRING RETAINER	2	Remarks: 8.6DX26DX9.3T.
80	276-33401-33	INTAKE VALVE	1	Remarks: 22DX5.5DX68L.
90	276-33501-33	EXHAUST VALVE	1	Remarks: 18.5DX5.5DX68L.
95	132-10KA0-31	VALVE COLLET	4	
150	276-35601-01	TIMING CHAIN CP (86 LINK)	1	
160	277-36911-03	TENTIONER	1	
163	277-37101-03	TENTIONER SPRING	1	
166	277-36902-03	TENTIONER PIN	1	Remarks: 6DX13DX34L.
170	277-36913-13	CHAIN GUIDE	1	
200	277-35001-13	PIN(ROCKER)	1	End Code: 5691. Remarks: 6DX9DX41L. Interchangeable with 277-35001-23.
200	277-35001-23	PIN(ROCKER)	1	Start Code: 5692. Remarks: 6DX9DX41L.
220	277-36101-00	ROCKER ARM(IN) AY	1	
225	277-36102-00	ROCKER ARM(EX) AY	1	
230	014-90500-10	ADJUST SCREW	1	M5X0.5X23
231	014-90500-10	ADJUST SCREW	1	M5X0.5X23
240	017-00500-20	NUT	1	M5X0.5
241	017-00500-20	NUT	1	M5X0.5
290	011-00600-20	FLANGE BOLT	1	M6X1.0X12
310	276-30101-11	MUFFLER CP	1	End Code: 5844.
310	276-30111-00	MUFFLER AY	1	Start Code: 5845. Remarks: W/SPARK ARRESTER.
315	277-37601-01	SPARK ARRESTER CP	1	
316	015-00400-60	TAPPING SCREW	1	M4X6
320	277-34201-01	MUFFLER COVER CP	1	End Code: 5783. Interchangeable with 277-34201-11.
320	277-34201-11	MUFFLER COVER CP	1	Start Code: 5784. End Code: 5813.
320	276-34201-01	MUFFLER COVER CP	1	Start Code: 5814.
340	277-35201-03	GASKET(MUFFLER)	1	Remarks: T=0.2 26D 9DX58P.
350	980-20082-80	FLANGE NUT	2	M8
360	015-20600-90	TAPPING BOLT	2	M6X10
361	011-00600-10	FLANGE BOLT	1	M6X1.10X8

300 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
365	011-00801-50	FLANGE BOLT	1	M8X1.25X12
440	277-37001-03	DEFLECTOR	1	End Code: 5813.
440	277-37001-01	DEFLECTOR CP	1	Start Code: 5814. Remarks: W/SCREEN.
445	015-00400-60	TAPPING SCREW	2	M4X6
540	277-32901-13	INSULATOR	1	
550	277-35901-13	GASKET(INSULATOR)	1	
570	002-38060-00	FLANGE NUT	2	M6X1.0
580	011-00600-50	FLANGE BOLT	1	M6X1.0X20
850	085-10800-00	RUBBER PIPE	1	Remarks: 8DX11D.

This Page Intentionally Left Blank

315 Air Cleaner

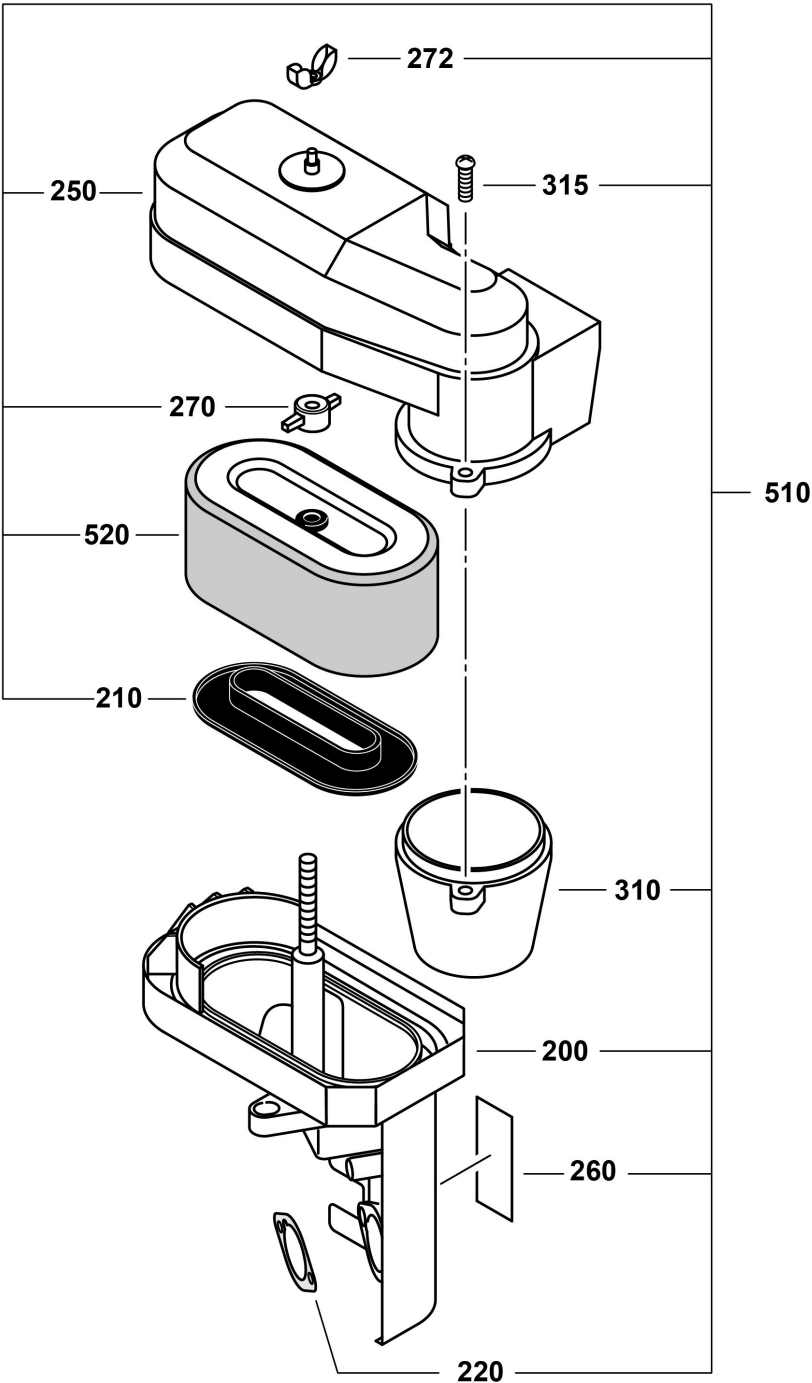


0315 0021 000

315 Air Cleaner

Ref	Part Number.	Description	Qty	Remark
510	277-32613-00	AIR CLEANER AY	1	PRE CLEANER
200	277-32630-08	BASE CP	1	
210	277-32610-08	SEAL	1	
220	277-32604-08	INTAKE GASKET	1	
250	277-32641-08	COVER CP	1	
260	277-32609-08	LABEL	1	
270	277-32741-08	WING NUT	1	
272	277-32607-08	WING NUT	1	
310	277-32770-08	DUST CUP	1	
315	277-32750-08	SCREW	2	
520	277-32611-07	ELEMENT SET	1	DUAL


400 Governor

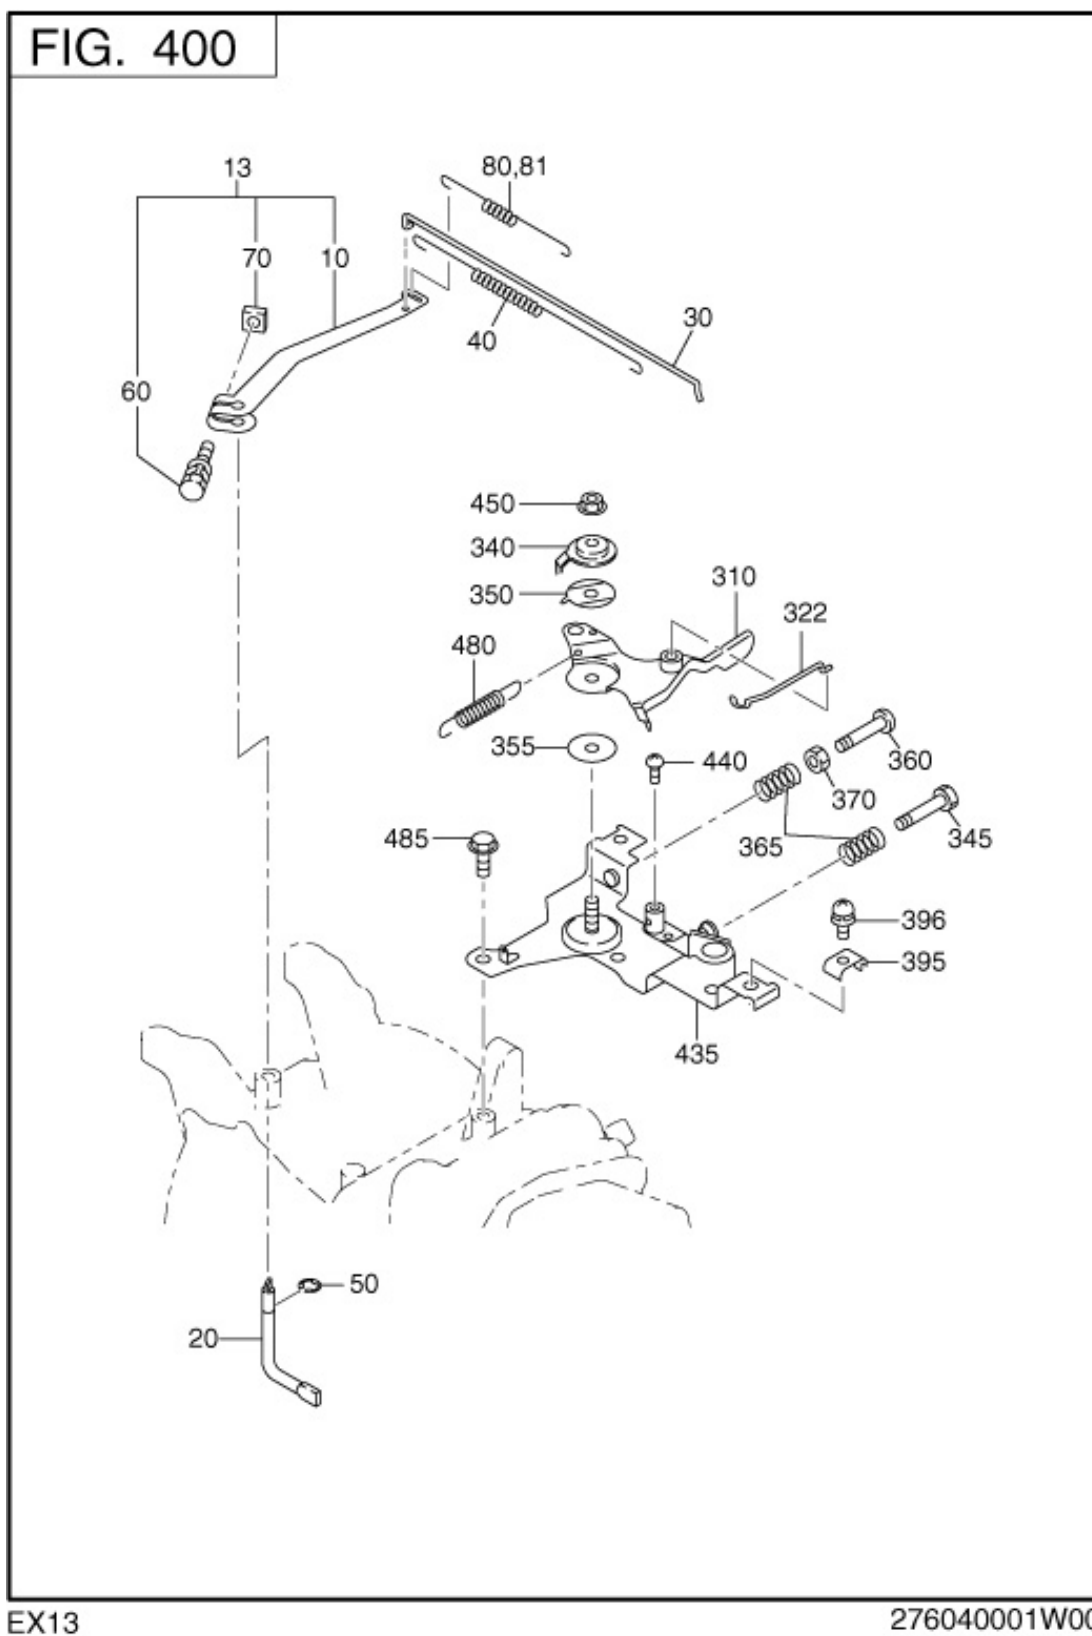

400 Governor

Ref	Part Number.	Description	Qty	Remark
10	277-42301-13	GOVERNOR LEVER	1	
20	277-42201-33	GOVERNOR SHAFT	1	Start Code: 5600.
20	277-42201-23	GOVERNOR SHAFT	1	Start Code: 5539. End Code: 5599. Interchangable with 277-42201-33.
20	277-42201-13	GOVERNOR SHAFT	1	End Code: 5538. Interchangable with 277-42201-23.
30	279-42701-01	GOVERNOR ROD CP	1	
40	277-42801-13	ROD SPRING	1	Remarks: 7DX0.5DX182L N=16.
50	003-13050-00	CLIP	1	
60	013-00602-40	BOLT & WASHER ASSY (M6X25)	1	
70	018-60600-20	SQUARE NUT (M6)	1	
80	279-42502-23	GOVERNOR SPRING	1	Remarks: 7.5DX0.7DX113L N=20.
310	277-43302-01	SPEED CONT.LEVER CP	1	Remarks: W/SWIVEL.
340	277-43501-03	STOP PLATE	1	
350	020-00601-70	WASHER	1	Remarks: 6DX24DX0.4T.
355	021-70600-70	FRICTION WASHER	1	NYLON
360	014-00601-80	SCREW	1	Remarks: M6X1.0X35L.
365	237-45004-23	ADJUST SPRING	1	
370	002-17060-00	NUT	1	
395	277-43901-03	CLAMP	1	
396	004-36051-60	SCREW AND WASHER AY	1	Interchangable with 001-17051-60.
435	277-46001-01	SPEED CONT.BRKT CP	1	
440	004-31040-80	SCREW(M4X8)	1	
450	002-35060-00	LOCKNUT (M6)	1	
480	277-45101-03	RETURN SPRING	1	
485	011-00600-20	FLANGE BOLT	2	M6X1.0X12

500 Cooling & Starting

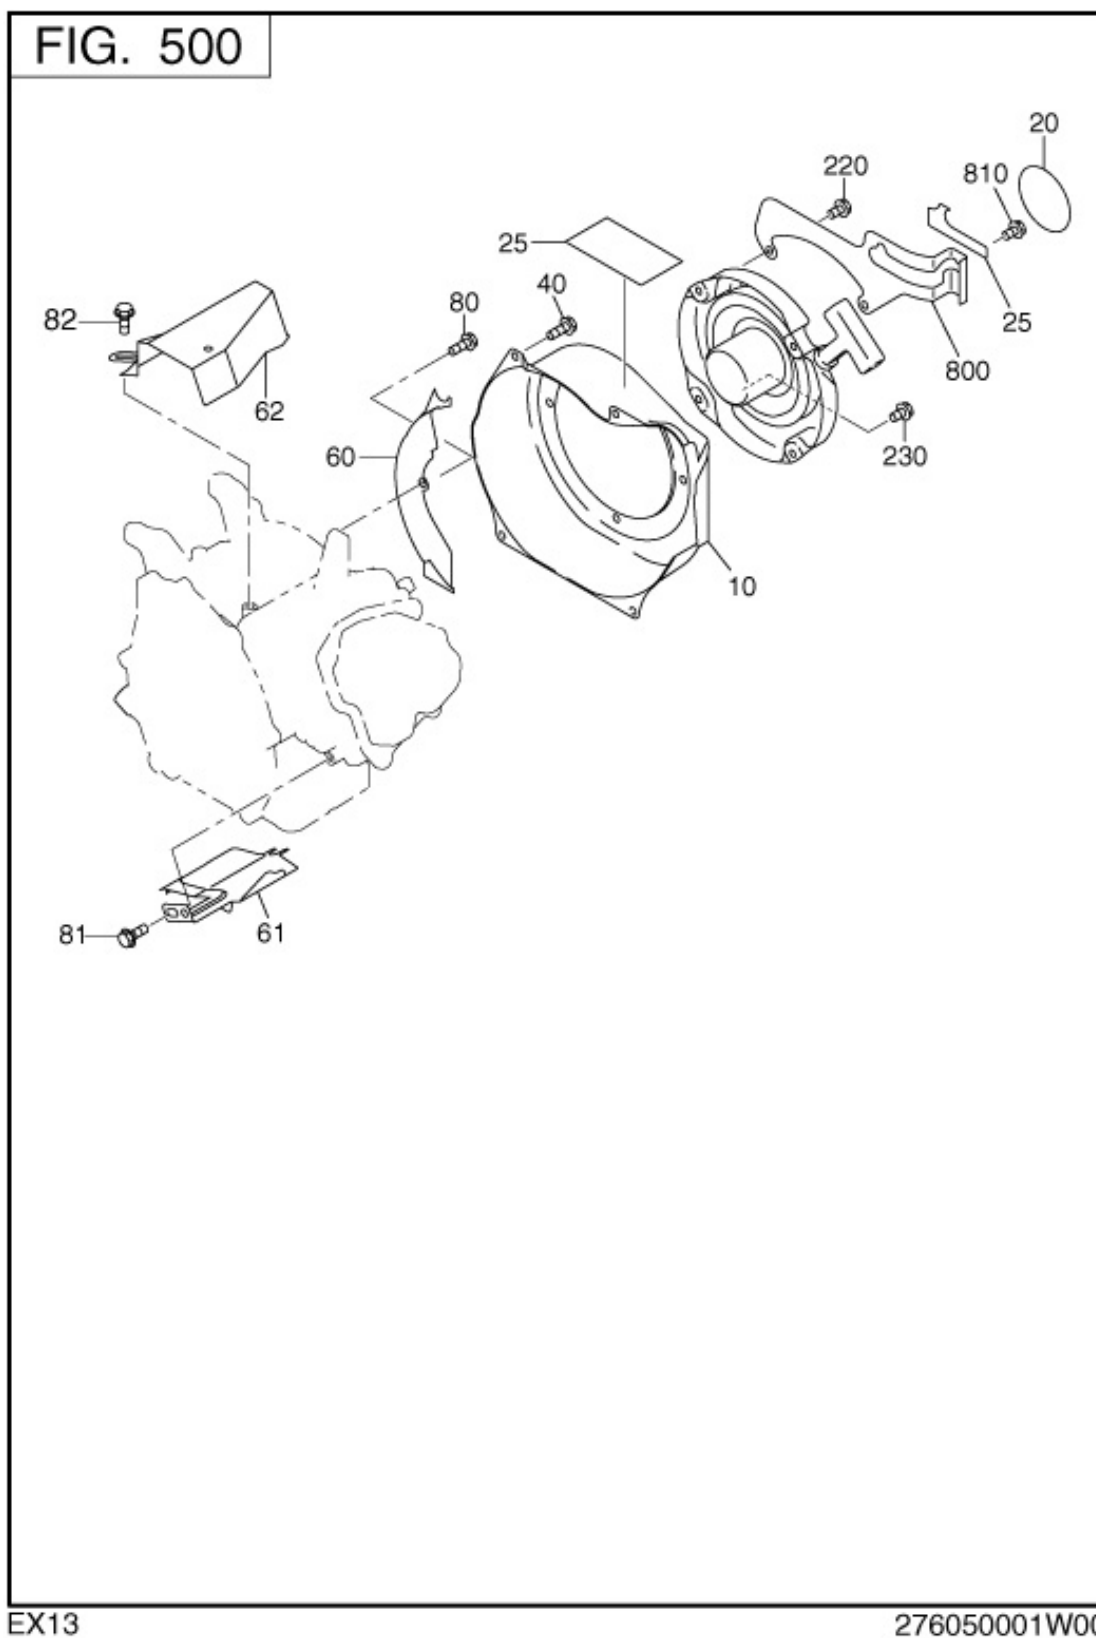


500 Cooling & Starting


Ref	Part Number.	Description	Qty	Remark
10	276-51202-01	BLOWER HOUSING CP	1	Remarks: BLACK.
20	073-20051-40	LABEL(TRADE MARK)	1	Remarks: 64D.
40	011-00600-30	FLANGE BOLT (M6X14)	4	
60	277-52711-11	BAFFLE 1(CASE) CP	1	Start Code: 5631.
60	277-52711-01	BAFFLE 1(CASE) CP	1	End Code: 5630.
61	277-52702-03	HEAD BAFFLE 2	1	
80	011-00600-20	FLANGE BOLT	1	M6X1.0X12
80	001-04061-60	FLANGE BOLT (M6X16) ¹	1	
81	011-00600-20	FLANGE BOLT	1	M6X1.0X12
220	011-00600-10	FLANGE BOLT	4	M6X1.10X8
Footnotes				
1: Start Code: 5631				

520 Cooling & Starting

FIG. 520

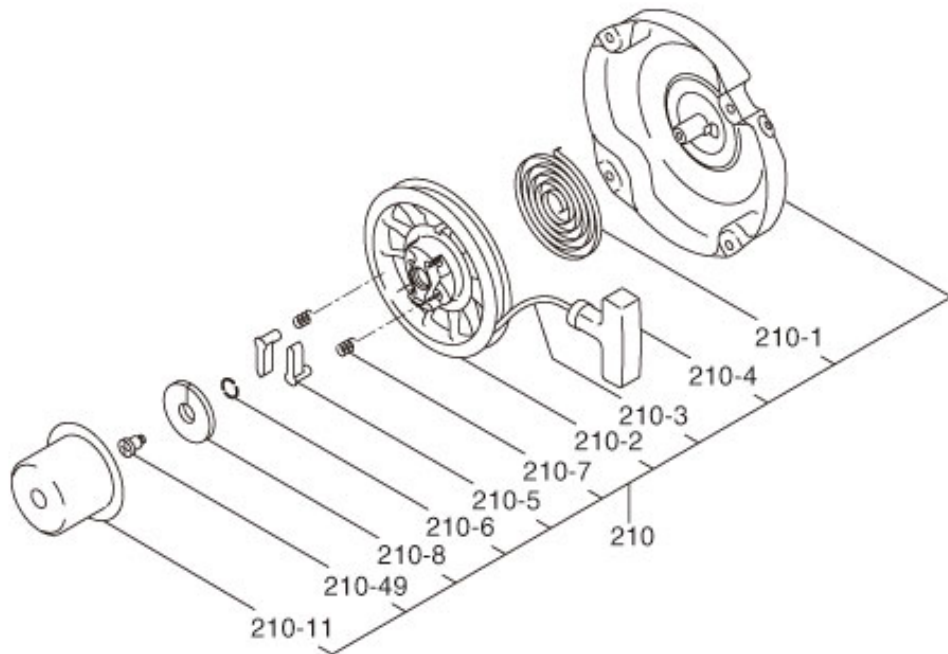

RESIN

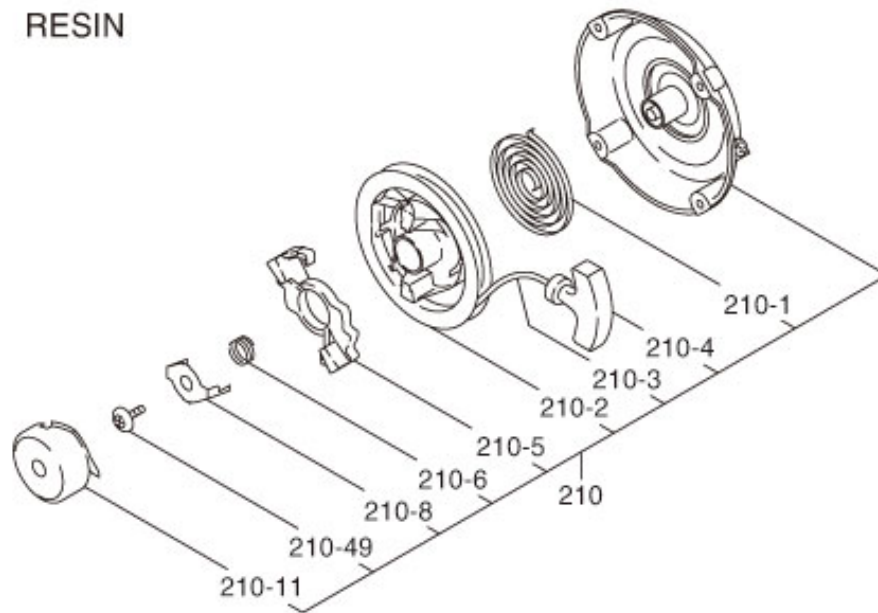


EX13

276052000W01

520 Cooling & Starting

Ref	Part Number.	Description	Qty	Remark
210	227-50152-08	SET SCREW	1	
210	268-50201-20	RECOIL STARTER AY	1	Remarks: D 160PD.
210	270-50115-08	SPIRAL SPRING	1	
210	269-50120-08	REEL	1	
210	269-50112-08	STARTER ROPE	1	
210	261-50100-08	STARTER KNOB	1	
210	270-50125-08	RATCHET	2	
210	227-50131-08	FRICTION SPRING	1	
210	268-50145-18	STARTER PULLEY	1	
210	270-50261-08	RATCHET GUIDE	1	


600 Fuel & Lubricant

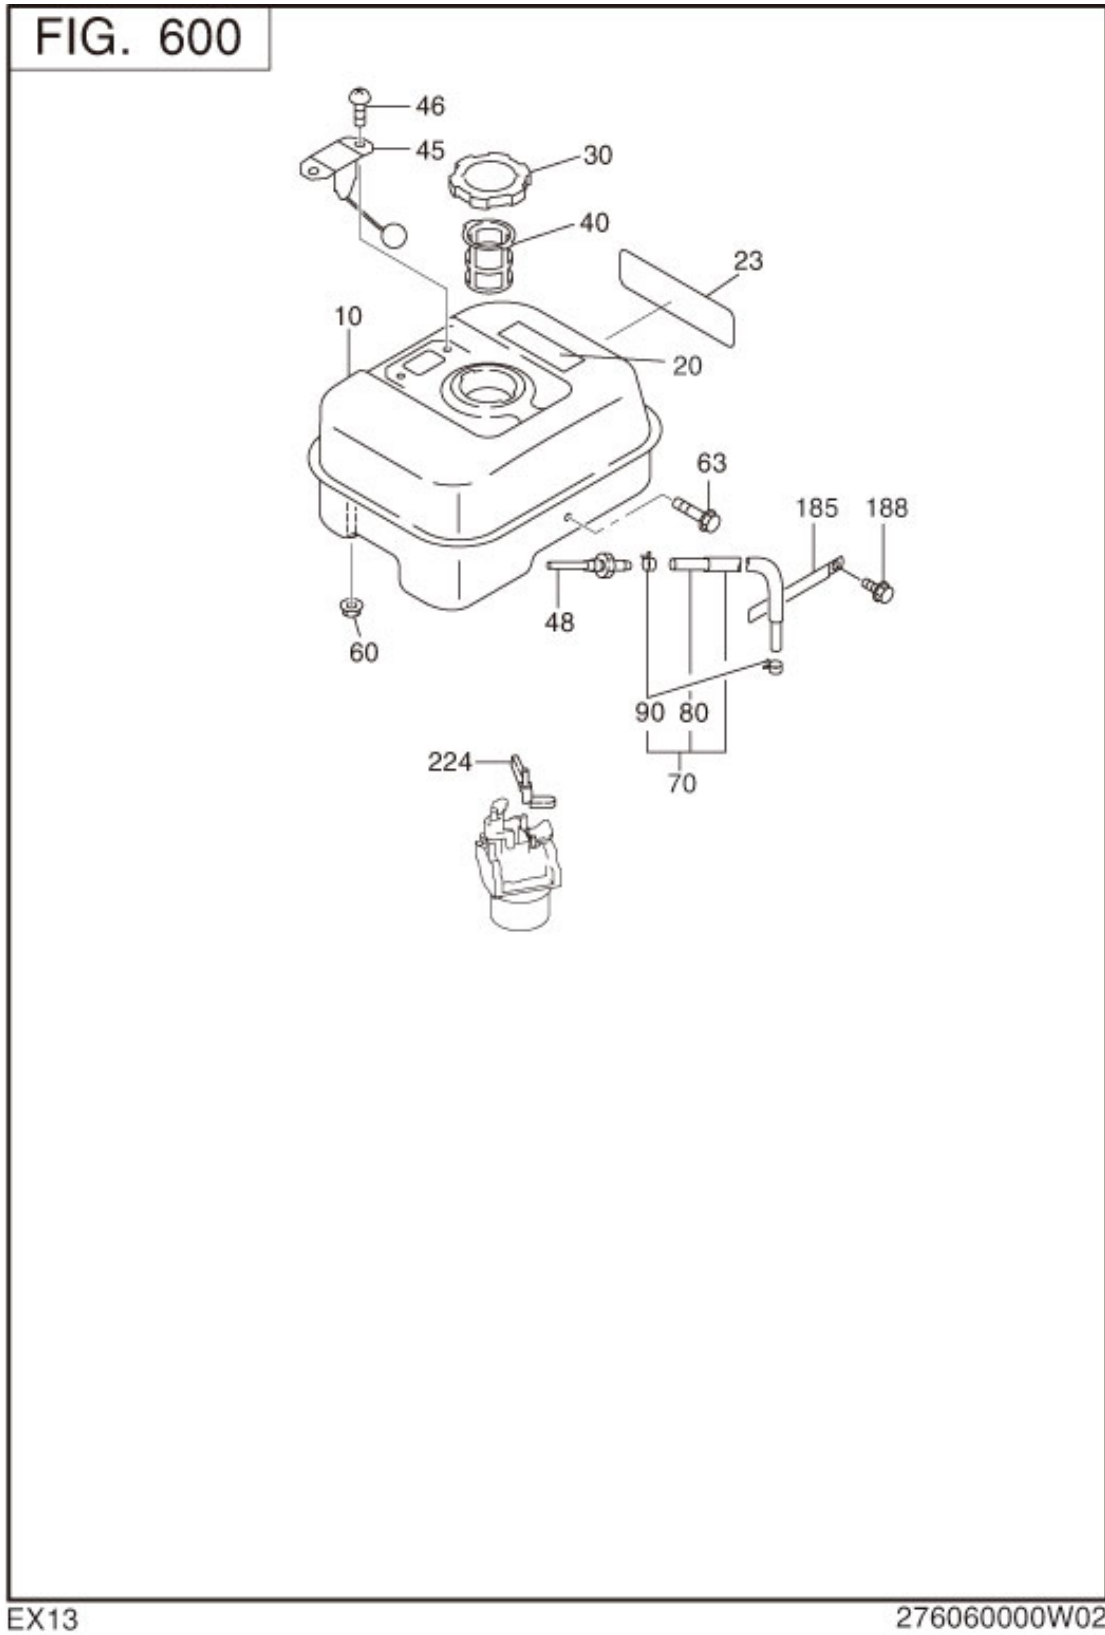

600 Fuel & Lubricant

Ref	Part Number.	Description	Qty	Remark
10	276-60102-01	FUEL TANK CP	1	Remarks: 2.7L BLACK.
20	073-20051-80	LABEL(WARNING)	1	Remarks: 42X104 ENGLISH.
23	276-95101-03	LABEL(MODEL)	1	Remarks: 23X87.
30	043-04400-50	FUEL TANK CAP CP	1	Remarks: 43DX68DX14H BLACK.
40	064-13600-10	FUEL FILTER	1	Remarks: 36DX46DX43H.
48	050-51200-20	UNION	1	Remarks: M12X4DX78L W/FILTER.
60	002-38060-00	FLANGE NUT	2	M6X1.0
63	011-00601-30	FLANGE BOLT (M6X25)	1	
80	085-10600-00	RUBBER PIPE	1	Remarks: 6DX12D.
90	056-11000-30	HOSE CLAMP	2	Remarks: 10DX8BX1T.
224	277-43801-01	CHOKE LEVER CP	1	

 FIG. 640



640 Carburetor

Ref	Part Number.	Description	Qty	Remark
210-17	214-62450-08	PACKING	1	End Code: 5599.
210-16	277-62505-08	FLOAT BODY	1	End Code: 5599.
210-15	277-62515-08	PIN	1	End Code: 5599.
210-14	277-62500-08	NEEDLE	1	End Code: 5599.
210-12	227-62451-08	BOLT	1	End Code: 5599.
210-11	276-62531-08	THROTTLE SHAFT	1	End Code: 5599.
210-3	277-62525-08	CHOKE VALVE	1	End Code: 5599.
210-5	234-62421-08	PILOT JET	1	End Code: 5599. Remarks: #37.5.
210-18	214-62540-08	CHAMBER PACKING	1	End Code: 5599.
210-62	236-62680-08	SEAL	1	End Code: 5599.
210-1	106-62538-08	THROTTLE VALVE	1	End Code: 5599. Remarks: #200.
210-8	277-62520-08	CHOKE LEVER	1	End Code: 5599.
210-19	226-62506-08	FLOAT AY	1	End Code: 5599.
210-20	276-62440-08	MAIN NOZZLE	1	End Code: 5599.
210-22	276-62400-08	MAIN JET	1	End Code: 5599. Remarks: #63.8.
210-24	226-62701-08	CLIP	1	End Code: 5599.
210-28	277-62350-08	BOLT	1	End Code: 5599.
210-32	246-62390-08	SEAL	1	End Code: 5599.
210-45	106-62410-08	AIR JET(PILOT)	1	End Code: 5599.
210-104	236-62541-08	PACKING	1	End Code: 5599.
210-302	064-20064-10	PACKING	1	End Code: 5599.
210-0	276-62302-00	CARBURETOR AY	1	End Code: 5599. Interchangeable with 276-62302-10.
210-11	276-62531-08	THROTTLE SHAFT	1	Start Code: 5600.
210-44	242-62321-08	AIR JET	1	End Code: 5599.
210-19	226-62506-08	FLOAT AY	1	Start Code: 5600.
210-0	276-62302-10	CARBURETOR AY	1	Start Code: 5600.
210-1	106-62538-08	THROTTLE VALVE	1	Start Code: 5600. Remarks: #200.
210-2	209-62351-08	SCREW	1	Start Code: 5600.
210-3	277-62525-08	CHOKE VALVE	1	Start Code: 5600.
210-5	246-62420-08	PILOT JET	1	Start Code: 5600. Remarks: #40.
210-8	277-62520-08	CHOKE LEVER	1	Start Code: 5600.
210-15	277-62515-08	PIN	1	Start Code: 5600.
210-14	277-62500-08	NEEDLE	1	Start Code: 5600.
210-303	064-20078-10	CUP	1	End Code: 5599.
210-16	277-62506-08	FLOAT BODY	1	Start Code: 5600.
210-18	214-62540-08	CHAMBER PACKING	1	Start Code: 5600.
210-303	064-20078-10	CUP	1	Start Code: 5600.
210-20	276-62440-08	MAIN NOZZLE	1	Start Code: 5600.


640 Carburetor

Ref	Part Number.	Description	Qty	Remark
210-22	252-62402-08	MAIN JET	1	Start Code: 5600. Remarks: #68.8.
210-24	226-62701-18	CLIP	1	Start Code: 5600.
210-28	277-62360-08	BOLT	1	Start Code: 5600.
210-32	246-62390-08	SEAL	1	Start Code: 5600.
210-44	207-62410-08	AIR JET	1	Start Code: 5600.
210-45	106-62410-08	AIR JET(PILOT)	1	Start Code: 5600.
210-62	236-62680-08	SEAL	1	Start Code: 5600.
210-104	236-62541-08	PACKING	1	Start Code: 5600.
210-302	064-20064-10	PACKING	1	Start Code: 5600.
210-17	214-62450-08	PACKING	1	Start Code: 5600.
210-12	227-62451-08	BOLT	1	Start Code: 5600.

This Page Intentionally Left Blank

700 Electric Device

FIG. 700

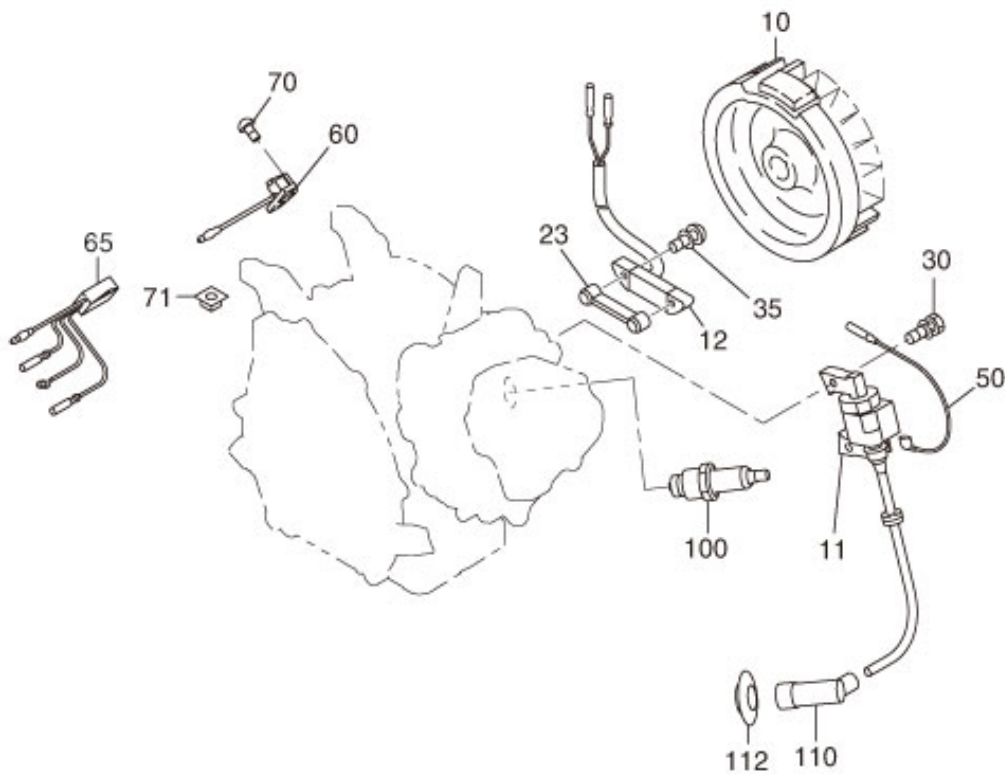


EX13

276070000W01

700 Electric Device

Ref	Part Number.	Description	Qty	Remark
10	276-79230-01	FLYWHEEL CP	1	
11	277-79430-11	IGNITION COIL CP	1	
30	001-14062-50	BOLT & WASHER ASSY (M6X25)	2	
50	277-73102-01	WIRE 2 CP	1	Remarks: L=360 BLACK.
60	X66-00003-61	SWITCH AY	1	
70	015-00400-90	TAPPING SCREW (M4X12)	2	
100	065-01401-50	SPARK PLUG (NGK BR6HS)	1	
110	065-50002-70	SPARK PLUG CAP	1	

770 Electric Device

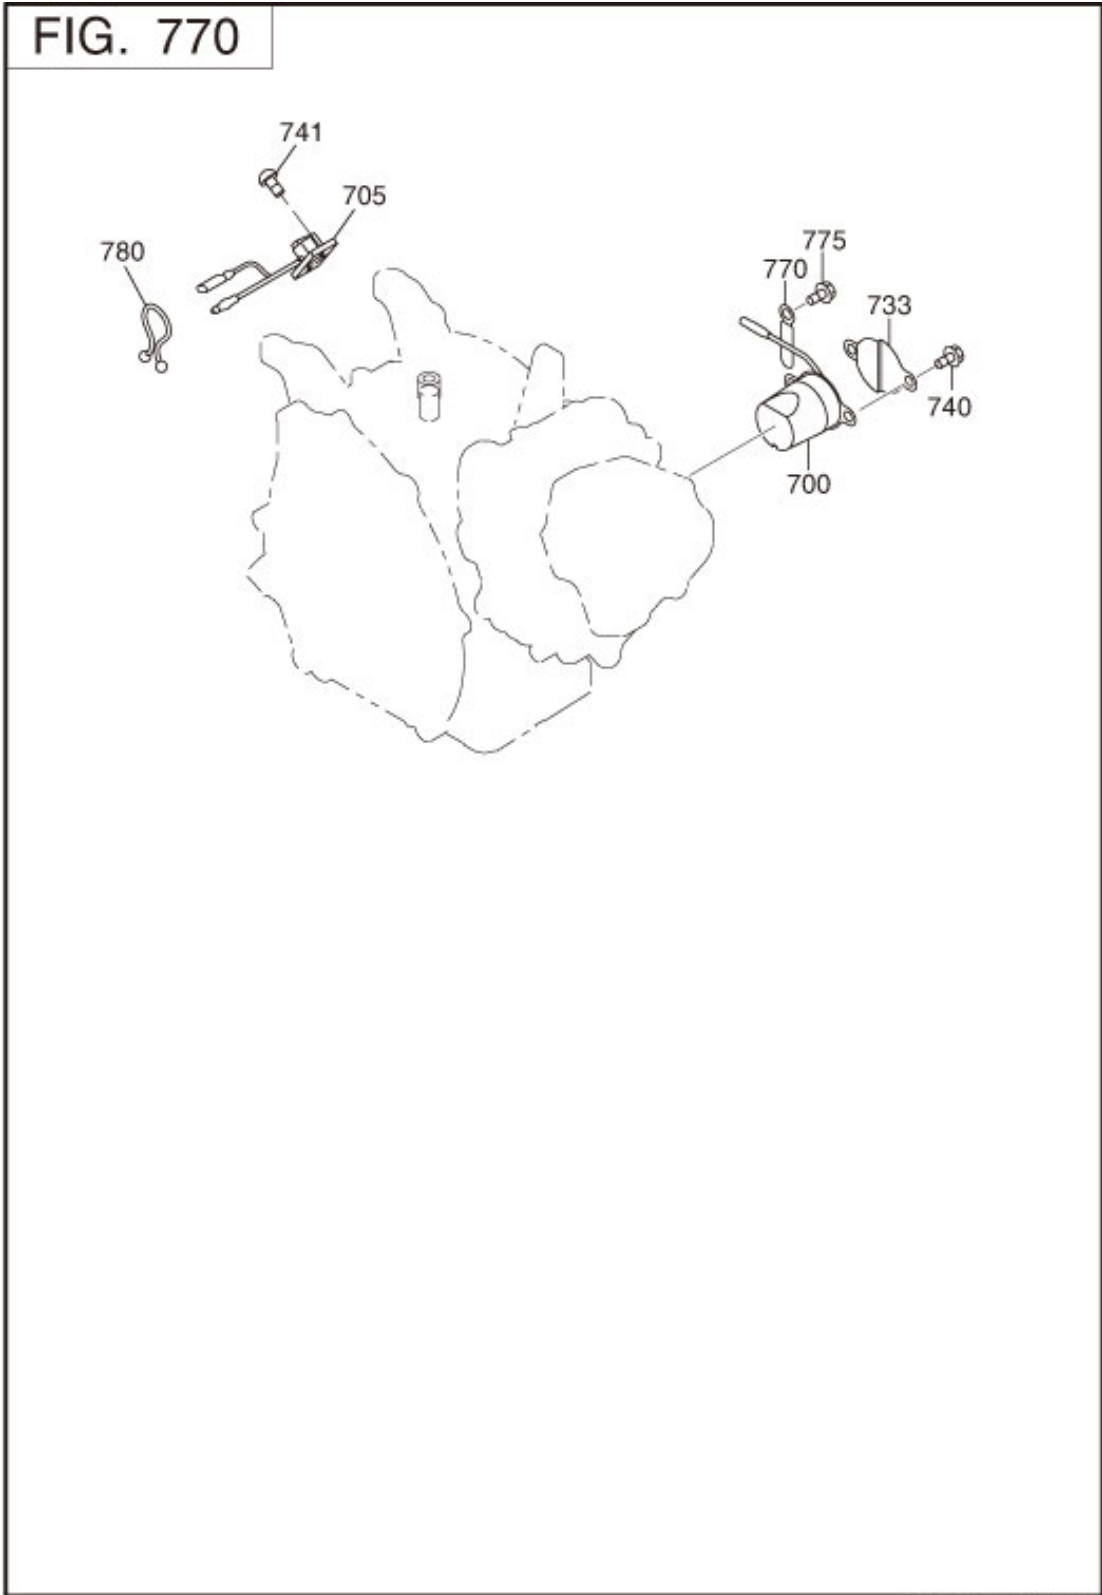


EX13

276077000W02

770 Electric Device

Ref	Part Number.	Description	Qty	Remark
700	277-76301-01	OIL SENSOR CP	1	
705	KU3-11043-01	FLOAT C/U CP3	1	
740	001-14061-60	BOLT & WASHER ASSY (M6X16)	2	
741	015-20500-10	TAPPING SCREW	1	Remarks: M5X10L.
770	214-79006-01	CLAMP CP	1	End Code: 5630.
775	011-00600-20	FLANGE BOLT	1	M6X1.0X12

900 Accessory

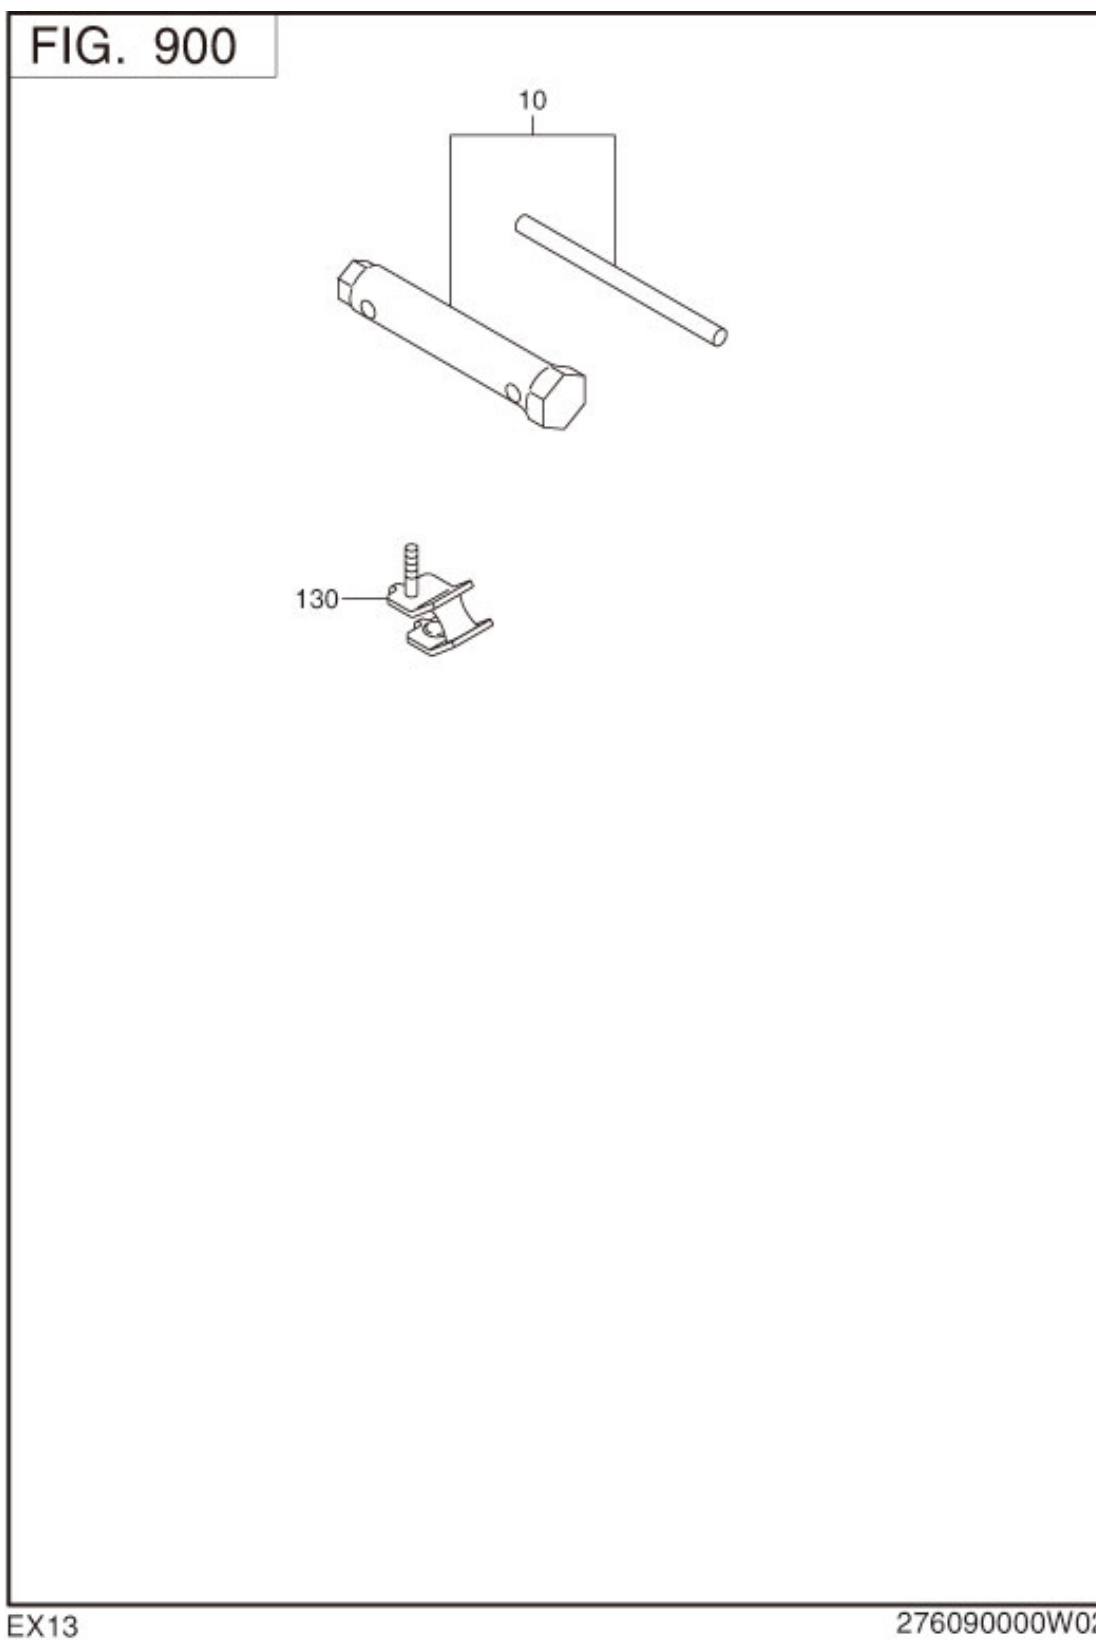

900 Accessory

Ref	Part Number.	Description	Qty	Remark
10	277-90301-H0	ACCESSORY TOOL KIT	1	
10	226-90304-00	ACCESORY TOOL KIT	1	Start Code: 5600.

Part Number Index

The Part Number Index is a numeric index of all part numbers included in this manual. The index shows what page(s) the part is used on.

Part Number	Page	Part Number	Page	Part Number	Page
001-04061-60	19	226-90304-00	33	277-32611-07	15
001-04083-50	6	227-50131-08	21	277-32613-00	15
001-14061-60	31	227-50152-08	21	277-32630-08	15
001-14062-50	29	227-62451-08	25-26	277-32641-08	15
002-17060-00	17	234-62421-08	25	277-32741-08	15
002-35060-00	17	236-62541-08	25-26	277-32750-08	15
002-38060-00	12, 23	236-62680-08	25-26	277-32770-08	15
003-13050-00	17	237-14202-03	5	277-32901-13	12
004-31040-80	17	237-45004-23	17	277-34201-01	11
004-36051-60	17	242-62321-08	25	277-34201-11	11
010-50603-51	5	246-62390-08	25-26	277-35001-13	11
010-50802-50	5	246-62420-08	25	277-35001-23	11
011-00600-10	11, 19	252-62402-08	26	277-35101-03	11
011-00600-20	6, 11, 17, 19, 31	261-50100-08	21	277-35201-03	11
011-00600-30	19	263-41901-03	5	277-35901-13	12
011-00600-50	12	268-50145-18	21	277-36101-00	11
011-00601-30	23	268-50201-20	21	277-36102-00	11
011-00801-50	12	269-33701-03	11	277-36401-03	11
011-00802-40	6	269-50112-08	21	277-36501-03	11
013-00602-40	17	269-50120-08	21	277-36902-03	11
014-00601-80	17	270-50115-08	21	277-36911-03	11
014-90500-10	11	270-50125-08	21	277-36913-13	11
015-00400-60	11-12	270-50261-08	21	277-37001-01	12
015-00400-90	29	276-10102-21	5	277-37001-03	12
015-20500-10	31	276-10102-31	5	277-37101-03	11
015-20600-90	11	276-10102-41	5	277-37601-01	11
017-00500-20	11	276-13001-01	6	277-38601-03	11
018-01400-20	9	276-15001-13	6	277-38701-03	11
018-60600-20	17	276-20901-01	9	277-42201-13	17
020-00601-70	17	276-20901-11	9	277-42201-23	17
021-11400-20	5	276-22501-10	9	277-42201-33	17
021-31600-20	5-6	276-23301-03	9	277-42301-13	17
021-70600-70	17	276-23401-03	9	277-42801-13	17
024-00600-10	11	276-23403-03	9	277-43302-01	17
032-30300-10	9	276-23404-03	9	277-43501-03	17
040-11400-30	5	276-23511-07	9	277-43801-01	23
043-04400-50	23	276-23512-07	9	277-43901-03	17
044-00600-20	5	276-23513-07	9	277-45004-21	5
044-02502-00	5	276-30101-11	11	277-45101-03	17
044-02502-10	5	276-30111-00	11	277-46001-01	17
050-51200-20	23	276-33401-33	11	277-52702-03	19
056-11000-30	23	276-33501-33	11	277-52711-01	19
060-02500-10	5	276-34201-01	11	277-52711-11	19
060-02501-40	5	276-35601-01	11	277-62350-08	25
060-02800-20	5	276-51202-01	19	277-62360-08	26
060-02800-21	5	276-60102-01	23	277-62500-08	25
064-13600-10	23	276-62302-00	25	277-62505-08	25
064-20064-10	25-26	276-62302-10	25	277-62506-08	25
064-20078-10	25	276-62400-08	25	277-62515-08	25
065-01401-50	29	276-62440-08	25	277-62520-08	25
065-50002-70	29	276-62531-08	25	277-62525-08	25
073-20051-40	19	276-79230-01	29	277-63601-03	5
073-20051-80	23	276-95101-03	23	277-63601-13	5
085-10600-00	23	276-99001-07	6	277-65001-03	5
085-10800-00	12	277-11002-01	5	277-73102-01	29
106-62410-08	25-26	277-11002-11	5	277-76301-01	31
106-62538-08	25	277-11002-21	5	277-79430-11	29
132-10KA0-31	11	277-15011-03	5-6	277-90301-H0	33
207-62410-08	26	277-15501-01	6	279-33601-03	11
209-62351-08	25	277-16001-03	6	279-42502-23	17
214-62450-08	25-26	277-16010-01	5	279-42701-01	17
214-62540-08	25	277-23001-03	9	980-20082-80	11
214-79006-01	31	277-31601-01	11	KU3-11043-01	31
215-25004-03	9	277-32604-08	15	X66-00003-61	29
226-62506-08	25	277-32607-08	15		
226-62701-08	25	277-32609-08	15		
226-62701-18	26	277-32610-08	15		

Part Description Index

The Part Description Index is an alphabetical index of all part descriptions included in this manual. The index shows what page(s) the part is used on.

A

ACCESSORY TOOL KIT.....33
ACCESSORY TOOL KIT.....33
ADJUST SCREW.....11
ADJUST SPRING.....17
AIR CLEANER AY.....15
AIR JET.....25–26
AIR JET(PILOT).....25–26

B

BAFFLE 1(CASE) CP.....19
BALL BEARING.....5
BASE CP.....15
BLOWER HOUSING CP.....19
BOLT.....25–26
BOLT & WASHER ASSY (M6X16).....31
BOLT & WASHER ASSY (M6X25).....17, 29

C

CAM SHAFT CP.....11
CARBURETOR AY.....25
CHAIN GUIDE.....11
CHAMBER PACKING.....25
CHOKE LEVER.....25
CHOKE LEVER CP.....23
CHOKE VALVE.....25
CLAMP.....17
CLAMP CP.....31
CLIP.....9, 11, 17, 25–26
CONNECTING ROD AY.....9
COVER CP.....15
CRANKCASE CP.....5
CRANKSHAFT CP.....9
CUP.....25
CYLINDER HEAD CP.....6

D

DEFLECTOR.....12
DEFLECTOR CP.....12
DUST CUP.....15

E

ELEMENT SET.....15
EXHAUST VALVE.....11

F

FILLER PLUG.....5
FLANGE BOLT.....6, 11–12, 17, 19, 31
FLANGE BOLT (M6X14).....19
FLANGE BOLT (M6X16).....19
FLANGE BOLT (M6X25).....23
FLANGE BOLT (M6X33).....9
FLANGE BOLT (M8X35).....6
FLANGE BOLT (M8X68).....6
FLANGE NUT.....11–12, 23
FLANGE NUT (M14).....9

FLOAT AY.....25
FLOAT BODY.....25
FLOAT C/U CP3.....31
FLYWHEEL CP.....29
FRICTION SPRING.....21
FRICTION WASHER.....17
FUEL FILTER.....23
FUEL TANK CAP CP.....23
FUEL TANK CP.....23

G

GASKET.....5–6
GASKET (HEAD).....6
GASKET SET.....6
GASKET(INSULATOR).....12
GASKET(MUFFLER).....11
GASKET(ROCKER COVER).....6
GOVERNOR GEAR CP.....5
GOVERNOR LEVER.....17
GOVERNOR ROD CP.....17
GOVERNOR SHAFT.....17
GOVERNOR SLEEVE.....5
GOVERNOR SPRING.....17

H

HEAD BAFFLE 2.....19
HOSE CLAMP.....23

I

IGNITION COIL CP.....29
INSULATOR.....12
INTAKE GASKET.....15
INTAKE VALVE.....11

L

LABEL.....15
LABEL(MODEL).....23
LABEL(TRADE MARK).....19
LABEL(WARNING).....23
LOCKNUT (M6).....17

M

MAIN BEARING COVER C.....5
MAIN JET.....25–26
MAIN NOZZLE.....25
MUFFLER AY.....11
MUFFLER COVER CP.....11
MUFFLER CP.....11

N

NEEDLE.....25
NUT.....11, 17

O

O-RING.....11
OIL GAUGE.....5

OIL GAUGE ASSY.....5
OIL SEAL.....5
OIL SENSOR CP.....31

P

PACKING.....25–26
PILOT JET.....25
PIN.....25
PIN(CAM SHAFT).....11
PIN(ROCKER).....11
PIPE KNOCK.....5–6
PISTON.....9
PISTON PIN.....9
PISTON RING SET.....9
PLUG.....5

R

RATCHET.....21
RATCHET GUIDE.....21
RECOIL STARTER AY.....21
REEL.....21
RELEASE LEVER.....11
RETURN SPRING.....11, 17
ROCKER ARM(EX) AY.....11
ROCKER ARM(IN) AY.....11
ROCKER COVER CP.....6
ROD SPRING.....17
RUBBER PIPE.....12, 23

S

SCREW.....15, 17, 25
SCREW AND WASHER AY.....17
SCREW(M4X8).....17
SEAL.....15, 25–26
SET SCREW.....21
SPARK ARRESTER CP.....11
SPARK PLUG (NGK BR6HS).....29
SPARK PLUG CAP.....29
SPEED CONT.BRKT CP.....17
SPEED CONT.LEVER CP.....17
SPIRAL SPRING.....21
SPRING PIN.....11
SPRING RETAINER.....11
SQUARE NUT (M6).....17
STARTER KNOB.....21
STARTER PULLEY.....21
STARTER ROPE.....21
STEM SEAL.....5
STOP PLATE.....17
STUD.....5
STUD (M8X1.25X25).....5
SWITCH AY.....29

T

TAPPING BOLT.....11
TAPPING SCREW.....11–12, 31
TAPPING SCREW (M4X12).....29
TENTIONER.....11

Part Description Index (continued)

TENTIONER PIN.....11
TENTIONER SPRING.....11
THROTTLE SHAFT.....25
THROTTLE VALVE.....25
TIMING CHAIN CP (86 LINK).....11

U

UNION.....23

V

VALVE COLLET.....11
VALVE GUIDE.....5
VALVE SPRING.....11

W

WASHER.....17
WING NUT.....15
WIRE 2 CP.....29
WOODRUFF KEY (3X6X16).....9

This Page Intentionally Left Blank

PRINTED IN THE USA

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047

Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com