

Robin Industrial Engines®

OEM PARTS MANUAL

Model

EC12D MIKASA

1193M325



ROBIN AMERICA, INC.
ROBIN TO WISCONSIN ROBIN
ENGINE MODEL CROSS REFERENCE LIST

ROBIN

WISCONSIN ROBIN

SIDE VALVE

EY08	W1-080
EY15	W1-145
EY15V	W1-145V
EY20	W1-185
EY20V	W1-185V
EY23	W1-230
EY28	W1-280
EY35	W1-340
EY40	W1-390
EY45V	W1-450V
EY21	EY21W
EY44	EY44W
EY18-3	EY18-3W
EY25	EY25W
EY27	EY27W

OVERHEAD VALVE

EH11	WO1-115
EH12	WO1-120
EH15	WO1-150
EH17	WO1-170
EH21	WO1-210
EH25	WO1-250
EH30	WO1-300
EH30V	WO1-300V
EH34	WO1-340
EH34V	WO1-340V
EH43V	WO1-430V

TWO CYCLE

EC13V	WT1-125V
-------	----------


DIESEL

DY23	WRD1-230
DY27	WRD1-270
DY30	WRD1-300
DY35	WRD1-350
DY41	WRD1-410

TABLE OF CONTENTS

- 1. CRANKCASE and CYLINDER HEAD**
- 2. CRANKSHAFT and PISTON**
- 3. MUFFLER and AIR CLEANER**
- 4. GOVERNOR**
- 5. BLOWER HOUSING and RECOIL STARTER**
- 6. CARBURETOR**
- 7. ELECTRIC DEVICE**
- 8. ACCESSORIES**
- 9. PARTS TO BE SHIPPED LOOSE**


1. CRANKCASE and CYLINDER

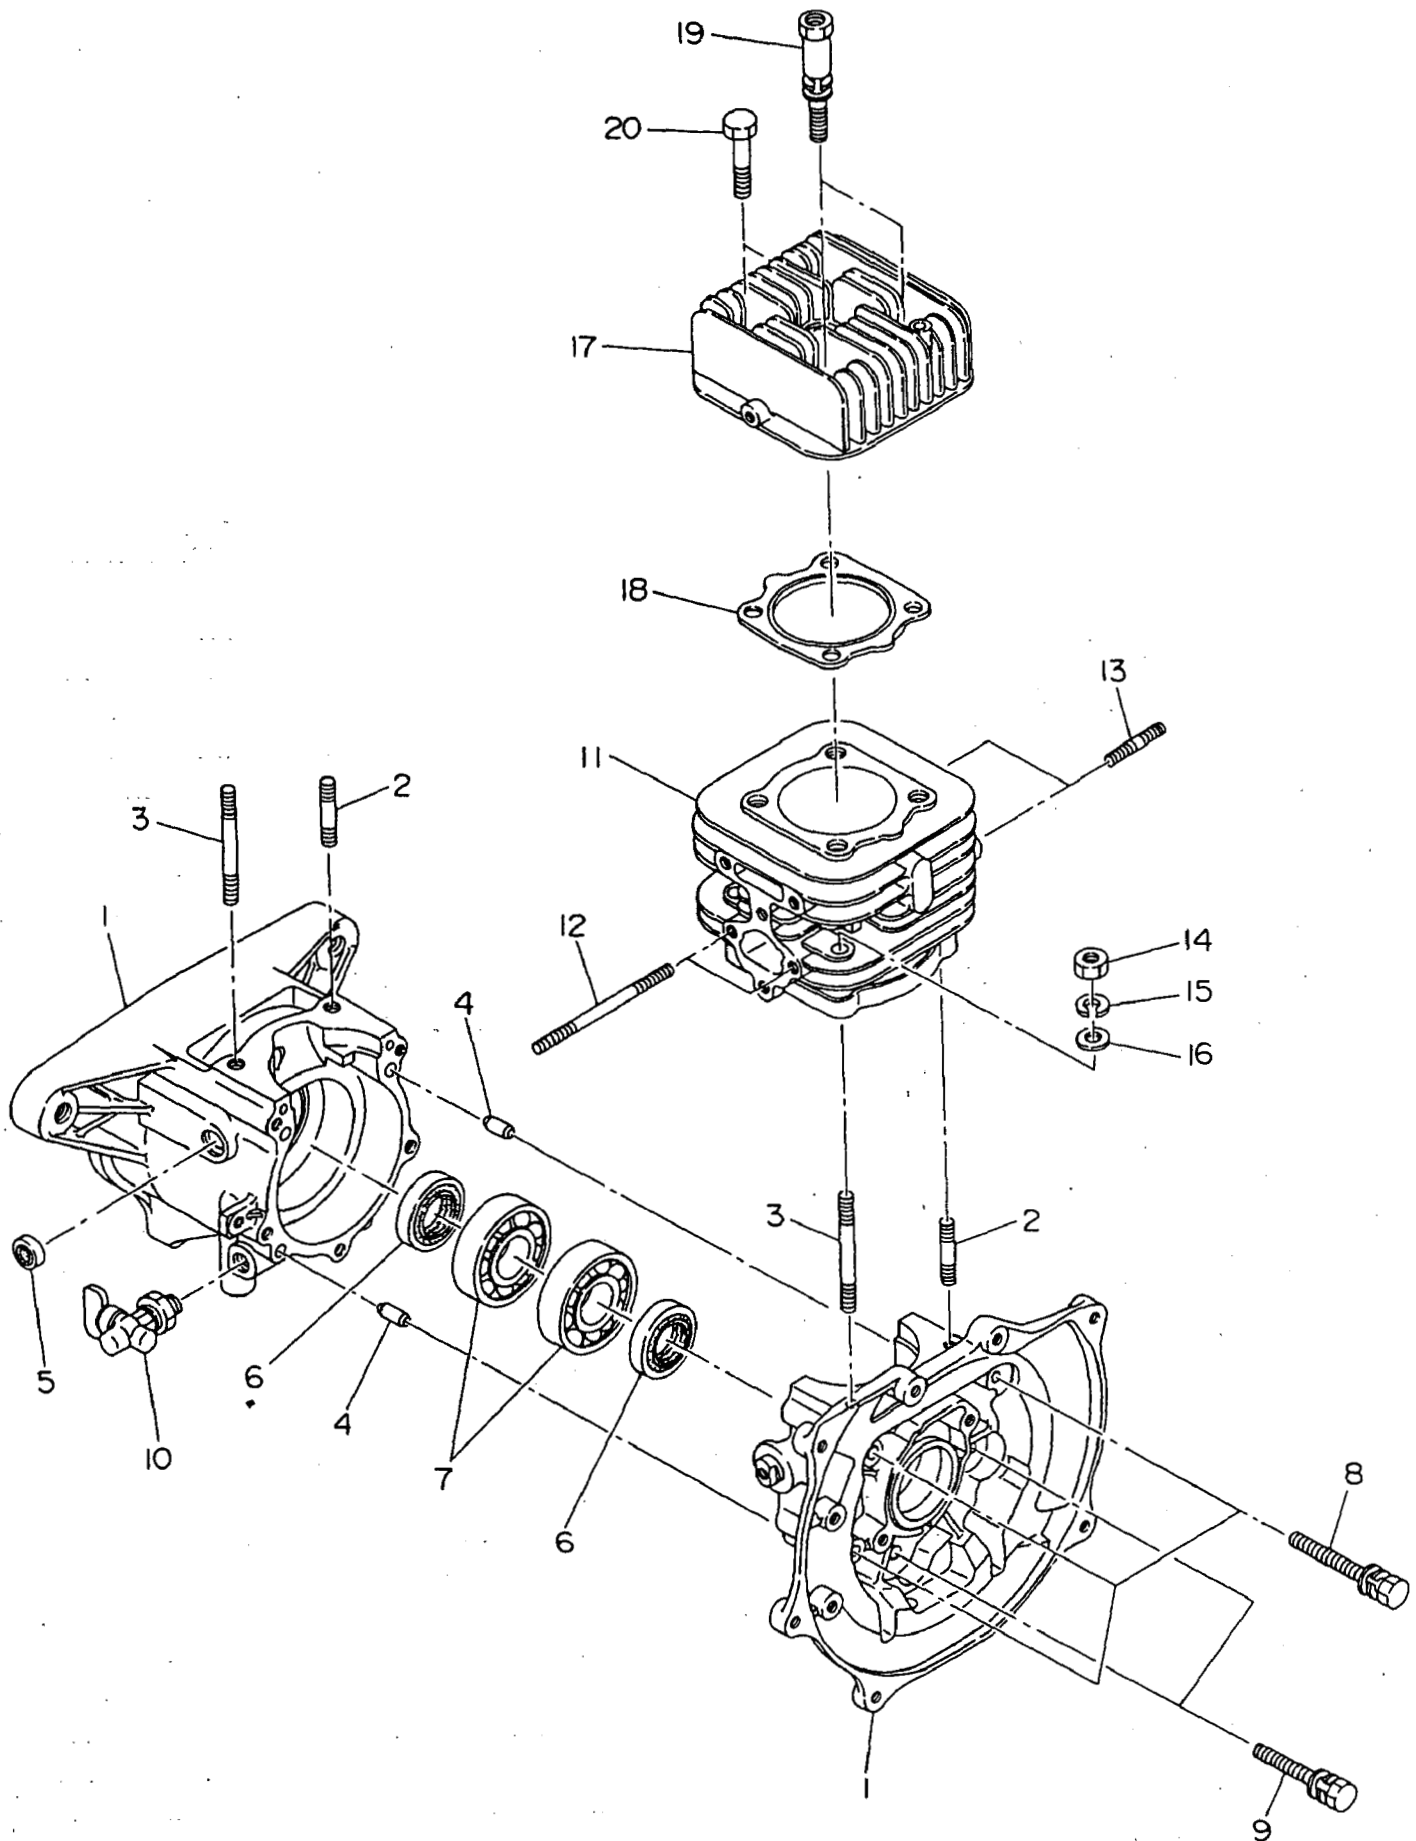

1. CRANKCASE and CYLINDER HEAD

[illegible]


2. CRANKSHAFT and PISTON

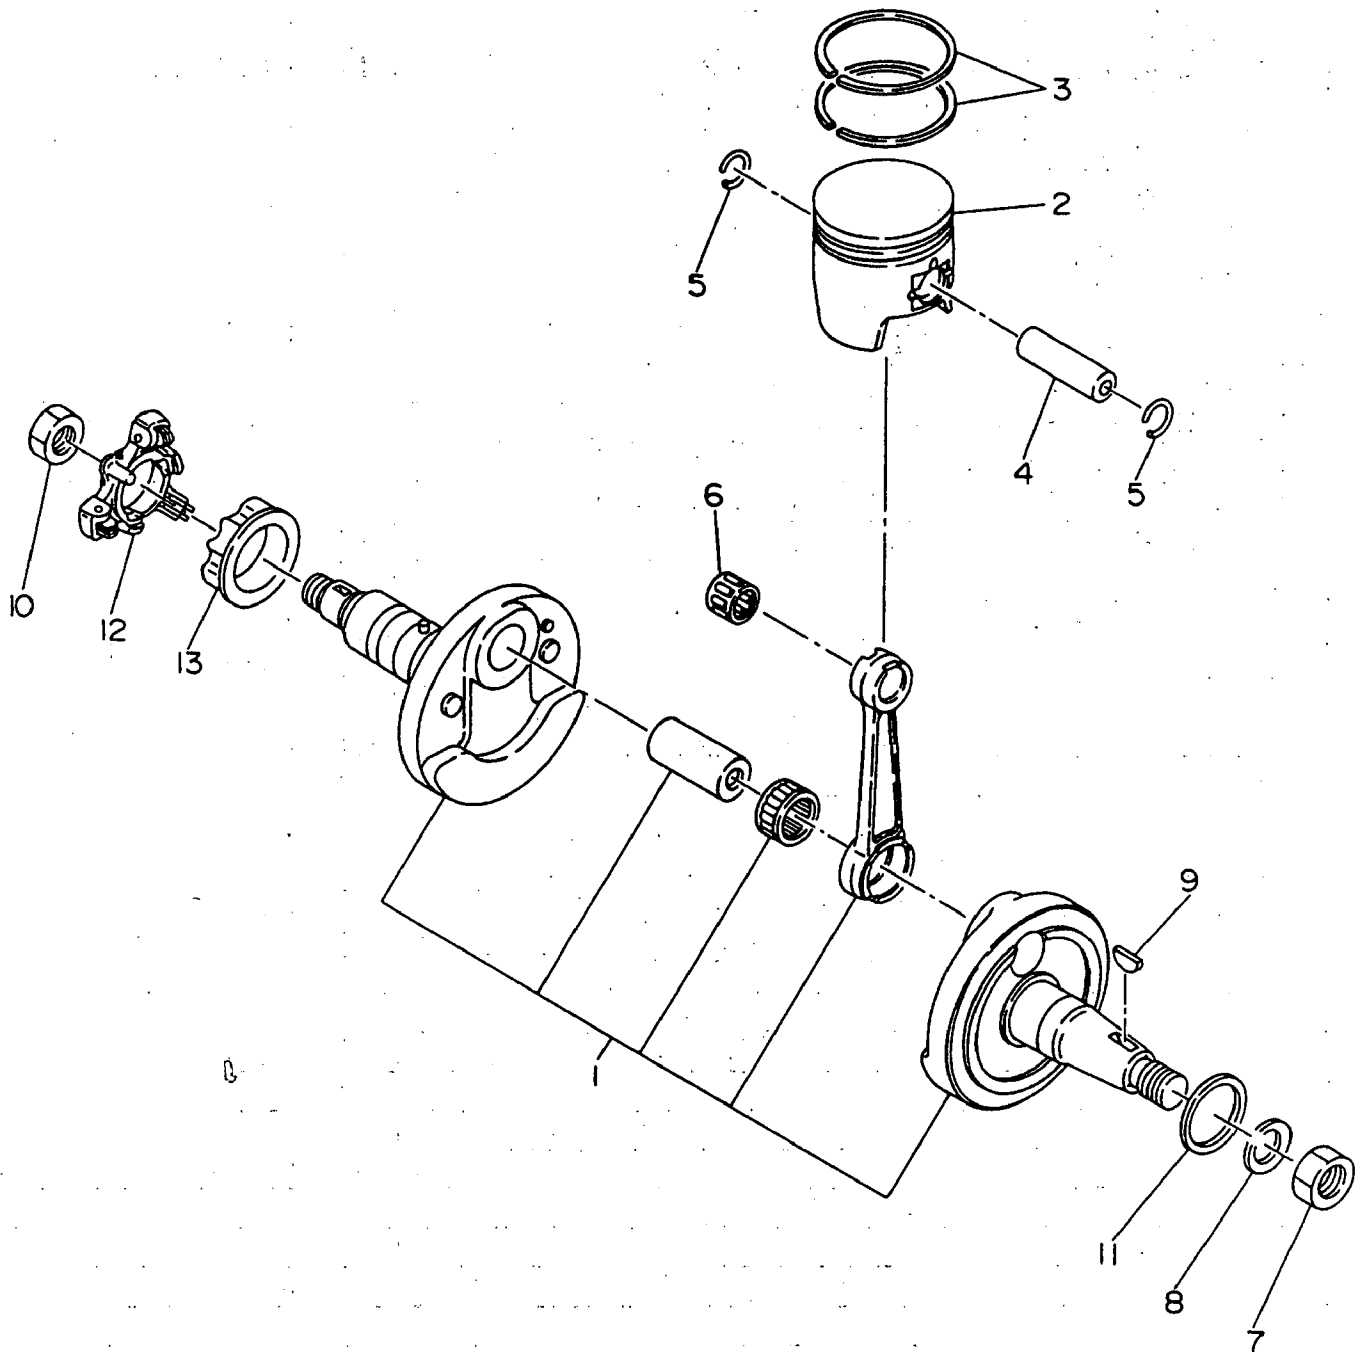

2. CRANKSHAFT and PISTON

[illegible]


3. MUFFLER and AIR CLEANER

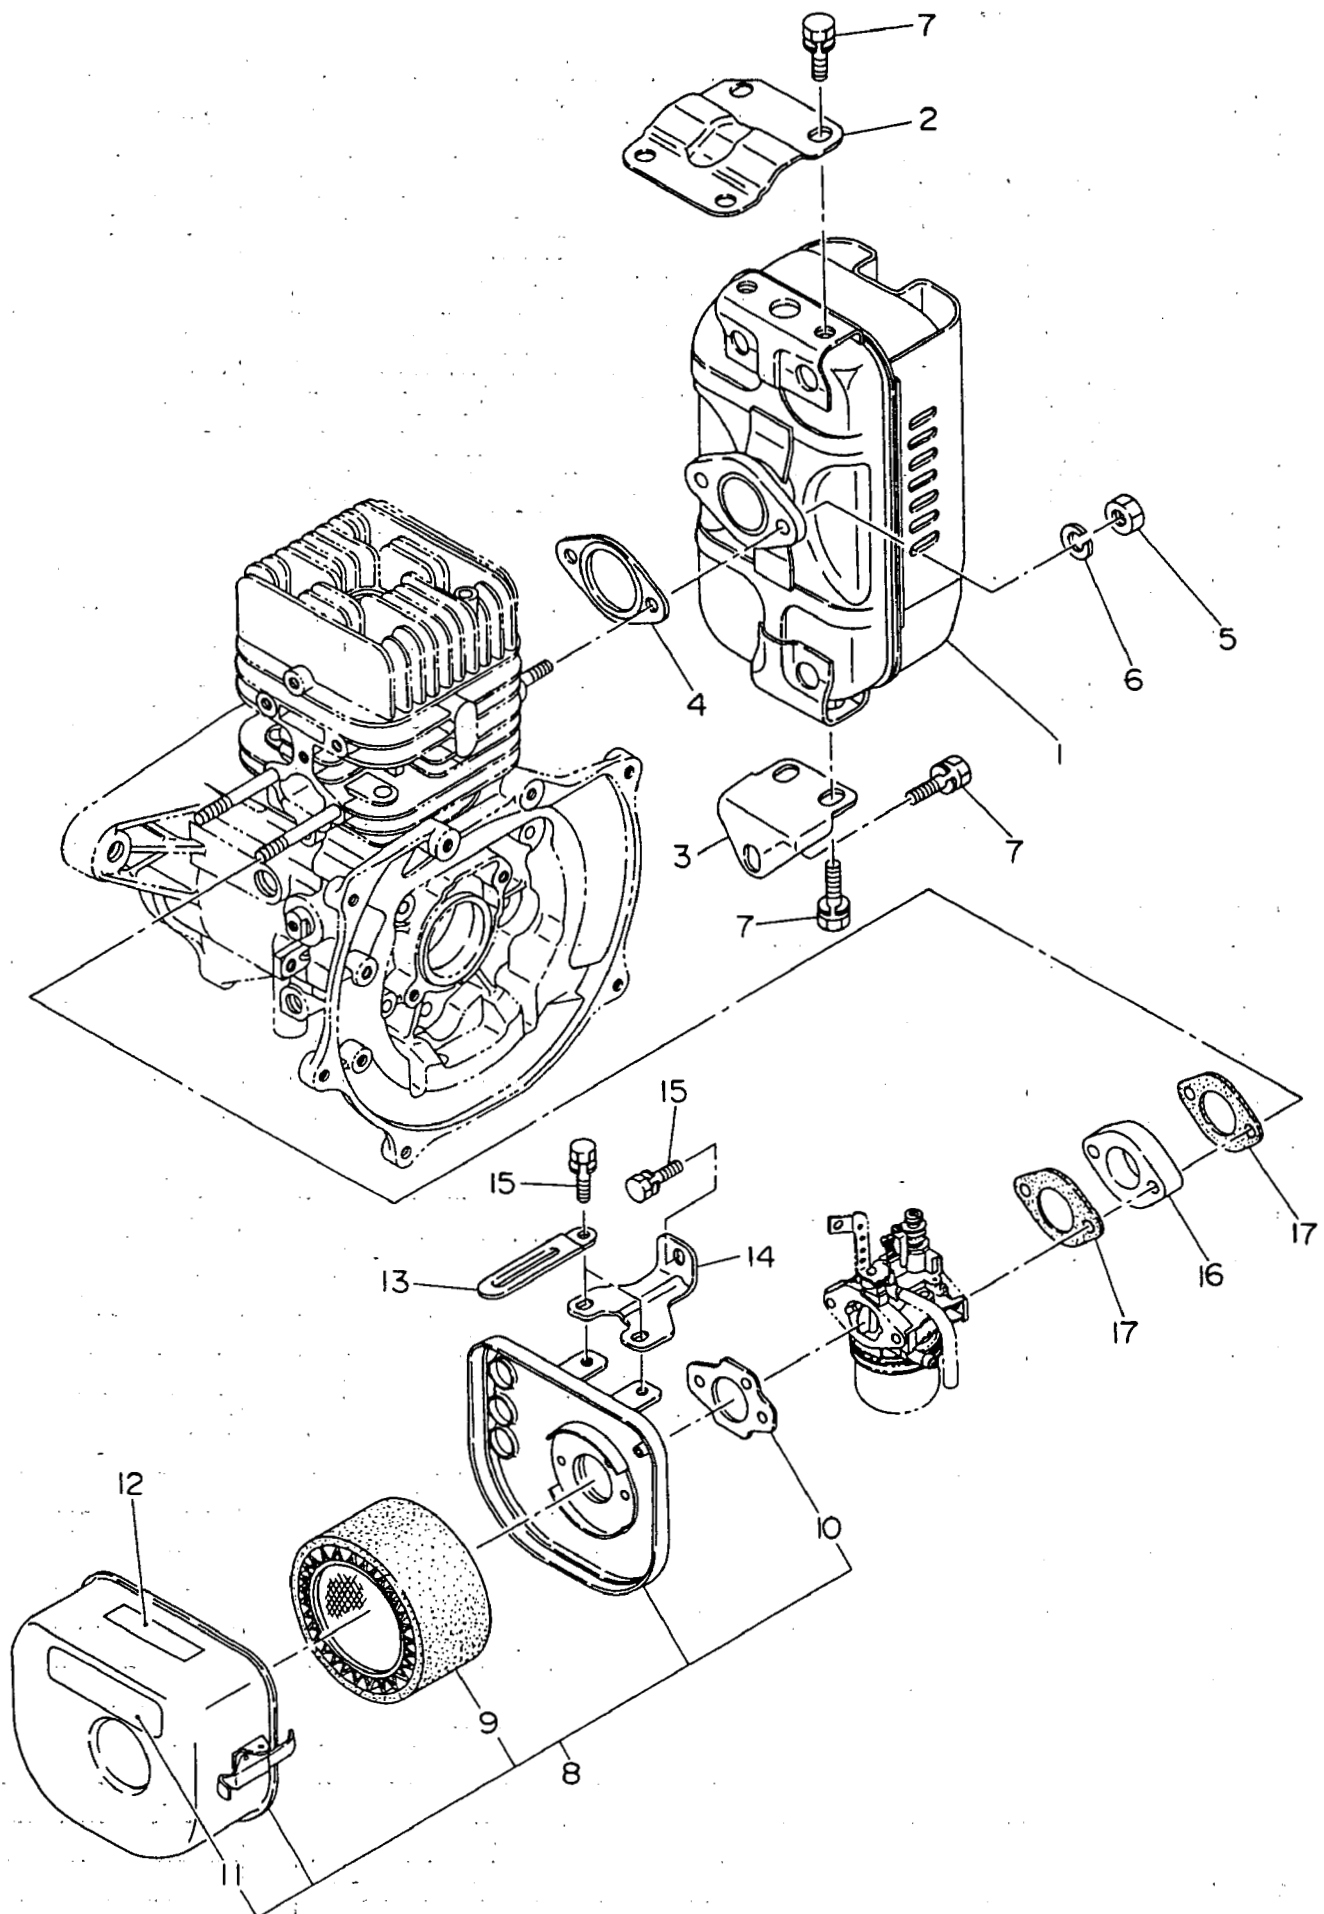

3. MUFFLER and AIR CLEANER

[illegible]


4. GOVERNOR

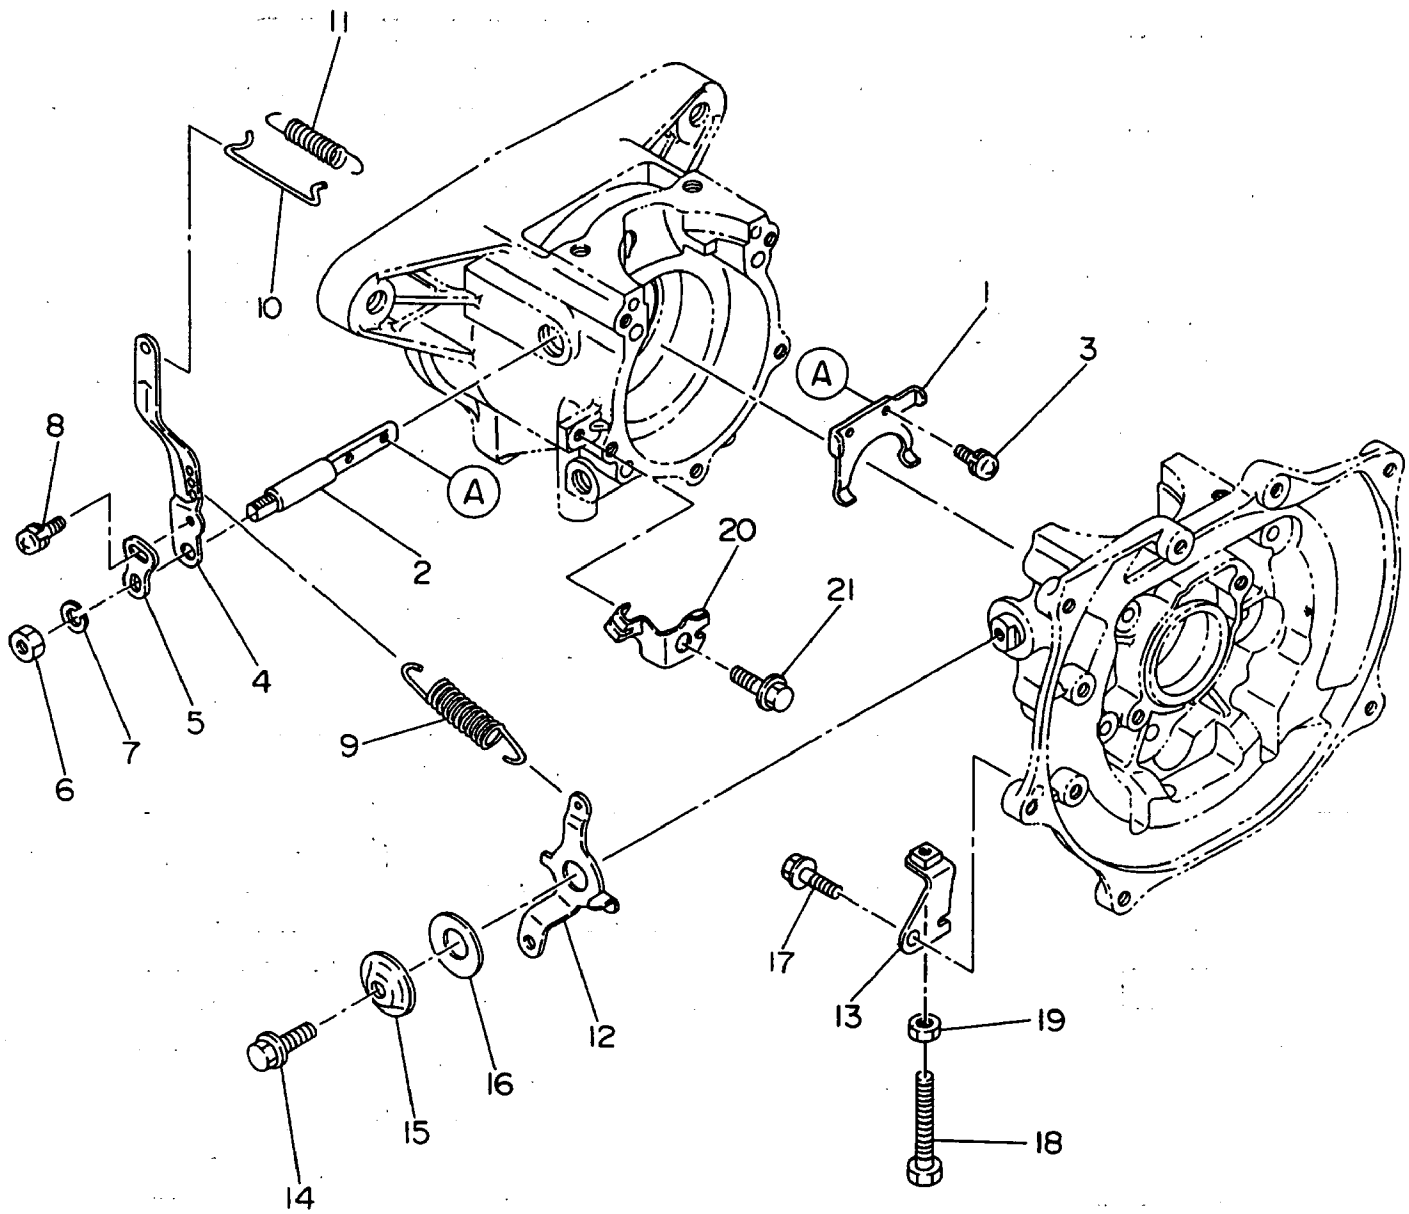

4. GOVERNOR

[illegible]


5. BLOWER HOUSING and RECOIL STARTER

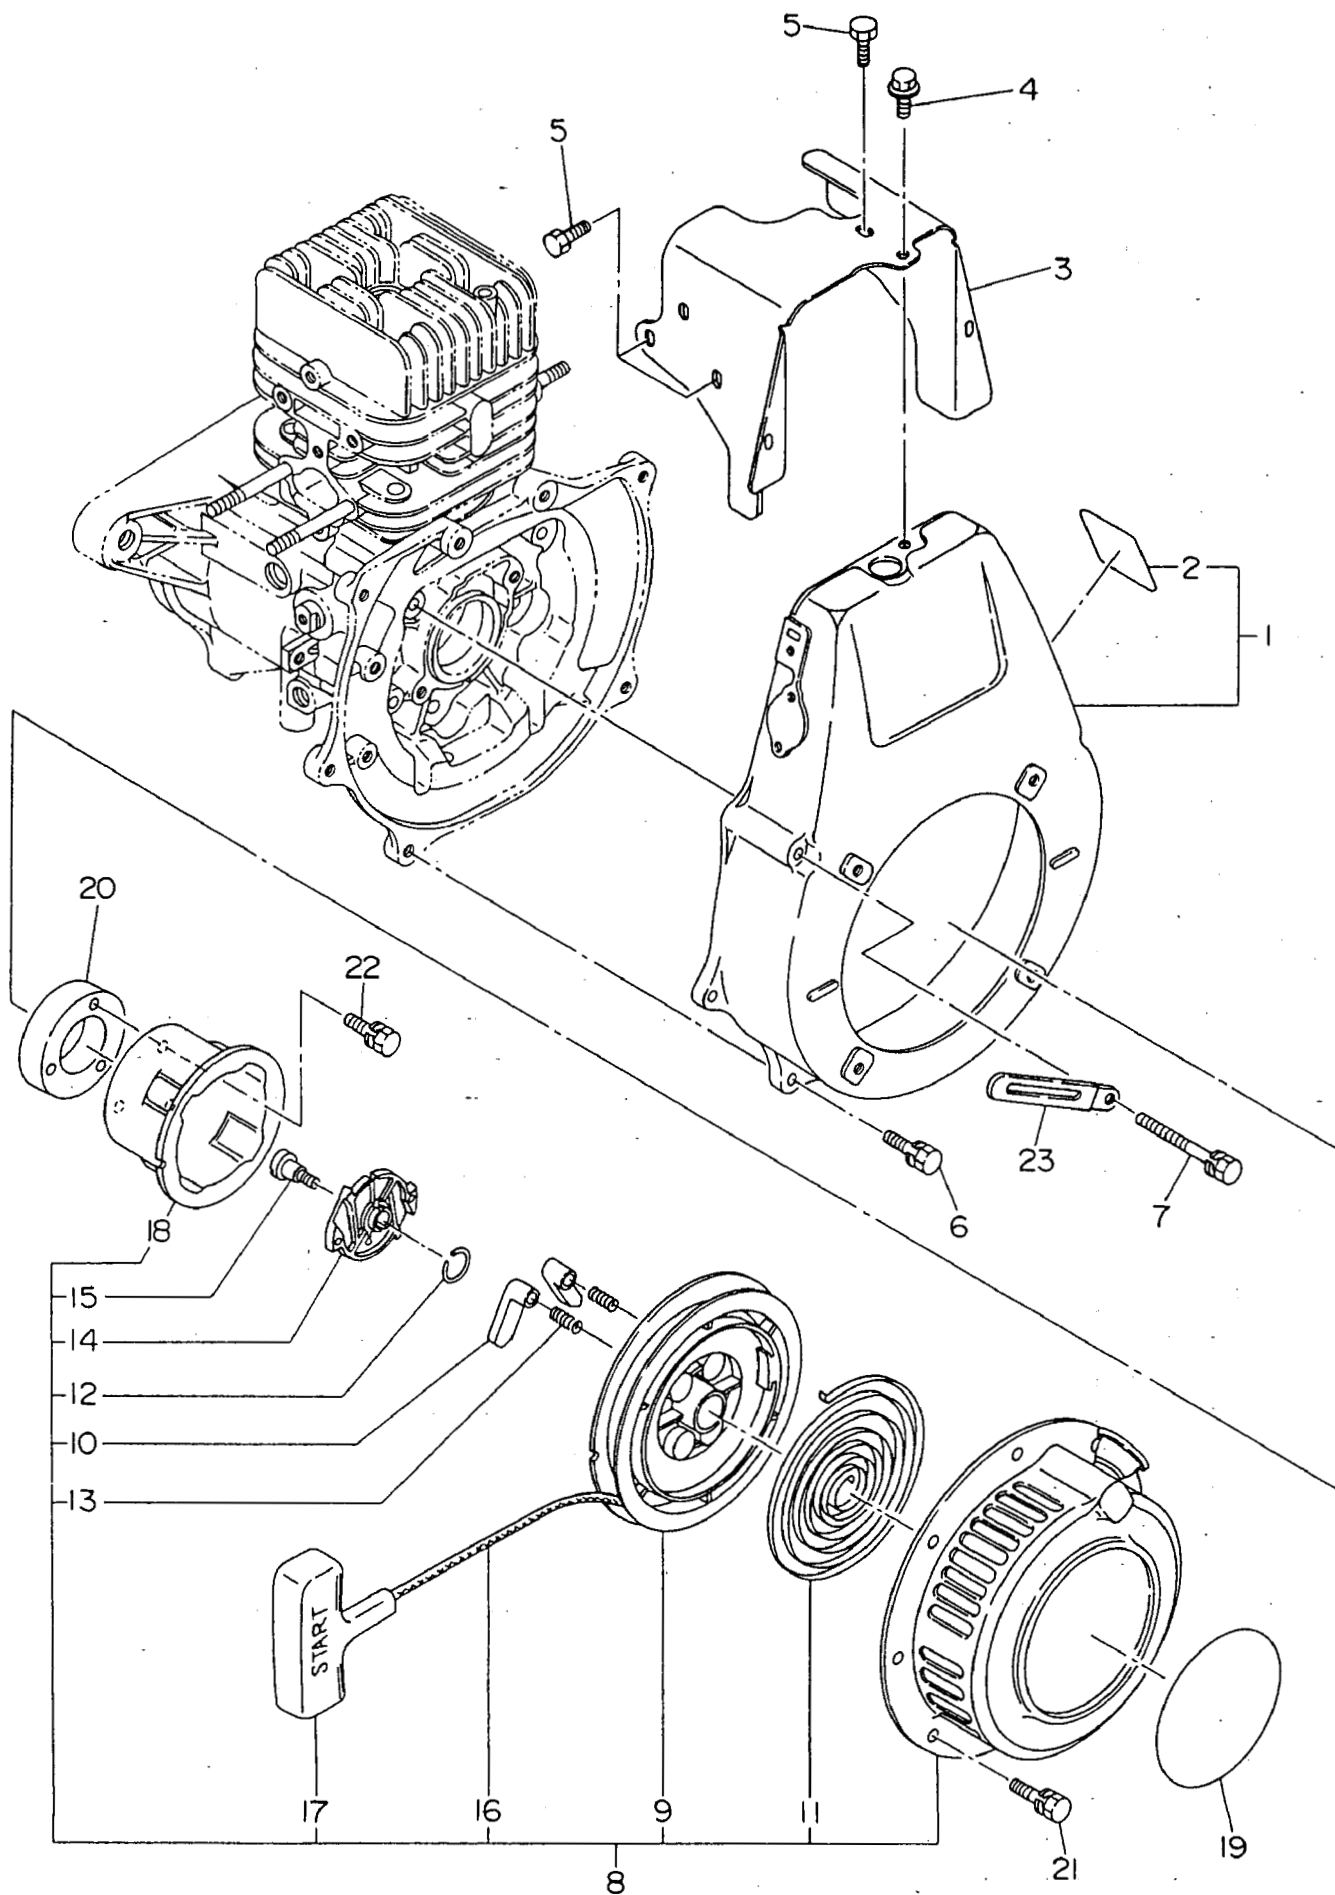

5. BLOWER HOUSING and RECOIL STARTER

[illegible]


6. CARBURETOR

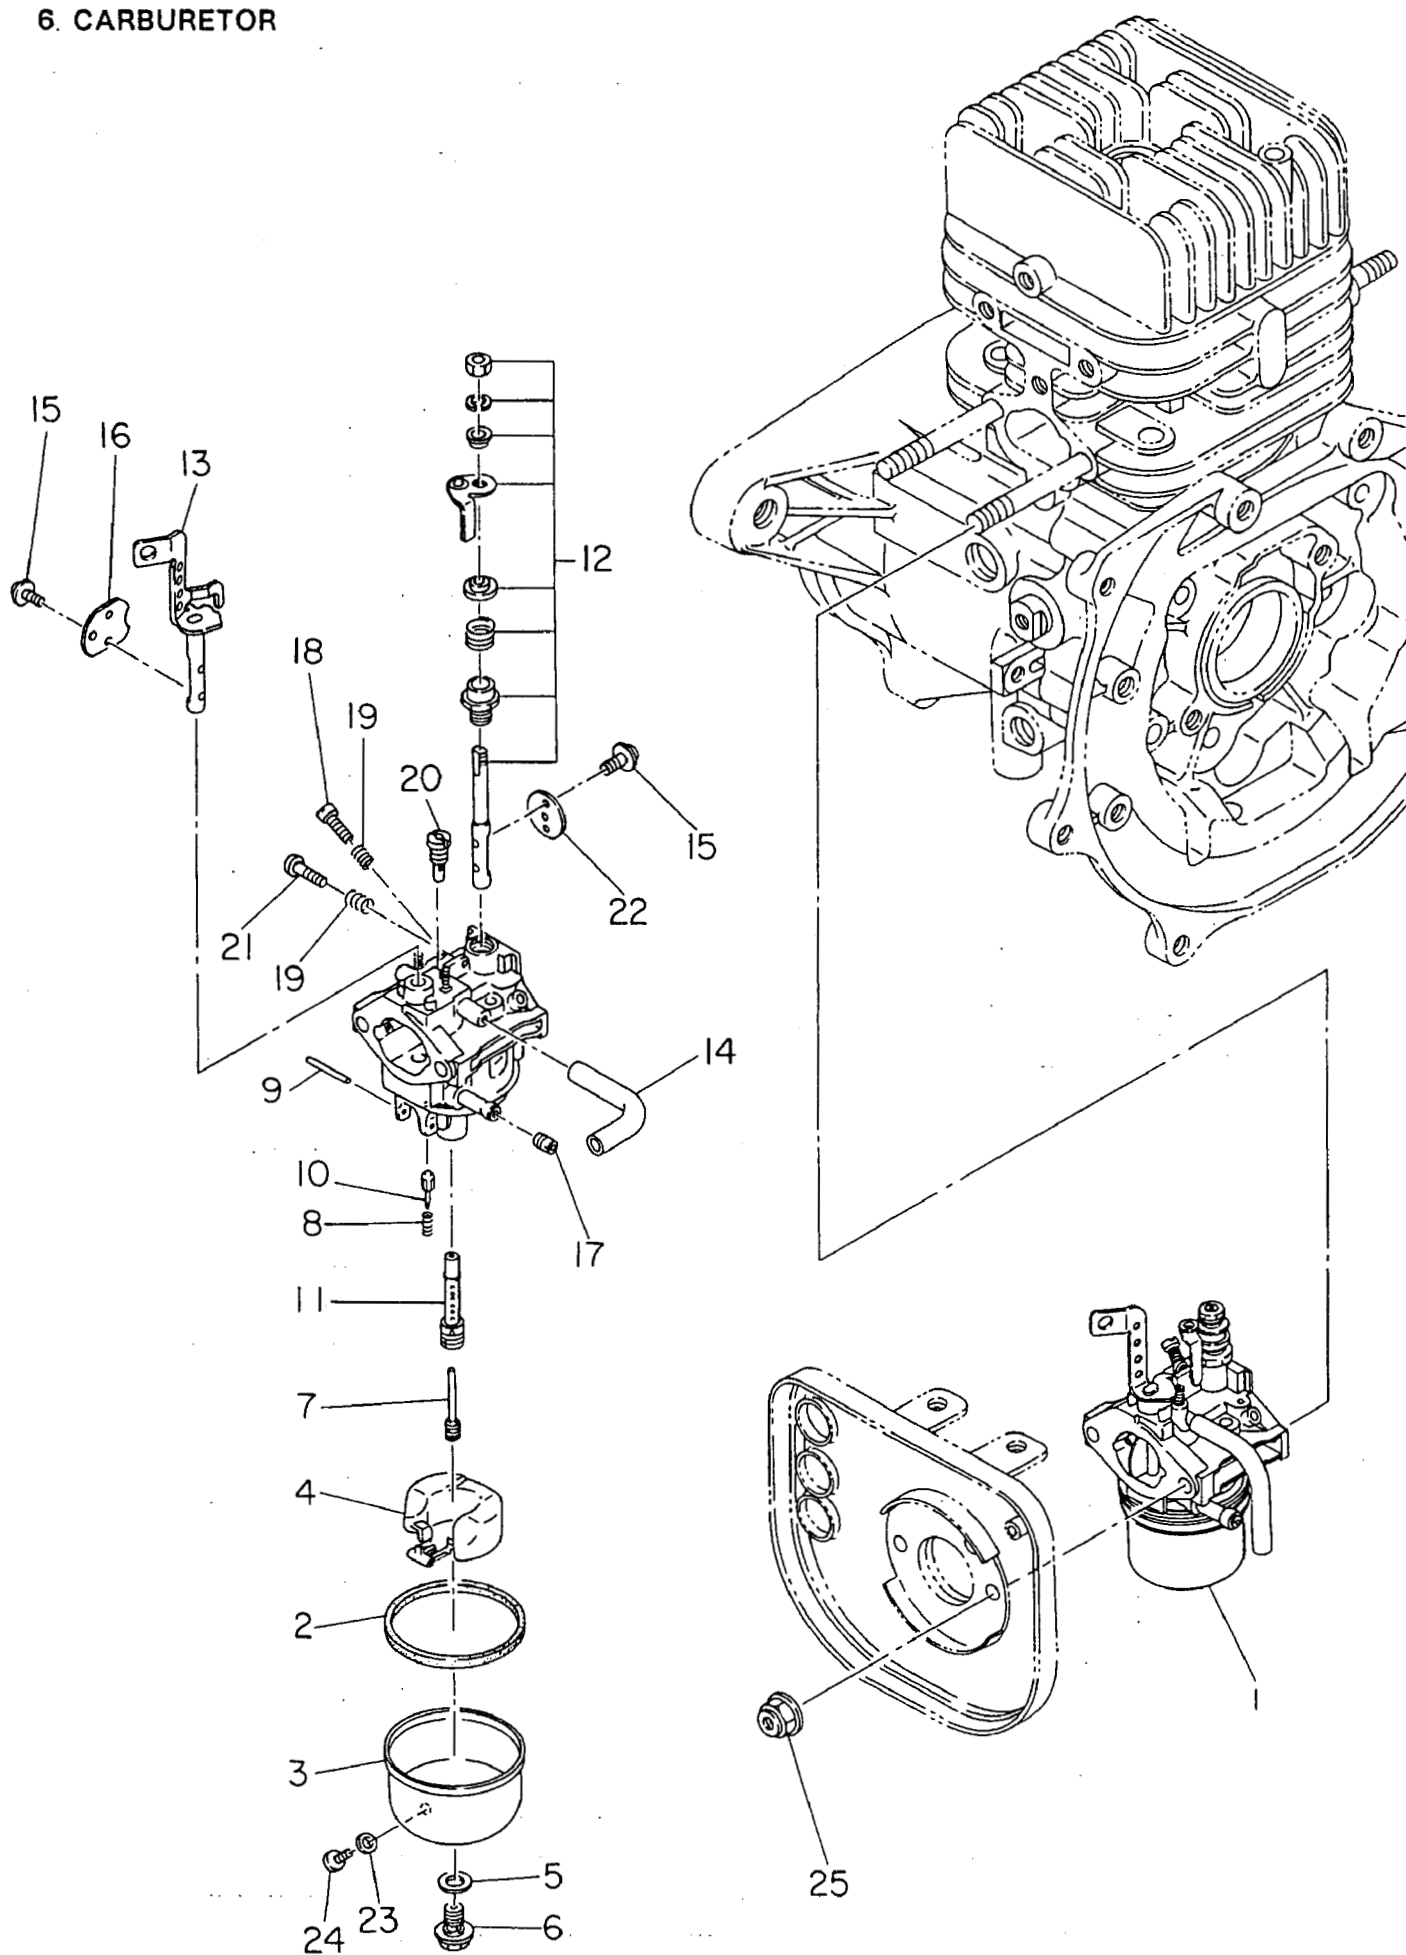

6. CARBURETOR

[illegible]


6. CARBURETOR

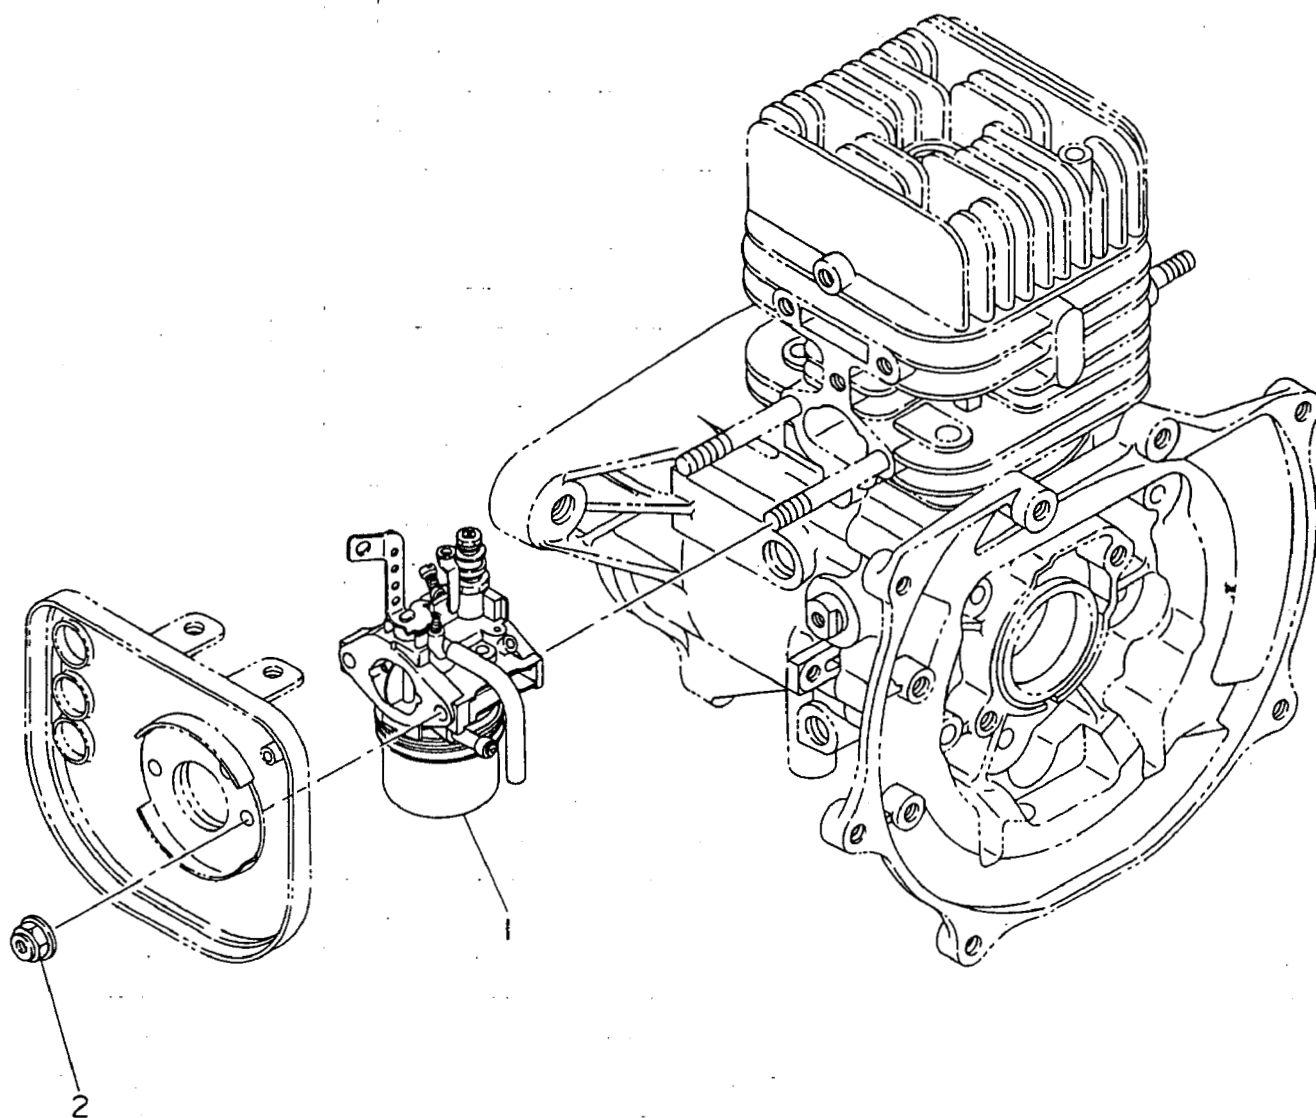

6. CARBURETOR

[illegible]


7. ELECTRIC DEVICE

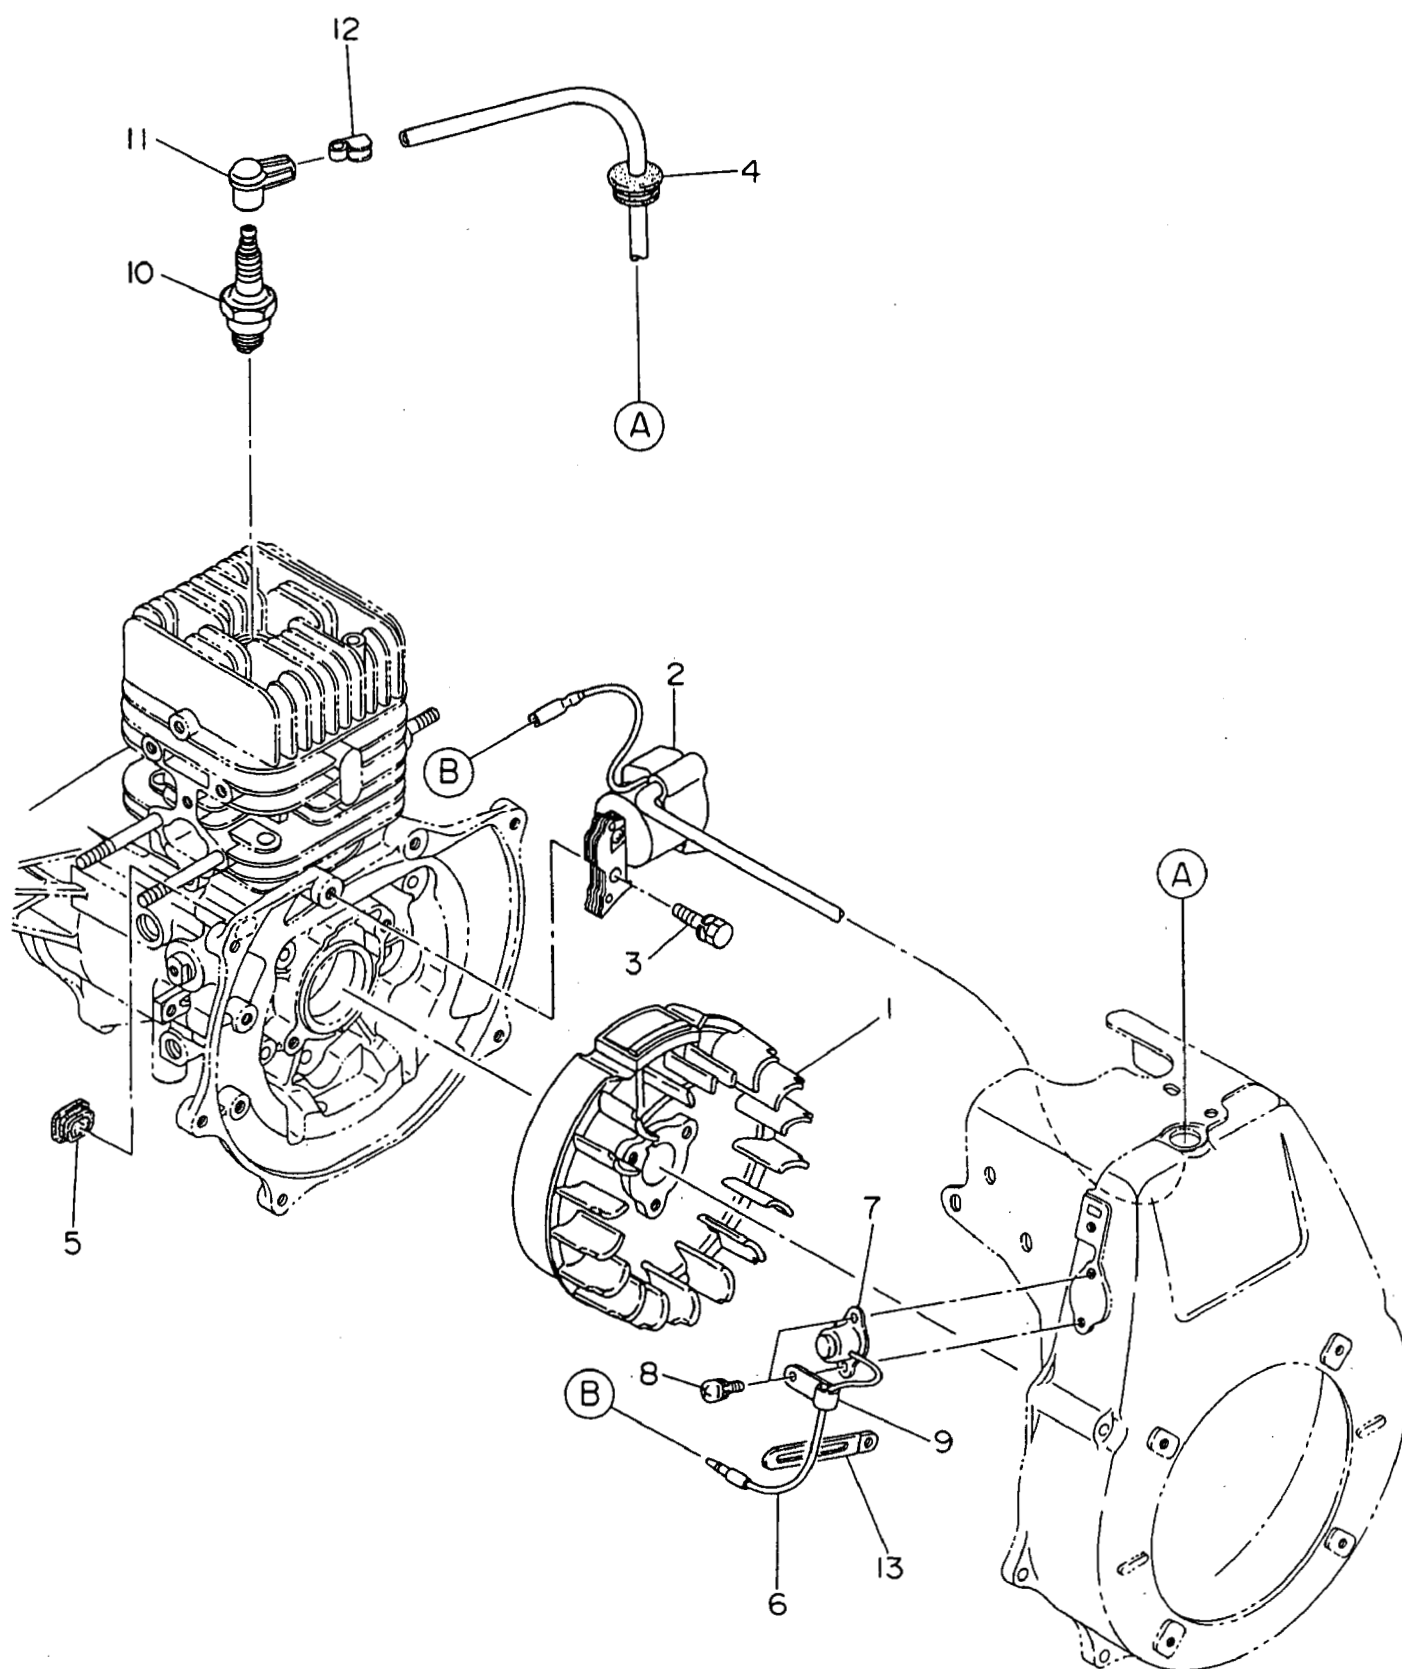

7. ELECTRIC DEVICE

[illegible]


8. ACCESSORIES

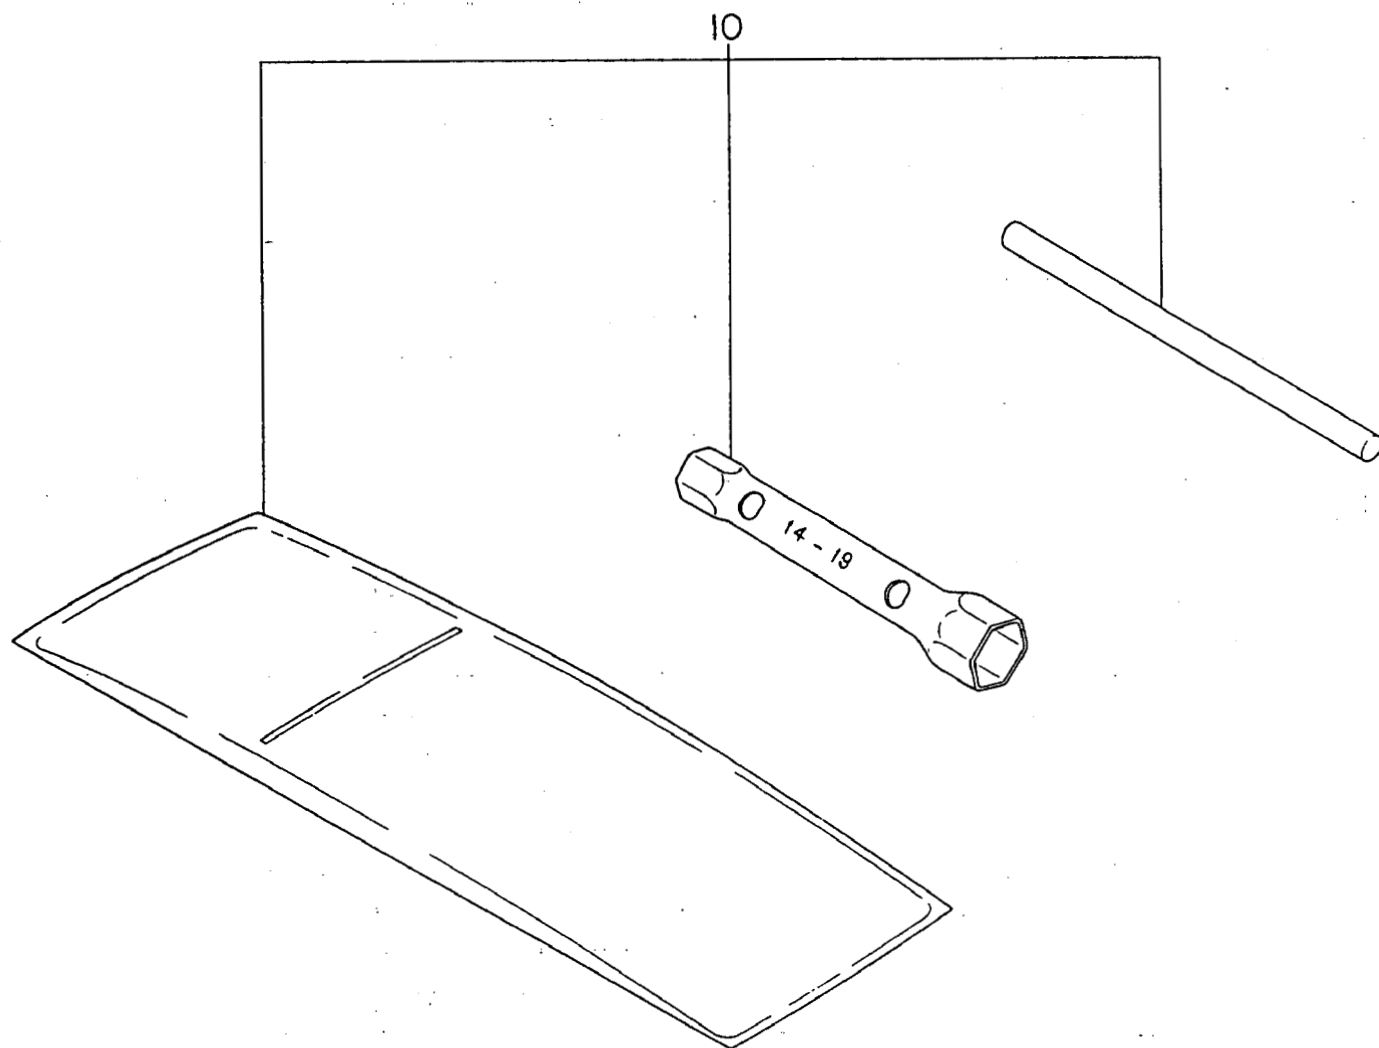

8. ACCESSORIES

[illegible]

9. PARTS TO BE SHIPPED LOOSE

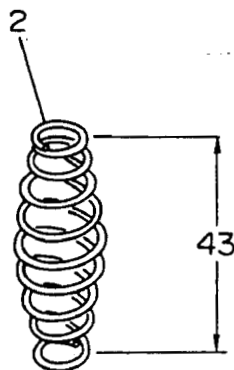

9. PARTS TO BE SHIPPED LOOSE

[illegible]

NOTES

NOTES

NOTES



Robin America, Inc.

940 Lively Blvd., Wood Dale, IL 60191 • Tel: (708) 350-8200 • Fax: (708) 350-8212