

PARTS MANUAL

MODEL
EH72

EH722DS2460

01/16



SUBARU

Industrial Power Products

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047 - Phone 847-540-7300 - Fax 847-438-5012


e-mail: sales@subarupower.com - www.subarupower.com

© 2015 Subaru Industrial Power Products

Group Index

Group Name	Page
100 Crankcase.....	4
200 Crankshaft.....	8
300 Intake & Exhaust.....	10
315 Intake & Exhaust.....	12
400 Governor.....	14
500 Cooling & Starting.....	16
600 Fuel & Lubricant.....	18
640 Carburetor.....	20
680 Oil Cooler.....	22
700 Electric Device.....	24
731 Electric Device.....	26
Part Number Index.....	28
Part Description Index.....	29

100 Crankcase

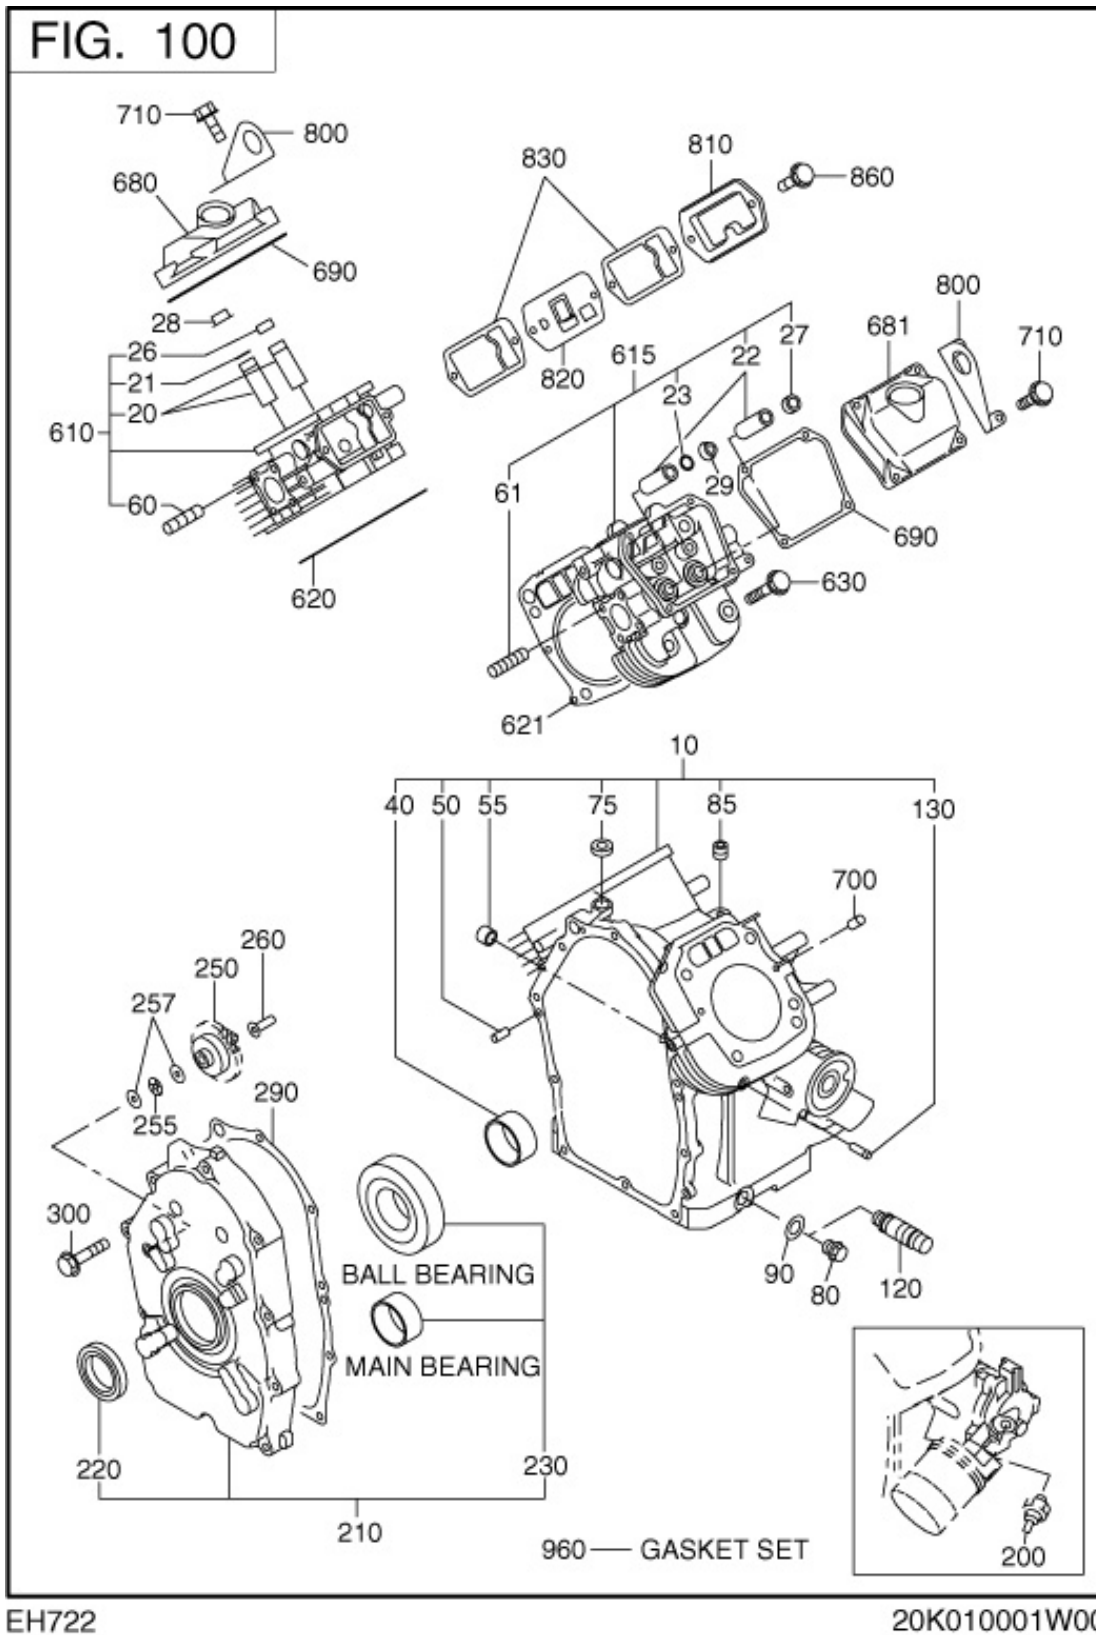

100 Crankcase


Ref	Part Number.	Description	Qty	Remark
10	280-10101-21	CRANKCASE CP	1	
20	263-14211-03	VALVE GUIDE	2	
21	056-51000-50	CLIP	1	
22	263-14211-03	VALVE GUIDE	2	
23	056-51000-50	CLIP	1	
26	132-11AA1-10	SEAL-EXH VALVE	1	
27	132-11AA1-10	SEAL-EXH VALVE	1	
28	263-35341-03	RETAINER PLATE	1	
29	263-35341-03	RETAINER PLATE	1	
40	263-15805-03	MAIN BEARING	1	
50	031-00801-10	DOWEL PIN	2	
55	263-55601-03	PIPE	2	
60	010-50802-90	STUD	4	
61	010-50802-90	STUD	4	
75	044-00800-10	OIL SEAL	1	
80	X40-11400-30	PLUG	2	
85	235-15421-03	BLIND PLUG CP	1	
90	021-11400-20	GASKET	2	
130	159-65401-03	PIPE(PULSE)	1	
200	263-76002-A1	OIL PRESSURE SWITCH	1	
210	263-11102-71	MAINBEARING COVER CP	1	
220	044-04200-30	OIL SEAL	1	
230	X60-04500-20	BALL BEARING	1	
250	263-45004-11	GOVERNOR GEAR CP	1	
255	263-46215-A3	THRUST BEARING	1	
257	263-46214-03	WASHER	2	
260	277-41902-01	GOVERNOR SLEEVE	1	
290	263-16002-A3	GASKET (M.B COVER)	1	
300	011-00802-20	FLANGE BOLT	1	
610	20K-13001-11	CYLINDER HEAD 1 CP	1	
615	20K-13101-11	CYLINDER HEAD 2 CP	1	
620	280-15001-23	GASKET 1 (CYL HEAD)	1	
621	280-15101-23	GASKET 2 (CYL HEAD)	1	
630	011-01000-70	FLANGE BOLT	8	
680	263-15505-03	ROCKER COVER	1	
681	263-15503-03	ROCKER COVER	1	
690	263-16101-A3	GASKET(ROCKER COVER)	2	
700	031-00600-20	DOWEL PIN	4	
710	011-00601-01	FLANGE BOLT	8	

100 Crankcase

Ref	Part Number.	Description	Qty	Remark
800	280-19001-03	HOOK	2	
810	263-14301-03	BREATHER COVER	1	
820	280-14401-A1	BREATHER PLATE CP	1	
830	263-16006-03	GASKET(BREATHERPLATE	2	
860	011-00600-30	FLANGE BOLT	2	
960	280-99001-17	GASKET SET	1	

This Page Intentionally Left Blank


200 Crankshaft

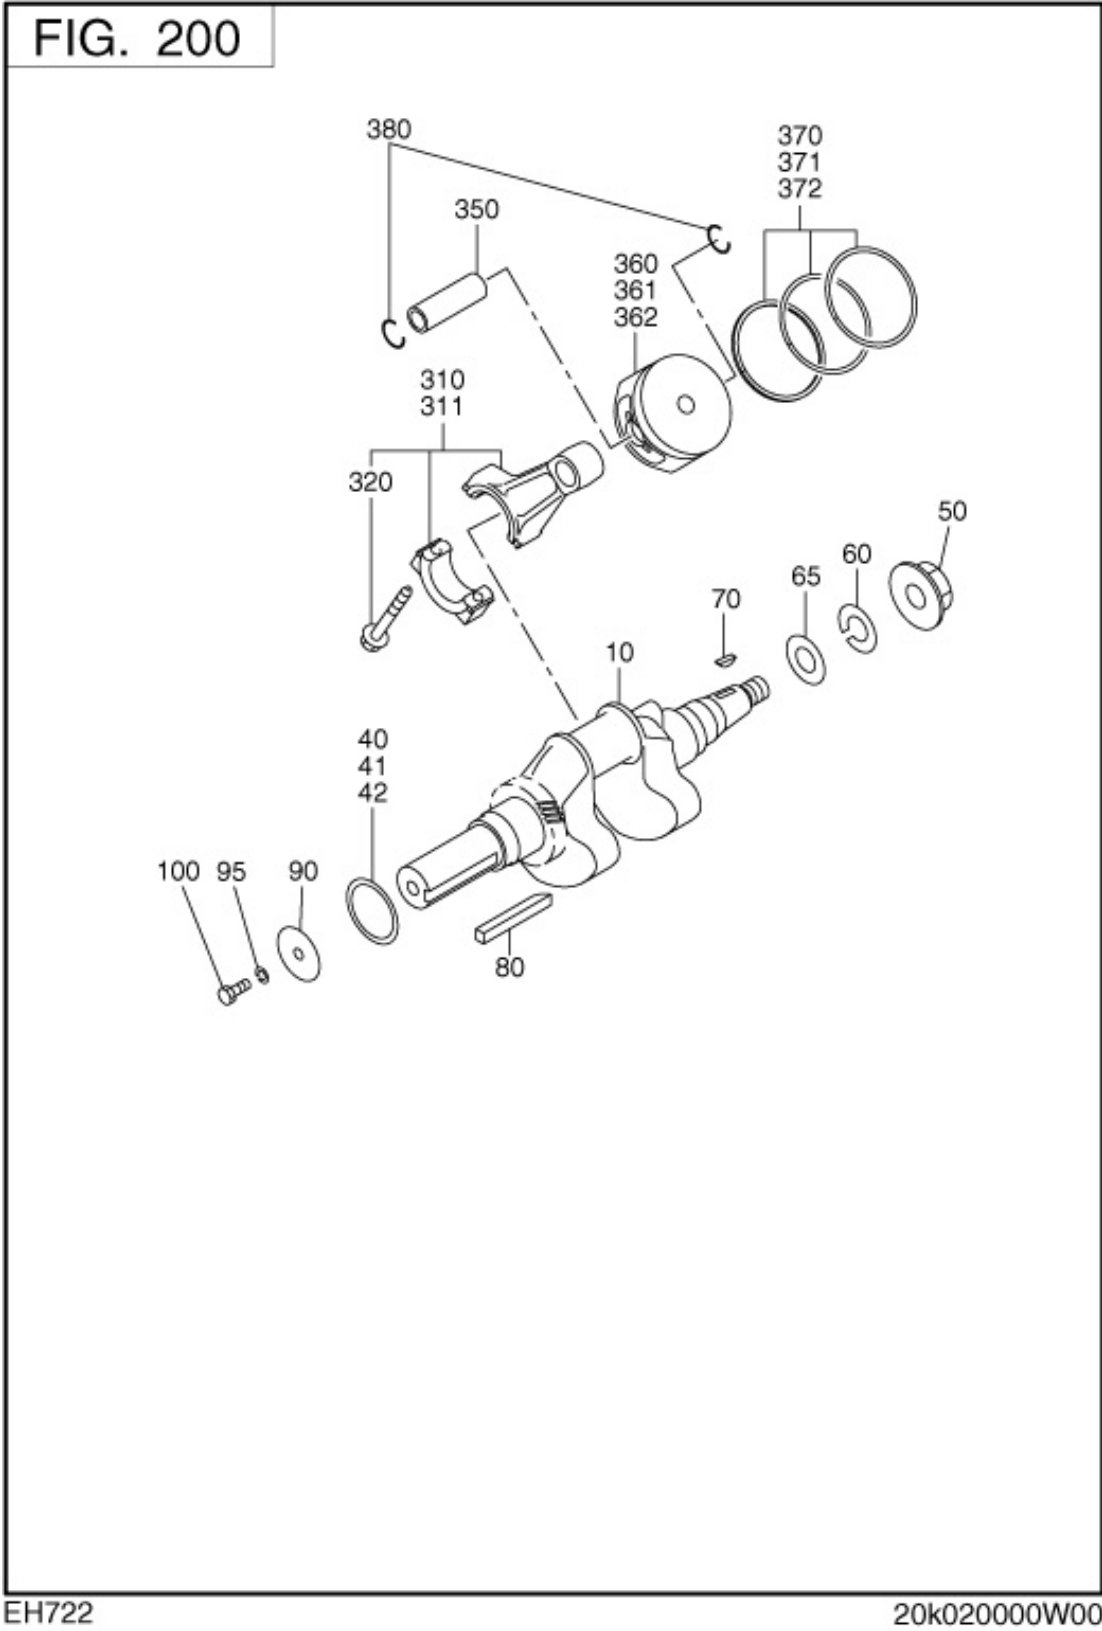

200 Crankshaft

Ref	Part Number.	Description	Qty	Remark
10	263-21211-11	CRANKSHAFT CP	1	
40	263-25012-A3	SPACER	1	
41	263-25013-A3	SPACER	1	
42	263-25014-A3	SPACER	1	
50	018-01800-10	FLANGE NUT	1	
65	003-10180-00	WASHER	1	
70	005-32054-01	WOODRUFF KEY	1	
310	263-22601-30	CONNECTING ROD AY	2	
320	001-05084-00	FLANGE BOLT	4	
350	263-23301-33	PISTON PIN	2	
360	280-23411-H3	PISTON	2	
370	247-23501-17	PISTON RING SET	2	
380	056-52100-20	CLIP	4	


300 Intake & Exhaust

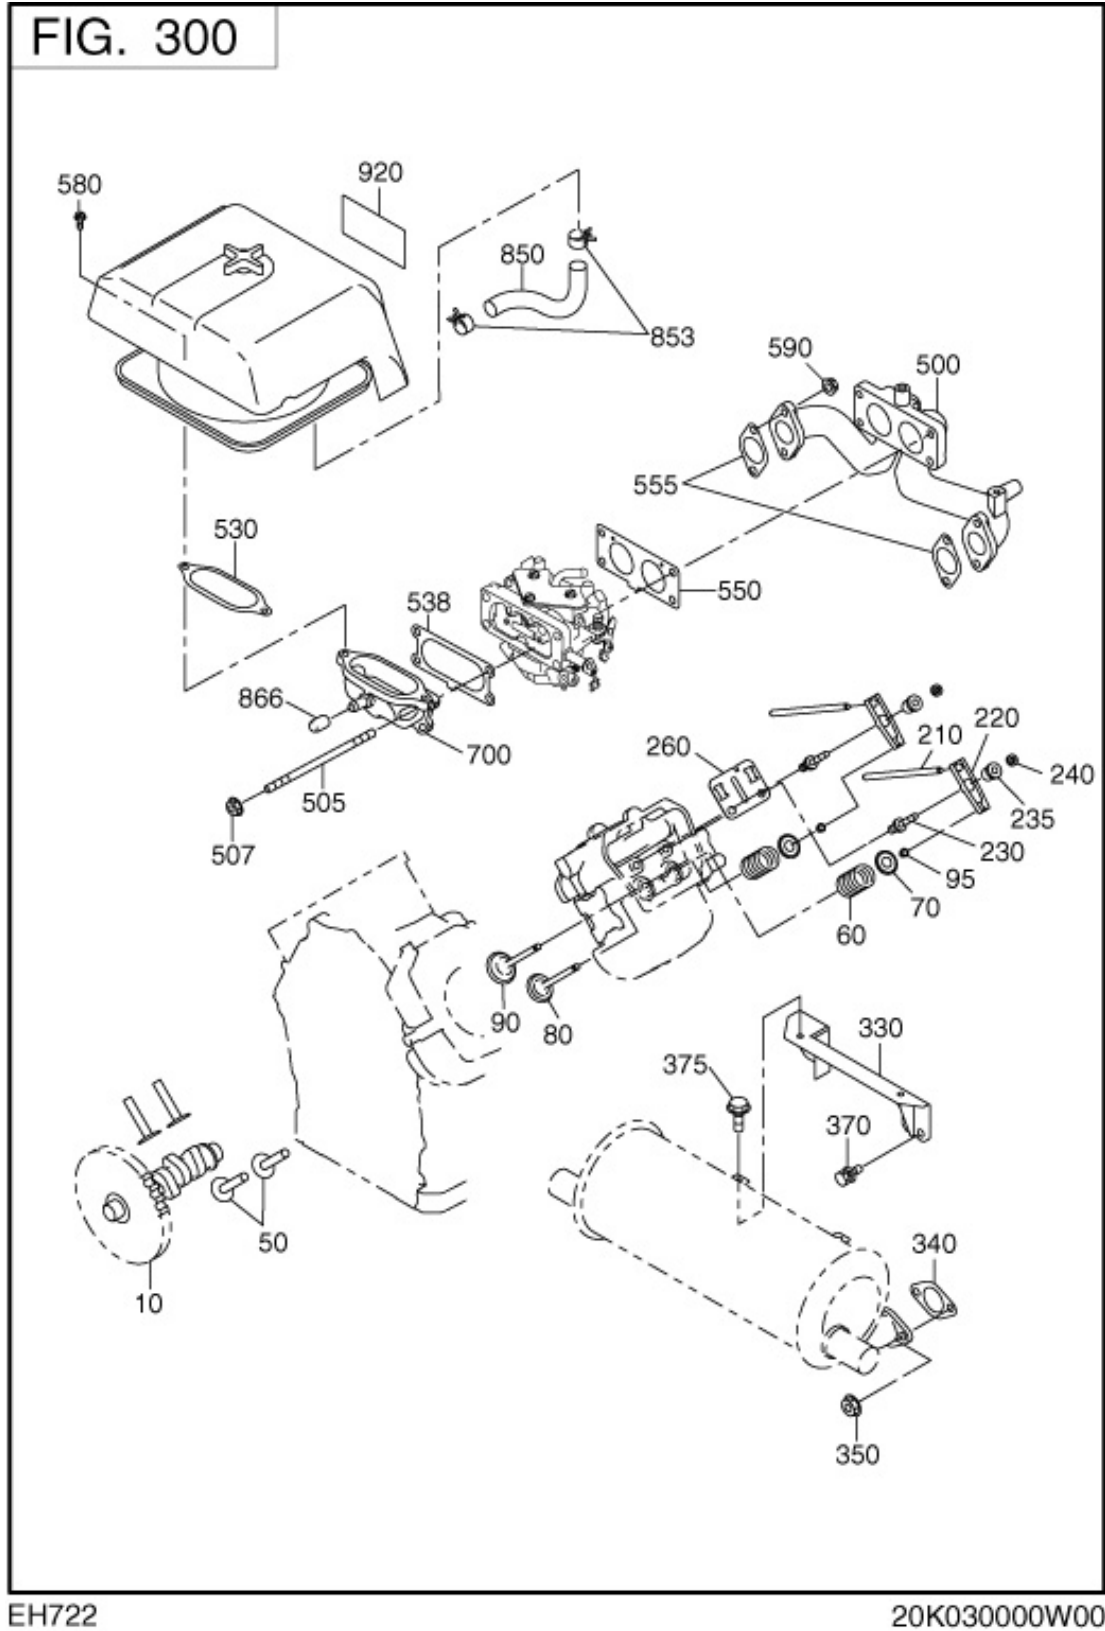

300 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
10	280-31801-03	CAM SHAFT	1	
50	263-33301-A3	TAPPET	4	
60	246-33611-03	VALVE SPRING	4	
70	246-33711-13	SPRING RETAINER	4	
80	263-33401-H3	INTAKE VALVE	2	
90	263-33502-H3	EXHAUST VALVE	2	
95	246-35501-03	COLLET-VALVE	8	
210	263-35322-A1	PUSH ROD CP	4	
220	267-36102-03	ROCKER ARM	4	
230	263-35801-03	BOLT(PIVOT)	4	
235	267-35701-03	PIVOT	4	
240	017-00601-10	NUT	4	
260	263-37002-A3	GUIDE PLATE	2	
340	270-35201-01	GASKET CP (MUFFLER)	2	
500	280-33005-H1	INTAKE MANIFOLD CP	1	
505	010-50601-91	STUD	4	M6X1.0X88L
507	002-38060-00	FLANGE NUT	4	M6X1.0X13DX6H
530	280-35622-03	GASKET(CLEANER)	1	
538	280-35501-03	GASKET(ADAPTER)	1	
550	280-66202-03	GASKET(CARBURETOR)	1	
555	263-35503-A3	GASKET(IN MANIFOLD)	2	
580	X11-00600-20	FLANGE BOLT	3	M6X1.0X14DX12L
590	002-38080-00	FLANGE NUT	4	M8X1.25X17DX7.5H
700	280-38001-03	CLEANER ADAPTER	1	
850	280-18001-03	BREATHER PIPE	1	
853	056-12000-20	HOSE CLAMP	2	
866	X42-30600-30	CAP(VINYL)	1	
920	20K-91701-03	LABEL(TRADE MARK)	1	

315 Intake & Exhaust

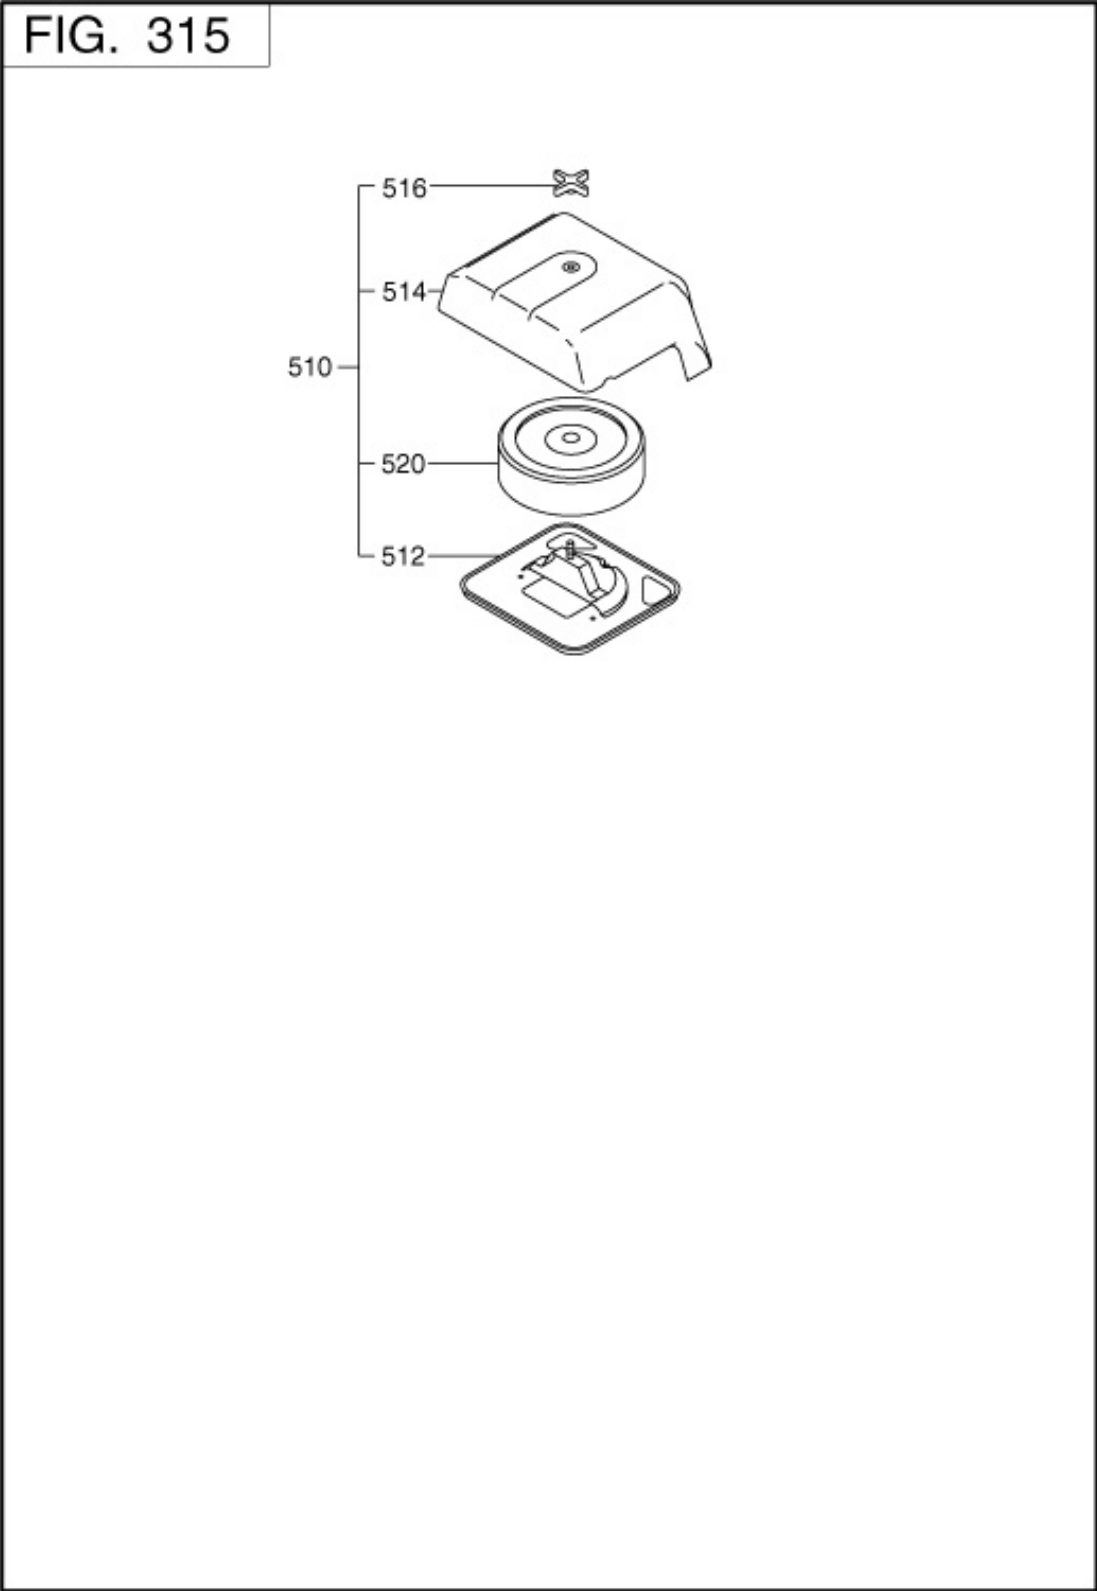


EH722

20K031500W00

315 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
510	20K-32601-A0	AIR CLEANER AY	1	
512	280-32626-A1	CLEANER BASE CP	1	
514	263-32630-03	CLEANER COVER	1	
516	263-32640-01	WING NUT	1	
520	263-32610-A1	CLEANER ELEMENT CP	1	

400 Governor

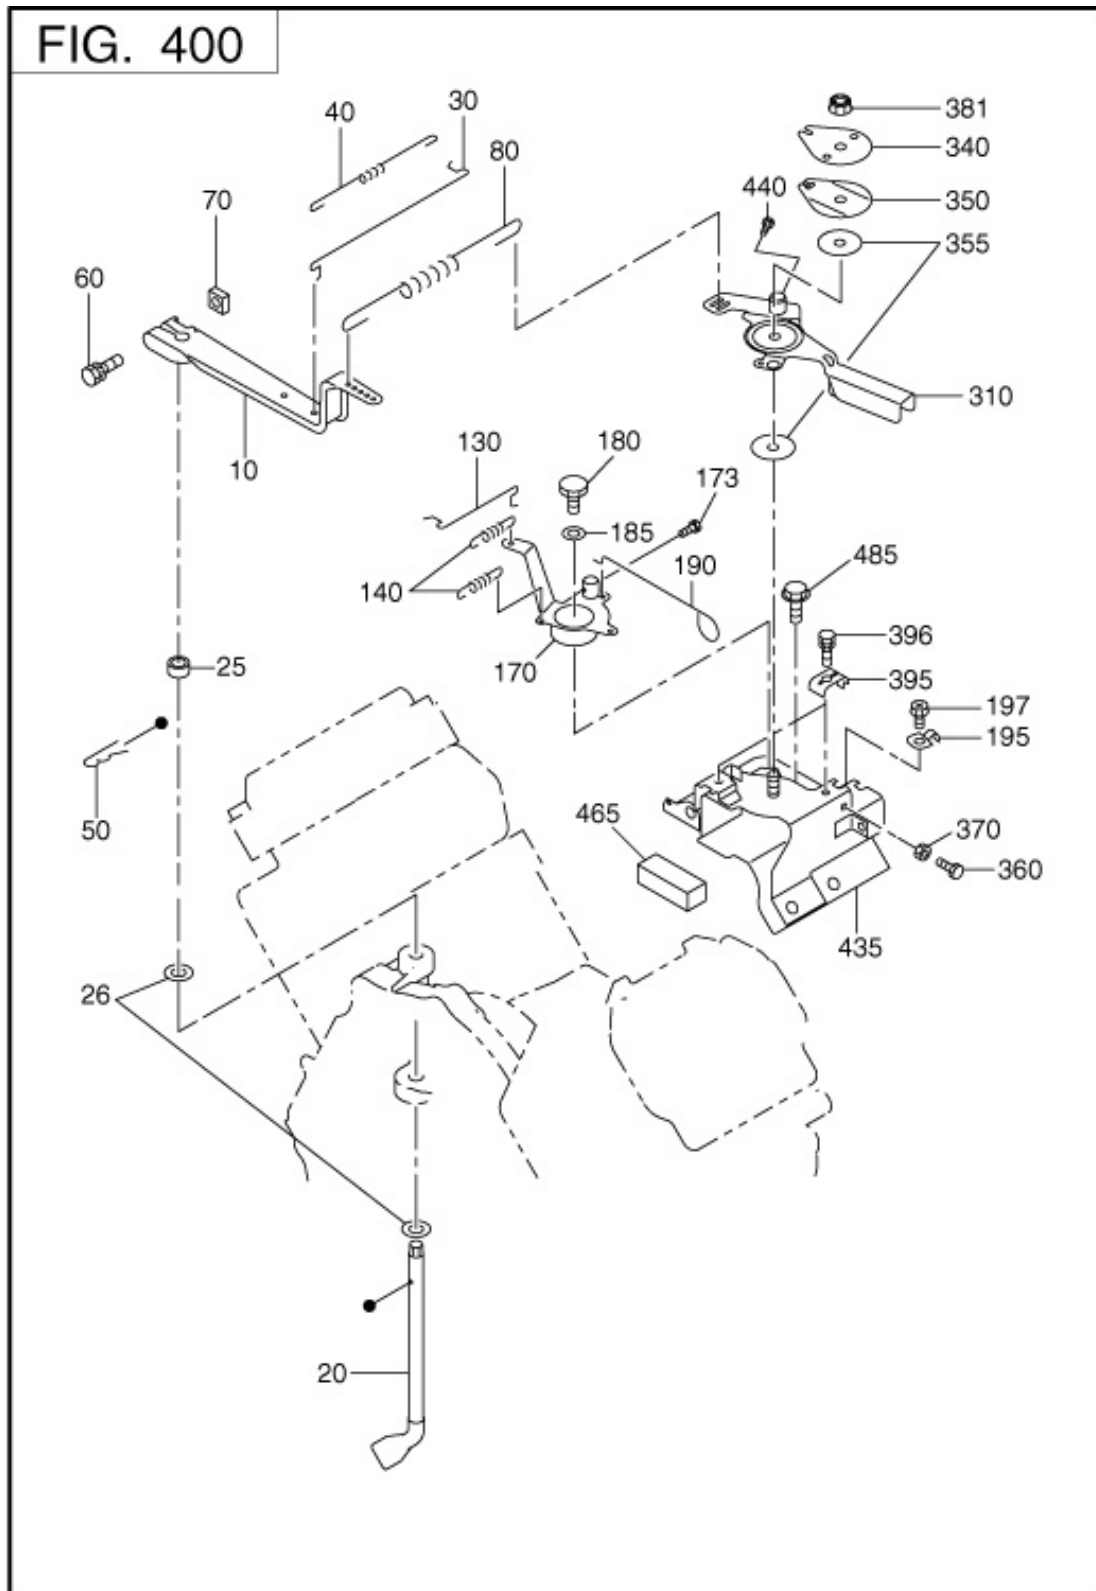


EH722

20K040000W00

400 Governor

Ref	Part Number.	Description	Qty	Remark
10	263-42301-B3	GOVERNOR LEVER	1	
20	263-42201-A3	GOVERNOR SHAFT	1	
25	X23-00801-50	SPACER	1	
26	003-10080-00	WASHER	2	8.5DX16DX1.2T
30	20K-42701-03	GOVERNOR ROD	1	
40	20K-42801-03	GOVERNOR ROD SPRING	1	
50	005-11060-01	SNAP PIN	1	
60	001-14063-00	BOLT AND WASHER AY	1	M6X1.0X30L
70	018-60600-20	NUT	1	M6X1.0X4.9H SQUARE
80	263-42501-13	GOVERNOR SPRING	1	
130	280-46011-03	CHOKE CONTROL ROD	1	
140	261-45201-13	RETURN SPRING	1	
170	280-46001-03	CHOKE CONTROL LINK	1	
180	226-43101-01	LINK PIVOT	1	
190	263-43901-13	CHOKE KNOB	1	
195	263-46010-03	CLAMP(CHOKE KNOB)	1	
197	015-20500-10	TAPPING SCREW	1	M5X10DX10L
310	263-43311-A3	SPEED CONTROL LEVER	1	
340	227-43501-13	STOP PLATE	1	
350	263-45002-03	SPRING WASHER	1	
355	021-70600-30	FRICTION WASHER	2	6.5DX33DX0.6T FIBER
360	011-50500-20	BOLT	2	M5X0.8X35L
370	002-27050-00	NUT	2	
381	002-35060-00	SELF LOCK NUT	1	
395	261-43901-03	CLAMP	2	
396	001-17052-00	BOLT & WASHER AY	2	
435	263-45021-A2	SPEED CONTROL BRACKET	1	
465	X84-14320-00	RUBBER FOAM	1	
485	011-00600-20	FLANGE BOLT	2	M6X1.0X14DX12L


500 Cooling & Starting

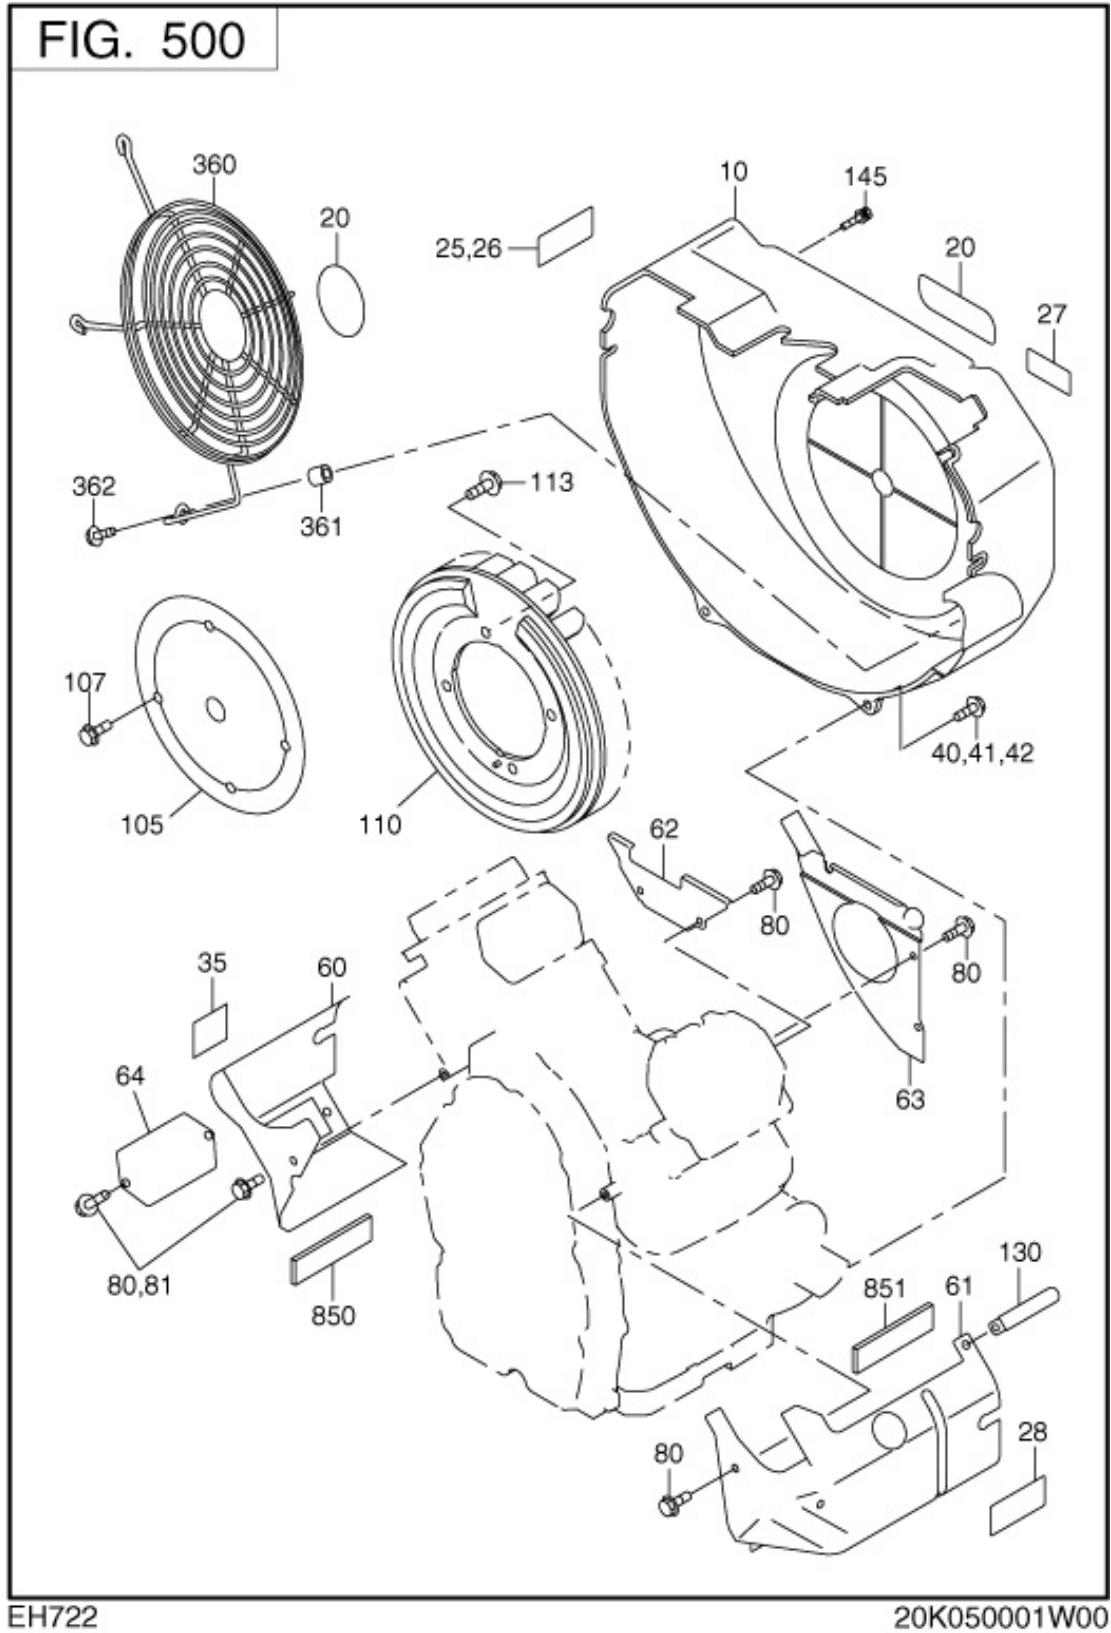

500 Cooling & Starting

Ref	Part Number.	Description	Qty	Remark
10	20K-51206-J2	BLOWER HOUSING UN	1	
25	073-20057-60	LABEL(WARNING)	1	
40	X11-00600-30	FLANGE BOLT	8	M6X1.0X14DX14L
60	263-52612-A1	CYLINDER BAFFLE 1 CP	1	
61	280-52701-C1	CYLINDER BAFFLE 2 CP	1	
62	280-52801-A2	CYLINDER BAFFLE 3 UN	1	
63	263-52912-A2	CYLINDER BAFFLE 4 UN	1	
80	011-00600-20	FLANGE BOLT	6	M6X1.0X14DX12L
81	X11-00600-20	FLANGE BOLT	1	M6X1.0X14DX12L
110	263-54101-H2	COOLING BLOWER UN	1	
113	001-14061-60	BOLT AND WASHER AY	4	M6X1.0X16L
145	011-00600-10	FLANGE BOLT	2	M6X1.0X14DX8L

600 Fuel & Lubricant

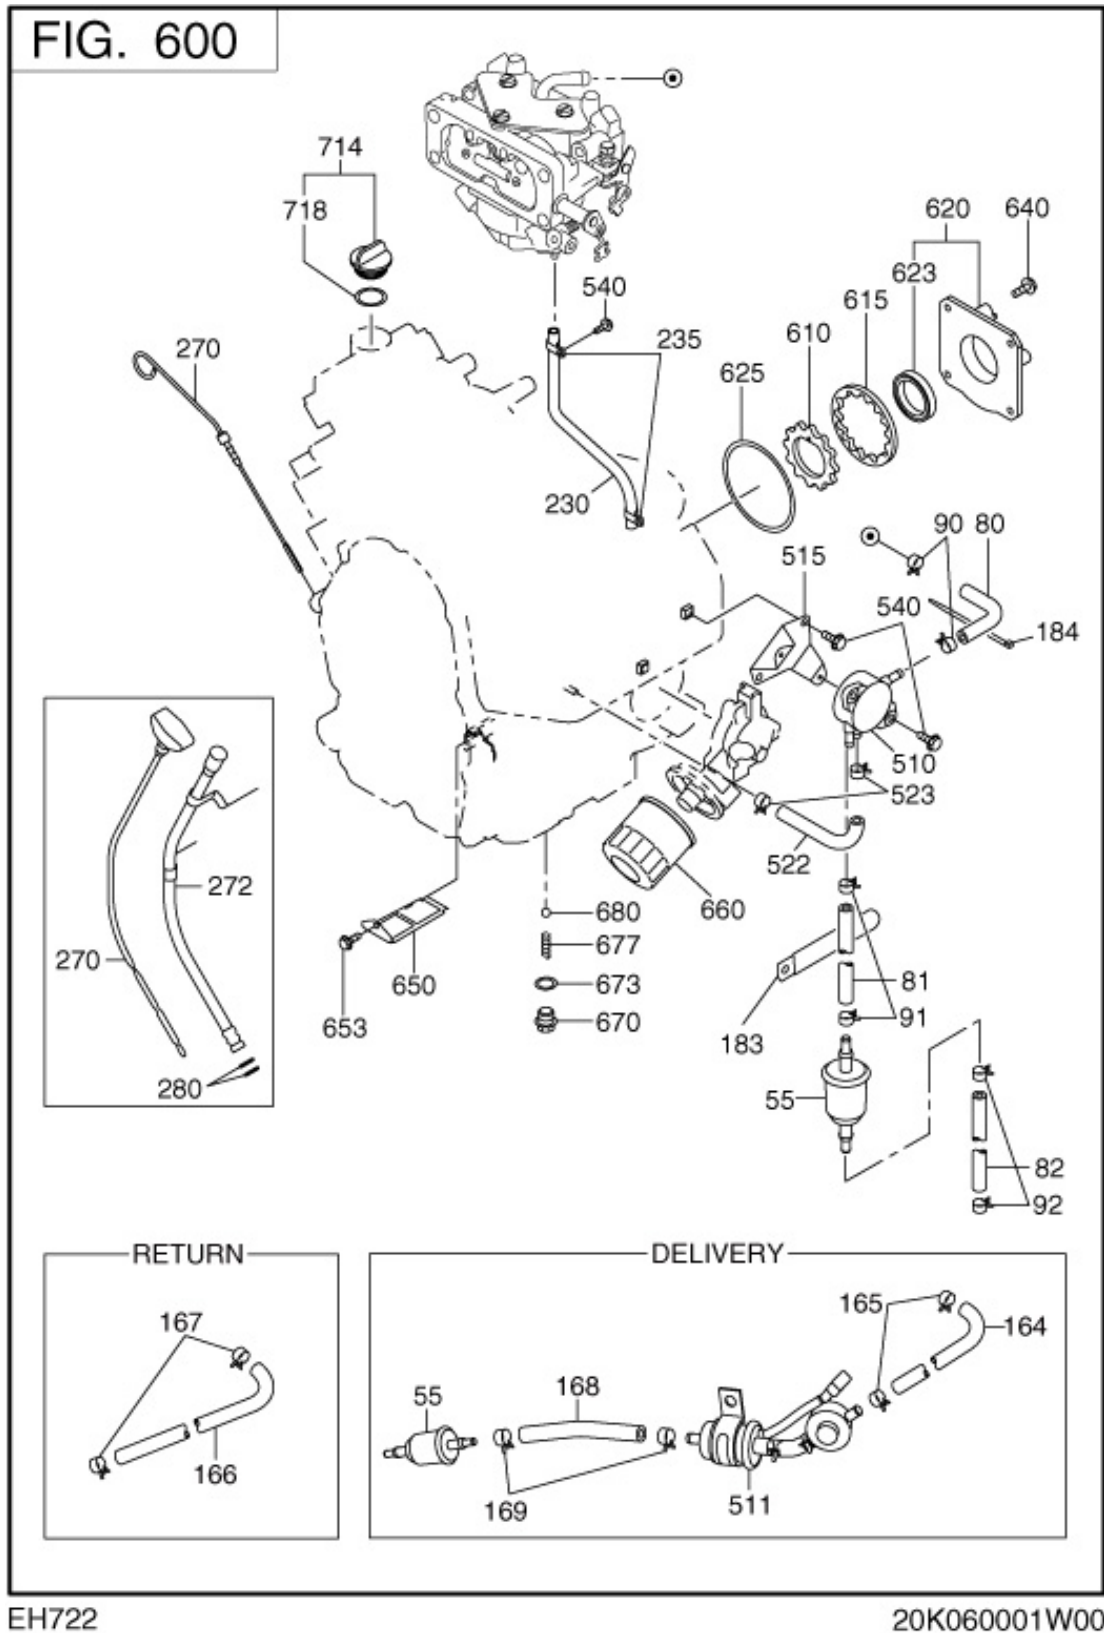


600 Fuel & Lubricant

Ref	Part Number.	Description	Qty	Remark
55	263-65012-A3	FILTER,FUEL	1	
80	X85-10615-42	RUBBER PIPE	1	
81	X85-10613-81	RUBBER PIPE	1	
90	263-68501-03	HOSE CLAMP	2	
91	263-68501-03	HOSE CLAMP	2	
183	056-61000-21	CLAMP	2	
230	085-10301-10	RUBBER PIPE	1	
235	206-75501-01	CLAMP CP	1	
270	263-63604-11	GAUGE CP,OIL LEVEL	1	
272	263-63622-01	GUIDE CP	1	
280	024-01000-10	O-RING	2	
510	267-62201-10	FUEL PUMP AY	1	
515	263-65002-A3	BRACKET(FUEL PUMP)	1	
522	X85-10616-30	RUBBER PIPE	1	
523	263-68501-03	HOSE CLAMP	2	
540	011-00600-20	FLANGE BOLT	9	M6X1.0X14DX12L
610	263-63904-H3	INNER ROTOR	1	
615	263-63905-H3	OUTER ROTOR	1	
620	263-64002-01	OIL PUMP COVER CP	1	
623	044-03501-70	OIL SEAL	1	
625	X24-08900-30	O-RING	1	
640	011-00600-30	FLANGE BOLT	4	M6X1.0X14DX14L
650	263-64302-02	OIL PUMP FILTER UN	1	
653	263-65011-A3	FLANGE BOLT	1	
660	248-65801-10	OIL FILTER AY	1	
670	263-65001-13	PLUG(OIL RELIEF)	1	
673	003-70140-00	GASKET,ALUMINUM	1	
677	263-66001-03	SPRING(RELIEF VALVE)	1	
680	006-90308-00	STEEL BALL	1	
714	280-63602-A1	OIL FILLER CAP CP	1	
718	263-64414-A3	O-RING	1	

640 Carburetor

FIG. 640

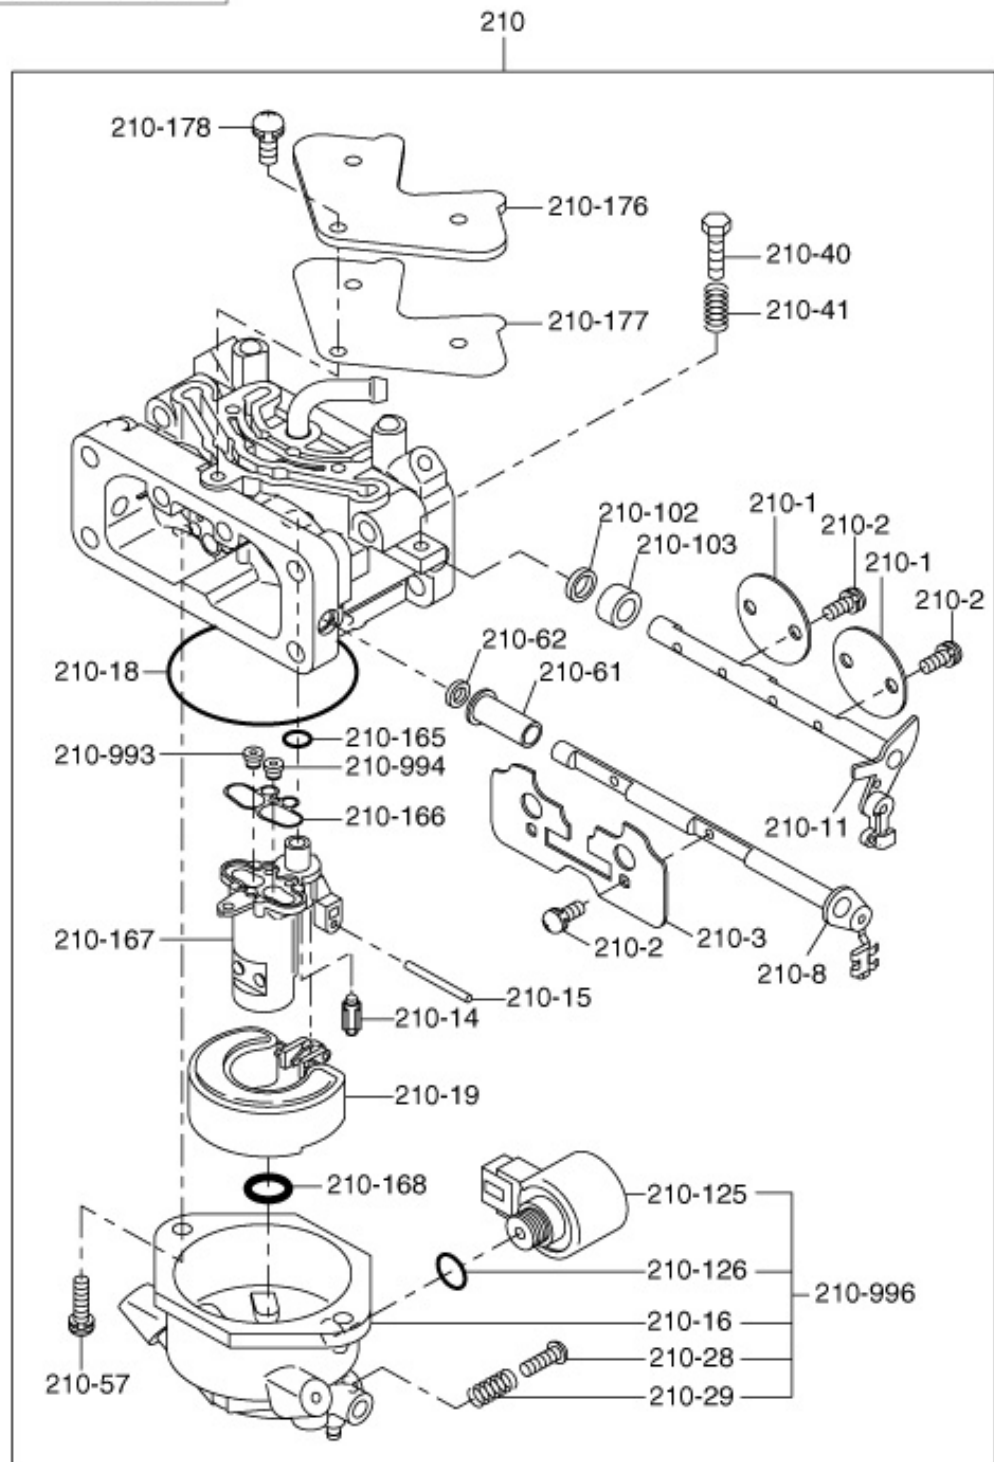

EH722


20K064000W00

640 Carburetor

Ref	Part Number.	Description	Qty	Remark
210	20K-62301-30	CARBURETOR AY	1	
1	20K-62536-08	VALVE,THROTTLE	2	
2	258-62555-08	SCREW SET(VALVE)	6	
3	20K-62525-08	VALVE,CHOKE	1	
8	20K-62520-08	SHAFT ASSY,CHOKE	1	
11	20K-62530-08	SHAFT COMPL,THROTTLE	1	
14	20K-62500-08	VALVE,FLOAT	1	
15	20K-62515-08	PIN,FLOAT	1	
16	20K-62556-08	CHAMBER ASSY,FLOAT	1	
18	20K-62540-08	GASKET,FLOAT CHAMBER	1	
19	263-62505-08	FLOAT	1	
28	215-62353-08	SCREW,DRAIN	1	
29	215-62446-08	SPRING,DRAIN	1	
40	20K-62553-08	SCREW,THROTTLE ADJUS	1	
41	258-62445-08	SPRING(ADJUST SCREW)	1	
57	20B-62453-08	SCREW	2	
61	20K-62560-08	COLLAR,CHOKE	1	
62	263-62574-08	SEAL,TH'SHAFT	1	
102	20K-62550-08	SEAL,THROTTLE	1	
103	20K-62551-08	COLLAR,THROTTLE	1	
125	20K-62557-08	VALVE COMPL,SOLENOID	1	
126	20B-62556-08	GASKET	1	
165	20B-62541-08	O RING	1	
166	20K-62541-08	GASKET,SPACER	1	
167	20K-62554-08	SPACER,CARB	1	
168	20K-62542-08	O-RING	1	
176	20K-62559-08	COVER,SLOW PASSAGE	1	
177	20K-62558-08	GASKET,SLOW PASSAGE	1	
178	107-62462-08	SCREW	3	
993	20K-62400-08	JET COML,MAIN(L)	1	
994	20K-62401-08	JET COML,MAIN(R)	1	
996	20K-62555-08	CHAMBER COMPL,FLOAT	1	

680 Oil Cooler

FIG. 685

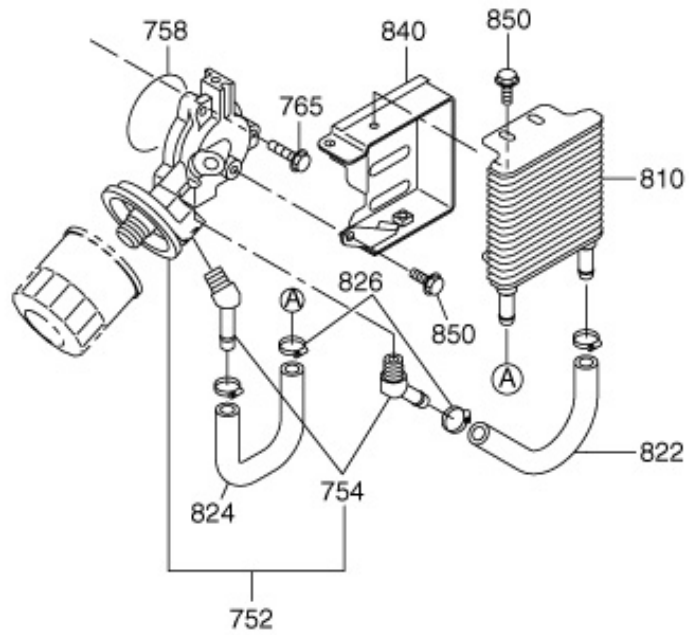

EH722


20K068500W00

680 Oil Cooler

Ref	Part Number.	Description	Qty	Remark
752	280-65011-03	ADAPTER CP	1	
754	280-65025-A3	ELBOW ADAPTER 1	2	
758	280-65050-A3	O RING	1	
765	011-00601-01	FLANGE BOLT	3	M6X1.0X13DX28L
810	280-65001-C1	OIL COOLER CP	1	
822	280-65037-03	HOSE 1(OIL COOLER)	1	
824	280-65038-03	HOSE 2(OIL COOLER)	1	
826	X56-10900-30	HOSE CLAMP	4	
840	280-65030-01	BRACKET CP(OIL COOL)	1	

700 Electric Device

FIG. 700

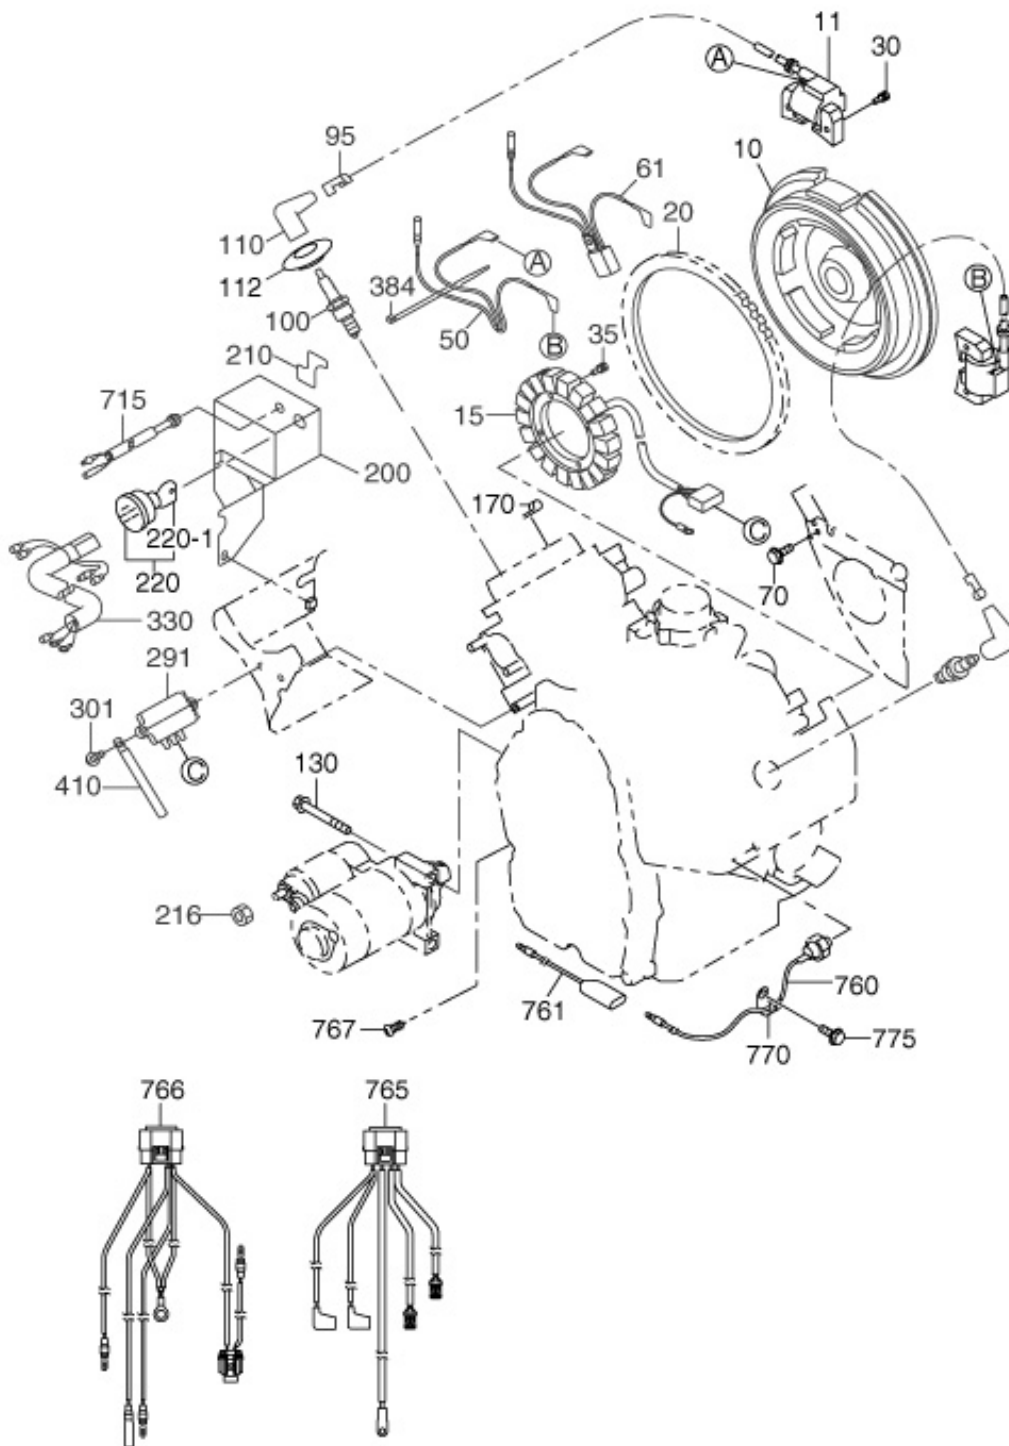


EH722

20K070000W00

700 Electric Device

Ref	Part Number.	Description	Qty	Remark
10	263-77206-01	FLYWHEEL CP	1	
11	263-78203-01	IGNITION COIL CP	2	MARK AK
15	263-79411-A1	CHARGE COIL CP	1	
20	263-71002-H3	RING GEAR	1	
30	001-14062-50	BOLT AND WASHER AY	4	M6X1.0X25L
35	001-16052-00	BOLT AND WASHER AY	4	
50	263-73129-A1	WIRE CP(IG.COIL)	1	BLACK
95	X65-91000-10	PLUG TERMINAL	2	
100	065-01402-80	SPARK PLUG	2	NGK BPR4EY
110	X65-51000-10	SPARK PLUG CAP	2	
112	279-55201-03	GROMMET(PLUG CAP)	1	
130	X11-00801-00	FLANGE BOLT	2	M8X1.25X17DX65L
210	263-95001-03	LABEL,CONTROL BOX	2	M8X1.25X17DX65L
216	002-38080-00	FLANGE NUT	1	M8X1.25X17DX7.5H
200	263-75121-01	CONTROL BOX CP	1	
291	263-71903-A1	REGULATOR CP	1	
301	X11-00601-40	FLANGE BOLT	2	M6X1.0X14DX18L
330	263-73130-A1	WIRING HARNESS	1	
220	X66-00004-40	KEY SWITCH	1	
384	056-30000-10	WIRE BAND	3	
410	056-60002-50	CLAMP	1	
760	263-73102-11	WIRE AY(OIL PRE.SW.)	1	GRAY
761	280-73102-01	WIRE CP(FUEL CUT)	1	
770	206-75501-01	CLAMP CP	2	
715	263-77301-10	LED LAMP AY	1	
775	X11-00600-10	FLANGE BOLT	1	M6X1.0X14DX8L

731 Electric Device

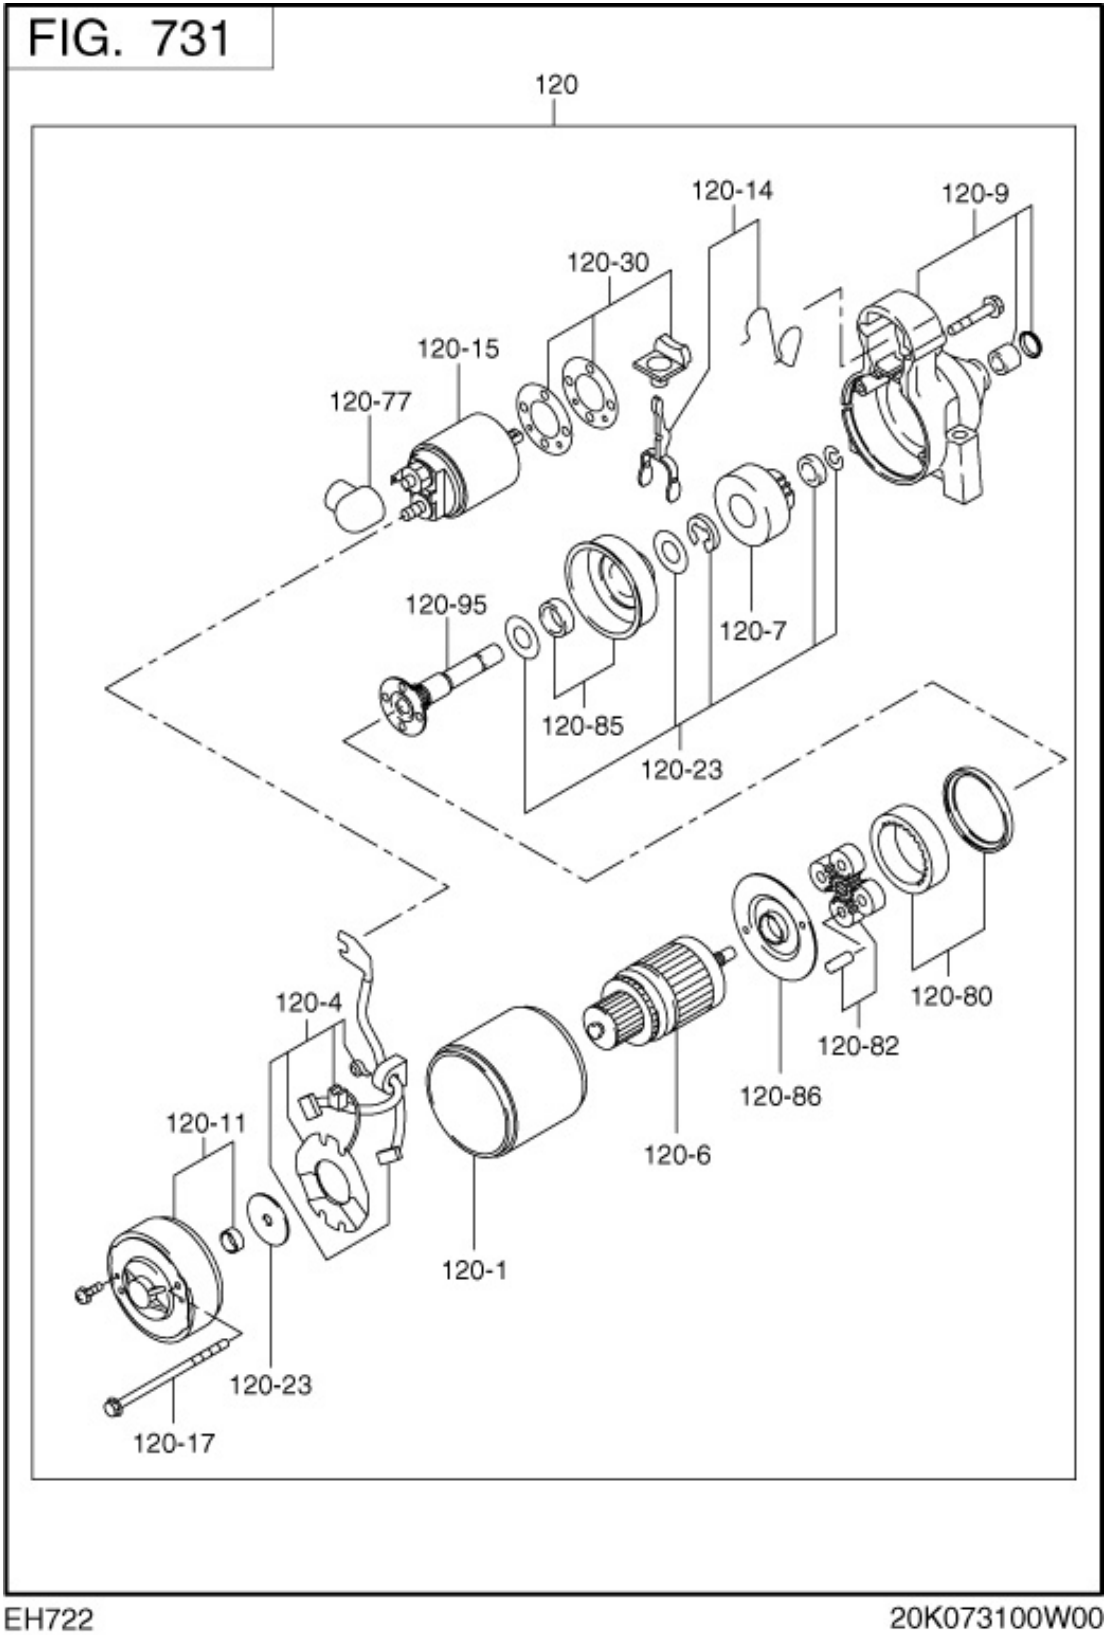

731 Electric Device

Ref	Part Number.	Description	Qty	Remark
120	263-70504-J0	STARTING MOTOR AY	1	
1	263-70561-08	YOKE AY	1	
4	245-70503-08	BRUSH HOLDER AY	1	
6	263-70512-08	ARMATURE AY	1	
7	263-70522-08	PINION AY	1	
9	263-70503-08	GEAR CASE AY	1	
11	263-70507-08	REAR COVER AY	1	
14	245-70518-08	SHIFT LEVER SET	1	
15	263-70515-08	MAGNETIC SWITCH AY	1	
17	207-70524-08	THROUGH BOLT	2	
23	245-70516-08	WASHER STOPPER SET	1	
30	245-70520-08	DUST COVER KIT	1	
77	207-70526-08	RUBBER CAP	1	
80	263-70596-08	INTERNAL GEAR	1	
82	263-70576-08	PLANET GEAR	3	
85	245-70509-08	CENTER BRACKET(P)	1	
86	263-70591-08	CENTER BRACKET (A)	1	
95	263-70571-08	PINION SHAFT	1	

Part Number Index

The Part Number Index is a numeric index of all part numbers included in this manual. The index shows what page(s) the part is used on.

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
001-05084-00	9	20K-62525-08	21	263-45002-03	15	280-46001-03	15
001-14061-60	17	20K-62530-08	21	263-45004-11	5	280-46011-03	15
001-14062-50	25	20K-62536-08	21	263-45021-A2	15	280-52701-C1	17
001-14063-00	15	20K-62540-08	21	263-46010-03	15	280-52801-A2	17
001-16052-00	25	20K-62541-08	21	263-46214-03	5	280-63602-A1	19
001-17052-00	15	20K-62542-08	21	263-46215-A3	5	280-65001-C1	23
002-27050-00	15	20K-62550-08	21	263-52612-A1	17	280-65011-03	23
002-35060-00	15	20K-62551-08	21	263-52912-A2	17	280-65025-A3	23
002-38060-00	11	20K-62553-08	21	263-54101-H2	17	280-65030-01	23
002-38080-00	11, 25	20K-62554-08	21	263-55601-03	5	280-65037-03	23
003-10080-00	15	20K-62555-08	21	263-62505-08	21	280-65038-03	23
003-10180-00	9	20K-62556-08	21	263-62574-08	21	280-65050-A3	23
003-70140-00	19	20K-62557-08	21	263-63604-11	19	280-66202-03	11
005-11060-01	15	20K-62558-08	21	263-63622-01	19	280-73102-01	25
005-32054-01	9	20K-62559-08	21	263-63904-H3	19	280-99001-17	6
006-90308-00	19	20K-62560-08	21	263-63905-H3	19	X11-00600-10	25
010-50601-91	11	20K-91701-03	11	263-64002-01	19	X11-00600-20	11, 17
010-50802-90	5	215-62353-08	21	263-64302-02	19	X11-00600-30	17
011-00600-10	17	215-62446-08	21	263-64414-A3	19	X11-00601-40	25
011-00600-20	15, 17, 19	226-43101-01	15	263-65001-13	19	X11-00801-00	25
011-00600-30	6, 19	227-43501-13	15	263-65002-A3	19	X23-00801-50	15
011-00601-01	5, 23	235-15421-03	5	263-65011-A3	19	X24-08900-30	19
011-00802-20	5	245-70503-08	27	263-65012-A3	19	X40-11400-30	5
011-01000-70	5	245-70509-08	27	263-66001-03	19	X42-30600-30	11
011-50500-20	15	245-70516-08	27	263-68501-03	19	X56-10900-30	23
015-20500-10	15	245-70518-08	27	263-70503-08	27	X60-04500-20	5
017-00601-10	11	245-70520-08	27	263-70504-J0	27	X65-51000-10	25
018-01800-10	9	246-33611-03	11	263-70507-08	27	X65-91000-10	25
018-60600-20	15	246-33711-13	11	263-70512-08	27	X66-00004-40	25
021-11400-20	5	246-35501-03	11	263-70515-08	27	X84-14320-00	15
021-70600-30	15	247-23501-17	9	263-70522-08	27	X85-10613-81	19
024-01000-10	19	248-65801-10	19	263-70561-08	27	X85-10615-42	19
031-00600-20	5	258-62445-08	21	263-70571-08	27	X85-10616-30	19
031-00801-10	5	258-62555-08	21	263-70576-08	27		
044-00800-10	5	261-43901-03	15	263-70591-08	27		
044-03501-70	19	261-45201-13	15	263-70596-08	27		
044-04200-30	5	263-11102-71	5	263-71002-H3	25		
056-12000-20	11	263-14211-03	5	263-71903-A1	25		
056-30000-10	25	263-14301-03	6	263-73102-11	25		
056-51000-50	5	263-15503-03	5	263-73129-A1	25		
056-52100-20	9	263-15505-03	5	263-73130-A1	25		
056-60002-50	25	263-15805-03	5	263-75121-01	25		
056-61000-21	19	263-16002-A3	5	263-76002-A1	5		
065-01402-80	25	263-16006-03	6	263-77206-01	25		
073-20057-60	17	263-16101-A3	5	263-77301-10	25		
085-10301-10	19	263-21211-11	9	263-78203-01	25		
107-62462-08	21	263-22601-30	9	263-79411-A1	25		
132-11AA1-10	5	263-23301-33	9	263-95001-03	25		
159-65401-03	5	263-25012-A3	9	267-35701-03	11		
206-75501-01	19, 25	263-25013-A3	9	267-36102-03	11		
207-70524-08	27	263-25014-A3	9	267-62201-10	19		
207-70526-08	27	263-32610-A1	13	270-35201-01	11		
20B-62453-08	21	263-32630-03	13	277-41902-01	5		
20B-62541-08	21	263-32640-01	13	279-55201-03	25		
20B-62556-08	21	263-33301-A3	11	280-10101-21	5		
20K-13001-11	5	263-33401-H3	11	280-14401-A1	6		
20K-13101-11	5	263-33502-H3	11	280-15001-23	5		
20K-32601-A0	13	263-35322-A1	11	280-15101-23	5		
20K-42701-03	15	263-35341-03	5	280-18001-03	11		
20K-42801-03	15	263-35503-A3	11	280-19001-03	6		
20K-51206-J2	17	263-35801-03	11	280-23411-H3	9		
20K-62301-30	21	263-37002-A3	11	280-31801-03	11		
20K-62400-08	21	263-42201-A3	15	280-32626-A1	13		
20K-62401-08	21	263-42301-B3	15	280-33005-H1	11		
20K-62500-08	21	263-42501-13	15	280-35501-03	11		
20K-62515-08	21	263-43311-A3	15	280-35622-03	11		
20K-62520-08	21	263-43901-13	15	280-38001-03	11		

Part Description Index

The Part Description Index is an alphabetical index of all part descriptions included in this manual. The index shows what page(s) the part is used on.

A

ADAPTER CP.....23
AIR CLEANER AY.....13
ARMATURE AY.....27

B

BALL BEARING.....5
BLIND PLUG CP.....5
BLOWER HOUSING UN.....17
BOLT.....15
BOLT & WASHER AY.....15
BOLT AND WASHER AY.....15, 17, 25
BOLT(PIVOT).....11
BRACKET CP(OIL COOL).....23
BRACKET(FUEL PUMP).....19
BREATHER COVER.....6
BREATHER PIPE.....11
BREATHER PLATE CP.....6
BRUSH HOLDER AY.....27

C

CAM SHAFT.....11
CAP(VINYL).....11
CARBURETOR AY.....21
CENTER BRACKET (A).....27
CENTER BRACKET(P).....27
CHAMBER ASSY,FLOAT.....21
CHAMBER COMPL,FLOAT.....21
CHARGE COIL CP.....25
CHOKE CONTROL LINK.....15
CHOKE CONTROL ROD.....15
CHOKE KNOB.....15
CLAMP.....15, 19, 25
CLAMP CP.....19, 25
CLAMP(CHOKE KNOB).....15
CLEANER ADAPTER.....11
CLEANER BASE CP.....13
CLEANER COVER.....13
CLEANER ELEMENT CP.....13
CLIP.....5, 9
COLLAR,CHOKE.....21
COLLAR,THROTTLE.....21
COLLET-VALVE.....11
CONNECTING ROD AY.....9
CONTROL BOX CP.....25
COOLING BLOWER UN.....17
COVER,SLOW PASSAGE.....21
CRANKCASE CP.....5
CRANKSHAFT CP.....9
CYLINDER BAFFLE 1 CP.....17
CYLINDER BAFFLE 2 CP.....17
CYLINDER BAFFLE 3 UN.....17
CYLINDER BAFFLE 4 UN.....17
CYLINDER HEAD 1 CP.....5
CYLINDER HEAD 2 CP.....5

D

DOWEL PIN.....5
DUST COVER KIT.....27

E

ELBOW ADAPTER 1.....23
EXHAUST VALVE.....11

F

FILTER,FUEL.....19
FLANGE BOLT.....5-6, 9, 11, 15, 17, 19, 23, 25
FLANGE NUT.....9, 11, 25
FLOAT.....21
FLYWHEEL CP.....25
FRICTION WASHER.....15
FUEL PUMP AY.....19

G

GASKET.....5, 21
GASKET (M.B COVER).....5
GASKET 1 (CYL HEAD).....5
GASKET 2 (CYL HEAD).....5
GASKET CP (MUFFLER).....11
GASKET SET.....6
GASKET(ADAPTER).....11
GASKET(BREATHERPLATE).....6
GASKET(CARBURETOR).....11
GASKET(CLEANER).....11
GASKET(IN MANIFOLD).....11
GASKET(ROCKER COVER).....5
GASKET,ALUMINUM.....19
GASKET,FLOAT CHAMBER.....21
GASKET,SLOW PASSAGE.....21
GASKET,SPACER.....21
GAUGE C/OIL LEVEL.....19
GEAR CASE AY.....27
GOVERNOR GEAR CP.....5
GOVERNOR LEVER.....15
GOVERNOR ROD.....15
GOVERNOR ROD SPRING.....15
GOVERNOR SHAFT.....15
GOVERNOR SLEEVE.....5
GOVERNOR SPRING.....15
GROMMET(PLUG CAP).....25
GUIDE CP.....19
GUIDE PLATE.....11

H

HOOK.....6
HOSE 1(OIL COOLER).....23
HOSE 2(OIL COOLER).....23
HOSE CLAMP.....11, 19, 23

I

IGNITION COIL CP.....25
INNER ROTOR.....19

INTAKE MANIFOLD CP.....11
INTAKE VALVE.....11
INTERNAL GEAR.....27

J

JET COML,MAIN(L).....21
JET COML,MAIN(R).....21

K

KEY SWITCH.....25

L

LABEL(TRADE MARK).....11
LABEL(WARNING).....17
LABEL,CONTROL BOX.....25
LED LAMP AY.....25
LINK PIVOT.....15

M

MAGNETIC SWITCH AY.....27
MAIN BEARING.....5
MAINBEARING COVER CP.....5

N

NUT.....11, 15

O

O RING.....21, 23
O-RING.....19, 21
OIL COOLER CP.....23
OIL FILLER CAP CP.....19
OIL FILTER AY.....19
OIL PRESSURE SWITCH.....5
OIL PUMP COVER CP.....19
OIL PUMP FILTER UN.....19
OIL SEAL.....5, 19
OUTER ROTOR.....19

P

PIN,FLOAT.....21
PINION AY.....27
PINION SHAFT.....27
PIPE.....5
PIPE(PULSE).....5
PISTON.....9
PISTON PIN.....9
PISTON RING SET.....9
PIVOT.....11
PLANET GEAR.....27
PLUG.....5
PLUG TERMINAL.....25
PLUG(OIL RELIEF).....19
PUSH ROD CP.....11

R

REAR COVER AY.....27

Part Description Index (continued)

REGULATOR CP.....25
 RETAINER PLATE.....5
 RETURN SPRING.....15
 RING GEAR.....25
 ROCKER ARM.....11
 ROCKER COVER.....5
 RUBBER CAP.....27
 RUBBER FOAM.....15
 RUBBER PIPE.....19

WOODRUFF KEY.....9

Y

YOKE AY.....27

S

SCREW.....21
 SCREW SET (VALVE).....21
 SCREW, DRAIN.....21
 SCREW, THROTTLE ADJUS.....21
 SEAL, TH' SHAFT.....21
 SEAL, THROTTLE.....21
 SEAL-EXH VALVE.....5
 SELF LOCK NUT.....15
 SHAFT ASSY, CHOKE.....21
 SHAFT COMPL, THROTTLE.....21
 SHIFT LEVER SET.....27
 SNAP PIN.....15
 SPACER.....9, 15
 SPACER, CARB.....21
 SPARK PLUG.....25
 SPARK PLUG CAP.....25
 SPEED CONTROL BRACKET.....15
 SPEED CONTROL LEVER.....15
 SPRING RETAINER.....11
 SPRING WASHER.....15
 SPRING (ADJUST SCREW).....21
 SPRING (RELIEF VALVE).....19
 SPRING, DRAIN.....21
 STARTING MOTOR AY.....27
 STEEL BALL.....19
 STOP PLATE.....15
 STUD.....5, 11

T

TAPPET.....11
 TAPPING SCREW.....15
 THROUGH BOLT.....27
 THRUST BEARING.....5

V

VALVE COMPL, SOLENOID.....21
 VALVE GUIDE.....5
 VALVE SPRING.....11
 VALVE, CHOKE.....21
 VALVE, FLOAT.....21
 VALVE, THROTTLE.....21

W

WASHER.....5, 9, 15
 WASHER STOPPER SET.....27
 WING NUT.....13
 WIRE AY (OIL PRE. SW.).....25
 WIRE BAND.....25
 WIRE CP (FUEL CUT).....25
 WIRE CP (IG. COIL).....25
 WIRING HARNESS.....25

This Page Intentionally Left Blank

PRINTED IN THE USA

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047

Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com