

PARTS MANUAL

MODEL
EX40
Engine

EX400D51040

08/16



SUBARU

Industrial Power Products

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047 - Phone 847-540-7300 - Fax 847-438-5012


e-mail: sales@subarupower.com - www.subarupower.com

© 2015 Subaru Industrial Power Products

Group Index

Group Name	Page
100 Crankcase.....	4
200 Crankshaft.....	6
300 Intake & Exhaust.....	8
315 Air Cleaner.....	10
330 Muffler.....	12
400 Governor.....	14
500 Cooling.....	16
520 Recoil Starter.....	18
600 Fuel Tank.....	20
640 Carburetor.....	22
700 Ignition.....	24
770 Oil Sensor.....	26
900 Accessories.....	28
 Part Number Index.....	 30
Part Description Index.....	31


100 Crankcase

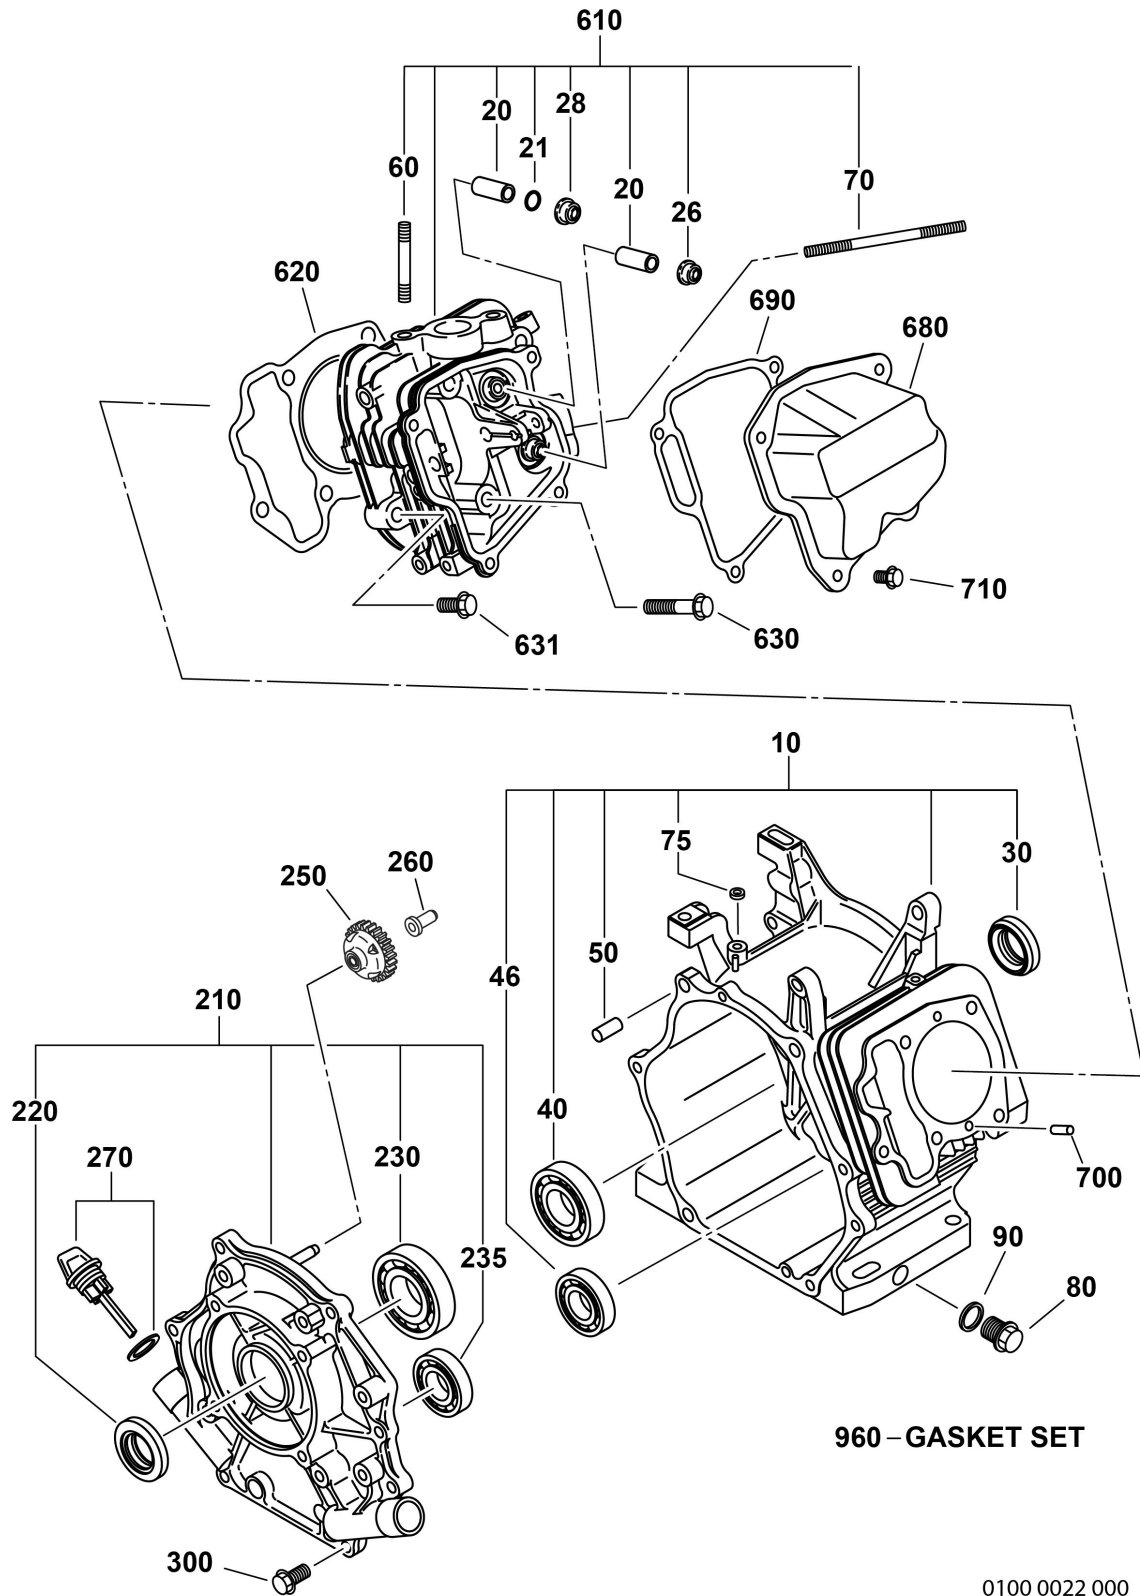

100 Crankcase

Ref	Part Number.	Description	Qty	Remark
10	20B-10102-51	CRANKCASE CP	1	
20	20B-14202-03	VALVE GUIDE	2	
21	056-51000-50	CLIP	1	
26	132-11AA1-10	SEAL-EXH VALVE	1	
28	263-35341-03	RETAINER PLATE	1	
30	044-03500-91	OIL SEAL	1	
40	X60-03502-40	BALL BEARING	1	
46	X60-01500-11	BALL BEARING	1	
50	277-15011-03	PIPE KNOCK	2	
60	010-50802-90	STUD	2	
70	010-50604-40	STUD	2	
75	044-00800-10	OIL SEAL	1	
80	040-11400-30	PLUG	2	
90	021-11400-20	GASKET	2	
210	20B-11001-21	MAINBEARING COVER CP	1	
220	044-03500-91	OIL SEAL	1	
230	X60-03502-40	BALL BEARING	1	
235	X60-01500-11	BALL BEARING	1	
250	20B-45003-11	GOVERNOR GEAR CP	1	
260	277-41902-01	GOVERNOR SLEEVE	1	
270	279-63601-30	OIL GAUGE ASSY	2	
300	011-00803-40	FLANGE BOLT (M8X38)	8	
610	20B-13002-00	CYLINDER HEAD AY	1	
620	20B-15001-33	HEAD GASKET	1	
630	011-01000-40	FLANGE BOLT (M10X75)	4	
631	001-04083-50	FLANGE BOLT (M8X35)	2	
680	20B-15501-01	ROCKER COVER CP	1	
690	20B-16001-03	GASKET(ROCKER COVER)	1	
700	031-00600-10	DOWEL PIN	2	
710	011-00600-20	FLANGE BOLT (M6X12)	4	
960	20B-99001-37	GASKET SET	1	

200 Crankshaft

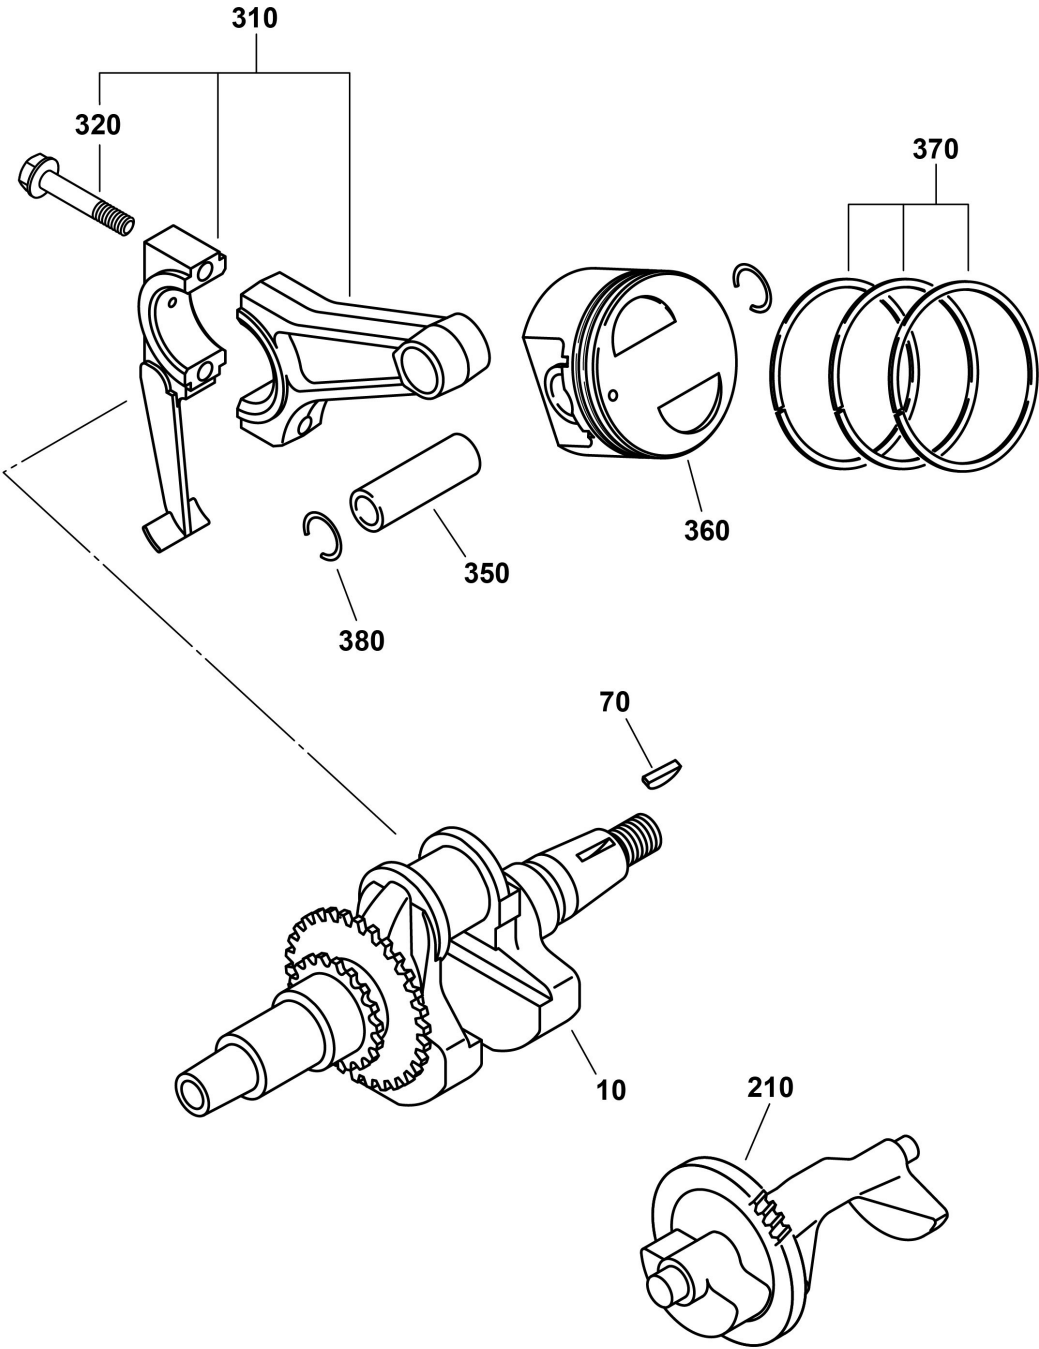


0200 0023 000

200 Crankshaft

Ref	Part Number.	Description	Qty	Remark
10	20B-21001-31	CRANKSHAFT CP	1	
70	005-32054-01	WOODRUFF KEY	1	
210	22B-24101-03	BALANCER SHAFT	1	
310	20B-22503-00	CONNECTING ROD AY	1	
320	001-05084-00	FLANGE BOLT (M8X40)	2	
350	263-23301-33	PISTON PIN	1	
360	22B-23401-J3	PISTON	1	STANDARD
360	22B-23403-J3	PISTON	1	0.25 OVERSIZED
360	22B-23404-J3	PISTON	1	0.50 OVERSIZED
370	22B-23501-07	PISTON RING SET	1	STANDARD
370	22B-23502-07	PISTON RING SET	1	0.25 OVERSIZED
370	22B-23503-07	PISTON RING SET	1	0.50 OVERSIZED
380	056-52100-20	CLIP	2	

300 Intake & Exhaust

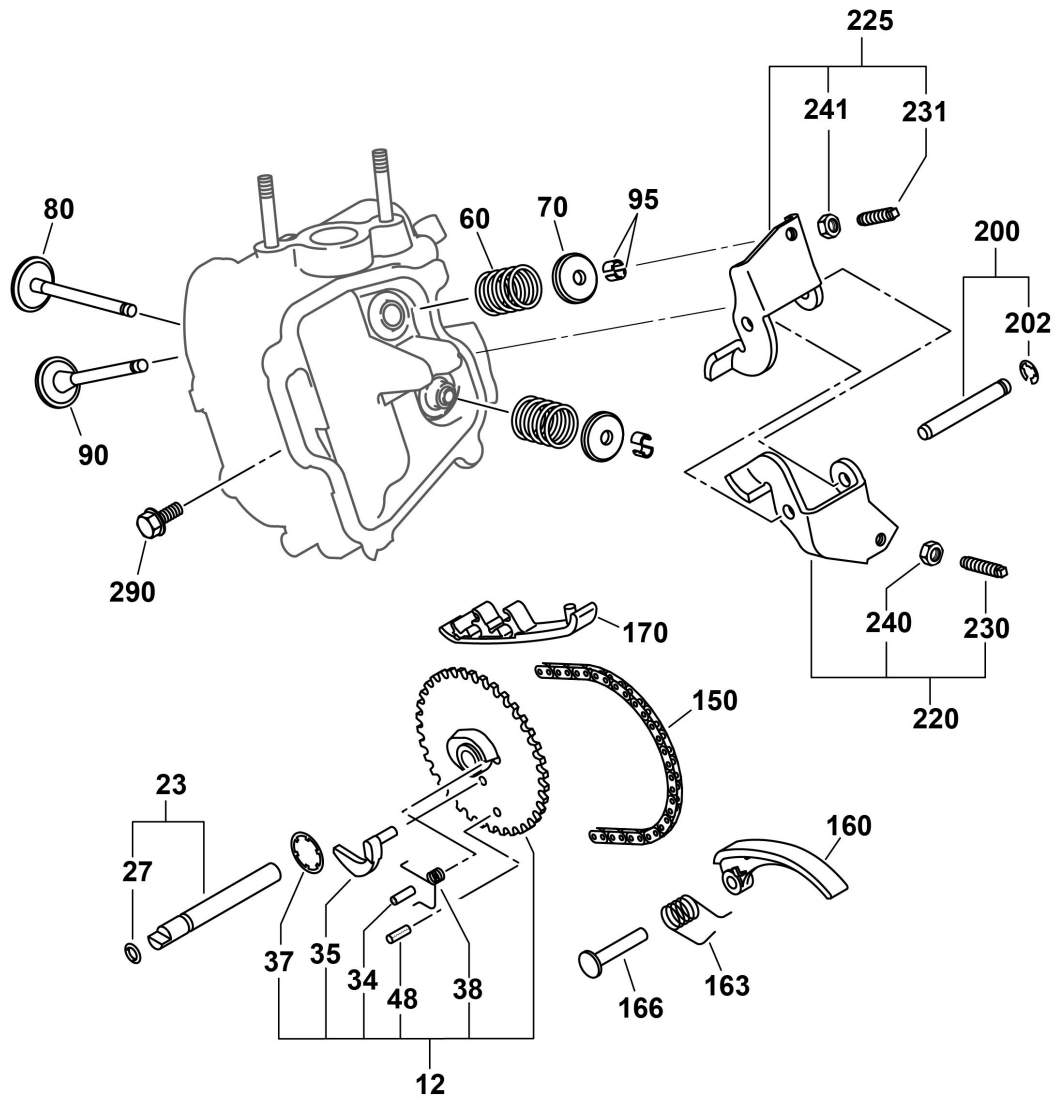


0300 0026 000

300 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
12	20B-31601-20	CAMSHAFT ASSY	1	
23	20B-35101-21	CAMSHAFT PIN CP	1	
27	024-00700-21	O-RING	1	
34	005-19041-00	SPRING PIN	1	
35	277-36401-13	RELEASE LEVER	1	
37	20B-36501-03	CLIP	1	
38	277-38702-03	RETURN SPRING	1	
48	031-80500-20	ROLL PIN	1	
60	246-33611-03	VALVE SPRING	2	
70	246-33711-13	SPRING RETAINER	2	
80	20B-33402-H3	INTAKE VALVE	1	
90	20B-33502-H3	EXHAUST VALVE	1	
95	246-35501-03	VALVE COLLET	4	
150	20B-35601-H1	TIMING CHAIN CP (112 LINK)	1	
160	20A-36911-03	TENTIONER	1	
163	277-37101-03	TENTIONER SPRING	1	
166	277-36902-03	TENTIONER PIN	1	
170	20A-36913-03	CHAIN GUIDE	1	
200	20B-35001-01	ROCKER PIN CP	1	
202	003-13060-00	CLIP	1	
220	20B-36101-00	INTAKE ROCKER ARM ASSY	1	
225	20B-36102-10	EXHAUST ROCKER ARM ASSY	1	
230	014-90500-20	ADJUST SCREW	1	
231	014-90500-20	ADJUST SCREW	1	
240	017-00500-30	NUT (M5)	1	
241	017-00500-30	NUT (M5)	1	
290	011-00600-10	FLANGE BOLT (M6X8)	1	

315 Air Cleaner

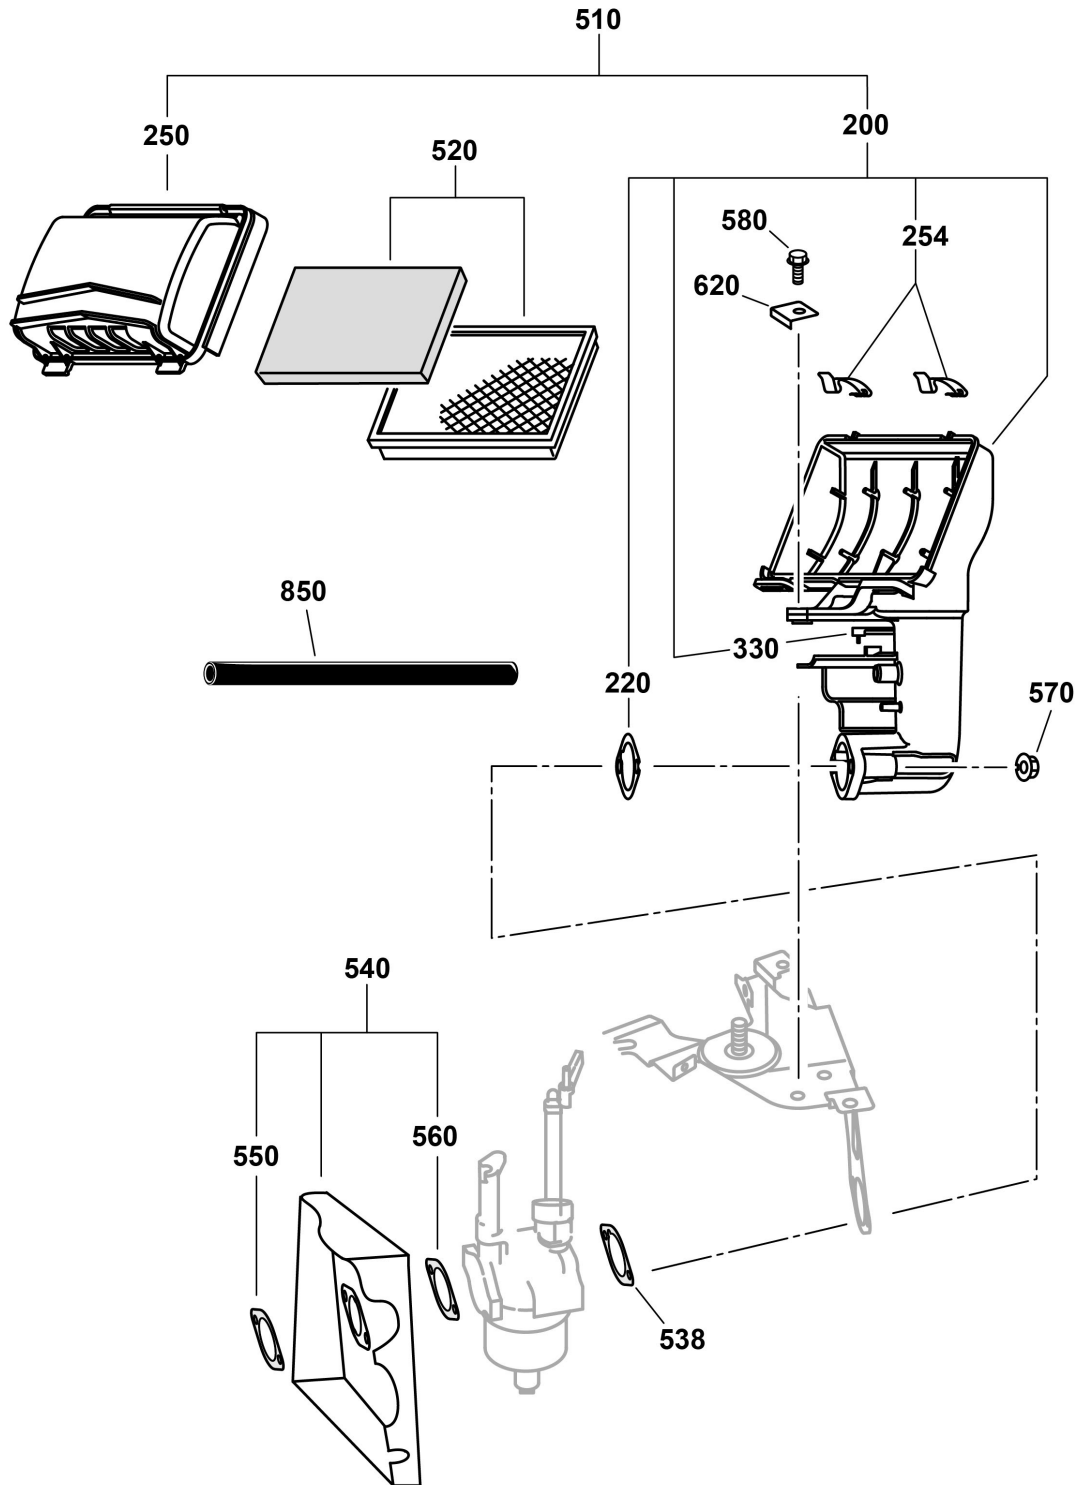


0315 0019 000

315 Air Cleaner

Ref	Part Number.	Description	Qty	Remark
200	20B-32636-H8	BODY CP	1	
220	20B-32720-H8	INTAKE GASKET	1	
250	20B-32641-J8	COVER	1	
254	20B-32680-H8	CLIP 1	2	
330	20B-43801-H1	CHOKE LEVER CP	1	
510	20B-32651-J0	AIR CLEANER ASSY	1	
520	20B-32610-J7	ELEMENT ASSY	1	
538	20B-35903-13	GASKET 3	1	
540	20B-32901-K1	INSULATOR CP	1	
550	20B-35902-H3	GASKET 2	1	
560	20B-35901-H3	GASKET 1	1	
570	002-38060-00	FLANGE NUT (M6)	2	
580	001-04061-60	FLANGE BOLT (M6X16)	1	
620	20B-57101-03	COVER STAY (A/C)	1	
850	X85-11001-70	RUBBER PIPE (10X15X170)	1	

330 Muffler

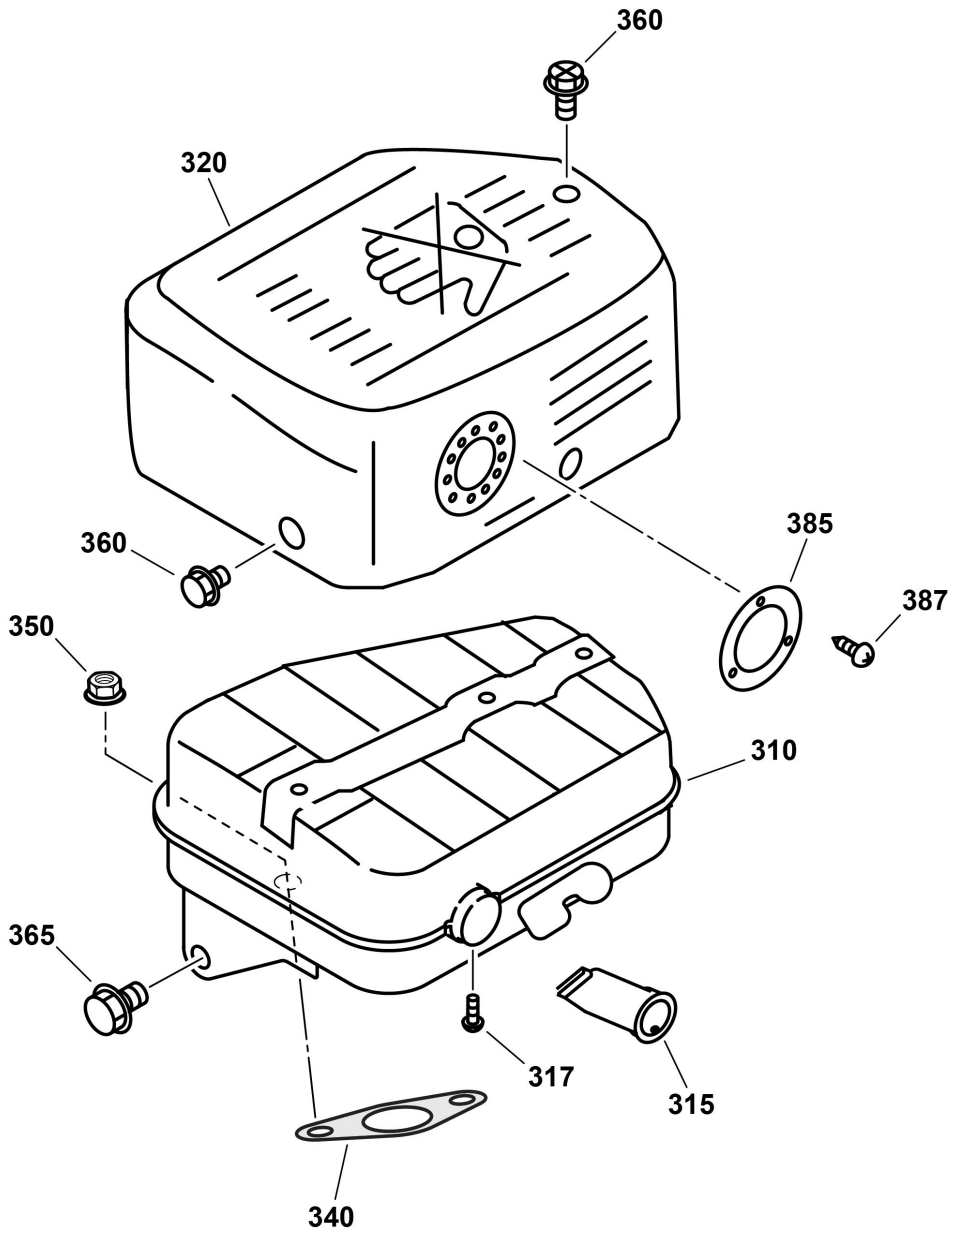


0330 0006 000

330 Muffler

Ref	Part Number.	Description	Qty	Remark
310	20B-30111-J2	MUFFLER UN	1	
315	267-37602-01	SPARK ARRESTER CP	1	
317	015-00400-60	TAPPING SCREW (M4X6)	1	
320	20B-34201-11	MUFFLER COVER CP	1	
385	267-37101-12	TAIL SCREEN UN	1	
387	015-00400-60	TAPPING SCREW (M4X6)	3	
340	20B-35201-13	EXHAUST GASKET	1	
360	011-00600-10	FLANGE BOLT (M6X8)	5	
350	002-38080-00	FLANGE NUT (M8)	2	
365	011-00803-20	FLANGE BOLT (M8X12)	1	

400 Governor

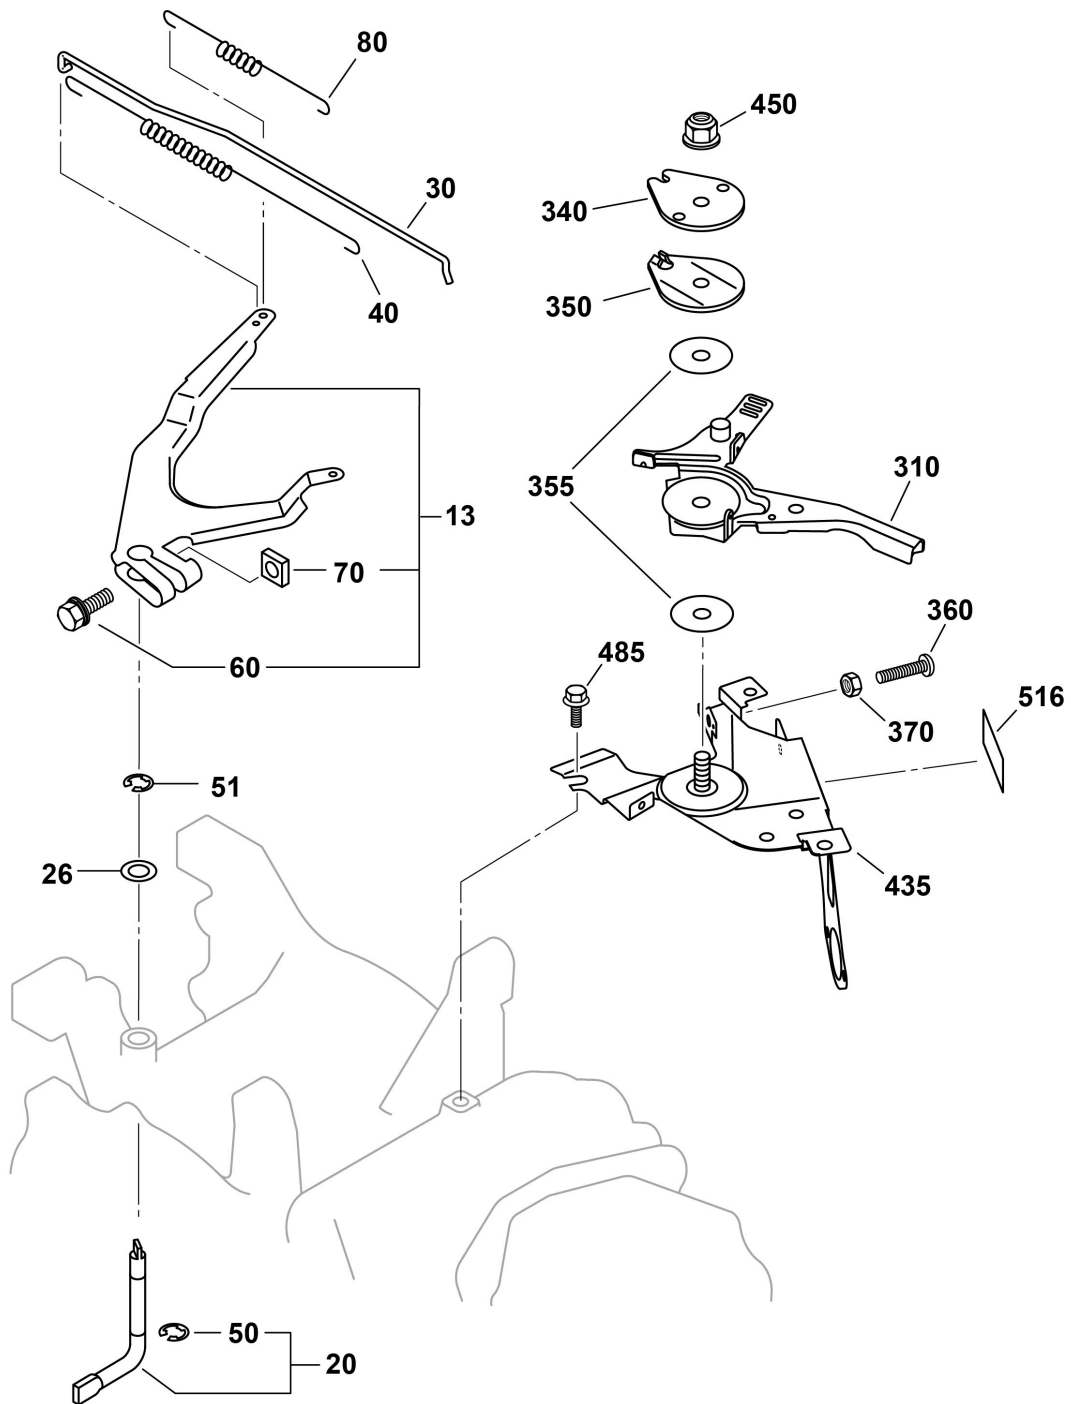


0400 0024 000

400 Governor

Ref	Part Number.	Description	Qty	Remark
13	20B-42301-20	GOVERNOR LEVER ASSY	1	
20	20B-42201-01	GOVERNOR SHAFT CP	1	
26	003-11080-00	WASHER (M8.5X18)	1	
30	20B-42701-23	GOVERNOR ROD	1	
40	20B-42801-13	ROD SPRING	1	
50	003-13060-00	CLIP	1	
51	003-13060-00	CLIP	1	
60	001-14062-50	BOLT & WASHER ASSY (M6X25)	1	
70	018-60600-20	SQUARE NUT (M6)	1	
80	20B-42501-13	GOVERNOR SPRING	1	
310	20B-43301-03	SPEED CONTROL LEVER	1	
340	227-43501-13	STOP PLATE	1	
350	227-45002-03	SPRING WASHER	1	
355	021-70600-30	FRICTION WASHER	2	
360	004-31062-00	SCREW (M6X20)	1	
370	002-27060-00	NUT (M6)	1	
435	20B-46001-21	SPEED CONTROL BRACKET CP	1	
450	002-35060-00	LOCKNUT (M6)	1	
485	011-00600-20	FLANGE BOLT (M6X12)	1	
516	277-96107-03	LABEL (HI-LOW)	1	

500 Cooling

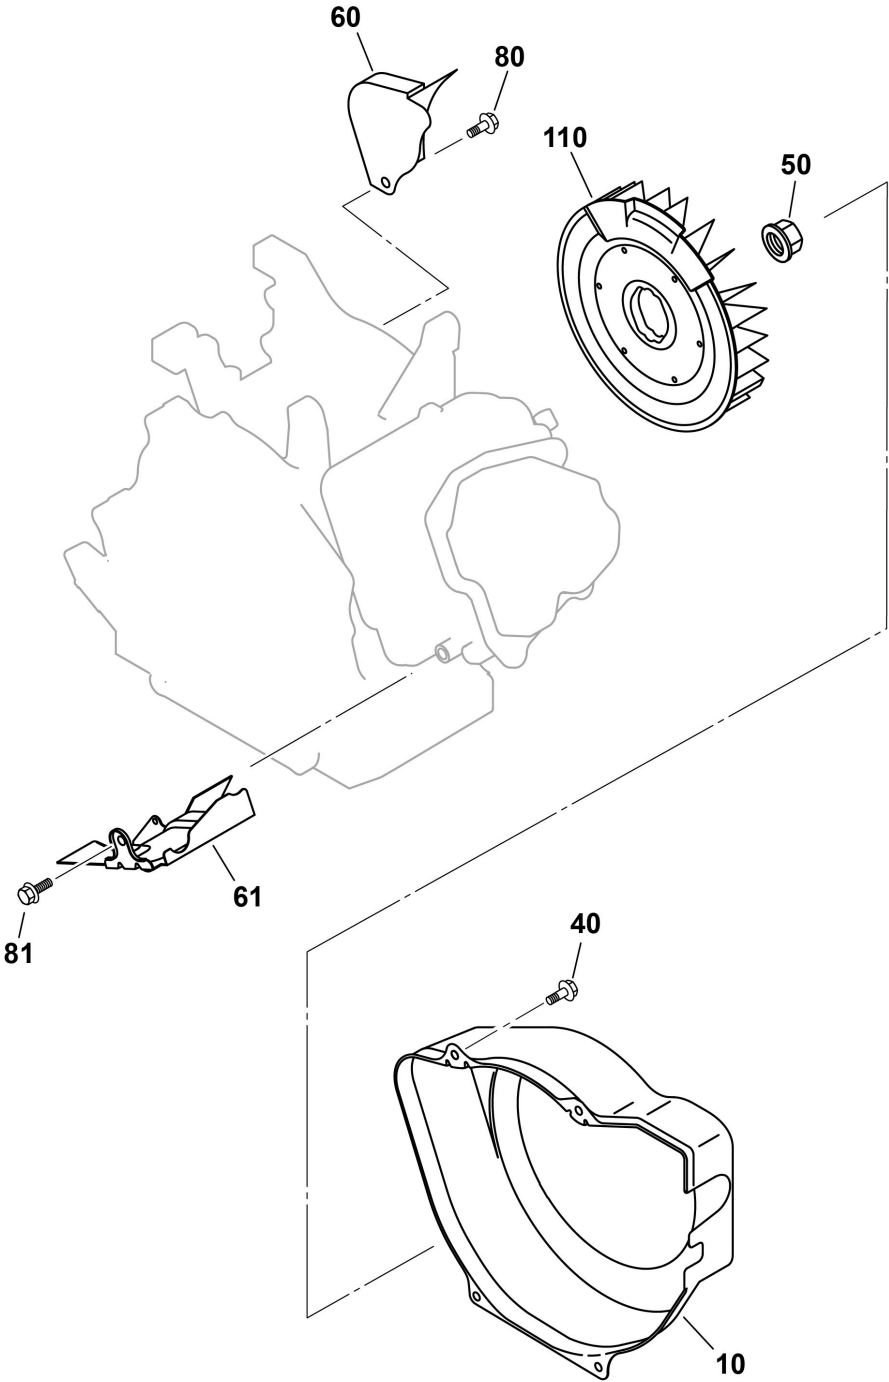


0500 0024 000

500 Cooling

Ref	Part Number.	Description	Qty	Remark
10	20B-51302-11	BLOWER HOUSING CP	1	
40	011-00600-20	FLANGE BOLT (M6X12)	4	
50	018-01800-10	FLANGE NUT (M18)	1	
60	279-52711-11	CASE BAFFLE 1 CP	1	
61	20B-52704-13	HEAD BAFFLE 2 CP	1	
80	001-65081-20	BOLT (M8X12)	1	
81	011-00600-10	FLANGE BOLT (M6X8)	2	
110	20B-54101-H3	COOLING BLOWER	1	

520 Recoil Starter

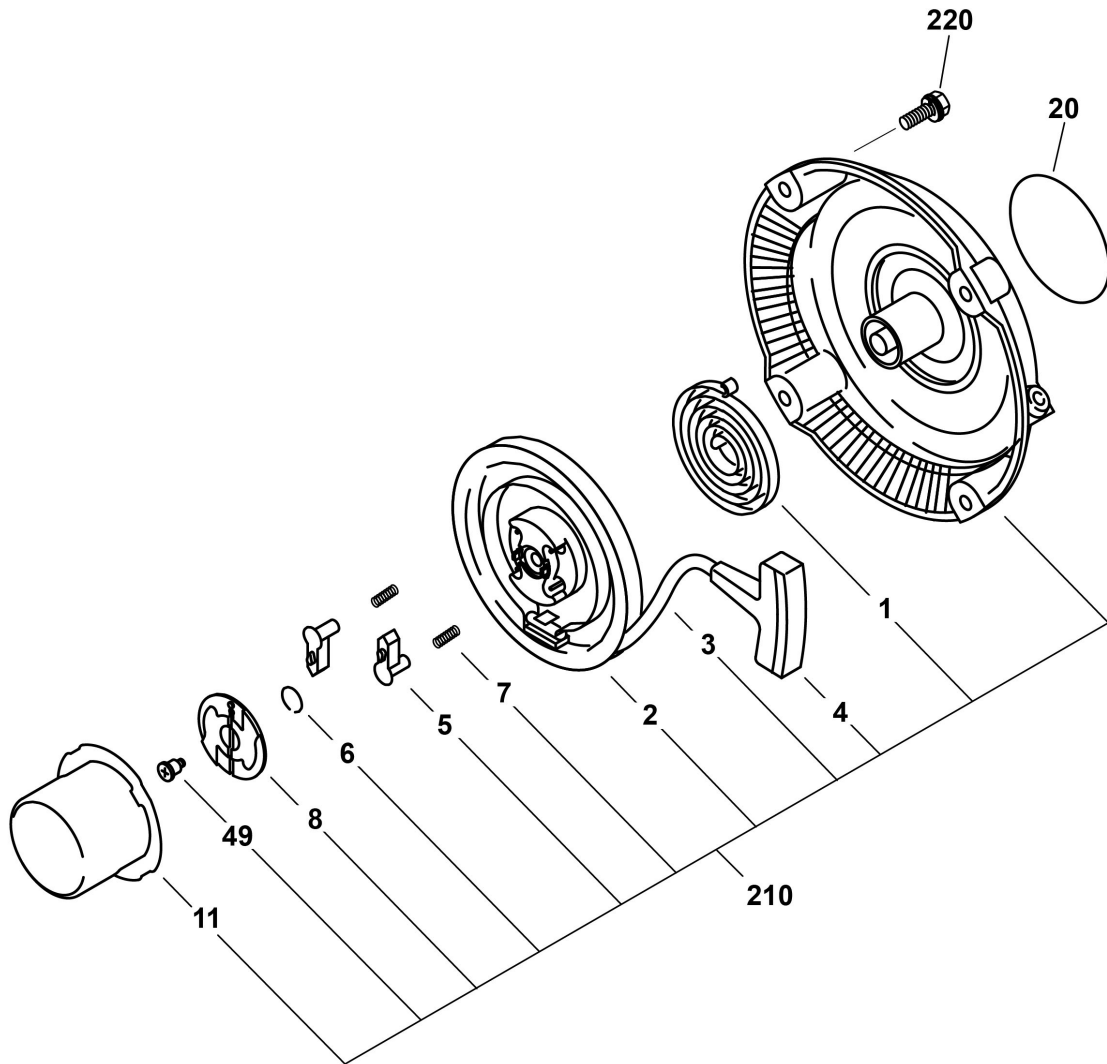


0520 0007 000

520 Recoil Starter

Ref	Part Number.	Description	Qty	Remark
210	20B-50301-H0	RECOIL STARTER ASSY	1	
1	22D-50155-H8	RETURN SPRING	1	
2	22D-50121-H8	REEL	1	
3	22D-50110-H8	STARTER ROPE	1	
4	20F-50100-18	STARTER KNOB	1	
5	22H-50125-08	RATCHET	2	
6	274-50131-08	FRICTION SPRING	1	
7	22D-50136-H8	RETURN SPRING	2	
8	22D-50141-H8	RATCHET GUIDE	1	
11	20B-50145-H8	STARTER PULLEY	1	
49	20B-50101-08	SET SCREW	1	
20	073-20058-20	LABEL (TRADE MARK)	1	
220	013-00602-81	BOLT & WASHER ASSY (M6X14)	4	

600 Fuel Tank

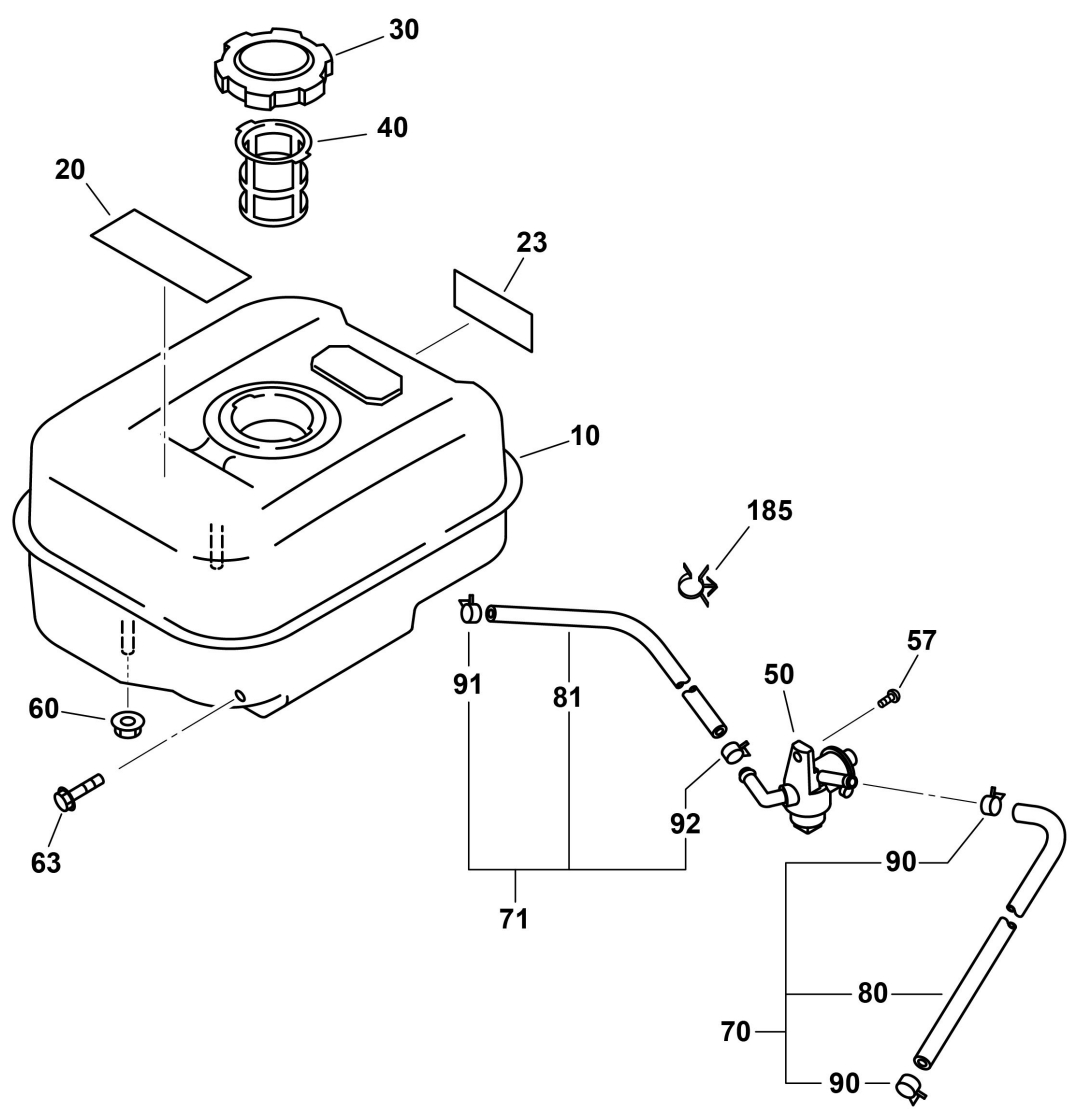


0600 0020 000

600 Fuel Tank

Ref	Part Number.	Description	Qty	Remark
10	20B-60102-01	FUEL TANK CP	1	
20	073-20057-60	LABEL (WARNING)	1	
23	20B-95103-03	LABEL (MODEL)	1	
30	X43-04401-62	FUEL TANK CAP CP	1	
40	X64-13600-10	FUEL FILTER	1	
50	X64-20122-01	FUEL STRAINER ASSY	1	
57	011-00600-10	FLANGE BOLT (M6X8)	1	
60	002-38080-00	FLANGE NUT (M8)	2	
63	011-00802-50	FLANGE BOLT (M8X25)	2	
70	20B-62601-31	FUEL PIPE CP	1	
71	267-62604-11	FUEL PIPE CP	1	
80	085-10620-41	RUBBER PIPE (6X11X80)	1	
81	X85-10614-91	RUBBER PIPE (6.35X12.7X250)	1	
90	056-11000-30	HOSE CLAMP	2	
91	056-11200-40	HOSE CLAMP	1	
92	X56-11100-60	HOSE CLAMP	1	
185	056-81200-20	CLAMP	1	

640 Carburetor

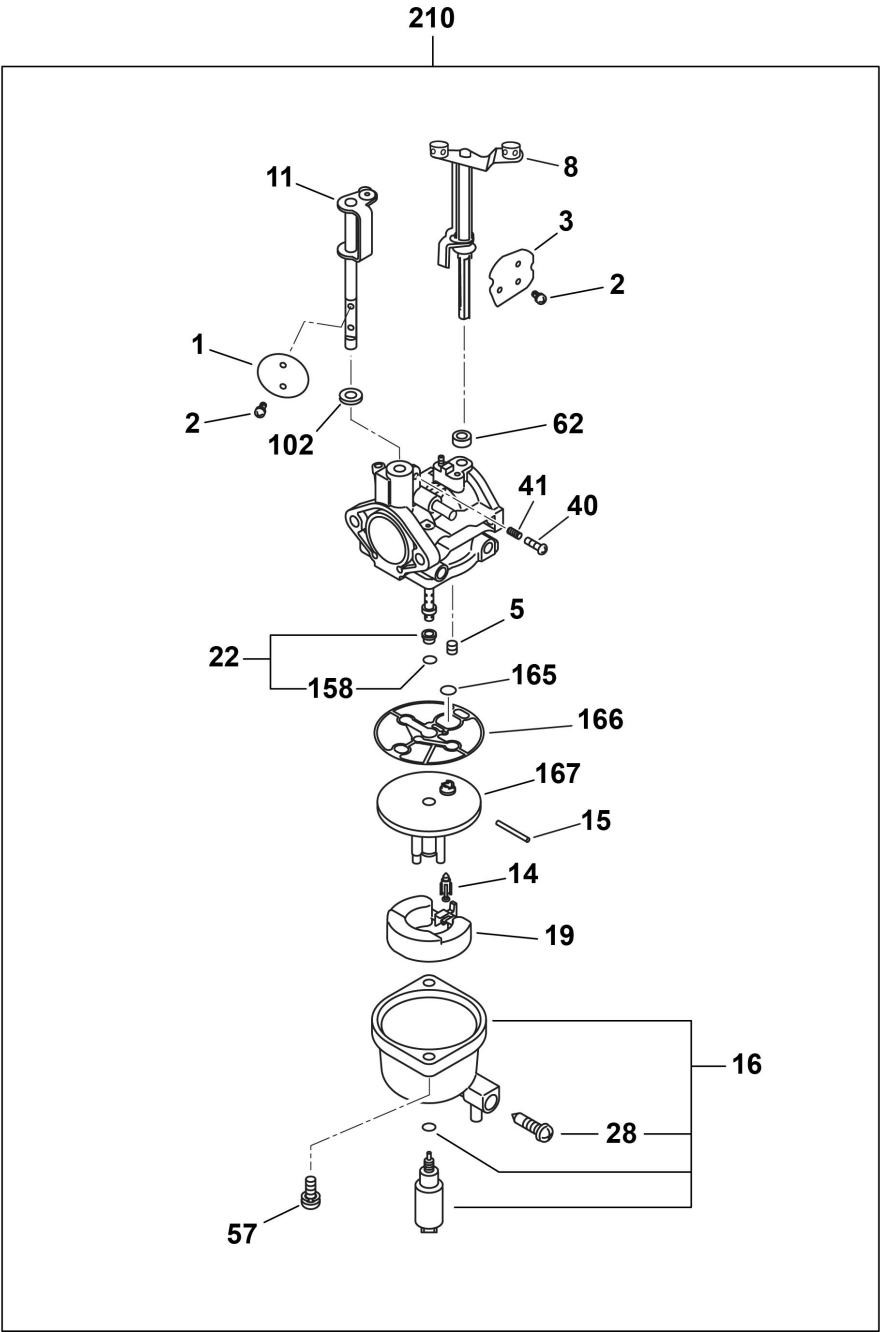


0640 0022 000

640 Carburetor

Ref	Part Number.	Description	Qty	Remark
210	20B-62320-20	CARBURETOR ASSY	1	
1	20B-62535-08	THROTTLE VALVE	1	
2	261-62352-08	SCREW	2	
3	20B-62526-08	CHOKE VALVE	1	
5	20B-62427-08	SLOW JET (#59)	1	
8	20B-62533-08	CHOKE SHAFT	1	
11	20B-62531-08	THROTTLE SHAFT	1	
14	20B-62500-08	FLOAT VALVE ASSY	1	
15	263-62515-08	FLOAT PIN	1	
16	20B-62550-08	FLOAT CHAMBER CP	1	
19	20B-62505-08	FLOAT ASSY	1	
22	20B-62415-08	MAIN JET (#115)	1	
28	20B-62354-08	DRAIN SCREW	1	
40	20B-62353-08	THROTTLE ADJUST SCREW	1	
41	20B-62445-08	THROTTLE ADJUST SPRING	1	
57	20B-62453-08	SCREW	2	
62	258-62554-08	GASKET (FOAM)	1	
102	226-62580-08	GASKET (FELT)	1	
158	20B-62542-08	O-RING	1	
165	20B-62541-08	O-RING	1	
166	20B-62540-08	SPACER	1	
167	20B-62520-08	SPACER	1	

700 Ignition

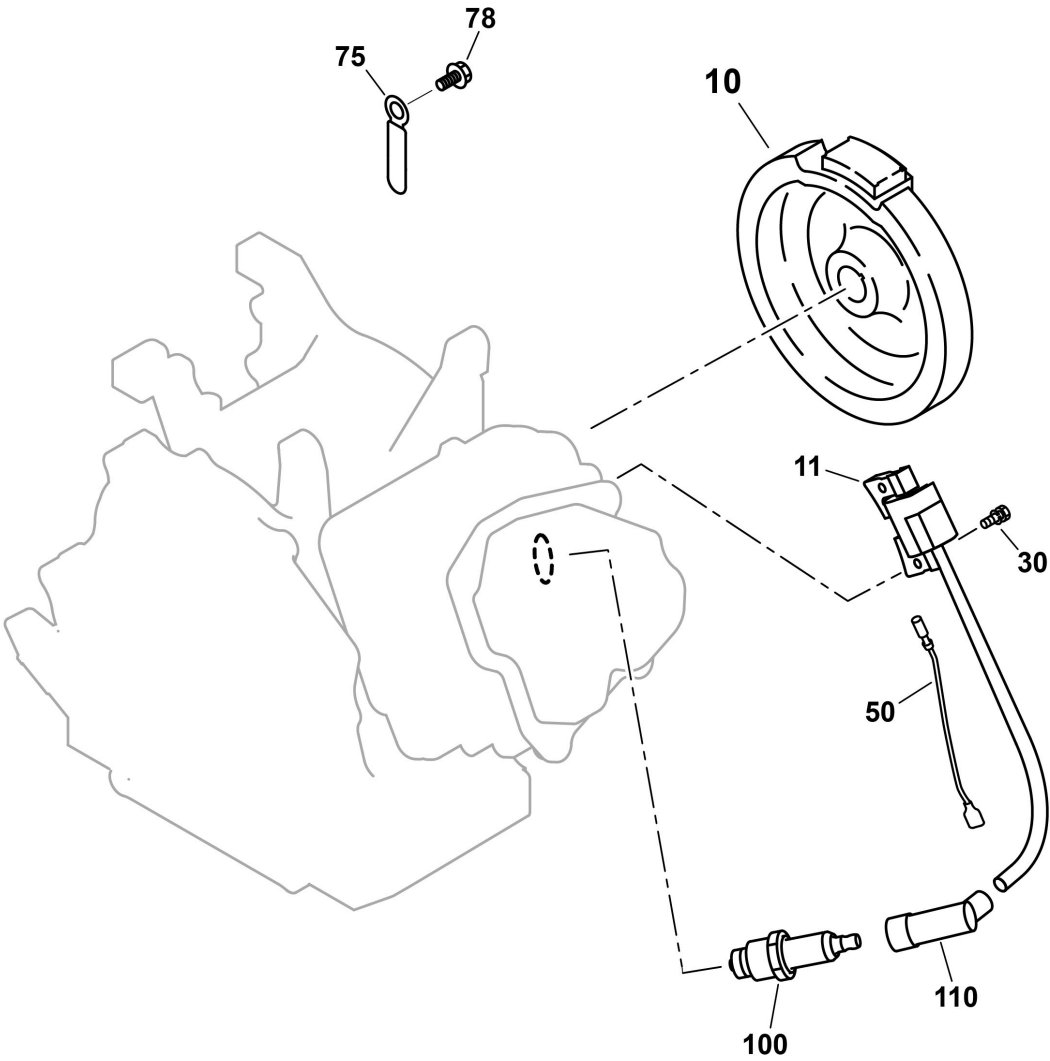


0700 0027 000

700 Ignition

Ref	Part Number.	Description	Qty	Remark
10	20B-79230-H1	FLYWHEEL CP	1	
11	20B-79430-H1	IGNITION COIL CP	1	
700	279-76301-61	OIL SENSOR CP	1	
1	277-76350-08	O-RING	1	
30	001-14063-00	BOLT & WASHER ASSY (M6X30)	2	
705	KU3-11077-01	FLOAT C/U CP11	1	
50	20B-73101-01	WIRE 1 CP	1	
75	214-79006-01	CLAMP CP	1	
740	001-04061-40	FLANGE BOLT (M6X16)	2	
741	015-00400-90	TAPPING SCREW (M4X12)	2	
78	011-00600-10	FLANGE BOLT (M6X8)	1	
100	X65-01430-50	SPARK PLUG (TORCH E6RC)	1	
110	065-50003-11	SPARK PLUG CAP	1	
770	20B-75501-13	WIRE CLAMP	1	
775	015-20600-50	TAPPING BOLT (M6X10)	1	

770 Oil Sensor

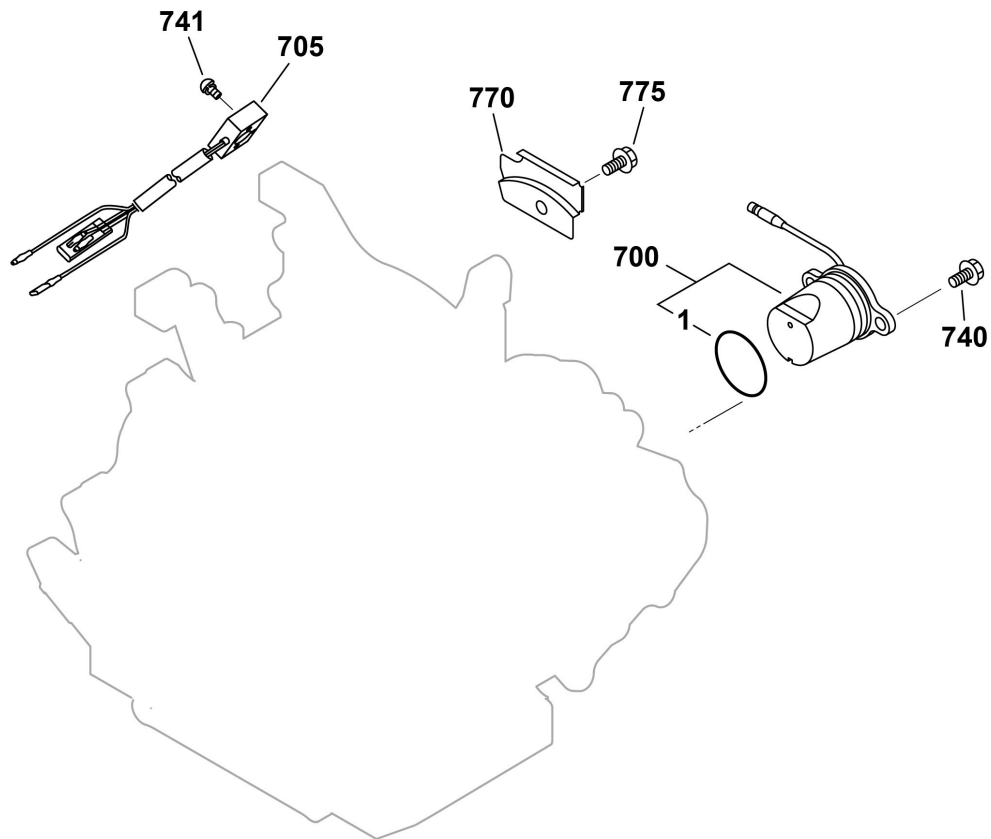


0770 0014 000

770 Oil Sensor

Ref	Part Number.	Description	Qty	Remark
700	279-76301-61	OIL SENSOR CP	1	
1	277-76350-08	O-RING	1	
705	KU3-11077-01	FLOAT C/U CP11	1	
740	001-04061-40	FLANGE BOLT (M6X16)	2	
741	015-00400-90	TAPPING SCREW (M4X12)	2	
770	20B-75501-13	WIRE CLAMP	1	
775	015-20600-50	TAPPING BOLT (M6X10)	1	

900 Accessories

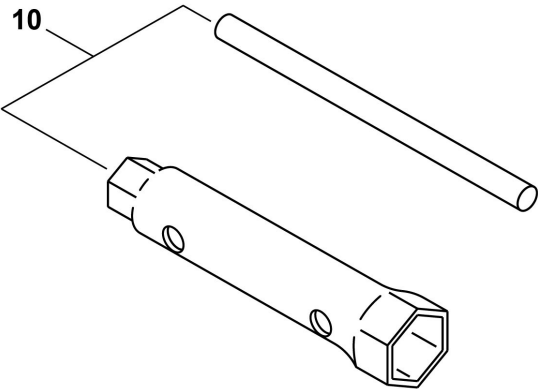

2900 0007 000

900 Accessories

Ref	Part Number.	Description	Qty	Remark
10	20B-90301-J0	ACCESSORY TOOL KIT	1	

Part Number Index

The Part Number Index is a numeric index of all part numbers included in this manual. The index shows what page(s) the part is used on.

Part Number	Page	Part Number	Page	Part Number	Page
001-04061-40	25, 27	20B-32680-H8	11	22B-23501-07	7
001-04061-60	11	20B-32720-H8	11	22B-23502-07	7
001-04083-50	5	20B-32901-K1	11	22B-23503-07	7
001-05084-00	7	20B-33402-H3	9	22B-24101-03	7
001-14062-50	15	20B-33502-H3	9	22D-50110-H8	19
001-14063-00	25	20B-34201-11	13	22D-50121-H8	19
001-65081-20	17	20B-35001-01	9	22D-50136-H8	19
002-27060-00	15	20B-35101-21	9	22D-50141-H8	19
002-35060-00	15	20B-35201-13	13	22D-50155-H8	19
002-38060-00	11	20B-35601-H1	9	22H-50125-08	19
002-38080-00	13, 21	20B-35901-H3	11	246-33611-03	9
003-11080-00	15	20B-35902-H3	11	246-33711-13	9
003-13060-00	9, 15	20B-35903-13	11	246-35501-03	9
004-31062-00	15	20B-36101-00	9	258-62554-08	23
005-19041-00	9	20B-36102-10	9	261-62352-08	23
005-32054-01	7	20B-36501-03	9	263-23301-33	7
010-50604-40	5	20B-42201-01	15	263-35341-03	5
010-50802-90	5	20B-42301-20	15	263-62515-08	23
011-00600-10	9, 13, 17, 21, 25	20B-42501-13	15	267-37101-12	13
011-00600-20	5, 15, 17	20B-42701-23	15	267-37602-01	13
011-00802-50	21	20B-42801-13	15	267-62604-11	21
011-00803-20	13	20B-43301-03	15	274-50131-08	19
011-00803-40	5	20B-43801-H1	11	277-15011-03	5
011-01000-40	5	20B-45003-11	5	277-36401-13	9
013-00602-81	19	20B-46001-21	15	277-36902-03	9
014-90500-20	9	20B-50101-08	19	277-37101-03	9
015-00400-60	13	20B-50145-H8	19	277-38702-03	9
015-00400-90	25, 27	20B-50301-H0	19	277-41902-01	5
015-20600-50	25, 27	20B-51302-11	17	277-76350-08	25, 27
017-00500-30	9	20B-52704-13	17	277-96107-03	15
018-01800-10	17	20B-54101-H3	17	279-52711-11	17
018-60600-20	15	20B-57101-03	11	279-63601-30	5
021-11400-20	5	20B-60102-01	21	279-76301-61	25, 27
021-70600-30	15	20B-62320-20	23	KU3-11077-01	25, 27
024-00700-21	9	20B-62353-08	23	X43-04401-62	21
031-00600-10	5	20B-62354-08	23	X56-11100-60	21
031-80500-20	9	20B-62415-08	23	X60-01500-11	5
040-11400-30	5	20B-62427-08	23	X60-03502-40	5
044-00800-10	5	20B-62445-08	23	X64-13600-10	21
044-03500-91	5	20B-62453-08	23	X64-20122-01	21
056-11000-30	21	20B-62500-08	23	X65-01430-50	25
056-11200-40	21	20B-62505-08	23	X85-10614-91	21
056-51000-50	5	20B-62520-08	23	X85-11001-70	11
056-52100-20	7	20B-62526-08	23		
056-81200-20	21	20B-62531-08	23		
065-50003-11	25	20B-62533-08	23		
073-20057-60	21	20B-62535-08	23		
073-20058-20	19	20B-62540-08	23		
085-10620-41	21	20B-62541-08	23		
132-11AA1-10	5	20B-62542-08	23		
20A-36911-03	9	20B-62550-08	23		
20A-36913-03	9	20B-62601-31	21		
20B-10102-51	5	20B-73101-01	25		
20B-11001-21	5	20B-75501-13	25, 27		
20B-13002-00	5	20B-79230-H1	25		
20B-14202-03	5	20B-79430-H1	25		
20B-15001-33	5	20B-90301-J0	29		
20B-15501-01	5	20B-95103-03	21		
20B-16001-03	5	20B-99001-37	5		
20B-21001-31	7	20F-50100-18	19		
20B-22503-00	7	214-79006-01	25		
20B-30111-J2	13	226-62580-08	23		
20B-31601-20	9	227-43501-13	15		
20B-32610-J7	11	227-45002-03	15		
20B-32636-H8	11	22B-23401-J3	7		
20B-32641-J8	11	22B-23403-J3	7		
20B-32651-J0	11	22B-23404-J3	7		

Part Description Index

The Part Description Index is an alphabetical index of all part descriptions included in this manual. The index shows what page(s) the part is used on.

A

ACCESSORY TOOL KIT.....29
ADJUST SCREW.....9
AIR CLEANER ASSY.....11

B

BALANCER SHAFT.....7
BALL BEARING.....5
BLOWER HOUSING CP.....17
BODY CP.....11
BOLT & WASHER ASSY (M6X14).....19
BOLT & WASHER ASSY (M6X25).....15
BOLT & WASHER ASSY (M6X30).....25
BOLT (M8X12).....17

C

CAMSHAFT ASSY.....9
CAMSHAFT PIN CP.....9
CARBURETOR ASSY.....23
CASE BAFFLE 1 CP.....17
CHAIN GUIDE.....9
CHOKE LEVER CP.....11
CHOKE SHAFT.....23
CHOKE VALVE.....23
CLAMP.....21
CLAMP CP.....25
CLIP.....5, 7, 9, 15
CLIP 1.....11
CONNECTING ROD AY.....7
COOLING BLOWER.....17
COVER.....11
COVER STAY (A/C).....11
CRANKCASE CP.....5
CRANKSHAFT CP.....7
CYLINDER HEAD AY.....5

D

DOWEL PIN.....5
DRAIN SCREW.....23

E

ELEMENT ASSY.....11
EXHAUST GASKET.....13
EXHAUST ROCKER ARM ASSY.....9
EXHAUST VALVE.....9

F

FLANGE BOLT (M10X75).....5
FLANGE BOLT (M6X12).....5, 15, 17
FLANGE BOLT (M6X16).....11, 25, 27
FLANGE BOLT (M6X8).....9, 13, 17, 21, 25
FLANGE BOLT (M8X12).....13
FLANGE BOLT (M8X25).....21
FLANGE BOLT (M8X35).....5
FLANGE BOLT (M8X38).....5
FLANGE BOLT (M8X40).....7

FLANGE NUT (M18).....17
FLANGE NUT (M6).....11
FLANGE NUT (M8).....13, 21
FLOAT ASSY.....23
FLOAT C/U CP11.....25, 27
FLOAT CHAMBER CP.....23
FLOAT PIN.....23
FLOAT VALVE ASSY.....23
FLYWHEEL CP.....25
FRICTION SPRING.....19
FRICTION WASHER.....15
FUEL FILTER.....21
FUEL PIPE CP.....21
FUEL STRAINER ASSY.....21
FUEL TANK CAP CP.....21
FUEL TANK CP.....21

G

GASKET.....5
GASKET (FELT).....23
GASKET (FOAM).....23
GASKET 1.....11
GASKET 2.....11
GASKET 3.....11
GASKET SET.....5
GASKET(ROCKER COVER).....5
GOVERNOR GEAR CP.....5
GOVERNOR LEVER ASSY.....15
GOVERNOR ROD.....15
GOVERNOR SHAFT CP.....15
GOVERNOR SLEEVE.....5
GOVERNOR SPRING.....15

H

HEAD BAFFLE 2 CP.....17
HEAD GASKET.....5
HOSE CLAMP.....21

I

IGNITION COIL CP.....25
INSULATOR CP.....11
INTAKE GASKET.....11
INTAKE ROCKER ARM ASSY.....9
INTAKE VALVE.....9

L

LABEL (HI-LOW).....15
LABEL (MODEL).....21
LABEL (TRADE MARK).....19
LABEL (WARNING).....21
LOCKNUT (M6).....15

M

MAIN JET (#115).....23
MAINBEARING COVER CP.....5
MUFFLER COVER CP.....13
MUFFLER UN.....13

N

NUT (M5).....9
NUT (M6).....15

O

O-RING.....9, 23, 25, 27
OIL GAUGE ASSY.....5
OIL SEAL.....5
OIL SENSOR CP.....25, 27

P

PIPE KNOCK.....5
PISTON.....7
PISTON PIN.....7
PISTON RING SET.....7
PLUG.....5

R

RATCHET.....19
RATCHET GUIDE.....19
RECOIL STARTER ASSY.....19
REEL.....19
RELEASE LEVER.....9
RETAINER PLATE.....5
RETURN SPRING.....9, 19
ROCKER COVER CP.....5
ROCKER PIN CP.....9
ROD SPRING.....15
ROLL PIN.....9
RUBBER PIPE (10X15X170).....11
RUBBER PIPE (6.35X12.7X250).....21
RUBBER PIPE (6X11X80).....21

S

SCREW.....23
SCREW (M6X20).....15
SEAL-EXH VALVE.....5
SET SCREW.....19
SLOW JET (#59).....23
SPACER.....23
SPARK ARRESTER CP.....13
SPARK PLUG (TORCH E6RC).....25
SPARK PLUG CAP.....25
SPEED CONTROL BRACKET CP.....15
SPEED CONTROL LEVER.....15
SPRING PIN.....9
SPRING RETAINER.....9
SPRING WASHER.....15
SQUARE NUT (M6).....15
STARTER KNOB.....19
STARTER PULLEY.....19
STARTER ROPE.....19
STOP PLATE.....15
STUD.....5

Part Description Index (continued)

T

TAIL SCREEN UN.....13
TAPPING BOLT (M6X10).....25, 27
TAPPING SCREW (M4X12).....25, 27
TAPPING SCREW (M4X6).....13
TENTIONER.....9
TENTIONER PIN.....9
TENTIONER SPRING.....9
THROTTLE ADJUST SCREW.....23
THROTTLE ADJUST SPRING.....23
THROTTLE SHAFT.....23
THROTTLE VALVE.....23
TIMING CHAIN CP (112 LINK).....9

V

VALVE COLLET.....9
VALVE GUIDE.....5
VALVE SPRING.....9

W

WASHER (M8.5X18).....15
WIRE 1 CP.....25
WIRE CLAMP.....25, 27
WOODRUFF KEY.....7

This Page Intentionally Left Blank

PRINTED IN THE USA

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047

Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com