

PARTS MANUAL

MODEL
EH65

EH650VD1040C

12/15



SUBARU

Industrial Power Products

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047 - Phone 847-540-7300 - Fax 847-438-5012

 
e-mail: sales@subarupower.com - www.subarupower.com

© 2015 Subaru Industrial Power Products

Group Index

Group Name	Page
100 Crankcase.....	4
200 Crankshaft.....	8
300 Intake & Exhaust.....	10
600 Fuel & Lubricant.....	12
700 Electric Device.....	14
 Part Number Index.....	 16
Part Description Index.....	17

100 Crankcase

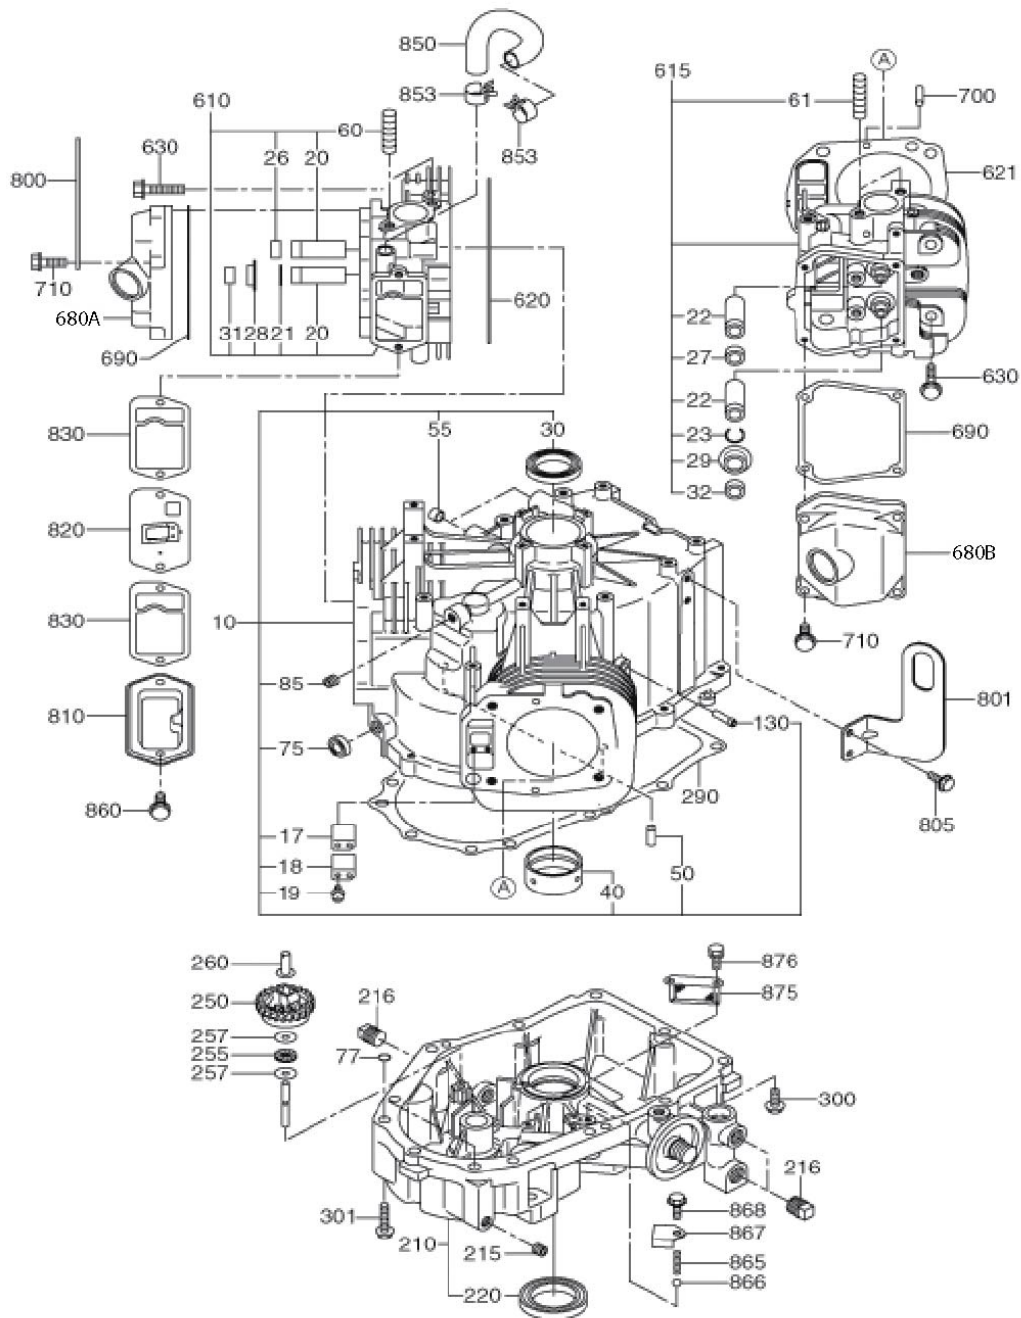

263010200W00

100 Crankcase

Ref	Part Number.	Description	Qty	Remark
10	263-10212-B1	CRANKCASE CP	1	
17	263-17101-B3	LEAF VALVE	2	
18	263-17201-A3	RETAINER PLATE	2	
19	004-35041-00	SCREW AND WASHER AY	4	
20	263-14202-03	VALVE GUIDE	2	
21	056-51000-50	CLIP	1	
22	263-14202-03	VALVE GUIDE	2	
23	056-51000-50	CLIP	1	
26	132-11AA1-10	SEAL-EXH VALVE	1	
27	132-11AA1-10	SEAL-EXH VALVE	1	
28	263-35341-03	RETAINER PLATE	1	
29	263-35341-03	RETAINER PLATE	1	
31	263-39001-01	OIL SEAL EXH VALVE	1	
32	263-39001-01	OIL SEALEXH VALVE	1	
40	263-15805-03	MAIN BEARING	1	
50	X31-00800-80	DOWEL PIN	2	
60	010-50802-90	STUD	2	
61	010-50802-90	STUD	2	
75	044-03501-70	OIL SEAL	1	
85	235-15421-03	BLIND PLUG CP	1	
210	263-11301-01	MAINBEARING COVER CP	1	
215	235-15421-03	BLIND PLUG CP	1	
216	263-17402-A3	PLUG	1	
220	044-04200-30	OIL SEAL	1	
250	263-46202-A3	GOVERNOR GEAR SHAFT	1	
290	263-16012-A3	GASKET (M.B. COVER)	1	
300	X11-00802-90	FLANGE BOLT	10	
610	263-13202-01	CYLINDER HEAD 1 CP	1	263-13202-00 PRIMARY
615	263-13302-01	CYLINDER HEAD 2 CP	1	
620	263-15021-41	GASKET 1 (CYL. HEAD)	1	
621	263-15121-31	GASKET 2 (CYL. HEAD)	1	
630	011-01000-30	FLANGE BOLT	8	
680	263-15511-J3	ROCKER COVER	1	USE PART # ENDING IN H3 UNTIL GONE THEN USE 263-15511-J3
690	263-16111-03	GASKET (ROCKET COVER)	2	
700	031-00600-20	DOWEL PIN	4	
710	011-00601-01	FLANGE BOLT	8	
810	263-14301-03	BREATHER COVER	1	
820	263-14411-A1	BREATHER PLATE CP	1	


100 Crankcase

Ref	Part Number.	Description	Qty	Remark
830	263-16007-03	GASKET (BREATHER PLATE)	2	
860	011-00600-30	FLANGE BOLT	2	
865	263-66001-03	SPRING(RELIEF VALVE)	1	
866	006-90308-00	STEEL BALL	1	
867	263-14412-A3	RETAINER PLATE	1	
875	263-64312-A2	OIL PUMP FILTER UN	1	

This Page Intentionally Left Blank

200 Crankshaft

 FIG. 202

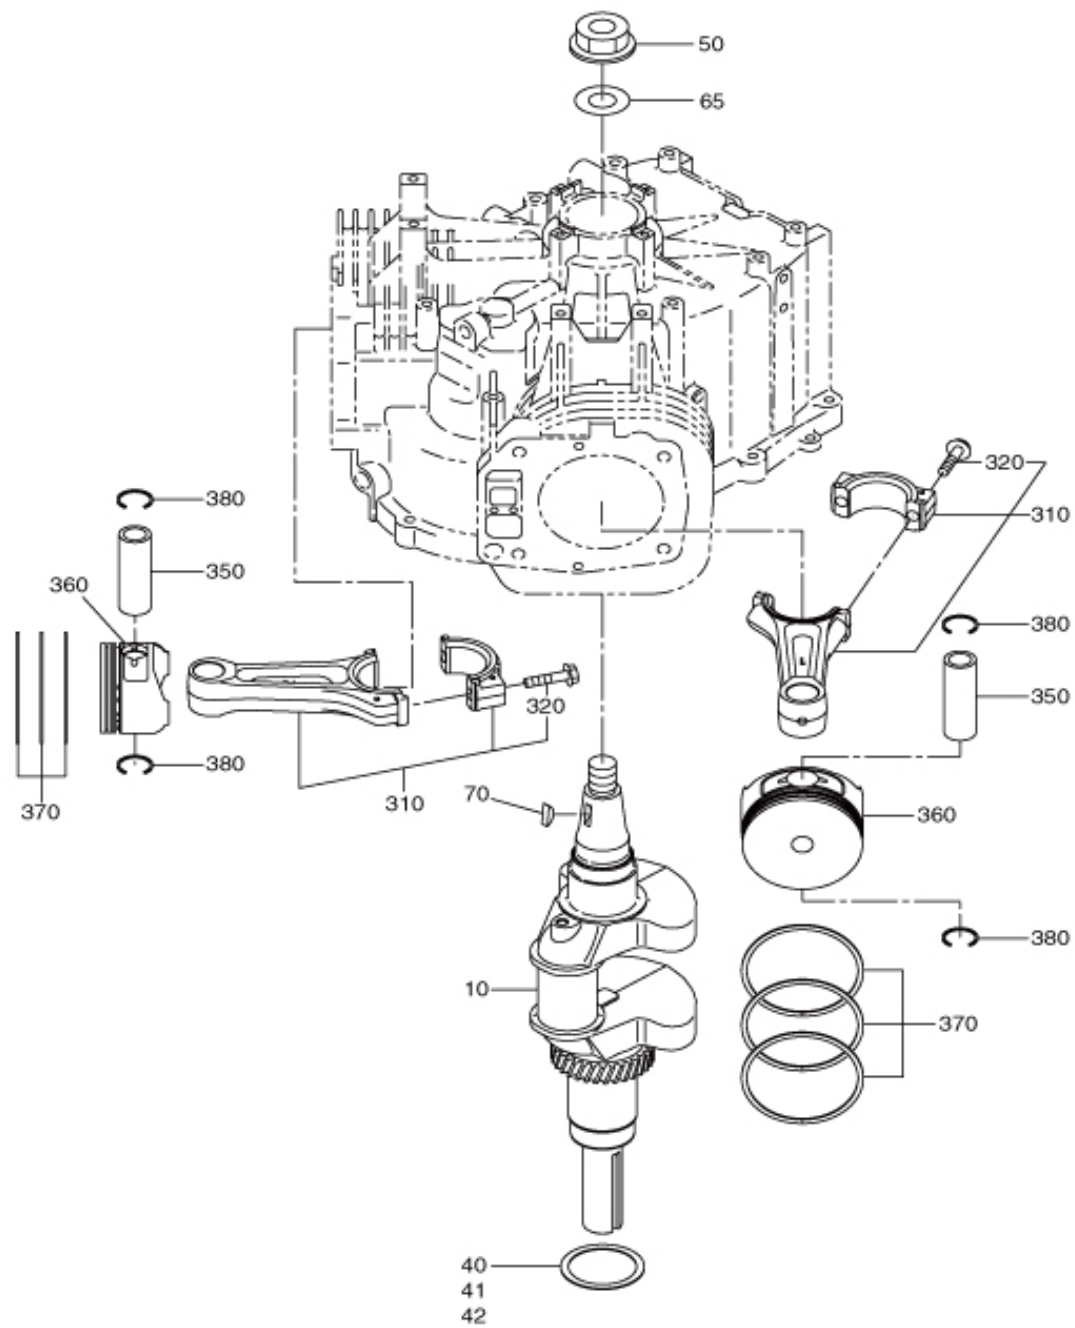

EH65/64/63


263020200W00

200 Crankshaft

Ref	Part Number.	Description	Qty	Remark
10	263-21721-B1	CRANKSHAFT CP	1	
40	263-25012-A3	SPACER	1	
41	263-25013-A3	SPACER	1	
42	263-25014-A3	SPACER	1	
310	263-22601-30	CONNECTING ROD AY	2	
320	001-05084-00	FLANGE BOLT	2	
350	263-23301-33	PISTON PIN	2	
360	263-23421-J3	PISTON	2	
370	263-23501-27	PISTON RING SET	2	
380	056-52100-20	CLIP	4	

300 lintake & Exhaust

 FIG. 302

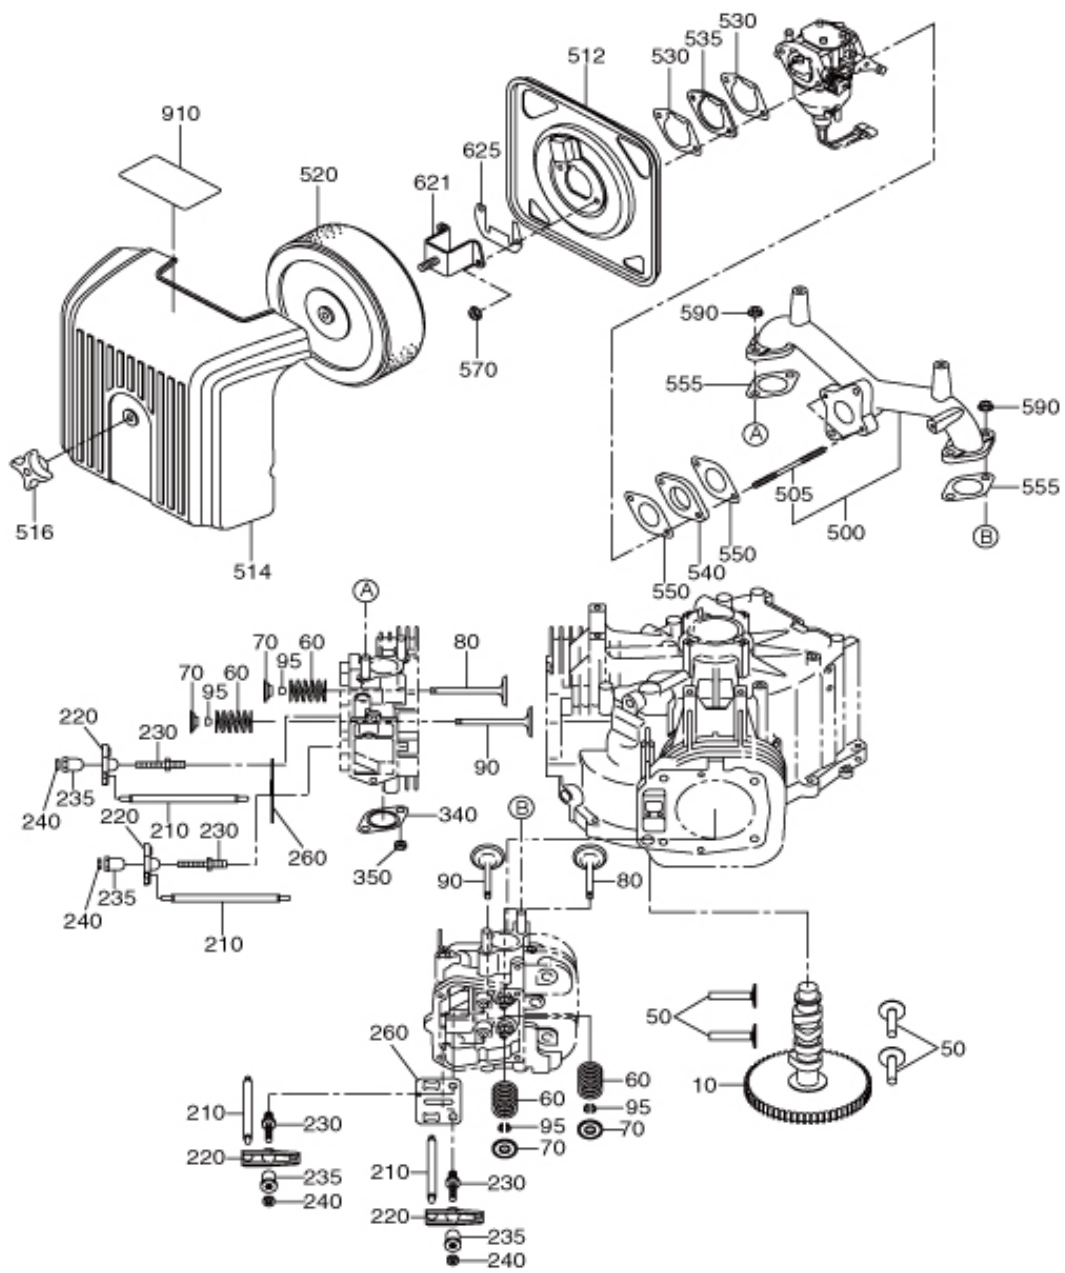

EH65/64/63


263030200W00

300 l intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
10	263-31801-13	CAM SHAFT CP	1	
50	263-33301-A3	TAPPET	4	
60	246-33611-03	VALVE SPRING	4	
70	246-33711-13	SPRING RETAINER	4	
80	263-33401-03	INTAKE VALVE	2	
90	263-33502-13	EXHAUST VALVE	2	
95	246-35501-03	COLLET-VALVE	8	
210	263-35322-A1	PUSH ROD CP	4	
220	267-36102-03	ROCKER ARM	4	
230	263-35801-03	BOLT (PIVOT)	4	
235	267-35701-03	PIVOT	4	
240	017-00601-10	NUT	4	
260	263-37002-A3	GUIDE PLATE	2	

600 Fuel & Lubricant

 FIG. 602

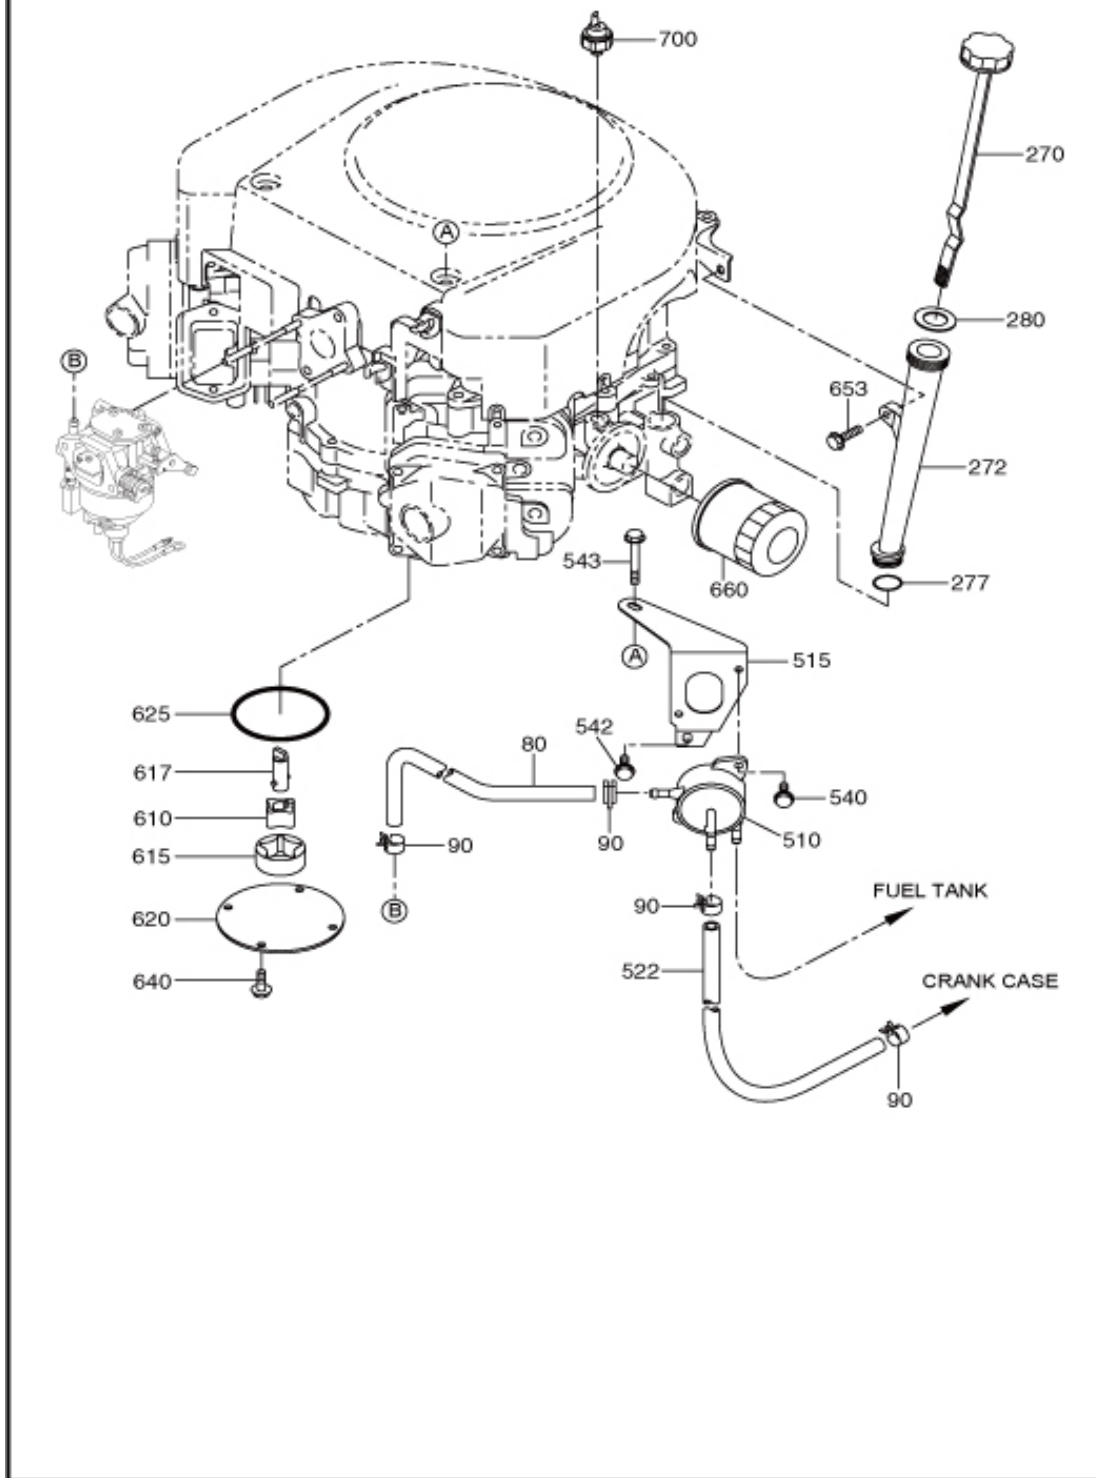

EH65/64/63


263060200W00

600 Fuel & Lubricant

Ref	Part Number.	Description	Qty	Remark
270	263-63631-B3	OIL GUAGE AY	1	
272	263-64414-A3	O RING	1	
610	263-63921-A3	INNER ROTOR	1	
615	263-63931-A3	OUTER ROTOR	1	
617	263-63942-A3	SHAFT(OIL PUMP)	1	
620	263-64012-J3	OIL PUMP COVER	1	
625	024-08800-10	O RING	1	
660	263-65901-A0	OIL FILTER AY	1	
700	263-76102-H1	SWITCH OIL PRESSURE	1	
543	X14-00601-70	SCREW	4	

700 Electric Device

 FIG. 702

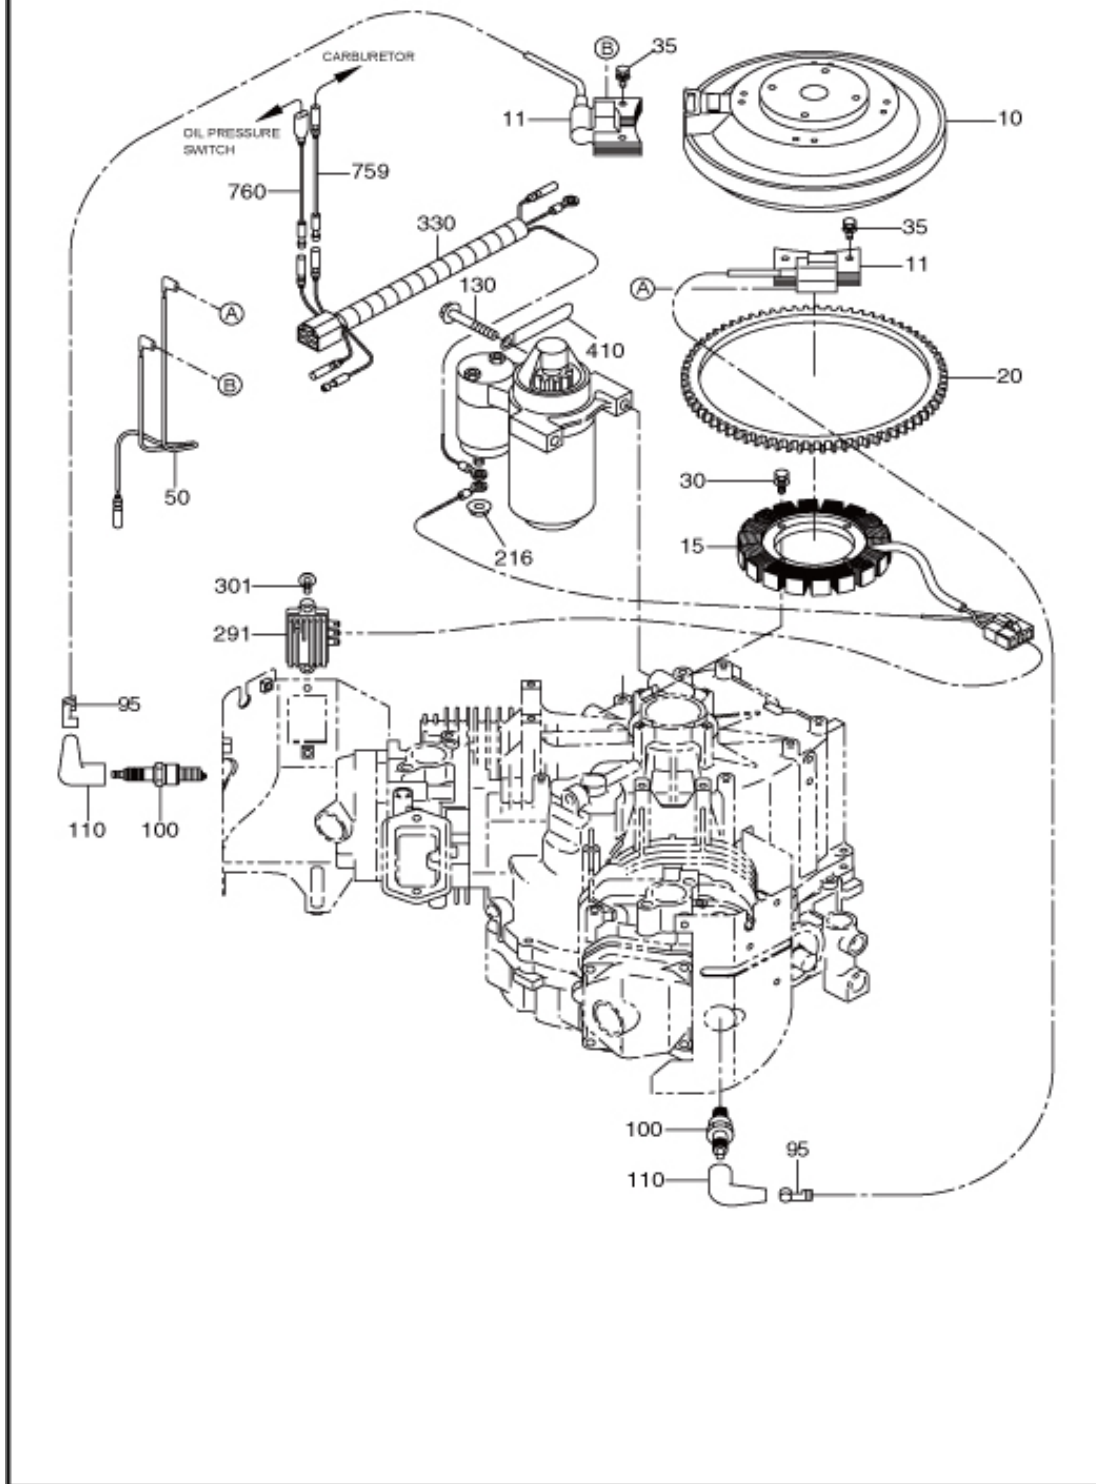

EH65/64/63

263070200W00

700 Electric Device

Ref	Part Number.	Description	Qty	Remark
100	065-01407-30	SPARK PLUG	2	

Part Number Index

The Part Number Index is a numeric index of all part numbers included in this manual. The index shows what page(s) the part is used on.

Part Number	Page	Part Number	Page
001-05084-00	9	267-36102-03	11
004-35041-00	5	X11-00802-90	5
006-90308-00	6	X14-00601-70	13
010-50802-90	5	X31-00800-80	5
011-00600-30	6		
011-00601-01	5		
011-01000-30	5		
017-00601-10	11		
024-08800-10	13		
031-00600-20	5		
044-03501-70	5		
044-04200-30	5		
056-51000-50	5		
056-52100-20	9		
065-01407-30	15		
132-11AA1-10	5		
235-15421-03	5		
246-33611-03	11		
246-33711-13	11		
246-35501-03	11		
263-10212-B1	5		
263-11301-01	5		
263-13202-01	5		
263-13302-01	5		
263-14202-03	5		
263-14301-03	5		
263-14411-A1	5		
263-14412-A3	6		
263-15021-41	5		
263-15121-31	5		
263-15511-J3	5		
263-15805-03	5		
263-16007-03	6		
263-16012-A3	5		
263-16111-03	5		
263-17101-B3	5		
263-17201-A3	5		
263-17402-A3	5		
263-21721-B1	9		
263-22601-30	9		
263-23301-33	9		
263-23421-J3	9		
263-23501-27	9		
263-25012-A3	9		
263-25013-A3	9		
263-25014-A3	9		
263-31801-13	11		
263-33301-A3	11		
263-33401-03	11		
263-33502-13	11		
263-35322-A1	11		
263-35341-03	5		
263-35801-03	11		
263-37002-A3	11		
263-39001-01	5		
263-46202-A3	5		
263-63631-B3	13		
263-63921-A3	13		
263-63931-A3	13		
263-63942-A3	13		
263-64012-J3	13		
263-64312-A2	6		
263-64414-A3	13		
263-65901-A0	13		
263-66001-03	6		
263-76102-H1	13		
267-35701-03	11		

Part Description Index

The Part Description Index is an alphabetical index of all part descriptions included in this manual. The index shows what page(s) the part is used on.

B

BLIND PLUG CP.....5
BOLT (PIVOT).....11
BREATHER COVER.....5
BREATHER PLATE CP.....5

C

CAM SHAFT CP.....11
CLIP.....5, 9
COLLET-VALVE.....11
CONNECTING ROD AY.....9
CRANKCASE CP.....5
CRANKSHAFT CP.....9
CYLINDER HEAD 1 CP.....5
CYLINDER HEAD 2 CP.....5

D

DOWEL PIN.....5

E

EXHAUST VALVE.....11

F

FLANGE BOLT.....5-6, 9

G

GASKET (BREATHER PLATE).....6
GASKET (M.B. COVER).....5
GASKET (ROCKET COVER).....5
GASKET 1 (CYL. HEAD).....5
GASKET 2 (CYL. HEAD).....5
GOVERNOR GEAR SHAFT.....5
GUIDE PLATE.....11

I

INNER ROTOR.....13
INTAKE VALVE.....11

L

LEAF VALVE.....5

M

MAIN BEARING.....5
MAINBEARING COVER CP.....5

N

NUT.....11

O

O RING.....13
OIL FILTER AY.....13
OIL GUAGE AY.....13
OIL PUMP COVER.....13

OIL PUMP FILTER UN.....6
OIL SEAL.....5
OIL SEAL EXH VALVE.....5
OIL SEALEXH VALVE.....5
OUTER ROTOR.....13

P

PISTON.....9
PISTON PIN.....9
PISTON RING SET.....9
PIVOT.....11
PLUG.....5
PUSH ROD CP.....11

R

RETAINER PLATE.....5-6
ROCKER ARM.....11
ROCKER COVER.....5

S

SCREW.....13
SCREW AND WASHER AY.....5
SEAL-EXH VALVE.....5
SHAFT(OIL PUMP).....13
SPACER.....9
SPARK PLUG.....15
SPRING RETAINER.....11
SPRING(RELIEF VALVE).....6
STEEL BALL.....6
STUD.....5
SWITCH OIL PRESSURE.....13

T

TAPPET.....11

V

VALVE GUIDE.....5
VALVE SPRING.....11

PRINTED IN THE USA

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047

Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com