

PARTS MANUAL

MODEL EX270DE5032

Parts

**Manual for
Billy Goat**

EX270DE5032

01/14



SUBARU

Industrial Power Products

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047 - Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com


© 2012 Subaru Industrial Power Products

Group Index

Group Name	Page
100 Crankcase.....	4
200 Crankshaft.....	6
300 Intake & Exhaust.....	8
315 Intake & Exhaust.....	12
400 Governor.....	14
500 Cooling & Starting.....	16
520 Cooling & Starting.....	18
600 Fuel & Lubricant.....	20
641 Fuel & Lubricant.....	22
700 Electric Device.....	24
770 Electric Device.....	26
900 Accessory.....	28
Part Number Index.....	30
Part Description Index.....	31

100 Crankcase

FIG. 100

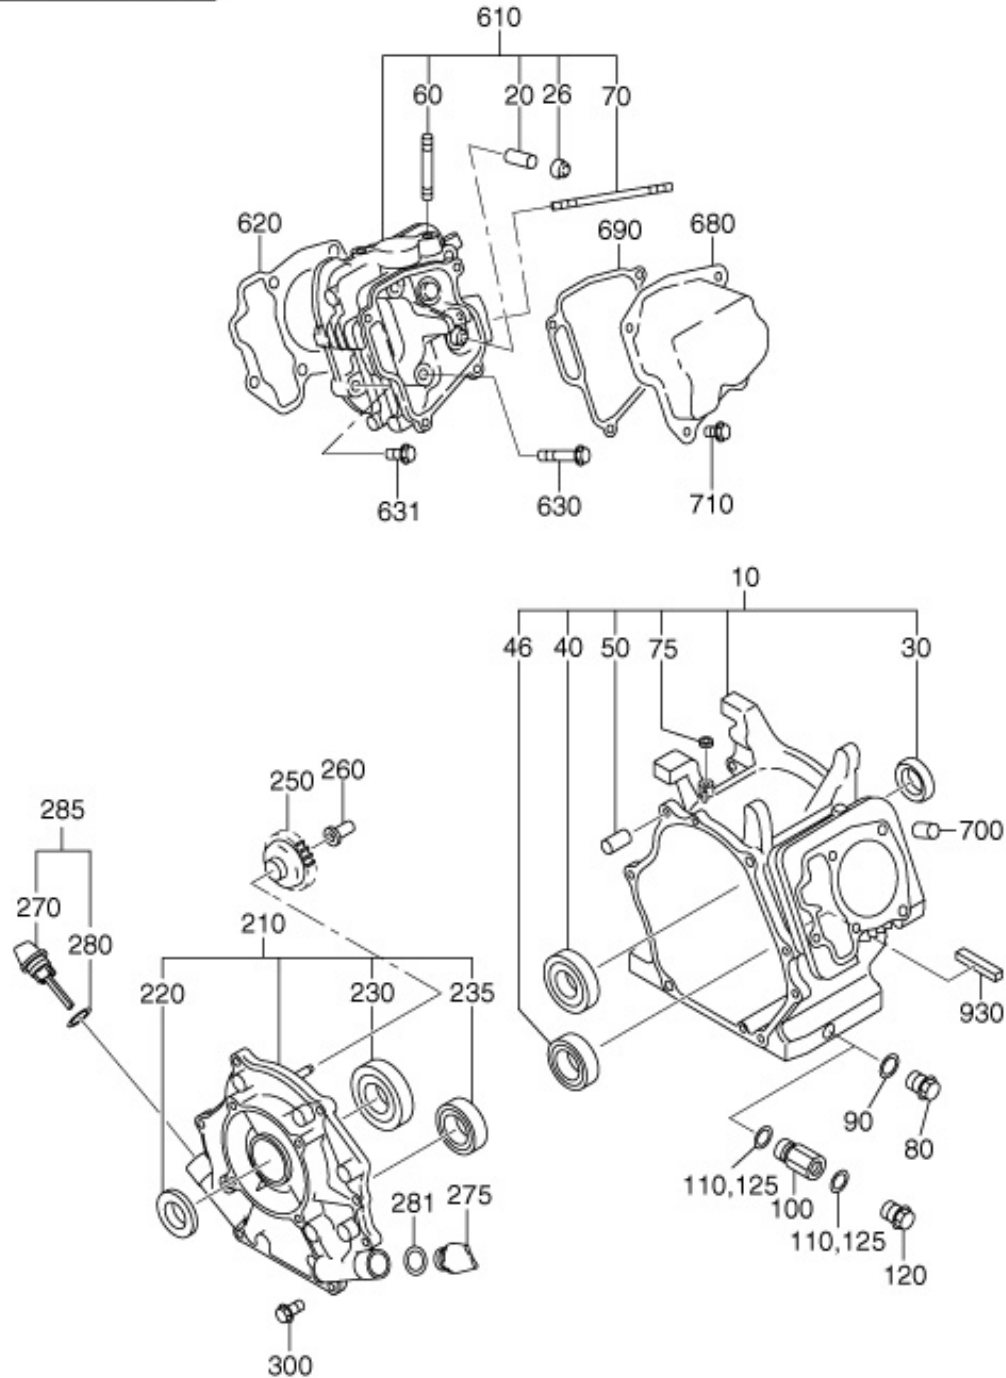

960- GASKET SET

EX27


279010001W00

100 Crankcase

Ref	Part Number.	Description	Qty	Remark
10	279-10104-61	CRANK CASE CP	1.00	
20	237-14202-03	VALVE GUIDE	2.00	
26	277-16010-01	STEM SEAL	1.00	
30	044-03001-60	OIL SEAL	1.00	
40	060-03003-70	BALL BEARING	1.00	
46	060-01500-11	BALL BEARING	1.00	
50	277-15011-03	PIPE KNOCK	2.00	
60	010-50802-50	STUD	2.00	
70	010-50604-10	STUD	2.00	
75	044-00600-20	OIL SEAL	1.00	
80	040-11400-30	PLUG	2.00	
90	021-11400-20	GASKET	2.00	
210	279-11004-21	MAIN BEARING COVER C	1.00	
220	044-03001-60	OIL SEAL	1.00	
230	060-03003-41	BALL BEARING	1.00	
235	060-01500-11	BALL BEARING	1.00	
250	277-45004-K1	GOVERNOR GEAR CP	1.00	
260	277-41902-03	GOVERNOR SLEEVE	1.00	
270	279-63601-23	OIL GAUGE	2.00	
280	021-32000-50	GASKET	2.00	
300	001-04083-50	FLANGE BOLT	7.00	
610	279-13001-21	CYLINDER HEAD CP	1.00	
620	279-15001-33	GASKET (HEAD)	1.00	
630	011-00802-40	FLANGE BOLT	4.00	
631	011-00803-10	FLANGE BOLT	1.00	
680	277-15503-01	ROCKER COVER CP	1.00	
690	277-16001-13	GASKET(ROCKER COVER)	1.00	
700	277-15011-03	PIPE KNOCK	2.00	
710	011-00600-20	FLANGE BOLT	4.00	
960	279-99001-27	GASKET SET	1.00	

200 Crankshaft

FIG. 200

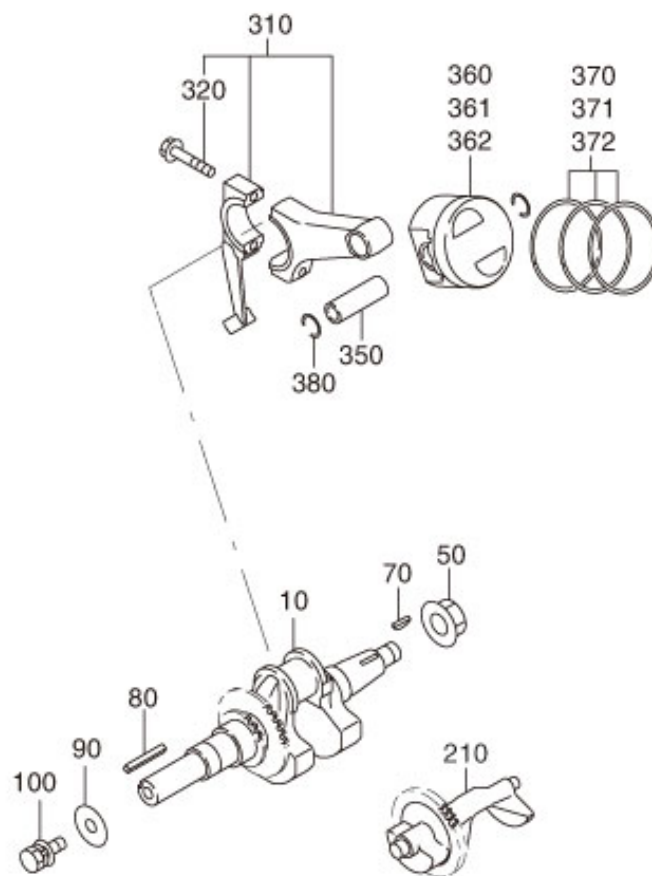


EX27

279020000W01

200 Crankshaft

Ref	Part Number.	Description	Qty	Remark
10	279-20902-21	CRANK SHAFT CP	1.00	
50	018-01800-10	FLANGE NUT	1.00	
70	032-30300-10	WOODRUFF KEY	1.00	
80	207-26001-03	KEY	1.00	
210	279-24101-14	BALANCER SHAFT	1.00	
310	279-22501-30	CONNECTING ROD AY	1.00	
320	279-23001-03	CONNECTING ROD BOLT	2.00	
350	279-23301-13	PISTON PIN	1.00	
360	279-23401-H3	PISTON	1.00	
361	279-23403-H3	PISTON	1.00	
362	279-23404-H3	PISTON	1.00	
370	279-23511-17	PISTON RING SET	1.00	
371	279-23512-17	PISTON RING SET	1.00	
372	279-23513-17	PISTON RING SET	1.00	
380	056-51800-10	CLIP	2.00	

300 Intake & Exhaust

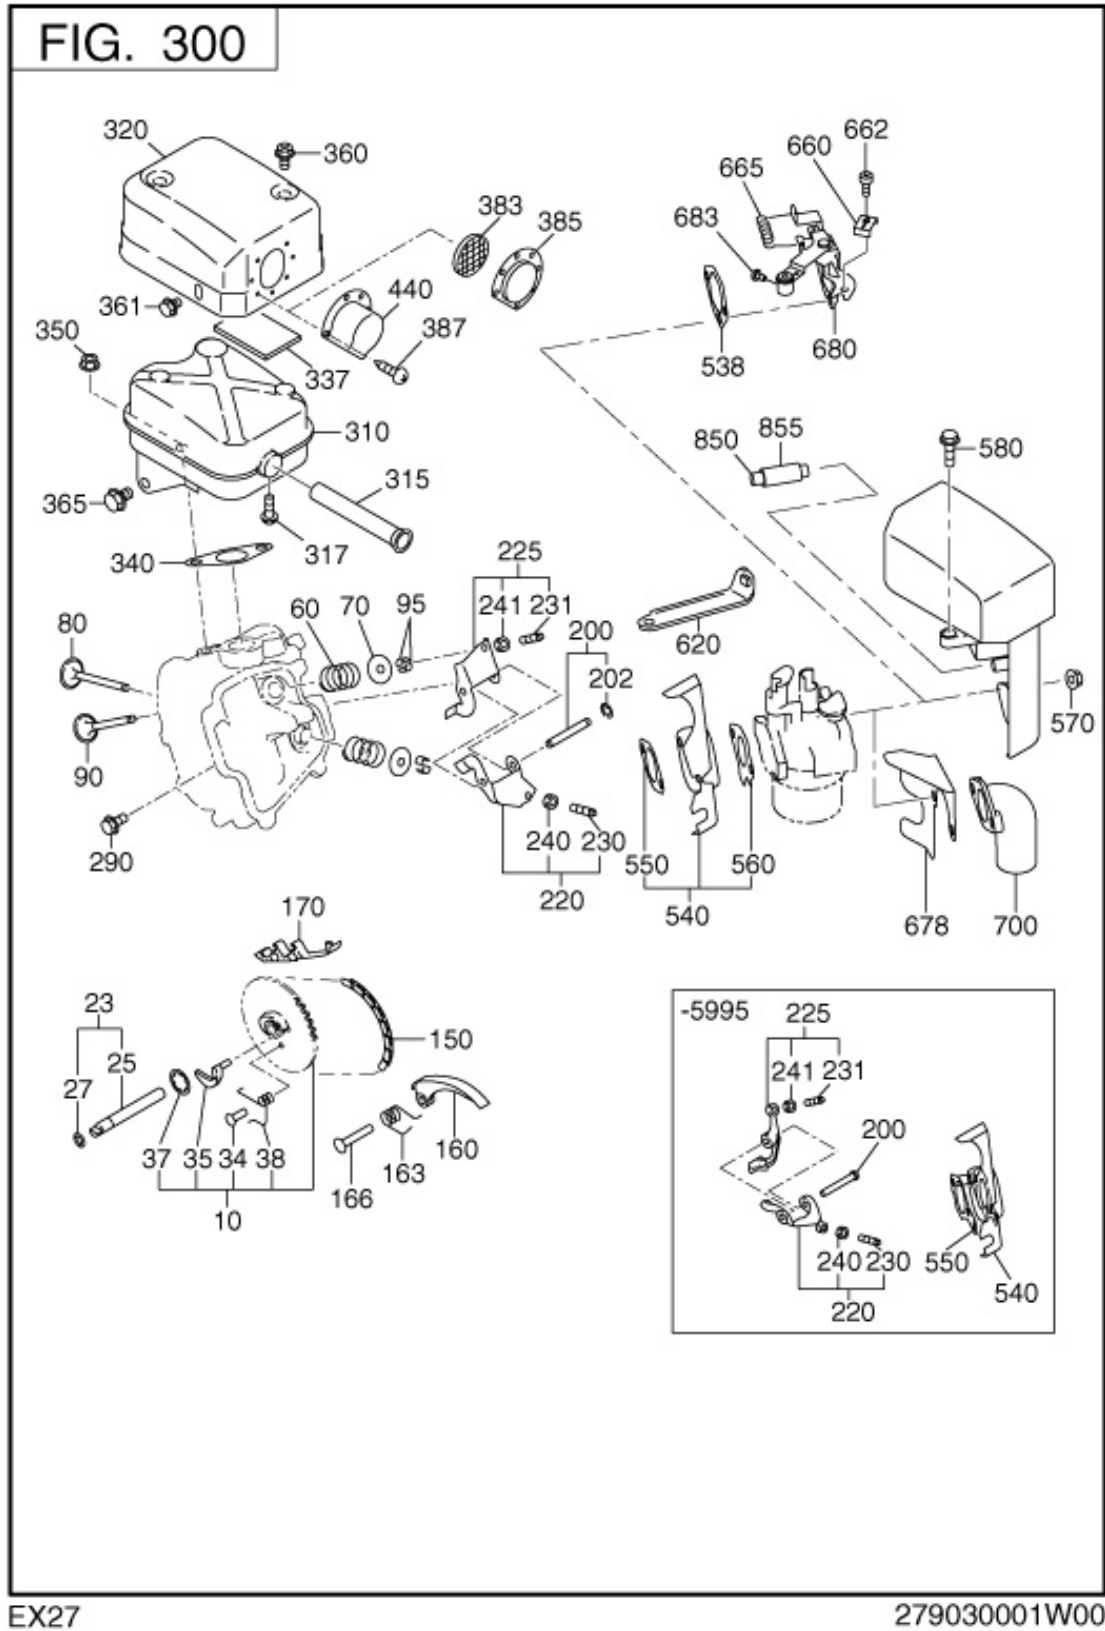

300 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
10	279-31601-11	CAM SHAFT CP	1.00	
25	277-35101-03	PIN(CAM SHAFT)	1.00	
27	024-00600-30	O RING	1.00	
34	277-38601-03	PIN(SPRING)	1.00	
35	279-36401-03	RELEASE LEVER	1.00	
37	277-36501-03	CLIP	1.00	
38	277-38703-03	RETURN SPRING	1.00	
60	279-33601-03	VALVE SPRING	2.00	
70	269-33701-03	SPRING RETAINER	2.00	
80	279-33401-H3	INTAKE VALVE	1.00	
90	279-33501-H3	EXHAUST VALVE	1.00	
95	132-10KA0-31	COLLET-VALVE	4.00	
150	279-35602-H1	TIMING CHAIN CP	1.00	
160	277-36911-03	TENTIONER	1.00	
163	277-37101-03	SPRING(TENTIONER)	1.00	
166	277-36902-03	PIN(TENTIONER)	1.00	
170	277-36913-13	CHAIN GUIDE	1.00	
200	277-35004-01	PIN(ROCKER) CP	1.00	
202	003-13050-00	CLIP	1.00	
220	277-36201-00	ROCKER ARM(IN) AY	1.00	
225	277-36202-00	ROCKER ARM(EX) AY	1.00	
230	014-90500-20	ADJUST SCREW	1.00	
231	014-90500-20	ADJUST SCREW	1.00	
240	017-00500-30	NUT	1.00	
241	017-00500-30	NUT	1.00	
290	011-00600-20	FLANGE BOLT	1.00	
310	279-30111-L1	MUFFLER CP	1.00	
315	279-37601-01	SPARK ARRESTER CP	1.00	
317	015-00400-60	TAPPING SCREW	1.00	
320	279-34201-31	MUFFLER COVER CP	1.00	
340	277-35201-13	GASKET(MUFFLER)	1.00	
350	002-38080-00	FLANGE NUT	2.00	
360	015-20600-90	TAPPING BOLT	2.00	
361	011-00600-10	FLANGE BOLT	1.00	
365	011-00803-20	FLANGE BOLT	1.00	
387	015-00400-60	TAPPING SCREW	2.00	
440	277-37001-H1	DEFLECTOR CP	1.00	
540	279-32902-J1	INSULATOR CP	1.00	
550	279-35903-J3	GASKET2(INSULATOR)	1.00	

300 Intake & Exhaust


Ref	Part Number.	Description	Qty	Remark
560	279-35902-J3	GASKET1(INSULATOR)	1.00	
570	002-38060-00	FLANGE NUT	2.00	
580	001-04062-00	FLANGE BOLT	1.00	
850	279-32760-08	RUBBER PIPE	1.00	

This Page Intentionally Left Blank


315 Intake & Exhaust

FIG. 315


URETHANE FOAM

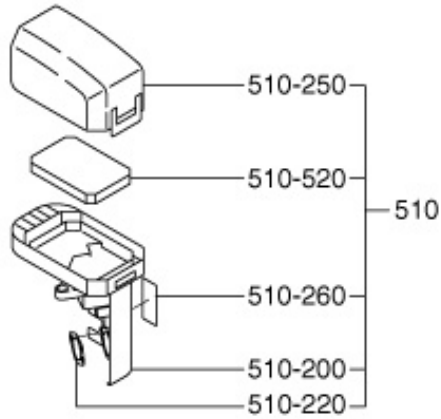

DUAL ELEMENT

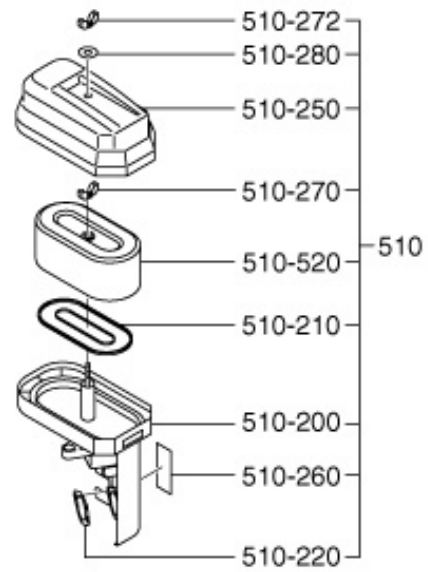

PRE CLEANER

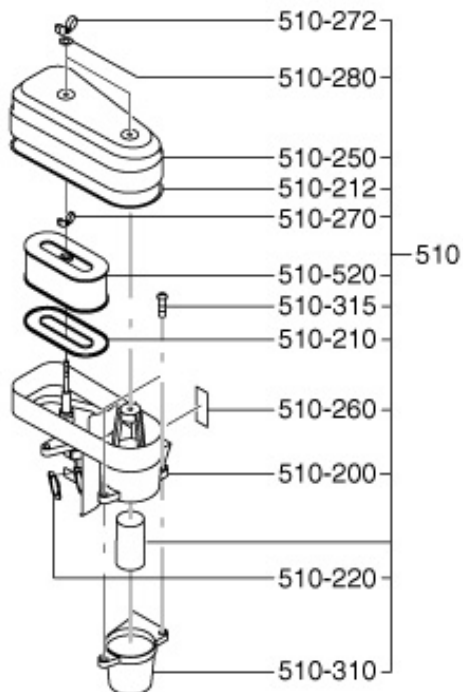


EX27

279031501W00

315 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
510	279-32615-60	AIR CLEANER AY	1.00	
510-200	279-32634-28	ELBOW COMP,AIR/C	1.00	
510-210	279-32720-08	PACKING	1.00	
510-220	279-32650-18	GASKET	1.00	
510-250	279-32643-18	COVER	1.00	
510-260	279-32730-08	LABEL	1.00	
510-270	279-32740-08	NUT	2.00	
510-520	279-32607-07	ELEMENT SET	1.00	

400 Governor

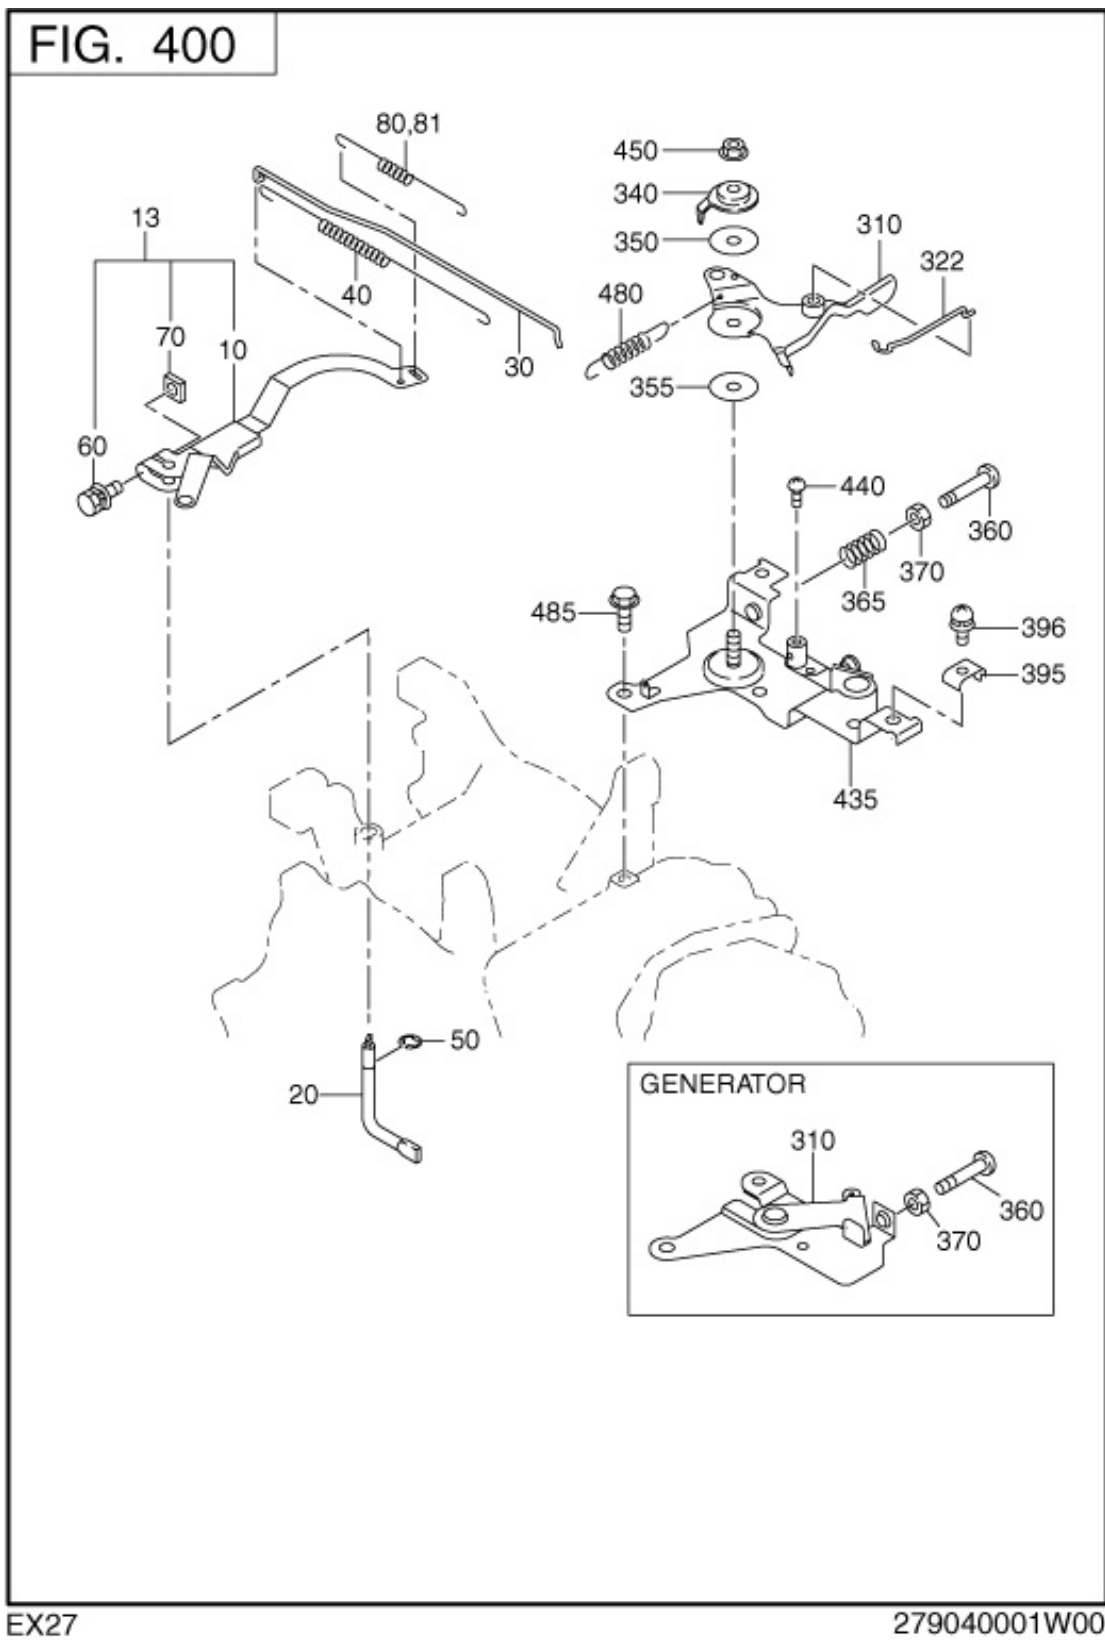


400 Governor

Ref	Part Number.	Description	Qty	Remark
10	279-42301-63	GOVERNOR LEVER	1.00	
20	277-42201-33	GOVERNOR SHAFT	1.00	
30	279-42701-23	GOVERNOR ROD CP	1.00	
40	277-42801-23	ROD SPRING	1.00	
50	003-13050-00	CLIP	1.00	
60	001-14062-50	BOLT AND WASHER AY	1.00	
70	018-60600-20	NUT	1.00	
80	279-42502-73	GOVERNOR SPRING	1.00	
310	277-43303-01	SPEED CONT.LEVER CP	1.00	
322	277-43701-01	LINK ROD CP	1.00	
340	277-43502-03	STOP PLATE	1.00	
350	277-44501-03	WASHER	1.00	
355	021-70600-70	FRICTION WASHER	1.00	
360	004-31062-50	SCREW,PANHEAD	1.00	
365	237-45004-23	SPRING (ADJUST)	1.00	
395	277-43902-03	CLAMP	1.00	
396	013-10500-30	SCREW AND WASHER AY	1.00	
435	277-46002-01	SPEED CONT.BRKT CP	1.00	
440	004-31040-80	SCREW	1.00	
450	002-35060-00	SELF LOCK NUT	1.00	
480	277-45103-03	RETURN SPRING	1.00	
485	011-00600-20	FLANGE BOLT	2.00	

500 Cooling & Starting

FIG. 500

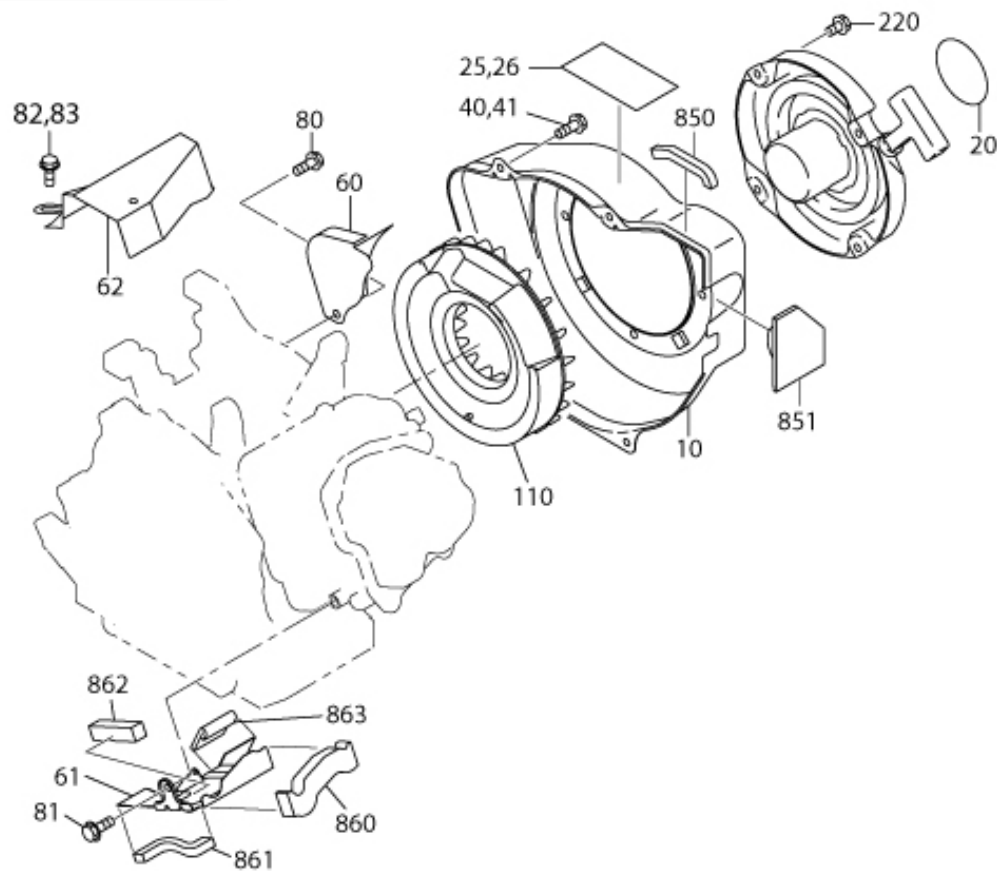

EX27


279050000W02

500 Cooling & Starting


Ref	Part Number.	Description	Qty	Remark
10	279-51202-01	BLOWER HOUSING CP	1.00	
20	073-20058-20	LABEL(TRADE MARK)	1.00	
40	011-00600-30	FLANGE BOLT	4.00	
60	279-52711-11	BAFFLE 1(CASE) CP	1.00	
61	279-52702-13	BAFFLE 2(HEAD)	1.00	
80	001-65081-20	BOLT	1.00	
81	011-00600-20	FLANGE BOLT	1.00	
220	011-00600-10	FLANGE BOLT	4.00	

520 Cooling & Starting

FIG. 520

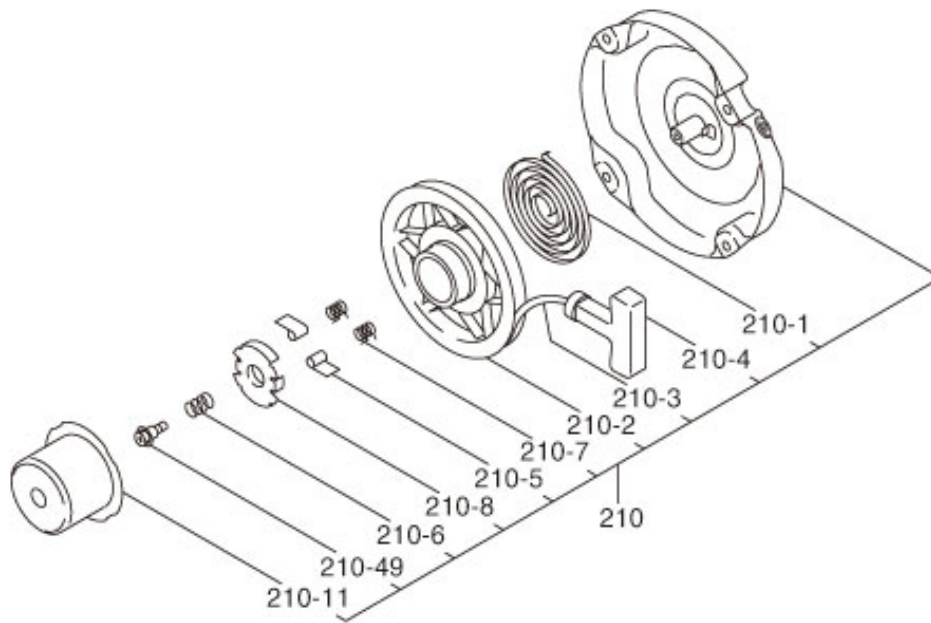

RESIN

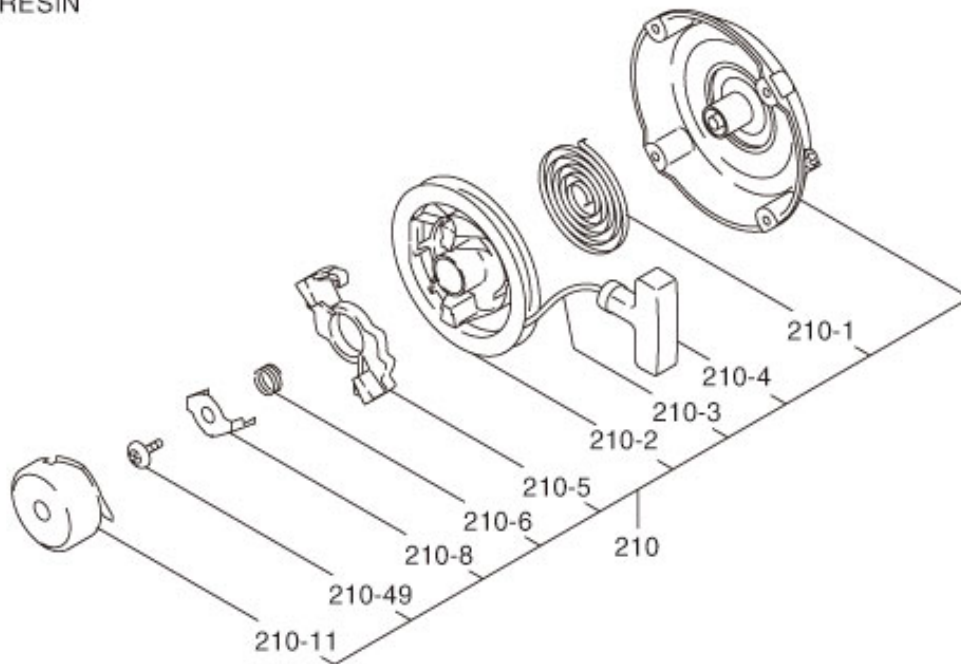

EX27


279052000W01

520 Cooling & Starting

Ref	Part Number.	Description	Qty	Remark
210	279-50301-20	RECOIL STARTER AY	1.00	
210-1	226-50716-08	SPIRAL SPRING	1.00	
210-2	279-50120-08	REEL	1.00	
210-3	279-50110-08	STARTER ROPE	1.00	
210-4	226-50701-08	STARTER KNOB	1.00	
210-5	279-50125-08	RACHET	2.00	
210-7	226-50752-08	RATCHET SPRING	2.00	
210-8	226-50741-08	FRICTION PLATE	1.00	
210-11	279-50145-08	STARTER PULLEY	1.00	
210-49	226-50753-18	CENTER SCREW	1.00	

600 Fuel & Lubricant

FIG. 600

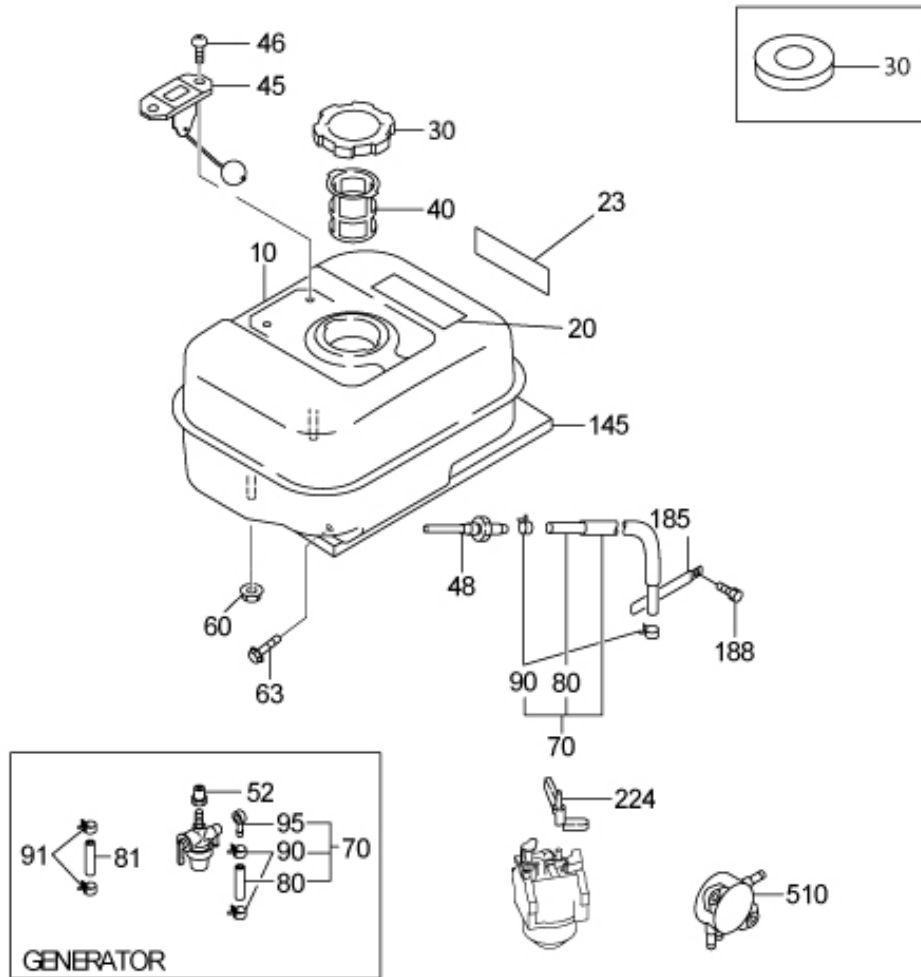

EX27


279060000W03

600 Fuel & Lubricant

Ref	Part Number.	Description	Qty	Remark
10	279-60102-11	FUEL TANK CP	1.00	
20	073-20057-60	LABEL(WARNING)	1.00	
23	279-95112-03	LABEL(MODEL)	1.00	
30	X43-04401-42	FUEL TANK CAP CP	1.00	
40	X64-13600-10	FUEL FILTER	1.00	
48	050-51200-20	UNION	1.00	
60	002-38080-00	FLANGE NUT	2.00	
63	011-00802-50	FLANGE BOLT	2.00	
70	279-62602-11	FUEL PIPE CP	1.00	
80	X85-10615-81	RUBBER PIPE	1.00	
90	X56-11100-60	HOSE CLAMP	2.00	
224	277-43801-01	CHOKE LEVER CP	1.00	

641 Fuel & Lubricant

FIG. 641

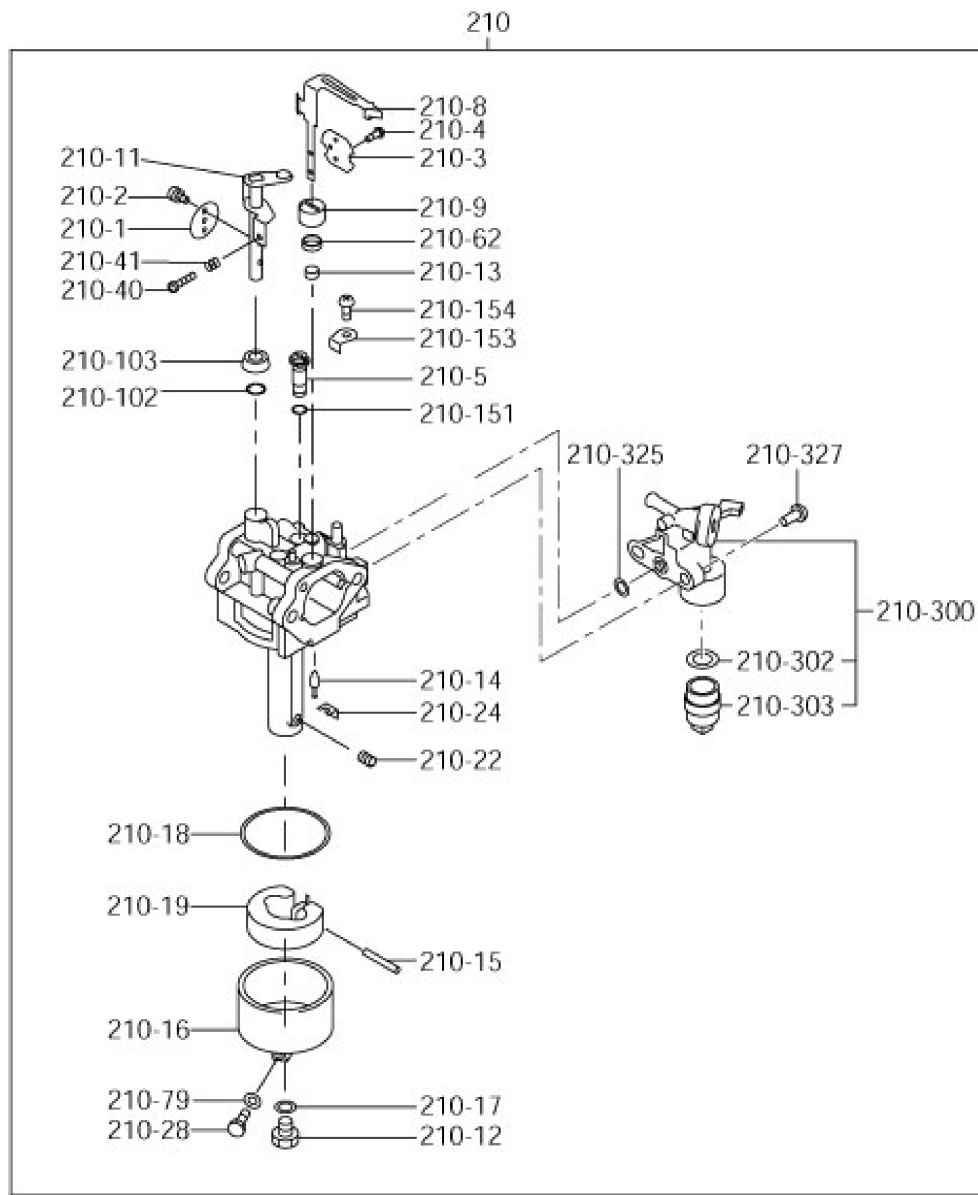

EX27


279064100W01

641 Fuel & Lubricant

Ref	Part Number.	Description	Qty	Remark
210	279-62362-00	CARBURETOR AY	1.00	
210-1	279-62536-08	THROTTLE VALVE	1.00	
210-2	209-62351-08	SCREW	1.00	
210-3	279-62527-08	CHOKE VALVE	1.00	
210-5	279-62421-08	PILOT JET	1.00	
210-8	279-62522-08	CHOKE LEVER	1.00	
210-11	279-62533-08	THROTTLE SHAFT-A	1.00	
210-12	150-62358-08	BOLT	1.00	
210-14	224-62305-08	NEEDLE VALVE	1.00	
210-15	214-62515-08	PIN	1.00	
210-16	279-62506-08	FLOAT BODY-A	1.00	
210-17	207-62345-08	INSERT WASHER	1.00	
210-18	206-62540-08	PACKING	1.00	
210-19	234-62506-08	FLOT-A	1.00	
210-22	279-62407-08	MAIN JET	1.00	
210-24	226-62701-18	CLIP	1.00	
210-28	279-62361-08	BOLT	1.00	
210-40	106-62556-08	SCREW	1.00	
210-41	283-62357-08	SPRING	1.00	
210-79	279-62541-08	WASHER	1.00	
210-102	246-62390-08	SEAL	1.00	
210-103	279-62551-08	RING	1.00	
210-151	106-62384-08	O-RING	1.00	
210-153	279-62360-08	PLATE	1.00	
210-154	279-62351-08	SCREW	1.00	
210-300	279-62103-10	COCK BODY-A	1.00	
210-302	277-62110-18	PACKING	1.00	
210-303	277-62100-18	CUP	1.00	
210-325	277-62552-08	O-RING	1.00	
210-327	165-62377-08	SCREW	2.00	

700 Electric Device

FIG. 700

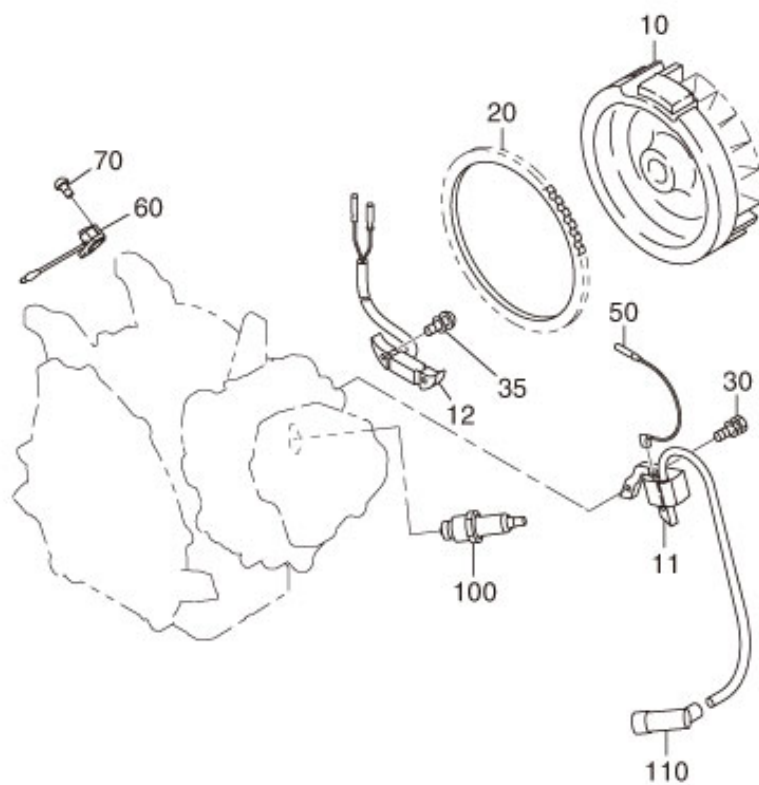

EX27


279070000W02

700 Electric Device

Ref	Part Number.	Description	Qty	Remark
10	279-79230-11	FLYWHEEL CP	1.00	
11	279-79430-01	IGNITION COIL CP	1.00	
30	001-04062-00	FLANGE BOLT	2.00	
50	277-73101-H1	WIRE 1 CP	1.00	
100	065-01401-50	SPARK PLUG	1.00	
110	065-50002-70	SPARK PLUG CAP	1.00	

770 Electric Device

FIG. 770

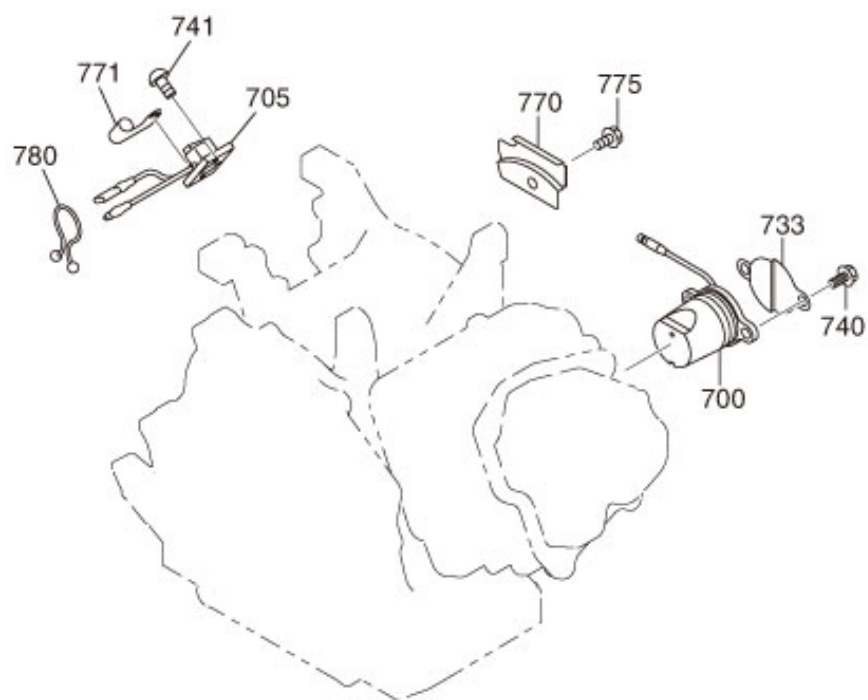


EX27

279077000W01

770 Electric Device

Ref	Part Number.	Description	Qty	Remark
700	279-76301-41	OIL SENSOR CP	1.00	
705	KU3-11071-01	FLOAT C/U CP5	1.00	
740	001-04061-40	FLANGE BOLT	2.00	
741	015-00400-90	TAPPING SCREW	2.00	
770	279-75501-13	WIRE CLAMP	1.00	
775	015-20600-50	TAPPING BOLT	1.00	
780	056-90000-20	PURSE LOCK	1.00	

900 Accessory

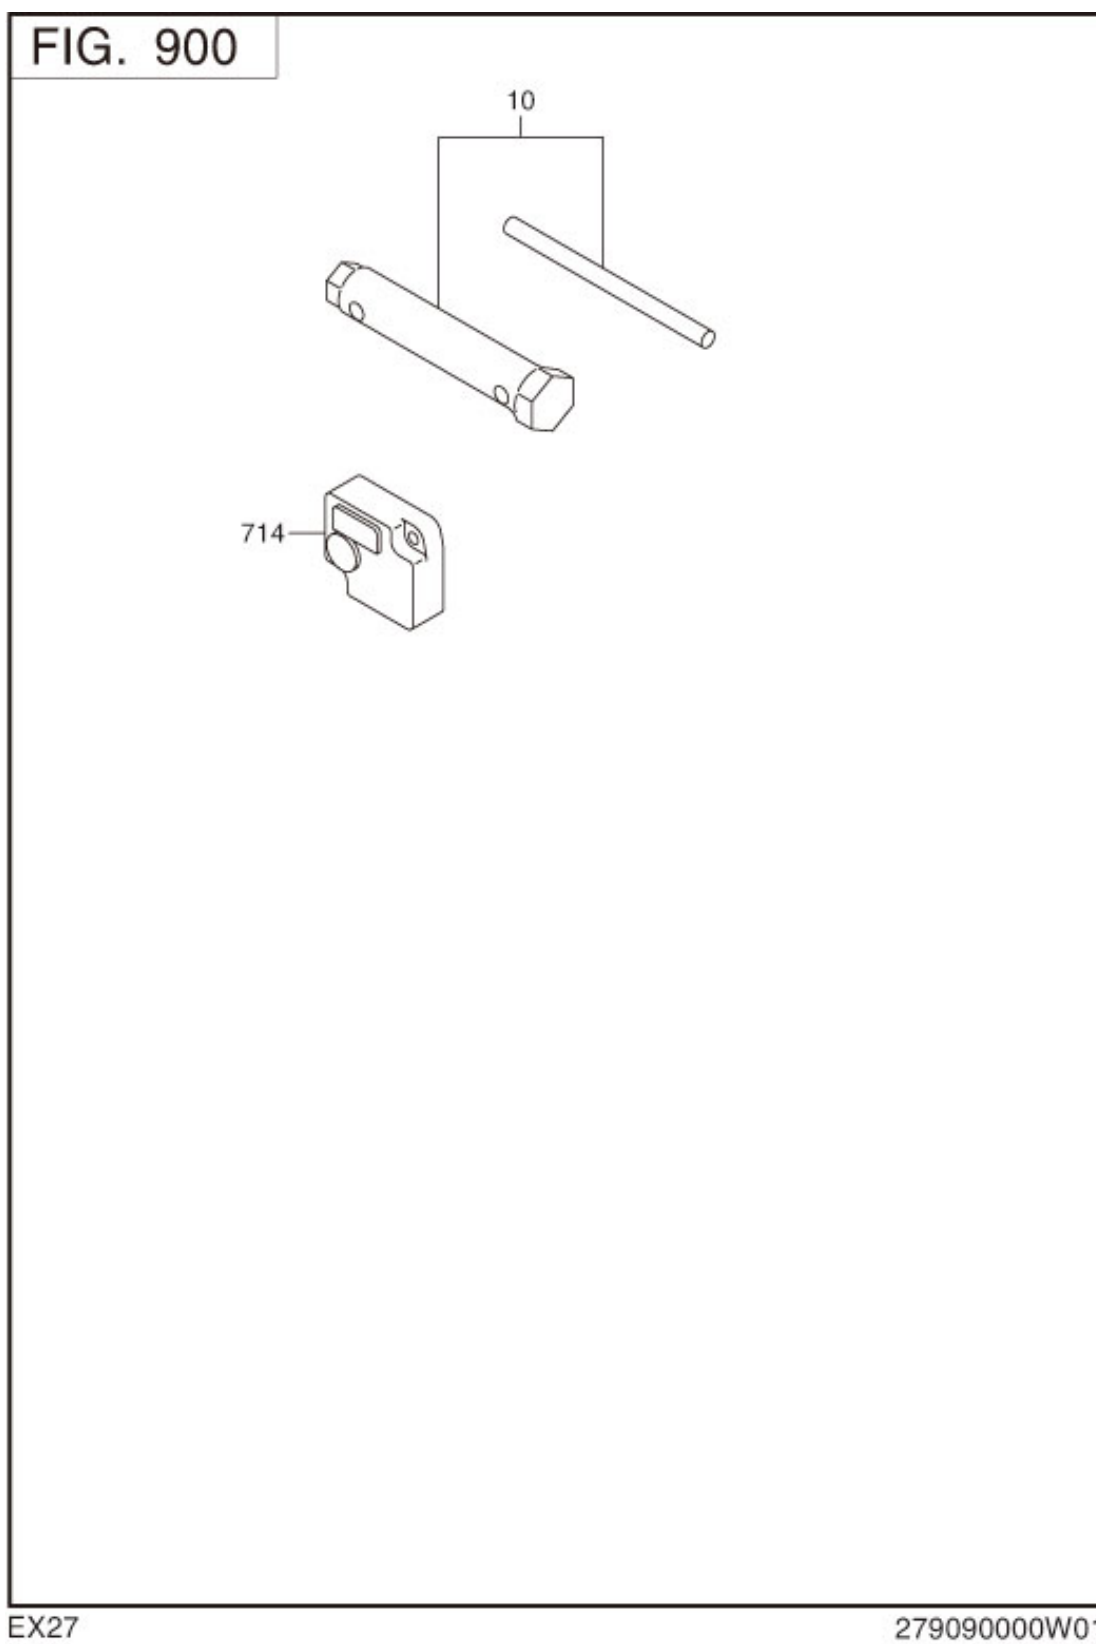

900 Accessory

Ref	Part Number.	Description	Qty	Remark
10	277-90301-H0	ACCESSORY TOOL KIT	1.00	

Part Number Index

The Part Number Index is a numeric index of all part numbers included in this manual. The index shows what page(s) the part is used on.

Part Number	Page	Part Number	Page	Part Number	Page
001-04061-40	27	246-62390-08	23	279-35602-H1	9
001-04062-00	10, 25	269-33701-03	9	279-35902-J3	10
001-04083-50	5	277-15011-03	5	279-35903-J3	9
001-14062-50	15	277-15503-01	5	279-36401-03	9
001-65081-20	17	277-16001-13	5	279-37601-01	9
002-35060-00	15	277-16010-01	5	279-42301-63	15
002-38060-00	10	277-35004-01	9	279-42502-73	15
002-38080-00	9, 21	277-35101-03	9	279-42701-23	15
003-13050-00	9, 15	277-35201-13	9	279-50110-08	19
004-31040-80	15	277-36201-00	9	279-50120-08	19
004-31062-50	15	277-36202-00	9	279-50125-08	19
010-50604-10	5	277-36501-03	9	279-50145-08	19
010-50802-50	5	277-36902-03	9	279-50301-20	19
011-00600-10	9, 17	277-36911-03	9	279-51202-01	17
011-00600-20	5, 9, 15, 17	277-36913-13	9	279-52702-13	17
011-00600-30	17	277-37001-H1	9	279-52711-11	17
011-00802-40	5	277-37101-03	9	279-60102-11	21
011-00802-50	21	277-38601-03	9	279-62103-10	23
011-00803-10	5	277-38703-03	9	279-62351-08	23
011-00803-20	9	277-41902-03	5	279-62360-08	23
013-10500-30	15	277-42201-33	15	279-62361-08	23
014-90500-20	9	277-42801-23	15	279-62362-00	23
015-00400-60	9	277-43303-01	15	279-62407-08	23
015-00400-90	27	277-43502-03	15	279-62421-08	23
015-20600-50	27	277-43701-01	15	279-62506-08	23
015-20600-90	9	277-43801-01	21	279-62522-08	23
017-00500-30	9	277-43902-03	15	279-62527-08	23
018-01800-10	7	277-44501-03	15	279-62533-08	23
018-06060-20	15	277-45004-K1	5	279-62536-08	23
021-11400-20	5	277-45103-03	15	279-62541-08	23
021-32000-50	5	277-46002-01	15	279-62551-08	23
021-70600-70	15	277-62100-18	23	279-62602-11	21
024-00600-30	9	277-62110-18	23	279-63601-23	5
032-30300-10	7	277-62552-08	23	279-75501-13	27
040-11400-30	5	277-73101-H1	25	279-76301-41	27
044-00600-20	5	277-90301-H0	29	279-79230-11	25
044-03001-60	5	279-10104-61	5	279-79430-01	25
050-51200-20	21	279-11004-21	5	279-95112-03	21
056-51800-10	7	279-13001-21	5	279-99001-27	5
056-90000-20	27	279-15001-33	5	283-62357-08	23
060-01500-11	5	279-20902-21	7	KU3-11071-01	27
060-03003-41	5	279-22501-30	7	X43-04401-42	21
060-03003-70	5	279-23001-03	7	X56-11100-60	21
065-01401-50	25	279-23301-13	7	X64-13600-10	21
065-50002-70	25	279-23401-H3	7	X85-10615-81	21
073-20057-60	21	279-23403-H3	7		
073-20058-20	17	279-23404-H3	7		
106-62384-08	23	279-23511-17	7		
106-62556-08	23	279-23512-17	7		
132-10KA0-31	9	279-23513-17	7		
150-62358-08	23	279-24101-14	7		
165-62377-08	23	279-30111-L1	9		
206-62540-08	23	279-31601-11	9		
207-26001-03	7	279-32607-07	13		
207-62345-08	23	279-32615-60	13		
209-62351-08	23	279-32634-28	13		
214-62515-08	23	279-32643-18	13		
224-62305-08	23	279-32650-18	13		
226-50701-08	19	279-32720-08	13		
226-50716-08	19	279-32730-08	13		
226-50741-08	19	279-32740-08	13		
226-50752-08	19	279-32760-08	10		
226-50753-18	19	279-32902-J1	9		
226-62701-18	23	279-33401-H3	9		
234-62506-08	23	279-33501-H3	9		
237-14202-03	5	279-33601-03	9		
237-45004-23	15	279-34201-31	9		

Part Description Index

The Part Description Index is an alphabetical index of all part descriptions included in this manual. The index shows what page(s) the part is used on.

A

ACCESSORY TOOL KIT.....29
ADJUST SCREW.....9
AIR CLEANER AY.....13

B

BAFFLE 1(CASE) CP.....17
BAFFLE 2(HEAD).....17
BALANCER SHAFT.....7
BALL BEARING.....5
BLOWER HOUSING CP.....17
BOLT.....17, 23
BOLT AND WASHER AY.....15

C

CAM SHAFT CP.....9
CARBURETOR AY.....23
CENTER SCREW.....19
CHAIN GUIDE.....9
CHOKE LEVER.....23
CHOKE LEVER CP.....21
CHOKE VALVE.....23
CLAMP.....15
CLIP.....7, 9, 15, 23
COCK BODY-A.....23
COLLET-VALVE.....9
CONNECTING ROD AY.....7
CONNECTING ROD BOLT.....7
COVER.....13
CRANK CASE CP.....5
CRANK SHAFT CP.....7
CUP.....23
CYLINDER HEAD CP.....5

D

DEFLECTOR CP.....9

E

ELBOW COMPAIR/C.....13
ELEMENT SET.....13
EXHAUST VALVE.....9

F

FLANGE BOLT.....5, 9-10, 15, 17, 21, 25, 27
FLANGE NUT.....7, 9-10, 21
FLOAT BODY-A.....23
FLOAT C/U CP5.....27
FLOT-A.....23
FLYWHEEL CP.....25
FRICTION PLATE.....19
FRICTION WASHER.....15
FUEL FILTER.....21
FUEL PIPE CP.....21
FUEL TANK CAP CP.....21
FUEL TANK CP.....21

G

GASKET.....5, 13
GASKET (HEAD).....5
GASKET SET.....5
GASKET(MUFFLER).....9
GASKET(ROCKER COVER).....5
GASKET1(INSULATOR).....10
GASKET2(INSULATOR).....9
GOVERNOR GEAR CP.....5
GOVERNOR LEVER.....15
GOVERNOR ROD CP.....15
GOVERNOR SHAFT.....15
GOVERNOR SLEEVE.....5
GOVERNOR SPRING.....15

H

HOSE CLAMP.....21

I

IGNITION COIL CP.....25
INSERT WASHER.....23
INSULATOR CP.....9
INTAKE VALVE.....9

K

KEY.....7

L

LABEL.....13
LABEL(MODEL).....21
LABEL(TRADE MARK).....17
LABEL(WARNING).....21
LINK ROD CP.....15

M

MAIN BEARING COVER C.....5
MAIN JET.....23
MUFFLER COVER CP.....9
MUFFLER CP.....9

N

NEEDLE VALVE.....23
NUT.....9, 13, 15

O

O RING.....9
O-RING.....23
OIL GAUGE.....5
OIL SEAL.....5
OIL SENSOR CP.....27

P

PACKING.....13, 23
PILOT JET.....23

PIN.....23
PIN(CAM SHAFT).....9
PIN(ROCKER) CP.....9
PIN(SPRING).....9
PIN(TENTIONER).....9
PIPE KNOCK.....5
PISTON.....7
PISTON PIN.....7
PISTON RING SET.....7
PLATE.....23
PLUG.....5
PURSE LOCK.....27

R

RACHET.....19
RATCHET SPRING.....19
RECOIL STARTER AY.....19
REEL.....19
RELEASE LEVER.....9
RETURN SPRING.....9, 15
RING.....23
ROCKER ARM(EX) AY.....9
ROCKER ARM(IN) AY.....9
ROCKER COVER CP.....5
ROD SPRING.....15
RUBBER PIPE.....10, 21

S

SCREW.....15, 23
SCREW AND WASHER AY.....15
SCREW,PANHEAD.....15
SEAL.....23
SELF LOCK NUT.....15
SPARK ARRESTER CP.....9
SPARK PLUG.....25
SPARK PLUG CAP.....25
SPEED CONT.BRKT CP.....15
SPEED CONT.LEVER CP.....15
SPIRAL SPRING.....19
SPRING.....23
SPRING (ADJUST).....15
SPRING RETAINER.....9
SPRING(TENTIONER).....9
STARTER KNOB.....19
STARTER PULLEY.....19
STARTER ROPE.....19
STEM SEAL.....5
STOP PLATE.....15
STUD.....5

T

TAPPING BOLT.....9, 27
TAPPING SCREW.....9, 27
TENTIONER.....9
THROTTLE SHAFT-A.....23
THROTTLE VALVE.....23
TIMING CHAIN CP.....9

Part Description Index (continued)

U

UNION.....21

V

VALVE GUIDE.....5

VALVE SPRING.....9

W

WASHER.....15, 23

WIRE 1 CP.....25

WIRE CLAMP.....27

WOODRUFF KEY.....7

This Page Intentionally Left Blank

PRINTED IN THE USA

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047

Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com