

PARTS MANUAL

MODEL
EH65

EH650DB1120

12/15



SUBARU

Industrial Power Products

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047 - Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com


© 2015 Subaru Industrial Power Products

Group Index

Group Name	Page
100 Crankcase.....	4
200 Crankshaft.....	8
300 Intake & Exhaust.....	10
315 Intake & Exhaust.....	12
400 Governor.....	14
500 Cooling & Starting.....	16
600 Fuel & Lubricant.....	18
640 Carburetor.....	20
700 Electric Device.....	22
720 Starter Motor.....	24
 Part Number Index.....	 26
Part Description Index.....	27

100 Crankcase

FIG. 101

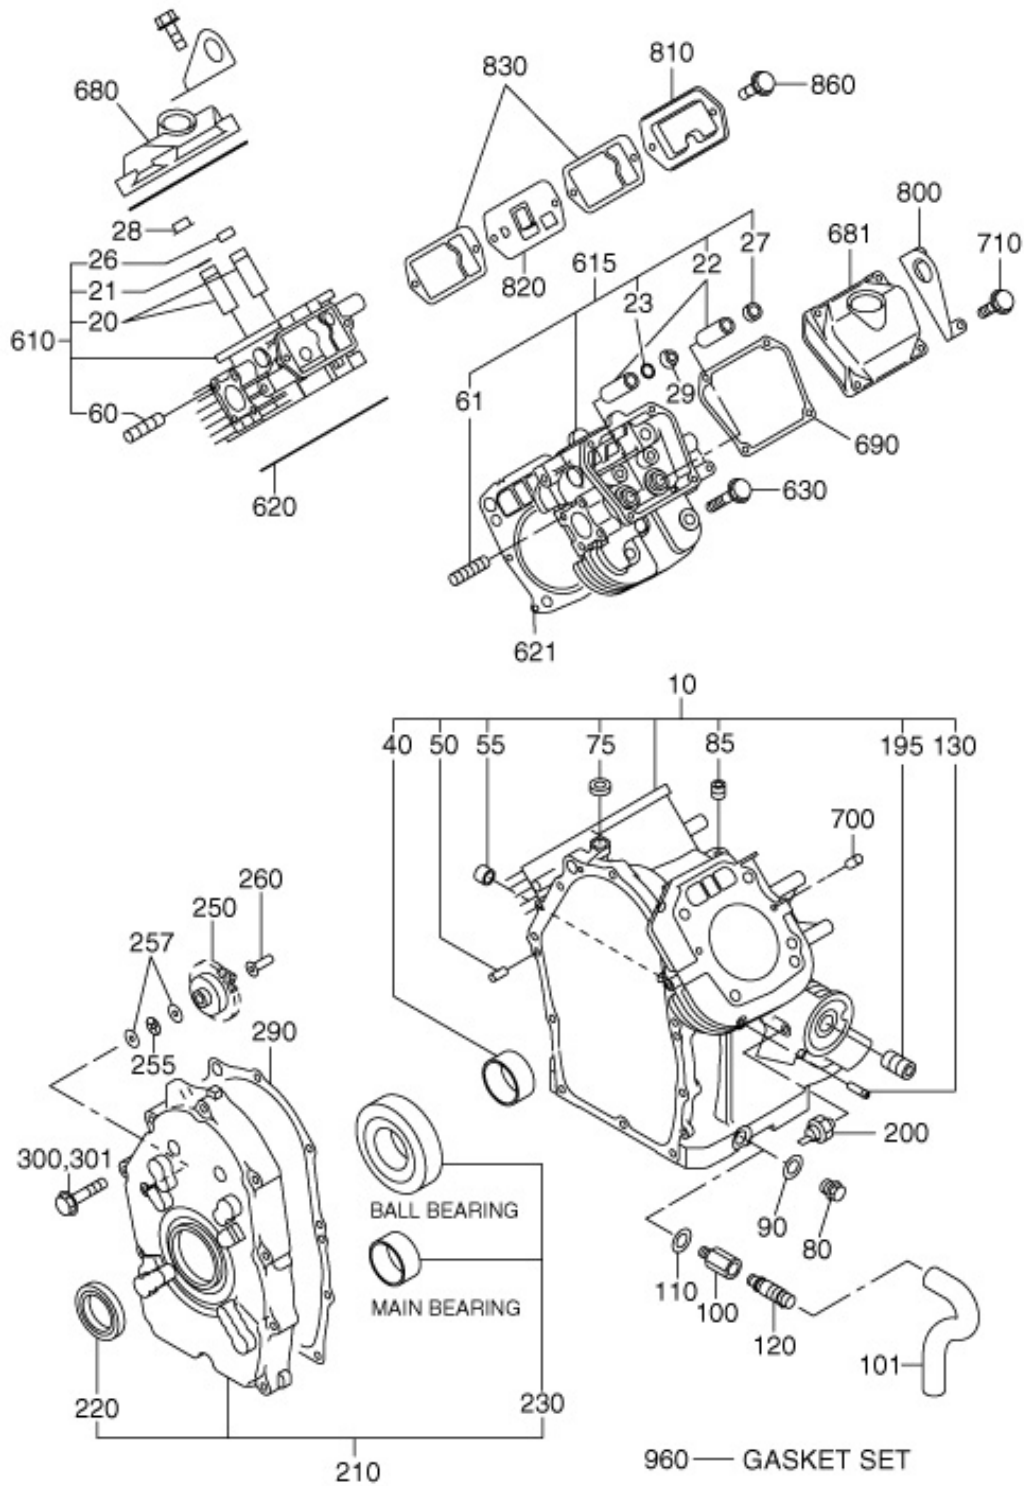

EH65/64/63

263010001W00

100 Crankcase

Ref	Part Number.	Description	Qty	Remark
10	263-10111-21	CRANKCASE CP	1	
20	263-14202-03	VALVE GUIDE	2	
21	056-51000-50	CLIP	1	
22	263-14202-03	VALVE GUIDE	2	
23	056-51000-50	CLIP	1	
26	132-11AA1-10	SEAL EX VALVE	1	
27	132-11AA1-10	SEAL EX VALVE	1	
28	263-35341-03	RETAINER PLATE	1	
29	263-35341-03	RETAINER PLATE	1	
40	263-15805-03	MAIN BEARING	1	
50	031-00801-10	DOWEL PIN	2	
55	263-55601-03	PIPE	2	
60	010-50802-90	STUD	4	
61	010-50802-90	STUD	4	
75	044-00800-10	OIL SEAL	1	
80	040-11400-30	PLUG	2	
85	235-15421-03	BLIND PLUG	1	
90	021-11400-20	GASKET	2	
130	159-65401-03	PIPE(PULSE)	1	
195	263-15901-03	UNION	1	
200	263-76102-H1	SWITCH OIL PRESSURE	1	
210	263-11001-51	MAINBEARING COVER CP	1	
220	044-04200-30	OIL SEAL	1	
230	060-04500-10	BALL BEARING	1	
250	263-45004-11	GOVERNOR GEAR CP	1	
255	263-46215-A3	THRUST BEARING	1	
257	263-46214-03	WASHER	2	
260	277-41902-01	GOVERNOR SLEEVE CP	1	
290	263-16002-A3	GASKET (M.B COVER)	1	
300	011-00802-20	FLANGE BOLT	10	
610	263-13211-11	CYLINDER HEAD 1 CP	1	
615	263-13311-11	CYLINDER HEAD 2 CP	1	
620	263-15021-41	GASKET 1 (CYL HEAD)	1	
621	263-15121-31	GASKET 2 (CYL HEAD)	1	
630	011-01000-70	FLANGE BOLT	8	
680	263-15505-03	ROCKER COVER	1	
681	263-15503-03	ROCKER COVER	1	
690	263-16111-03	GASKET(ROCKER COVER)	2	
700	031-00600-20	DOWEL PIN	4	


100 Crankcase

Ref	Part Number.	Description	Qty	Remark
710	011-00601-01	FLANGE BOLT	8	
800	280-19001-03	HOOK	2	
810	263-14302-03	BREATHER COVER	1	
820	280-14401-A1	BREATHER PLATE CP	1	
830	263-16007-03	GASKET(BREATHERPLATE	2	
860	011-00600-30	FLANGE BOLT	2	
960	263-99001-27	GASKET SET	1	

This Page Intentionally Left Blank

200 Crankshaft

FIG. 200

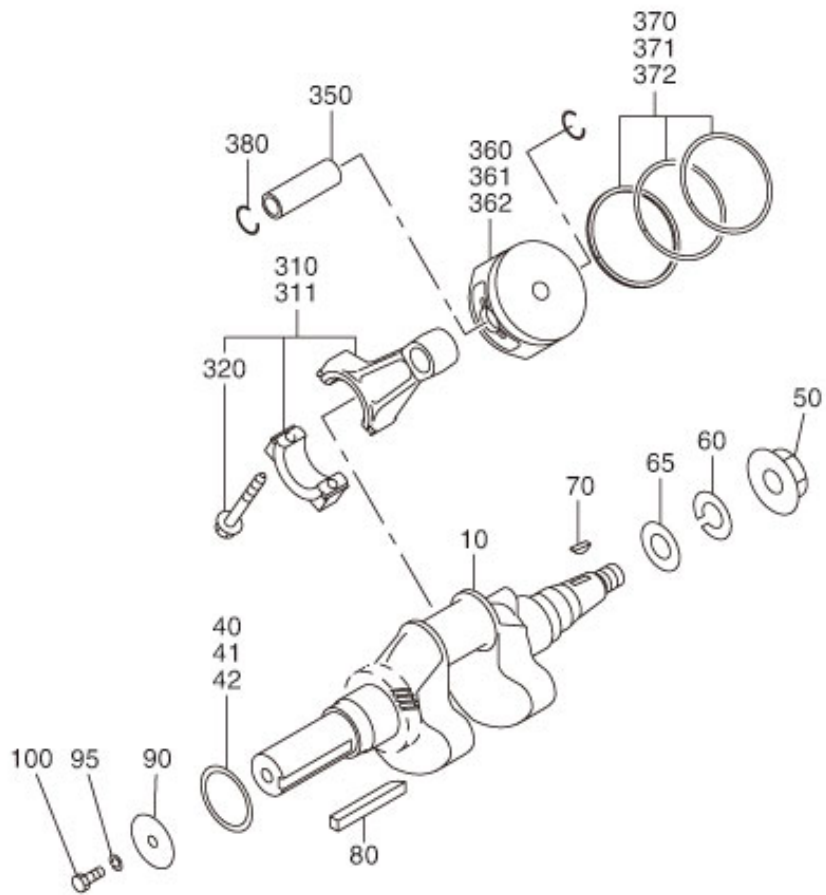


EH65/64/63

263020000W01

200 Crankshaft

Ref	Part Number.	Description	Qty	Remark
10	263-21311-11	CRANKSHAFT CP	1	
40	263-25012-A3	SPACER	1	
41	263-25013-A3	SPACER	1	
42	263-25014-A3	SPACER	1	
50	018-01800-10	FLANGE NUT	1	
65	003-10180-00	WASHER	1	
70	005-32054-01	WOODRUFF KEY	1	
80	207-26001-03	KEY	1	
310	263-22601-30	CONNECTING ROD AY	2	
320	001-05084-00	FLANGE BOLT	2	
350	263-23301-33	PISTON PIN	2	
360	263-23421-J3	PISTON	2	
370	263-23501-17	PISTON RING SET	2	
380	056-52100-20	CLIP	4	


300 Intake & Exhaust

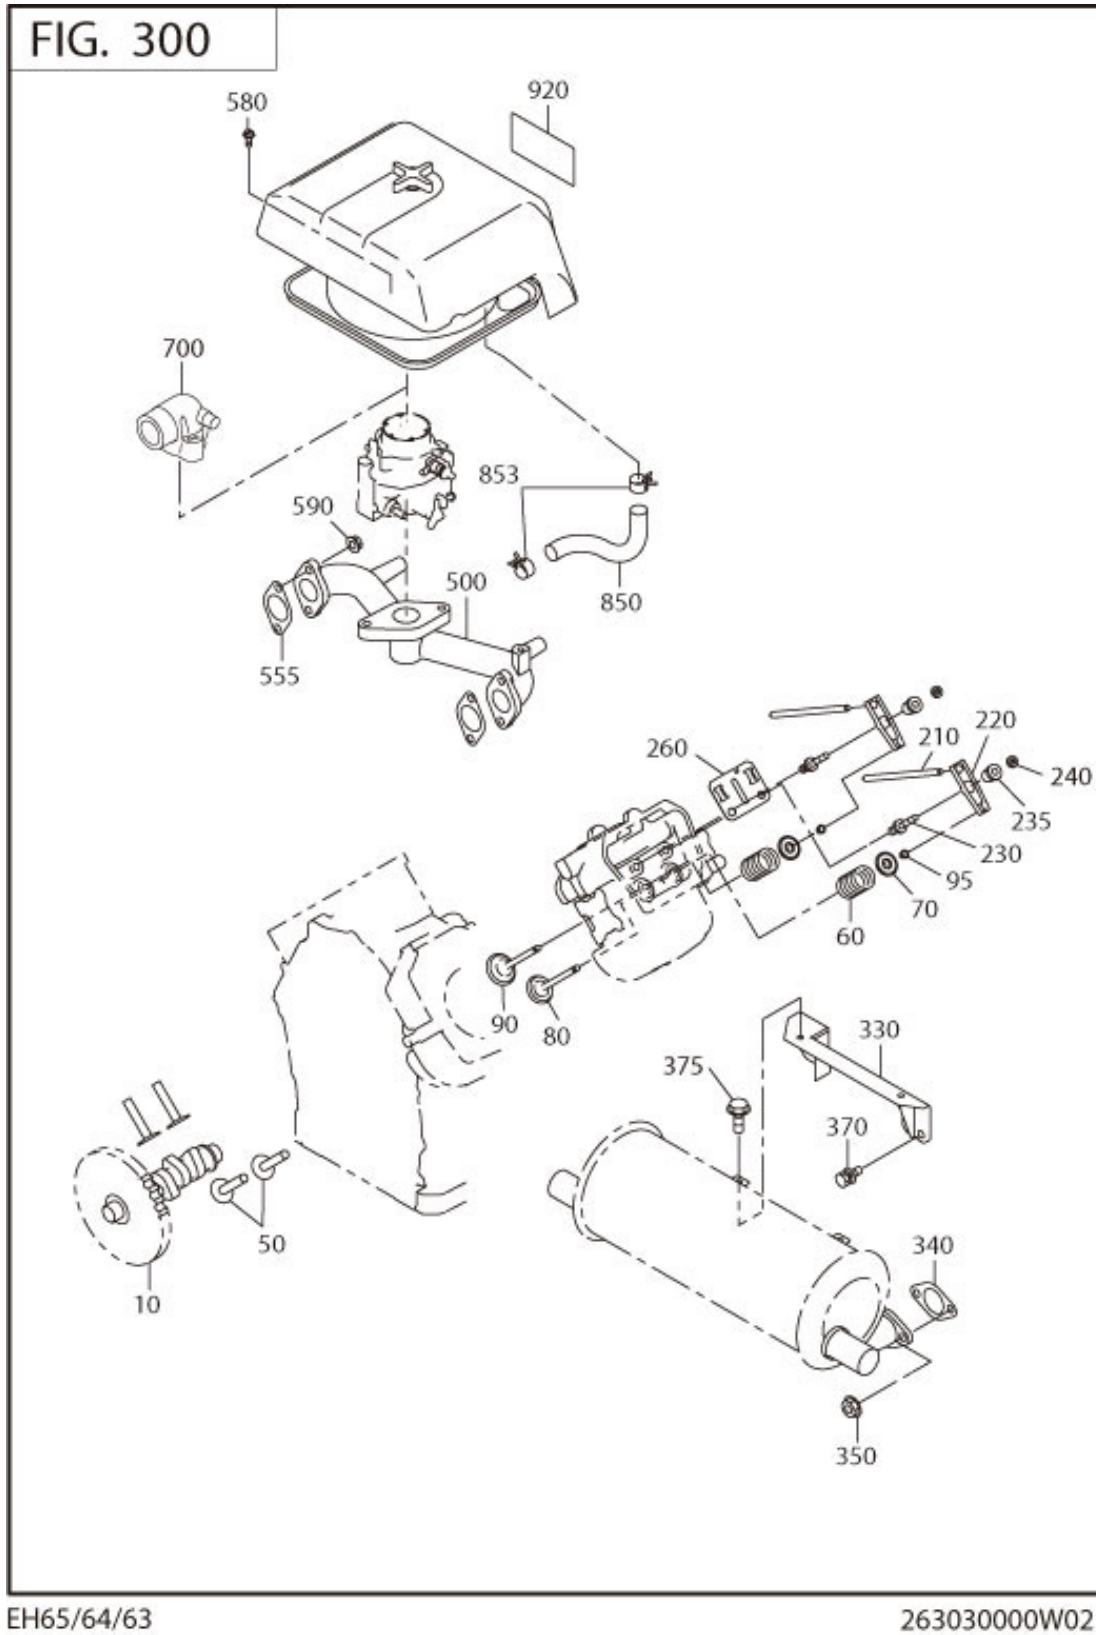

300 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
10	280-31701-13	CAM SHAFT	1	
50	263-33301-A3	TAPPET	4	
60	246-33611-03	VALVE SPRING	4	
70	246-33711-13	SPRING RETAINER	4	
80	263-33401-H3	INTAKE VALVE	2	
90	263-33502-H3	EXHAUST VALVE	2	
95	246-35501-03	COLLET-VALVE	8	
210	263-35331-01	PUSH ROD CP	4	
220	267-36102-03	ROCKER ARM	4	
230	263-35801-03	BOLT(PIVOT)	4	
235	267-35701-03	PIVOT	4	
240	017-00601-10	NUT	4	
260	263-37002-A3	GUIDE PLATE	2	
330	263-37001-H1	BRACKET(MUFFLER)	1	
340	270-35201-01	GASKET CP (MUFFLER)	2	
350	018-00800-10	FLANGE NUT	4	
370	001-14082-00	BOLT AND WASHER AY	2	
375	011-00600-30	FLANGE BOLT	4	
500	280-33001-J3	INTAKE MANIFOLD	1	
555	263-35503-A3	GASKET(IN MANIFOLD)	2	
580	011-00600-20	FLANGE BOLT	3	
590	002-38080-00	FLANGE NUT	4	
850	263-18003-03	RUBBER PIPE	1	
853	056-12000-20	HOSE CLAMP	2	
920	263-91722-03	LABEL(TRADE MARK)	1	

315 Intake & Exhaust

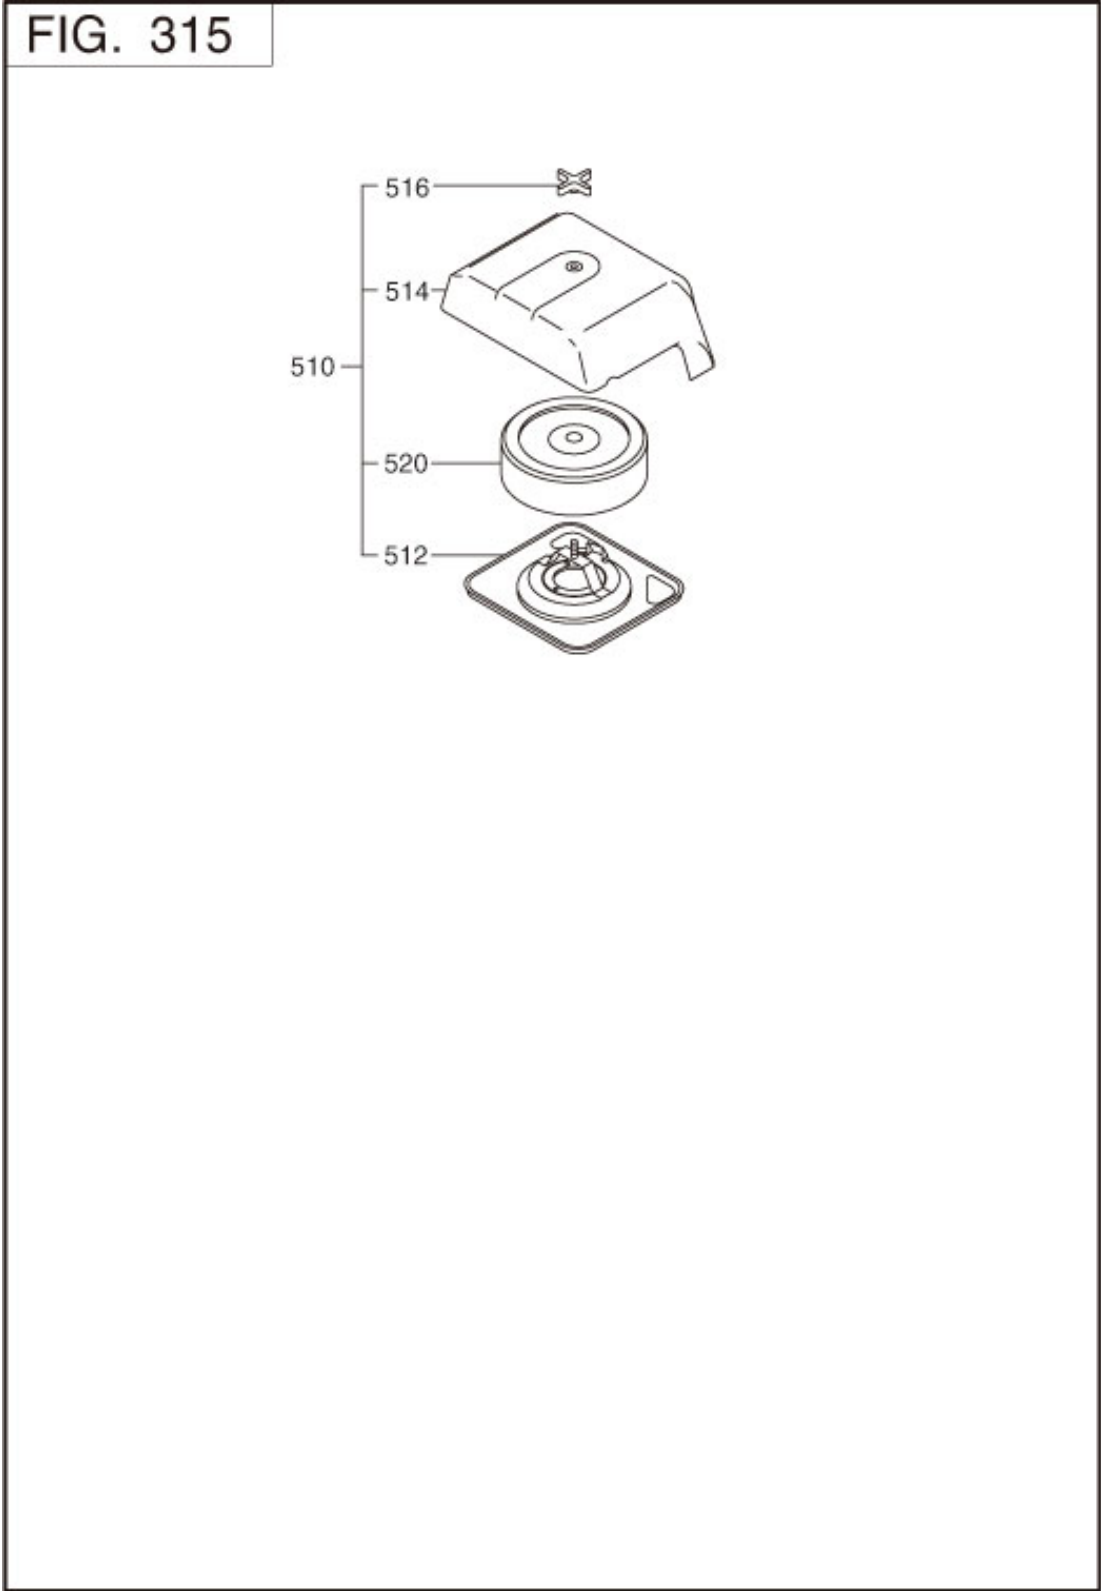


EH65/64/63

263031500W01

315 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
510	280-32602-00	AIR CLEANER AY	1	
512	280-32625-01	CLEANER BASE CP	1	
514	263-32630-03	CLEANER COVER	1	
516	263-32640-01	WING NUT	1	
520	263-32610-A1	CLEANER ELEMENT CP	1	

400 Governor

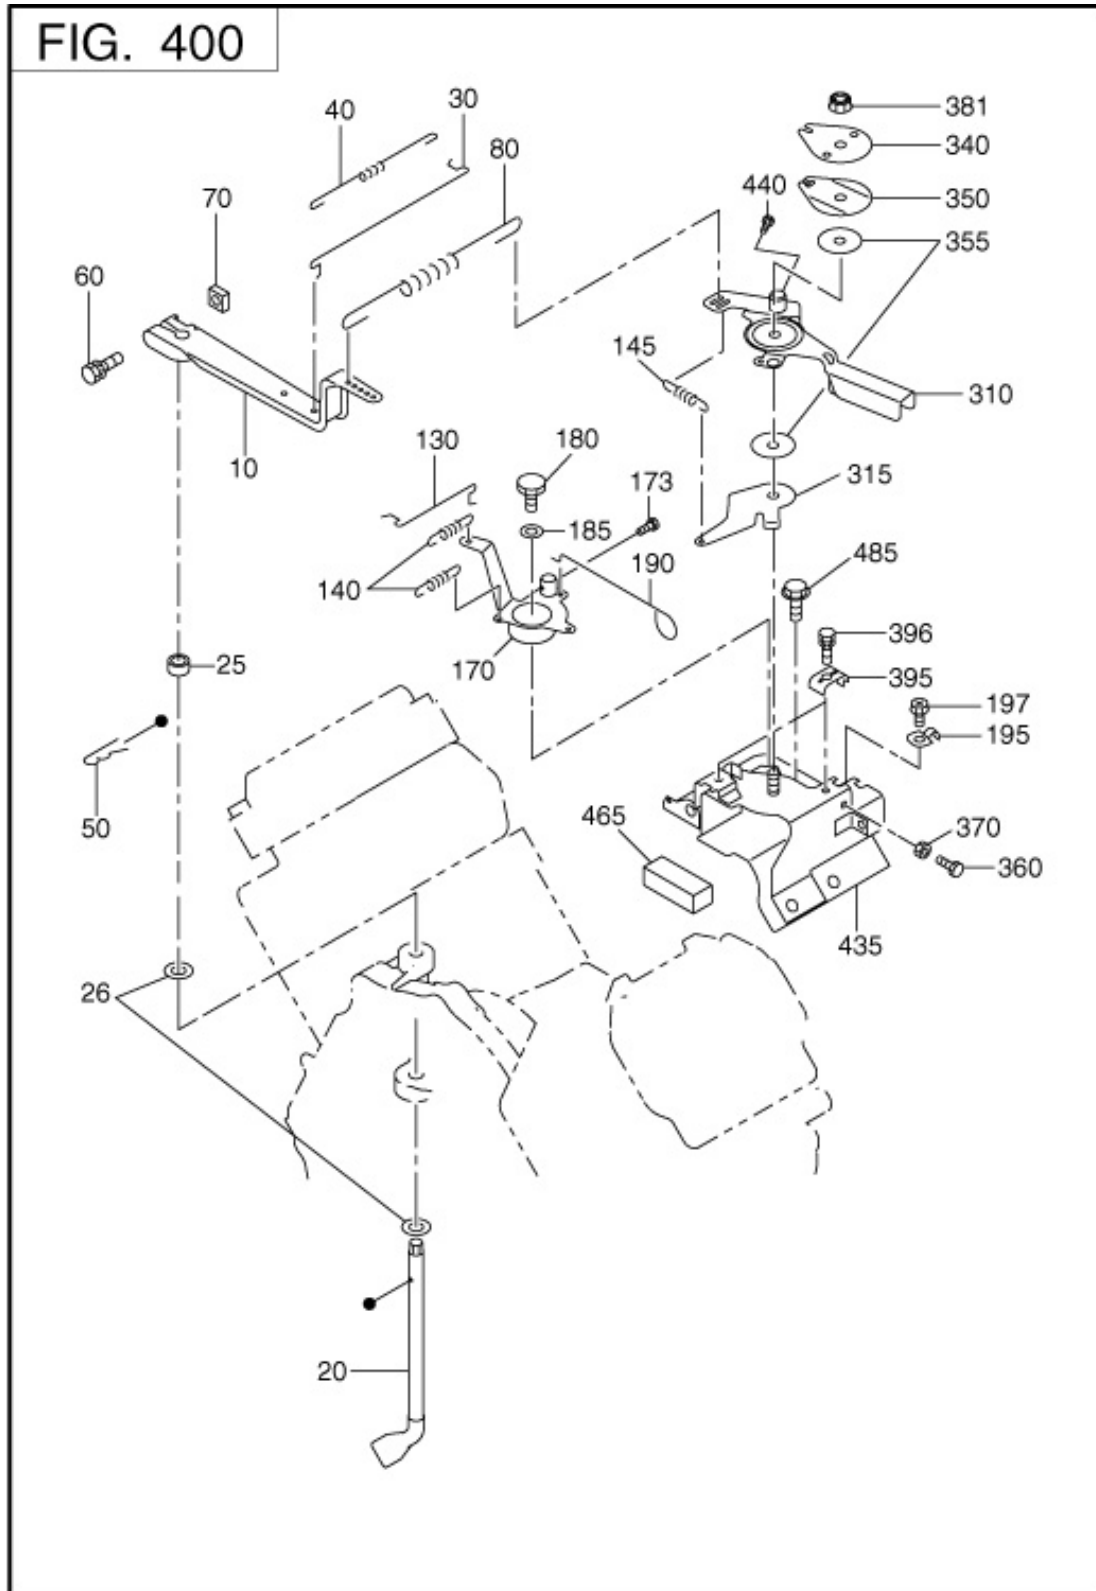


EH65/64/63

263040001W01

400 Governor

Ref	Part Number.	Description	Qty	Remark
10	263-42301-B3	GOVERNOR LEVER	1	
20	263-42201-A3	GOVERNOR SHAFT	1	
25	X23-00801-50	SPACER	1	
30	263-42701-A3	GOVERNOR ROD	1	
40	263-42801-03	ROD SPRING	1	
50	005-11060-01	SNAP PIN	1	
60	001-14063-00	BOLT AND WASHER AY	1	
70	018-60600-20	NUT	1	
80	263-42503-03	GOVERNOR SPRING	1	
130	263-46011-A3	CHOKE CONTROL ROD	1	
140	261-45201-03	RETURN SPRING	2	
170	263-46001-03	CHOKE CONTROL LINKCP	1	
180	226-43101-01	LINK PIVOT CP	1	
185	003-22100-00	WAVED WASHER	1	
190	263-43901-A3	CHOKE KNOB	1	
195	263-46010-03	CLAMP(CHOKE KNOB)	1	
197	015-20500-10	TAPPING SCREW	1	
310	263-43301-A3	SPEED CONTROL LEV CP	1	
340	227-43501-13	STOP PLATE	1	
350	263-45002-03	SPRING WASHER	1	
355	021-70600-30	FRICTION WASHER	2	
360	011-50500-20	BOLT	1	
370	002-27050-00	NUT	1	
381	002-35060-00	SELF LOCK NUT	1	
395	261-43901-03	CLAMP	2	
396	001-17052-00	BOLT & WASHER AY	2	
435	263-45011-A2	BRACKET UN(SPD CTL)	1	
440	011-50500-20	SCREW	1	

 
FIG. 500



500 Cooling & Starting

Ref	Part Number.	Description	Qty	Remark
10	263-51121-H2	BLOWER HOUSING UN	1	
25	073-20057-60	LABEL(CAUTION)	1	
35	263-91802-03	LABEL(ENGINE NAME)	1	
40	011-00600-30	FLANGE BOLT	8	
60	263-52612-A1	CYLINDER BAFFLE 1 CP	1	
61	263-52704-A1	CYLINDER BAFFLE 2 CP	1	
62	263-52802-A3	CYLINDER BAFFLE 3	1	
63	263-52912-A2	CYLINDER BAFFLE 4 UN	1	
80	011-00600-20	FLANGE BOLT	8	
110	263-54101-H2	COOLING BLOWER UN	1	
113	001-14061-60	BOLT AND WASHER AY	4	

 
FIG. 600



600 Fuel & Lubricant

Ref	Part Number.	Description	Qty	Remark
55	263-65012-A3	FILTER,FUEL	1	
80	X85-10616-60	RUBBER PIPE	1	
81	X85-10613-81	RUBBER PIPE	1	
90	263-68501-03	HOSE CLAMP	2	
91	263-68501-03	HOSE CLAMP	2	
183	056-61000-21	CLAMP	1	
230	085-10301-10	RUBBER PIPE	1	
235	206-75501-01	CLAMP CP	2	
270	263-63603-01	OIL GAUGE CP	1	
290	263-66201-A3	GASKET(CARBURETOR)	1	
510	267-62201-10	FUEL PUMP AY	1	
515	263-65002-A3	BRACKET(FUEL PUMP)	1	
520	263-62653-B1	PULSE PIPE CP	1	
522	X85-10616-30	RUBBER PIPE	1	
523	263-68501-03	HOSE CLAMP	2	
540	011-00600-20	FLANGE BOLT	5	
573	011-00801-10	FLANGE BOLT	2	
610	263-63901-13	INNER ROTOR	1	
615	263-63902-13	OUTER ROTOR	1	
620	263-64002-01	OIL PUMP COVER CP	1	
623	044-03501-70	OIL SEAL	1	
625	024-08800-10	O RING	1	
640	011-00600-30	FLANGE BOLT	4	
650	263-64302-02	OIL PUMP FILTER UN	1	
653	263-65011-A3	FLANGE BOLT	1	
660	248-65801-10	OIL FILTER AY	1	
670	263-65001-13	PLUG(OIL RELIEF)	1	
673	003-70140-00	GASKET,ALUMINUM	1	
677	263-66001-03	SPRING(RELIEF VALVE)	1	
680	006-90308-00	STEEL BALL	1	
715	280-63602-A1	OIL FILLER CAP CP	1	
718	024-02600-20	O RING	1	

640 Carburetor

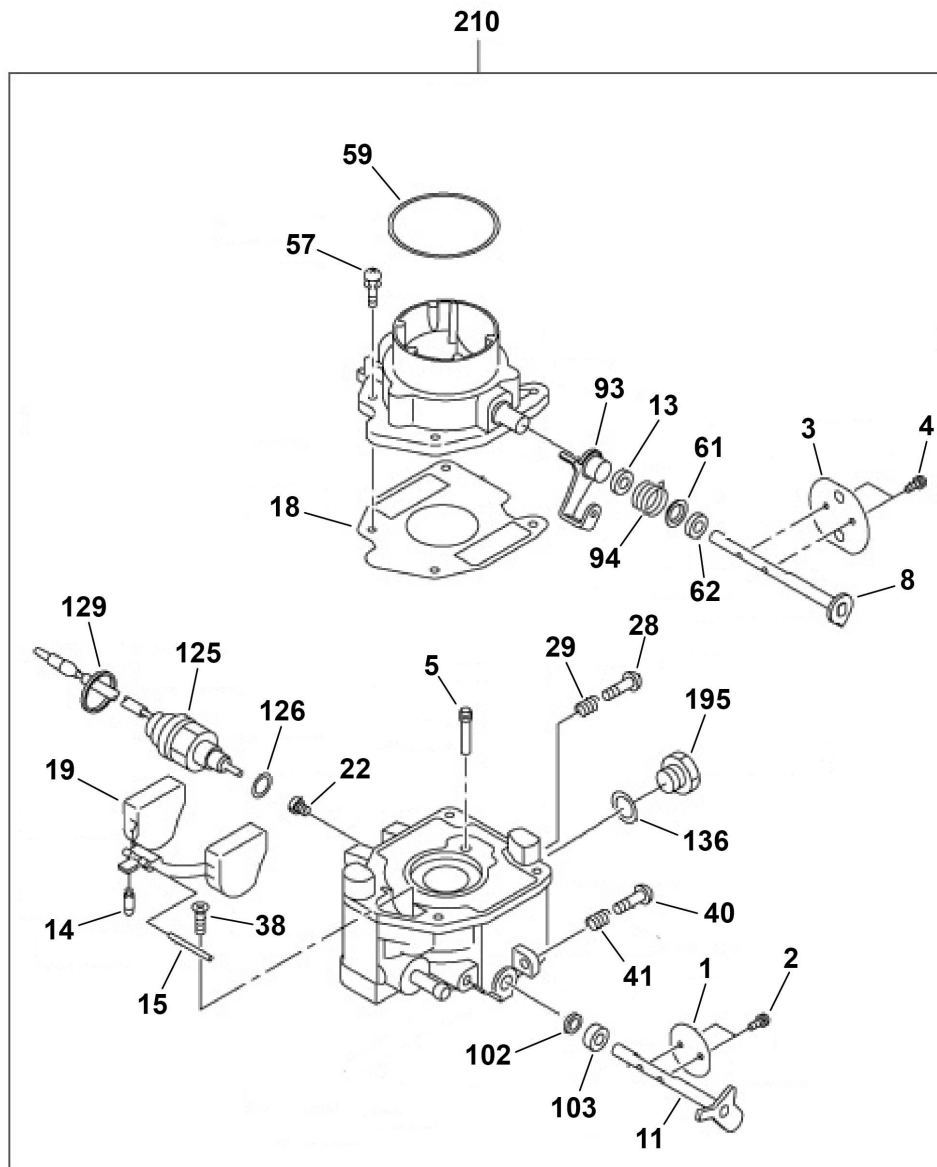


0640 0010 000

640 Carburetor

Ref	Part Number.	Description	Qty	Remark
210	263-62481-10	CARBURETOR AY	1	
1	263-62535-08	VALVE,THROTTLE	1	
2	261-62352-08	SCREW,VALVE SET	2	
3	263-62528-08	VALVE,CHOKE	1	
4	258-62555-08	SCREW SET(VALVE)	2	
5	258-62420-08	JET(SLOW)	1	
8	263-62520-08	SHAFT ASSY,CHOKE	1	
11	263-62531-08	SHAFT ASSY,THROTTLE	1	
13	258-62551-08	RING(CHOKE LEVER)	1	
14	226-62501-08	VALVE,FLOAT	1	
15	258-62515-08	FLOAT PIN	1	
18	280-62545-08	GASKET,AIR HORN	1	
19	280-62505-08	FLOAT	1	
22	263-62400-08	JET,MAIN	1	
28	215-62353-08	SCREW,DRAIN	1	
29	215-62446-08	SPRING,DRAIN	1	
38	258-62556-08	SCREW SET(FLOAT PIN)	1	
40	263-62451-08	SCREW,THRO.ADJUST	1	
41	258-62445-08	SPRING(ADJUST SCREW)	1	
57	258-62450-08	SCREW SET(AIR HORN)	4	
59	263-62560-08	O-RING,AIR HORN	1	
61	280-62551-08	COLLAR,CHOKE	1	
62	258-62554-08	FILTER(CHOKE SHAFT)	1	
93	263-62524-08	LEVER ASSY,CHOKE	1	
94	263-62445-08	SPRING,CHOKE	1	
102	226-62580-08	FILTER,AIR	1	
103	258-62570-08	COLLAR(THRO.SHAFT)	1	
125	263-62556-08	VALVE CP,(SOLENOID)	1	
126	258-62546-08	GASKET,MAIN PASSAGE	1	
129	258-62566-08	CLAMP(SOLENOID)WIRE	1	
136	263-62555-08	GASKET	1	
195	263-62552-08	PLUG	1	

700 Electric Device

FIG. 700

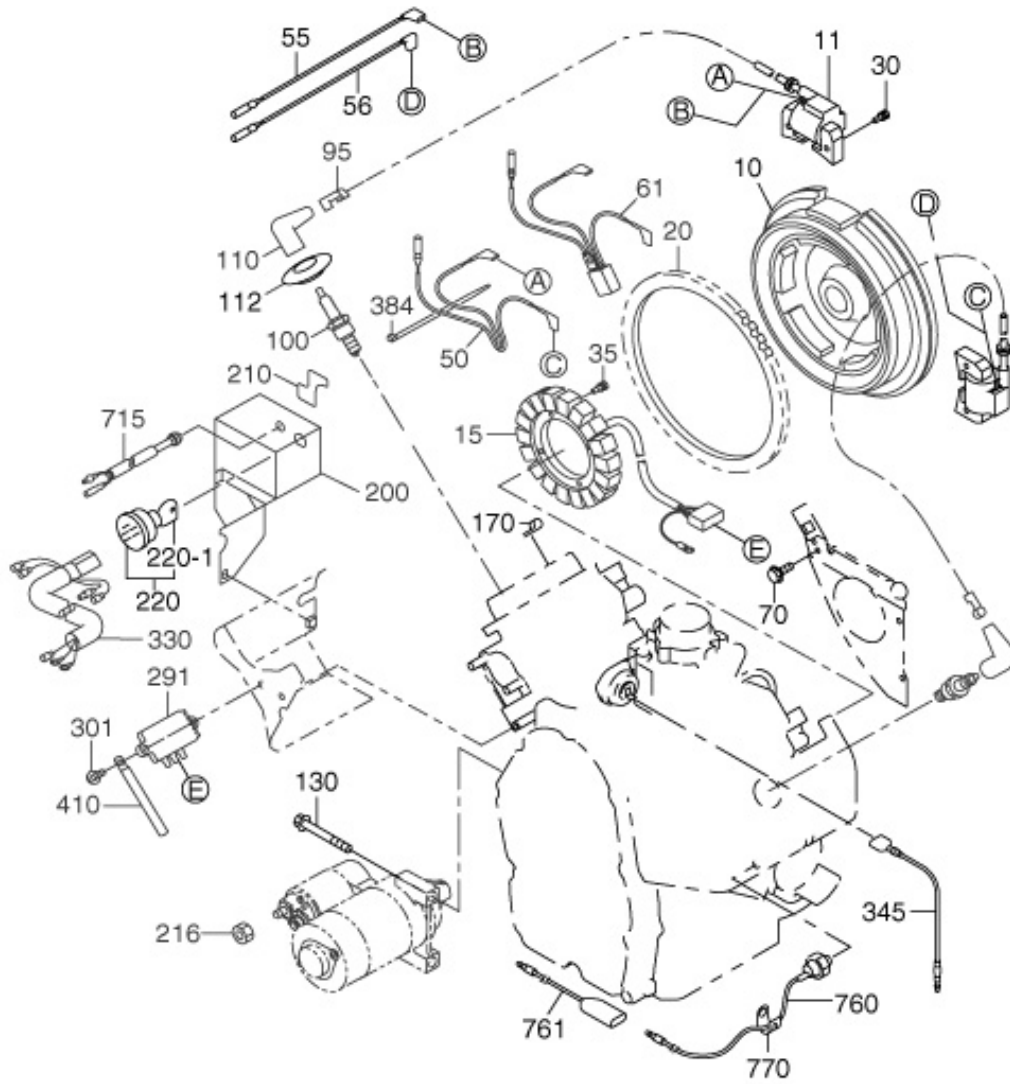


EH65/64/63

263070001W00

700 Electric Device

Ref	Part Number.	Description	Qty	Remark
10	263-77207-01	FLYWHEEL CP	1.00	
11	263-78203-01	IGNITION COIL CP	2	
15	263-79411-A1	CHARGE COIL CP	1	
20	263-71002-H3	RING GEAR	1.00	
30	001-14062-50	BOLT AND WASHER AY	4	
35	001-16052-00	BOLT & WASHER AY	4	
35	001-16052-50	BOLT AND WASHER AY	4	
50	263-73126-H1	WIRE CP(IG.COIL)	1	
95	X65-91000-10	PLUG TERMINAL	2	
100	065-01402-80	SPARK PLUG	2	
110	X65-51000-10	SPARK PLUG CAP	2	
130	011-00801-00	FLANGE BOLT	2	
216	002-38080-00	FLANGE NUT	1.00	
291	263-71903-A1	REGULATOR CP	1.00	
301	011-00601-40	FLANGE BOLT	2	
330	263-73130-A1	WIRING HARNESS	1.00	
384	056-30000-10	WIRE BAND	3	
410	056-60002-50	CLAMP	1.00	
760	263-73102-11	WIRE AY(OIL PRE.SW.)	1.00	
770	206-75501-01	CLAMP CP	2	

720 Starter Motor

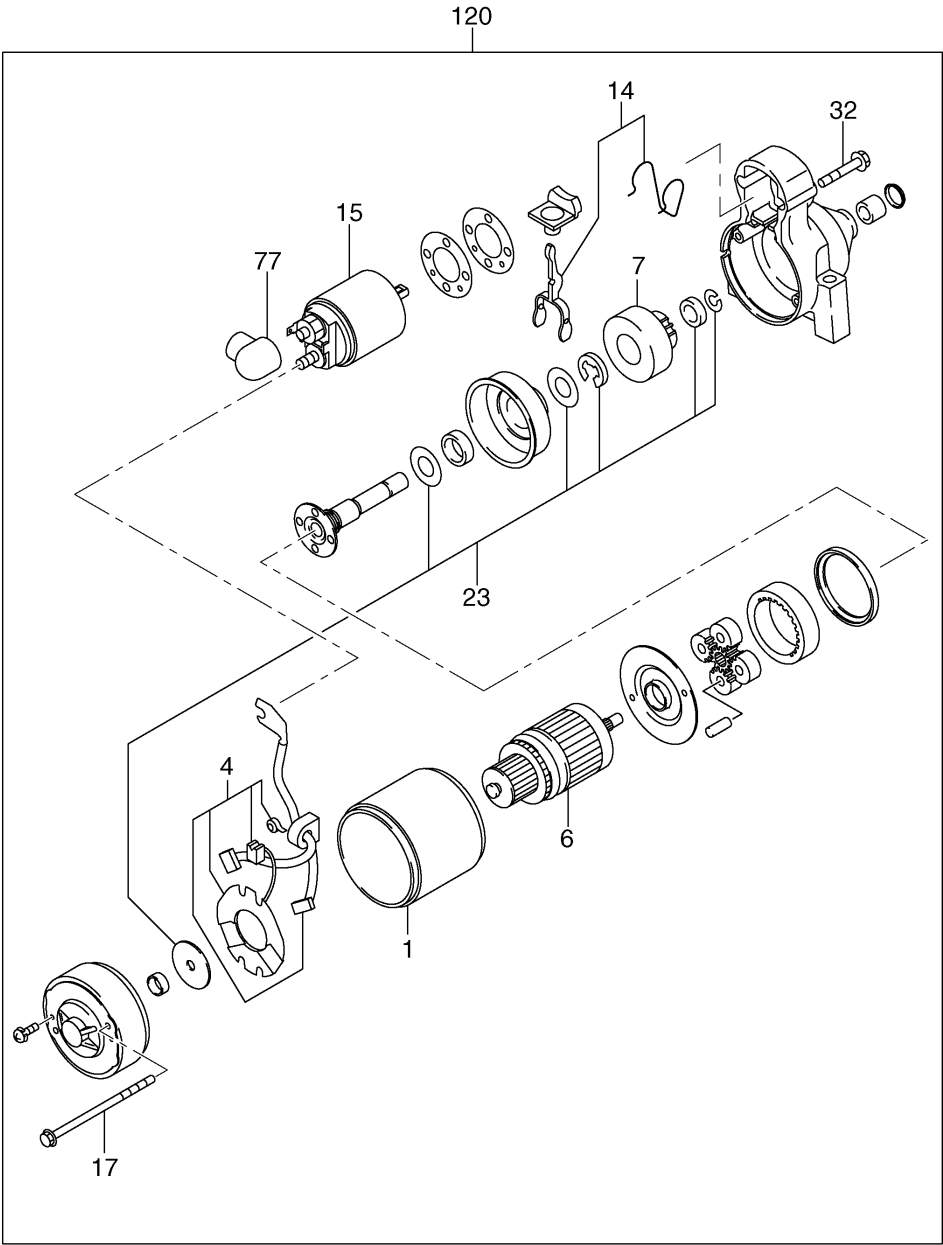

0720 0006 000

720 Starter Motor

Ref	Part Number.	Description	Qty	Remark
120	263-70504-J0	STARTING MOTOR AY	1	
1	263-70562-H8	MACHINE SHELL ASSEMBLY	1	
4	263-70530-J8	BRUSH ASSEMBLY	1	
6	263-70565-H8	ARMATURE	1	
7	263-70523-H8	ONE-WAY CLUTCH	1	
14	263-70525-H8	SHIFT LEVER SET	1	
15	263-70516-H8	SOLENOID SWITCH	1	
17	263-70587-H8	HEXAGON BOLTS WITH F	2	
23	263-70588-H8	WASHER STOPPER SET	1	
32	263-70517-H8	SHEATHING	1	

Part Number Index

The Part Number Index is a numeric index of all part numbers included in this manual. The index shows what page(s) the part is used on.

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
001-05084-00	9	258-62420-08	21	263-52704-A1	17	280-63602-A1	19
001-14061-60	17	258-62445-08	21	263-52802-A3	17	X23-00801-50	15
001-14062-50	23	258-62450-08	21	263-52912-A2	17	X65-51000-10	23
001-14063-00	15	258-62515-08	21	263-54101-H2	17	X65-91000-10	23
001-14082-00	11	258-62546-08	21	263-55601-03	5	X85-10613-81	19
001-16052-00	23	258-62551-08	21	263-62400-08	21	X85-10616-30	19
001-16052-50	23	258-62554-08	21	263-62445-08	21	X85-10616-60	19
001-17052-00	15	258-62555-08	21	263-62451-08	21		
002-27050-00	15	258-62556-08	21	263-62481-10	21		
002-35060-00	15	258-62566-08	21	263-62520-08	21		
002-38080-00	11, 23	258-62570-08	21	263-62524-08	21		
003-10180-00	9	261-43901-03	15	263-62528-08	21		
003-22100-00	15	261-45201-03	15	263-62531-08	21		
003-70140-00	19	261-62352-08	21	263-62535-08	21		
005-11060-01	15	263-10111-21	5	263-62552-08	21		
005-32054-01	9	263-11001-51	5	263-62555-08	21		
006-90308-00	19	263-13211-11	5	263-62556-08	21		
010-50802-90	5	263-13311-11	5	263-62560-08	21		
011-00600-20	11, 17, 19	263-14202-03	5	263-62653-B1	19		
011-00600-30	6, 11, 17, 19	263-14302-03	6	263-63603-01	19		
011-00601-01	6	263-15021-41	5	263-63901-13	19		
011-00601-40	23	263-15121-31	5	263-63902-13	19		
011-00801-00	23	263-15503-03	5	263-64002-01	19		
011-00801-10	19	263-15505-03	5	263-64302-02	19		
011-00802-20	5	263-15805-03	5	263-65001-13	19		
011-01000-70	5	263-15901-03	5	263-65002-A3	19		
011-50500-20	15	263-16002-A3	5	263-65011-A3	19		
015-20500-10	15	263-16007-03	6	263-65012-A3	19		
017-00601-10	11	263-16111-03	5	263-66001-03	19		
018-00800-10	11	263-18003-03	11	263-66201-A3	19		
018-01800-10	9	263-21311-11	9	263-68501-03	19		
018-60600-20	15	263-22601-30	9	263-70504-J0	25		
021-11400-20	5	263-23301-33	9	263-70516-H8	25		
021-70600-30	15	263-23421-J3	9	263-70517-H8	25		
024-02600-20	19	263-23501-17	9	263-70523-H8	25		
024-08800-10	19	263-25012-A3	9	263-70525-H8	25		
031-00600-20	5	263-25013-A3	9	263-70530-J8	25		
031-00801-10	5	263-25014-A3	9	263-70562-H8	25		
040-11400-30	5	263-32610-A1	13	263-70565-H8	25		
044-00800-10	5	263-32630-03	13	263-70587-H8	25		
044-03501-70	19	263-32640-01	13	263-70588-H8	25		
044-04200-30	5	263-33301-A3	11	263-71002-H3	23		
056-12000-20	11	263-33401-H3	11	263-71903-A1	23		
056-30000-10	23	263-33502-H3	11	263-73102-11	23		
056-51000-50	5	263-35331-01	11	263-73126-H1	23		
056-52100-20	9	263-35341-03	5	263-73130-A1	23		
056-60002-50	23	263-35503-A3	11	263-76102-H1	5		
056-61000-21	19	263-35801-03	11	263-77207-01	23		
060-04500-10	5	263-37001-H1	11	263-78203-01	23		
065-01402-80	23	263-37002-A3	11	263-79411-A1	23		
073-20057-60	17	263-42201-A3	15	263-91722-03	11		
085-10301-10	19	263-42301-B3	15	263-91802-03	17		
132-11AA1-10	5	263-42503-03	15	263-99001-27	6		
159-65401-03	5	263-42701-A3	15	267-35701-03	11		
206-75501-01	19, 23	263-42801-03	15	267-36102-03	11		
207-26001-03	9	263-43301-A3	15	267-62201-10	19		
215-62353-08	21	263-43901-A3	15	270-35201-01	11		
215-62446-08	21	263-45002-03	15	277-41902-01	5		
226-43101-01	15	263-45004-11	5	280-14401-A1	6		
226-62501-08	21	263-45011-A2	15	280-19001-03	6		
226-62580-08	21	263-46001-03	15	280-31701-13	11		
227-43501-13	15	263-46010-03	15	280-32602-00	13		
235-15421-03	5	263-46011-A3	15	280-32625-01	13		
246-33611-03	11	263-46214-03	5	280-33001-J3	11		
246-33711-13	11	263-46215-A3	5	280-62505-08	21		
246-35501-03	11	263-51121-H2	17	280-62545-08	21		
248-65801-10	19	263-52612-A1	17	280-62551-08	21		

Part Description Index

The Part Description Index is an alphabetical index of all part descriptions included in this manual. The index shows what page(s) the part is used on.

A

AIR CLEANER AY.....13
ARMATURE.....25

B

BALL BEARING.....5
BLIND PLUG.....5
BLOWER HOUSING UN.....17
BOLT.....15
BOLT & WASHER AY.....15, 23
BOLT AND WASHER AY.....11, 15, 17, 23
BOLT(PIVOT).....11
BRACKET UN(SPD CTL).....15
BRACKET(FUEL PUMP).....19
BRACKET(MUFFLER).....11
BREATHER COVER.....6
BREATHER PLATE CP.....6
BRUSH ASSEMBLY.....25

C

CAM SHAFT.....11
CARBURETOR AY.....21
CHARGE COIL CP.....23
CHOKE CONTROL LINKCP.....15
CHOKE CONTROL ROD.....15
CHOKE KNOB.....15
CLAMP.....15, 19, 23
CLAMP CP.....19, 23
CLAMP(CHOKE KNOB).....15
CLAMP(SOLENOID)WIRE.....21
CLEANER BASE CP.....13
CLEANER COVER.....13
CLEANER ELEMENT CP.....13
CLIP.....5, 9
COLLAR(THRO.SHAFT).....21
COLLAR,CHOKE.....21
COLLET-VALVE.....11
CONNECTING ROD AY.....9
COOLING BLOWER UN.....17
CRANKCASE CP.....5
CRANKSHAFT CP.....9
CYLINDER BAFFLE 1 CP.....17
CYLINDER BAFFLE 2 CP.....17
CYLINDER BAFFLE 3.....17
CYLINDER BAFFLE 4 UN.....17
CYLINDER HEAD 1 CP.....5
CYLINDER HEAD 2 CP.....5

D

DOWEL PIN.....5

E

EXHAUST VALVE.....11

F

FILTER(CHOKE SHAFT).....21

FILTER,AIR.....21
FILTER,FUEL.....19
FLANGE BOLT.....5-6, 9, 11, 17, 19, 23
FLANGE NUT.....9, 11, 23
FLOAT.....21
FLOAT PIN.....21
FLYWHEEL CP.....23
FRICTION WASHER.....15
FUEL PUMP AY.....19

G

GASKET.....5, 21
GASKET (M.B COVER).....5
GASKET 1 (CYL HEAD).....5
GASKET 2 (CYL HEAD).....5
GASKET CP (MUFFLER).....11
GASKET SET.....6
GASKET(BREATHERPLATE).....6
GASKET(CARBURETOR).....19
GASKET(IN MANIFOLD).....11
GASKET(ROCKER COVER).....5
GASKET,AIR HORN.....21
GASKET,ALUMINUM.....19
GASKET,MAIN PASSAGE.....21
GOVERNOR GEAR CP.....5
GOVERNOR LEVER.....15
GOVERNOR ROD.....15
GOVERNOR SHAFT.....15
GOVERNOR SLEEVE CP.....5
GOVERNOR SPRING.....15
GUIDE PLATE.....11

H

HEXAGON BOLTS WITH F.....25
HOOK.....6
HOSE CLAMP.....11, 19

I

IGNITION COIL CP.....23
INNER ROTOR.....19
INTAKE MANIFOLD.....11
INTAKE VALVE.....11

J

JET(SLOW).....21
JET,MAIN.....21

K

KEY.....9

L

LABEL(CAUTION).....17
LABEL(ENGINE NAME).....17
LABEL(TRADE MARK).....11
LEVER ASSY,CHOKE.....21
LINK PIVOT CP.....15

M

MACHINE SHELL ASSEMBLY.....25
MAIN BEARING.....5
MAINBEARING COVER CP.....5

N

NUT.....11, 15

O

O RING.....19
O-RING,AIR HORN.....21
OIL FILLER CAP CP.....19
OIL FILTER AY.....19
OIL GAUGE CP.....19
OIL PUMP COVER CP.....19
OIL PUMP FILTER UN.....19
OIL SEAL.....5, 19
ONE-WAY CLUTCH.....25
OUTER ROTOR.....19

P

PIPE.....5
PIPE(PULSE).....5
PISTON.....9
PISTON PIN.....9
PISTON RING SET.....9
PIVOT.....11
PLUG.....5, 21
PLUG TERMINAL.....23
PLUG(OIL RELIEF).....19
PULSE PIPE CP.....19
PUSH ROD CP.....11

R

REGULATOR CP.....23
RETAINER PLATE.....5
RETURN SPRING.....15
RING GEAR.....23
RING(CHOKE LEVER).....21
ROCKER ARM.....11
ROCKER COVER.....5
ROD SPRING.....15
RUBBER PIPE.....11, 19

S

SCREW.....15
SCREW SET(AIR HORN).....21
SCREW SET(FLOAT PIN).....21
SCREW SET(VALVE).....21
SCREW,DRAIN.....21
SCREW,THRO.ADJUST.....21
SCREW,VALVE SET.....21
SEAL EX VALVE.....5
SELF LOCK NUT.....15
SHAFT ASSY,CHOKE.....21
SHAFT ASSY,THROTTLE.....21

Part Description Index (continued)

SHEATHING.....25
SHIFT LEVER SET.....25
SNAP PIN.....15
SOLENOID SWITCH.....25
SPACER.....9, 15
SPARK PLUG.....23
SPARK PLUG CAP.....23
SPEED CONTROL LEV CP.....15
SPRING RETAINER.....11
SPRING WASHER.....15
SPRING(ADJUST SCREW).....21
SPRING(RELIEF VALVE).....19
SPRING,CHOKE.....21
SPRING,DRAIN.....21
STARTING MOTOR AY.....25
STEEL BALL.....19
STOP PLATE.....15
STUD.....5
SWITCH OIL PRESSURE.....5

T

TAPPET.....11
TAPPING SCREW.....15
THRUST BEARING.....5

U

UNION.....5

V

VALVE CP,(SOLENOID).....21
VALVE GUIDE.....5
VALVE SPRING.....11
VALVE,CHOKE.....21
VALVE,FLOAT.....21
VALVE,THROTTLE.....21

W

WASHER.....5, 9
WASHER STOPPER SET.....25
WAVED WASHER.....15
WING NUT.....13
WIRE AY(OIL PRE.SW.).....23
WIRE BAND.....23
WIRE CP(IG.COIL).....23
WIRING HARNESS.....23
WOODRUFF KEY.....9

This Page Intentionally Left Blank

PRINTED IN THE USA

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047

Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com