

PARTS MANUAL

MODEL
EX40
Engine

EX400DE5112

08/16



SUBARU

Industrial Power Products

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047 - Phone 847-540-7300 - Fax 847-438-5012


e-mail: sales@subarupower.com - www.subarupower.com

© 2015 Subaru Industrial Power Products

Group Index

Group Name	Page
100 Crankcase.....	4
200 Crankshaft.....	6
300 Intake & Exhaust.....	8
317 Intake & Exhaust.....	12
400 Governor.....	14
500 Cooling & Starting.....	16
520 Cooling & Starting.....	18
600 Fuel & Lubricant.....	20
640 Carburetor.....	22
700 Electric Device.....	24
770 Electric Device.....	26
Part Number Index.....	28
Part Description Index.....	29

100 Crankcase

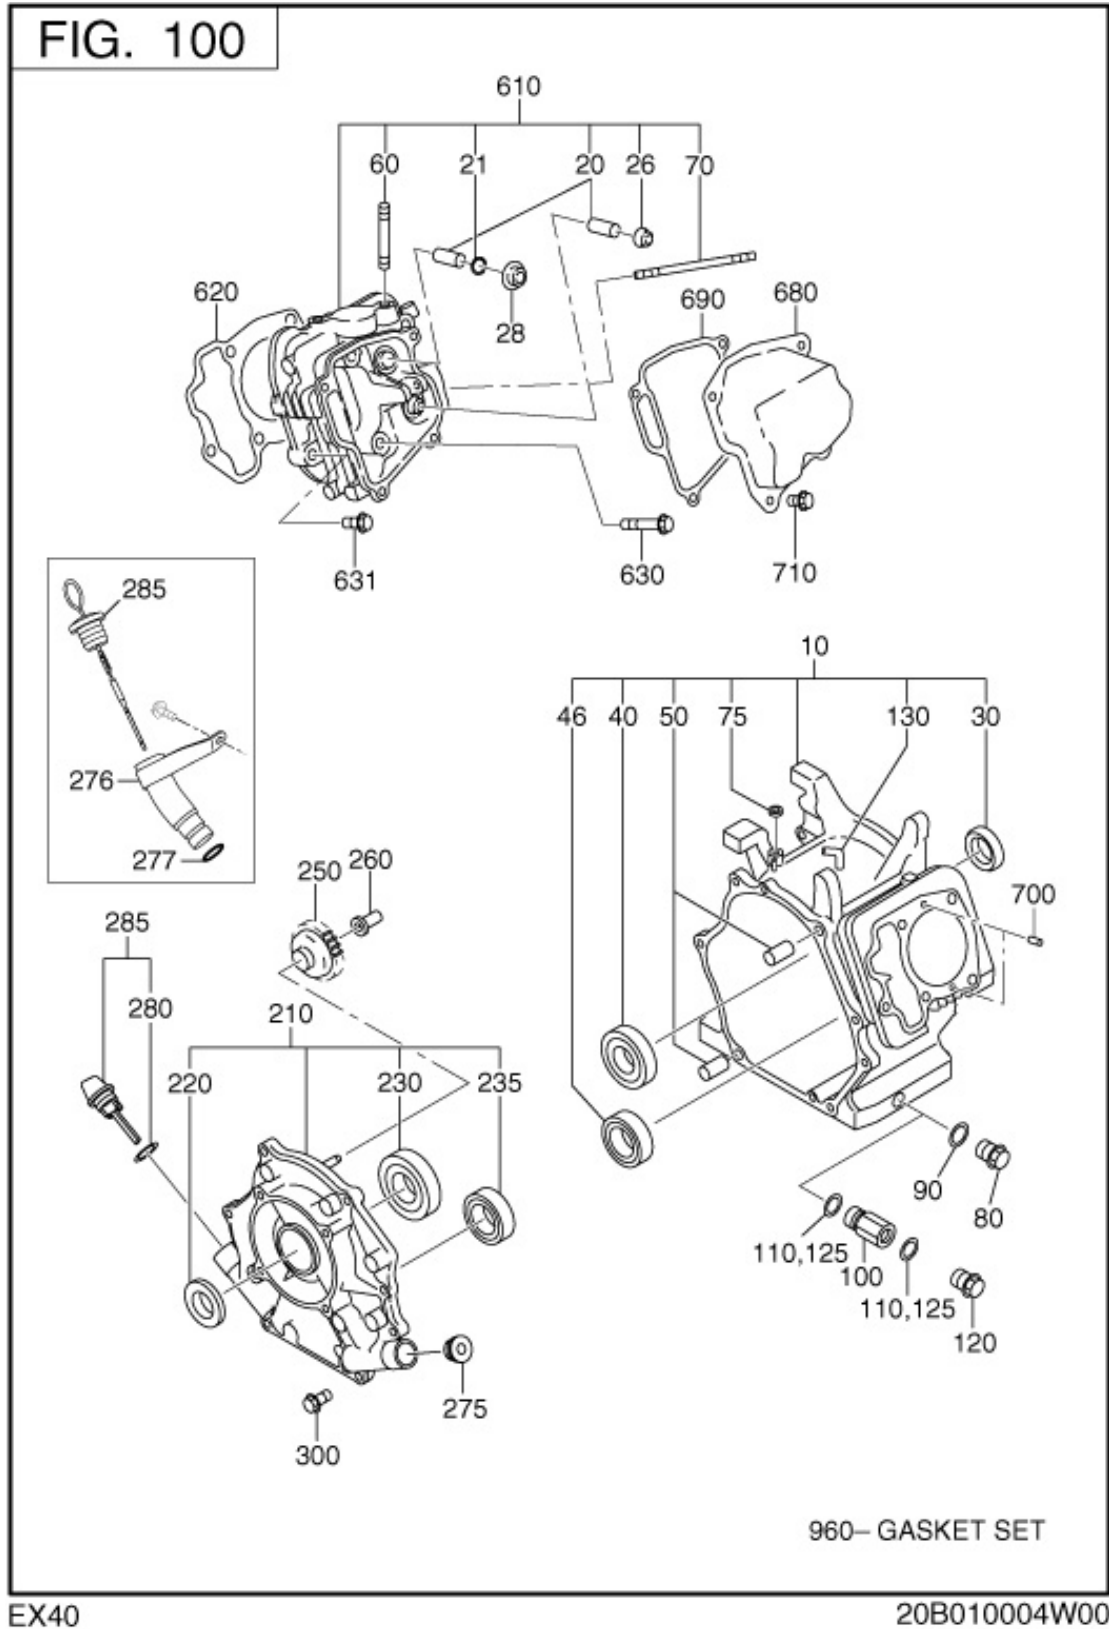


100 Crankcase

Ref	Part Number.	Description	Qty	Remark
10	20B-10102-31	CRANKCASE CP	1	
20	20B-14202-03	VALVE GUIDE	2	
21	056-51000-50	CLIP	1	
26	132-11AA1-10	SEAL-EXH VALVE	1	
28	263-35341-03	RETAINER PLATE	1	
30	044-03500-91	OIL SEAL	1	
40	X60-03502-40	BALL BEARING	1	
46	X60-01500-11	BALL BEARING	1	
50	277-15011-03	PIPE KNOCK	2	
60	010-50802-90	STUD	2	
70	010-50604-40	STUD	2	
75	044-00800-10	OIL SEAL	1	
80	040-11400-30	PLUG	2	
90	021-11400-20	GASKET	2	
210	20B-11002-21	MAINBEARING COVER CP	1	
220	044-03500-91	OIL SEAL	1	
230	X60-03502-40	BALL BEARING	1	
235	X60-01500-11	BALL BEARING	1	
250	20B-45003-11	GOVERNOR GEAR CP	1	
260	277-41902-01	GOVERNOR SLEEVE CP	1	
280	021-32000-50	GASKET	2	
285	279-63601-30	OIL GAUGE ASSY	2	
300	011-00803-40	FLANGE BOLT (M8X38)	8	
610	20B-13002-00	CYLINDER HEAD AY	1	
620	20B-15001-23	GASKET(HEAD)	1	
630	011-01000-40	FLANGE BOLT (M10X75)	4	
631	001-04083-50	FLANGE BOLT (M8X35)	2	
680	20B-15501-01	ROCKER COVER CP	1	
690	20B-16001-03	GASKET(ROCKER COVER)	1	
700	031-00600-10	DOWEL PIN	2	
710	011-00600-20	FLANGE BOLT (M6X12)	4	
960	20B-99001-27	GASKET SET	1	

200 Crankshaft

FIG. 200

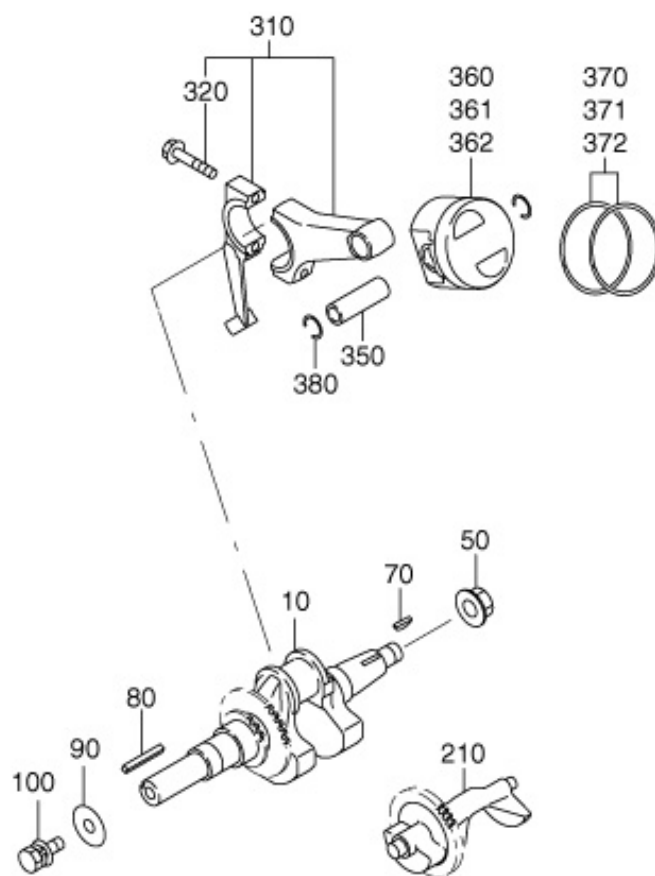


EX40

20B020001W00

200 Crankshaft

Ref	Part Number.	Description	Qty	Remark
10	20B-21001-11	CRANKSHAFT CP	1	
50	018-01800-10	FLANGE NUT (M18)	1	
70	005-32054-01	WOODRUFF KEY	1	
210	22B-24101-03	BALANCER SHAFT	1	
310	20B-22501-00	CONNECTING ROD ASSY	1	
320	001-05084-00	FLANGE BOLT (M8X40)	2	
350	263-23301-33	PISTON PIN	1	
360	20B-23401-J3	PISTON	1	
361	20B-23403-J3	PISTON	1	
362	20B-23404-J3	PISTON	1	
370	20B-23501-07	PISTON RING SET	1	
371	20B-23502-07	PISTON RING SET	1	
372	20B-23503-07	PISTON RING SET	1	
380	056-52100-20	CLIP	2	

300 Intake & Exhaust

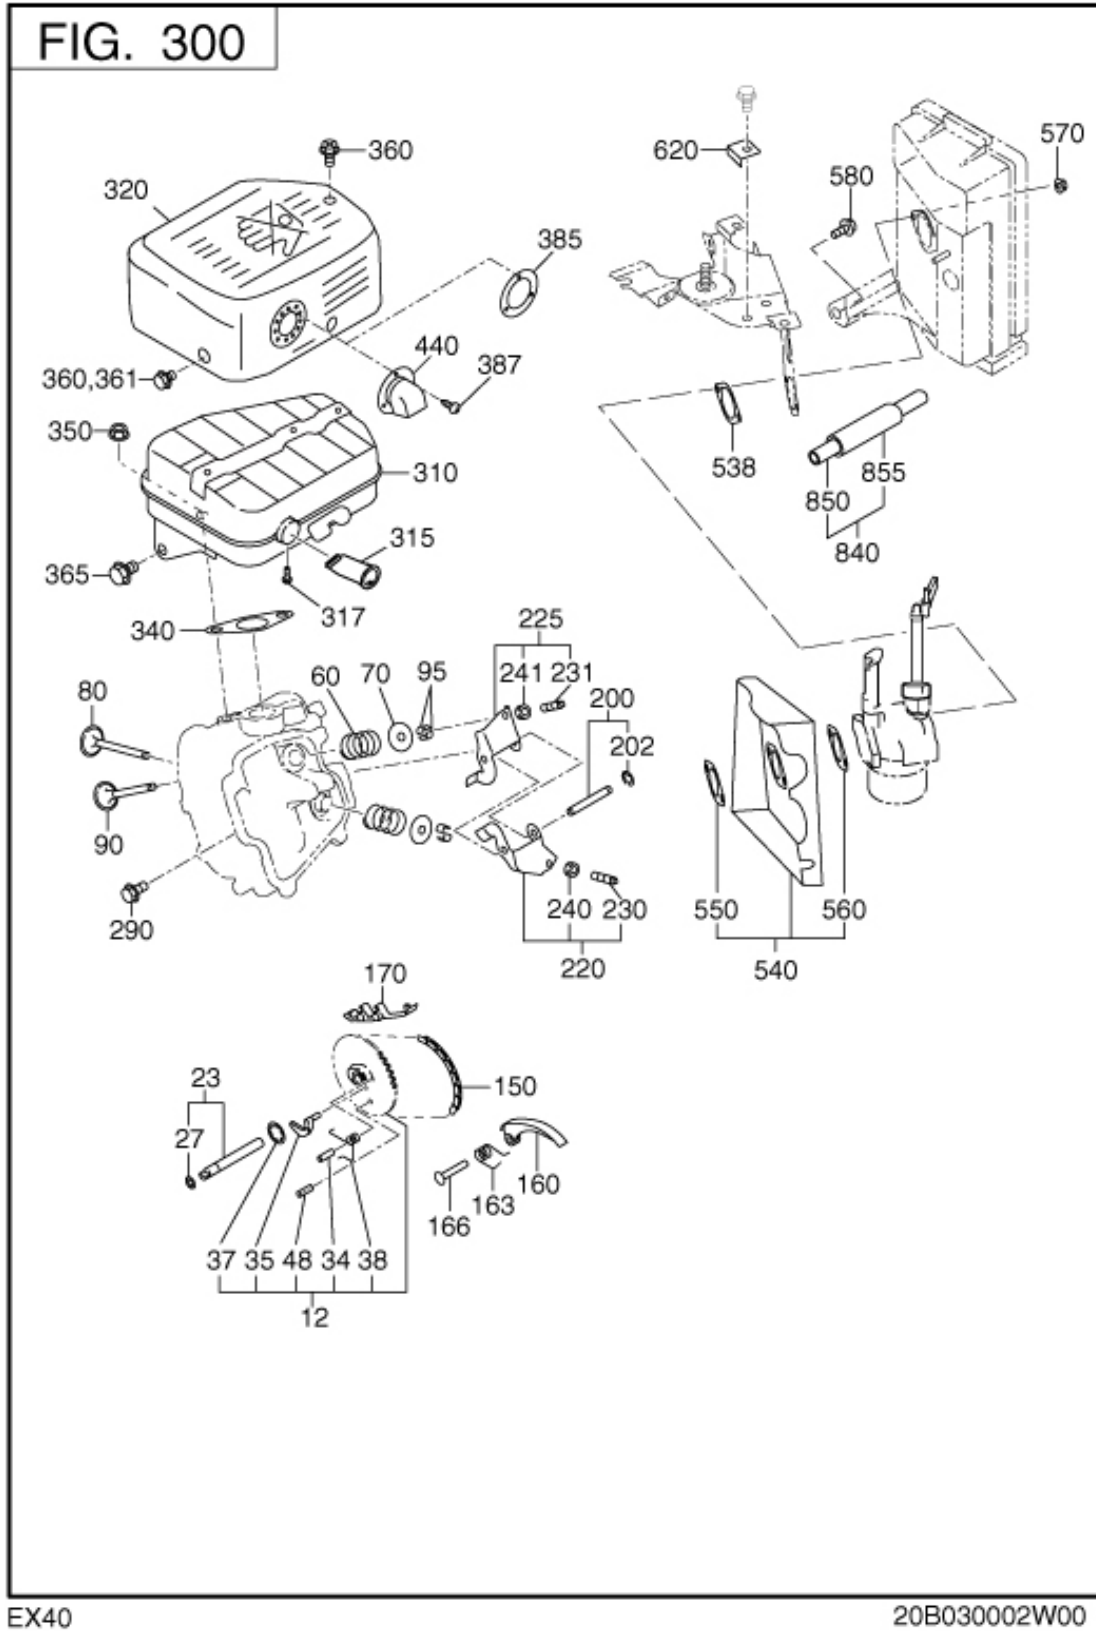

300 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
12	20B-31601-10	CAMSHAFT AY	1	
23	20B-35101-21	CAMSHAFT PIN CP	1	
27	024-00700-21	O-RING	1	
34	005-19041-00	SPRING PIN	1	
35	277-36401-03	RELEASE LEVER	1	
37	20B-36501-03	CLIP	1	
38	277-38702-03	RETURN SPRING	1	
48	031-80500-20	ROLL PIN	1	
60	246-33611-03	VALVE SPRING	2	
70	246-33711-13	SPRING RETAINER	2	
80	20B-33401-H3	INTAKE VALVE	1	
90	20B-33501-H3	EXHAUST VALVE	1	
95	246-35501-03	VALVE COLLET	4	
150	20B-35601-H1	TIMING CHAIN CP (112 LINK)	1	
160	277-36911-03	TENTIONER	1	
163	277-37101-03	TENTIONER SPRING	1	
166	277-36902-03	TENTIONER PIN	1	
170	277-36913-13	CHAIN GUIDE	1	
200	20B-35001-01	PIN(ROCKER)CP	1	
202	003-13060-00	CLIP	1	
220	20B-36101-00	INTAKE ROCKER ARM ASSY	1	
225	20B-36102-10	EXHAUST ROCKER ARM ASSY	1	
230	014-90500-20	ADJUST SCREW (M5X23)	1	
231	014-90500-20	ADJUST SCREW (M5X23)	1	
240	017-00500-30	NUT (M5)	1	
241	017-00500-30	NUT (M5)	1	
290	011-00600-10	FLANGE BOLT (M6X8)	1	
310	20B-30101-J2	MUFFLER UN	1	
315	267-37602-01	SPARK ARRESTER CP	1	
317	015-00400-60	TAPPING SCREW (M4X6)	1	
320	20B-34201-11	MUFFLER COVER CP	1	
340	20B-35201-03	EXHAUST GASKET	1	
350	002-38080-00	FLANGE NUT (M8)	2	
360	011-00600-10	FLANGE BOLT (M6X8)	5	
365	011-00803-20	FLANGE BOLT (M8X12)	1	
387	015-00400-60	TAPPING SCREW (M4X6)	3	
440	20B-37001-11	DEFLECTOR CP	1	
538	20B-35903-13	GASKET 3	1	
540	20B-32901-J1	INSULATOR CP	1	

300 Intake & Exhaust


Ref	Part Number.	Description	Qty	Remark
550	20B-35902-H3	GASKET 2	1	
560	20B-35901-H3	GASKET 1	1	
570	002-38060-00	FLANGE NUT (M6)	2	
580	001-04061-60	FLANGE BOLT (M6X16)	1	
620	20B-57101-03	COVER STAY(A/C)	1	
850	X85-11001-70	RUBBER PIPE (10X15X170)	1	

This Page Intentionally Left Blank


317 Intake & Exhaust

FIG. 317

HI MOUNT (DUAL)

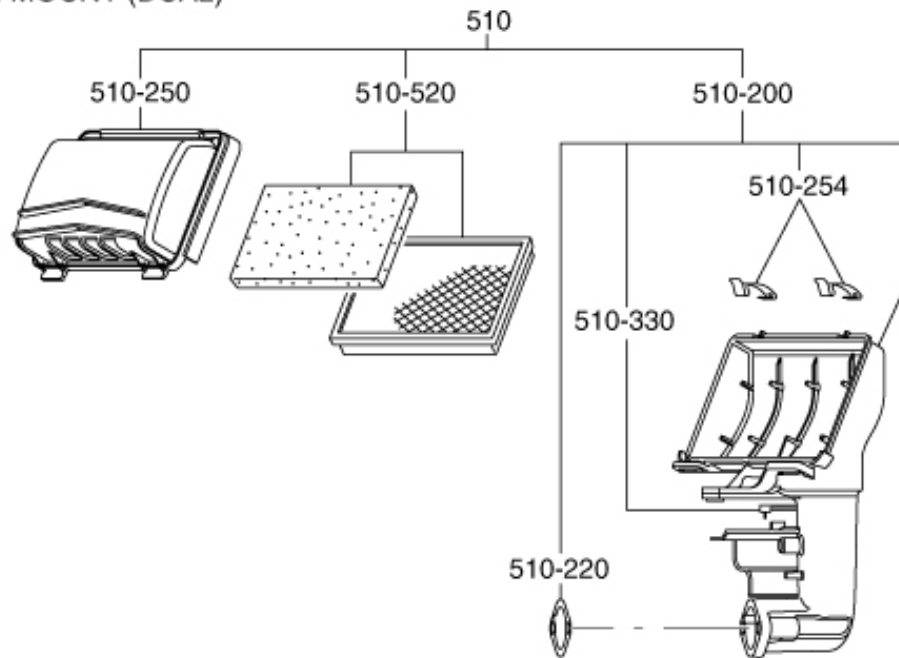

HI MOUNT (PRE CYCLONE)

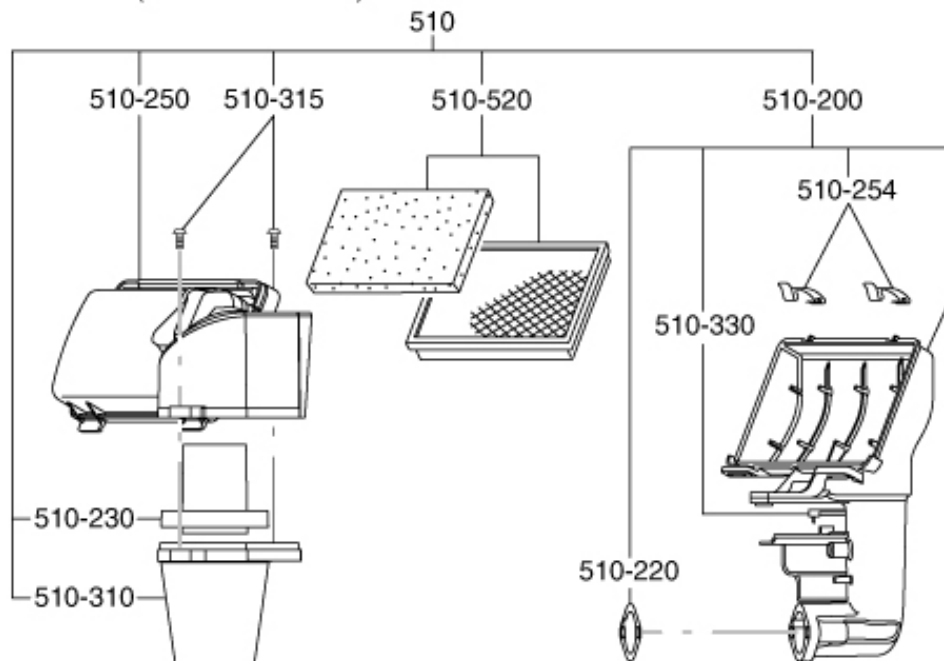


EX40

20B031701W00

317 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
510	20B-32651-H0	AIR CLEANER AY	1	
510-220	20B-32720-H8	INTAKE GASKET	1	
510-250	20B-32641-H8	COVER	1	
510-254	20B-32680-H8	CLIP 1	2	
510-520	20B-32610-H7	ELEMENT AY	1	


400 Governor

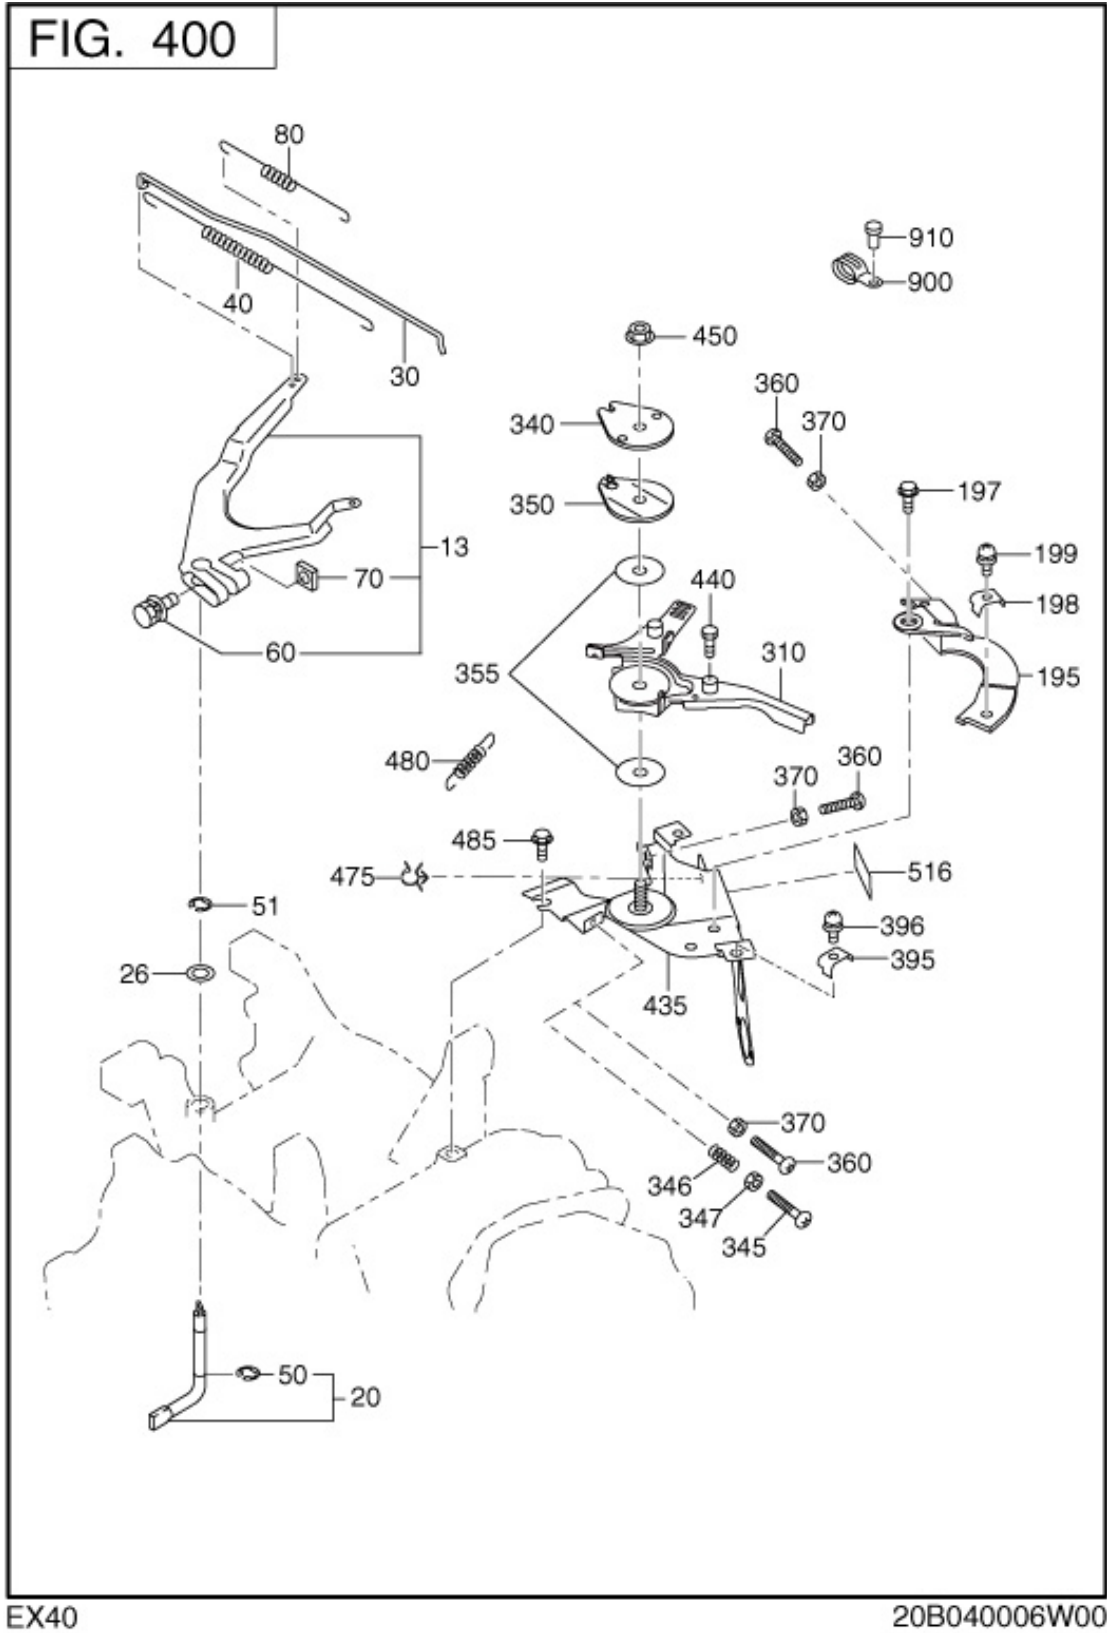

400 Governor

Ref	Part Number.	Description	Qty	Remark
13	20B-42301-10	GOVERNOR LEVER AY	1	
20	20B-42201-01	GOVERNOR SHAFT CP	1	
26	003-11080-00	WASHER (M8.5X18)	1	
30	20B-42701-13	GOVERNOR ROD	1	
40	20B-42801-13	ROD SPRING	1	
50	003-13060-00	CLIP	1	
51	003-13060-00	CLIP	1	
60	001-14062-50	BOLT & WASHER ASSY (M6X25)	1	
70	018-60600-20	SQUARE NUT (M6)	1	
80	20B-42501-13	GOVERNOR SPRING	1	
310	20B-43301-01	SPEED CONT. LEVER CP	1	
340	227-43501-13	STOP PLATE	1	
350	227-45002-03	SPRING WASHER	1	
355	021-70600-30	FRICTION WASHER	2	
360	004-31061-80	SCREW	1	
370	002-27060-00	NUT	1	
395	277-43902-03	CLAMP	1	
396	013-10500-30	SCREW & WASHER ASSY (M5X20)	1	
435	20B-46001-21	SPEED CONTROL BKT CP	1	
440	004-31040-80	SCREW(M4X8)	1	
450	002-35060-00	LOCKNUT (M6)	1	
480	277-45103-03	RETURN SPRING	1	
485	011-00600-20	FLANGE BOLT (M6X12)	1	
516	277-96107-03	LABEL(HI-LOW)	1	

 FIG. 500




500 Cooling & Starting

Ref	Part Number.	Description	Qty	Remark
10	20B-51302-11	BLOWER HOUSING CP	1	
20	073-20058-20	LABEL (TRADE MARK)	1	
25	073-20058-60	LABEL(WARNING)	1	
40	011-00600-20	FLANGE BOLT (M6X12)	4	
60	279-52711-11	CASE BAFFLE 1 CP	1	
61	20B-52704-13	HEAD BAFFLE 2 CP	1	BLACK
80	001-65081-20	BOLT (M8X12)	1	
81	011-00600-10	FLANGE BOLT (M6X8)	2	
110	20B-54101-H3	COOLING BLOWER	1	
220	013-00602-81	BOLT & WASHER ASSY (M6X14)	4	

520 Cooling & Starting

FIG. 520

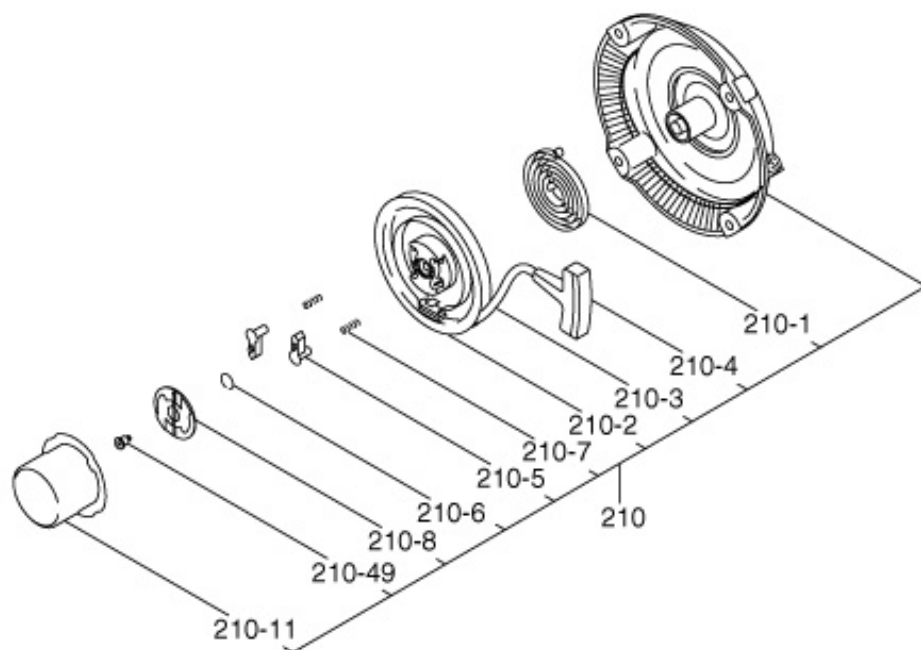


EX40

20B052001W00

520 Cooling & Starting

Ref	Part Number.	Description	Qty	Remark
210	20B-50301-H0	RECOIL STARTER ASSY	1	
210-1	277-50155-08	SPIRAL SPRING	1	
210-2	20B-50120-08	REEL	1	
210-3	20B-50110-08	STARTER ROPE	1	
210-4	261-50100-18	STARTER KNOB	1	
210-5	161-50125-08	RATCHET	2	
210-6	227-50131-08	FRICTION SPRING	1	
210-7	227-50135-08	RETURN SPRING	2	
210-8	161-50150-08	RATCHET GUIDE	1	
210-11	20B-50145-08	STARTER PULLEY	1	
210-49	20B-50101-08	SET SCREW	1	


600 Fuel & Lubricant

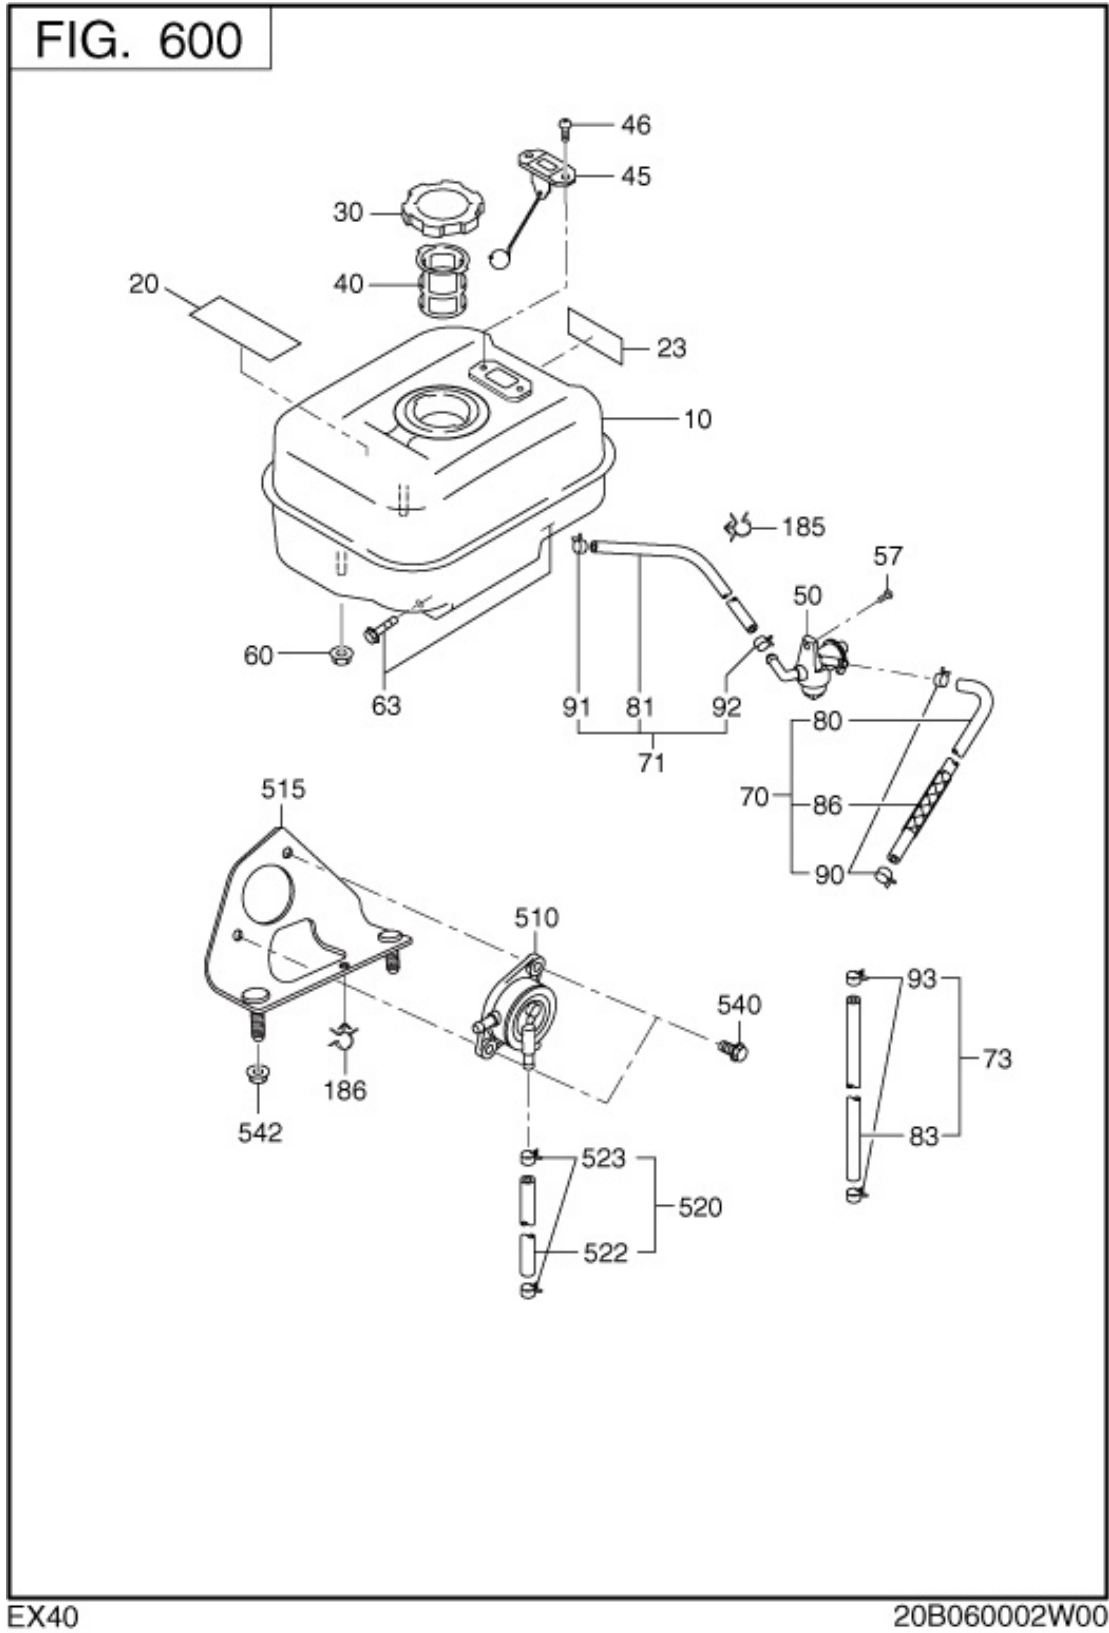

600 Fuel & Lubricant

Ref	Part Number.	Description	Qty	Remark
10	20B-60102-01	FUEL TANK CP	1	
20	073-20057-60	LABEL (WARNING)	1	
23	20B-95103-03	LABEL (MODEL)	1	
30	X43-04401-62	FUEL TANK CAP CP (BLACK)	1	
40	X64-13600-10	FUEL FILTER	1	
50	X64-20122-01	FUEL STRAINER ASSY	1	
57	011-00600-10	FLANGE BOLT (M6X8)	1	
60	002-38080-00	FLANGE NUT (M8)	2	
63	011-00802-50	FLANGE BOLT (M8X25)	2	
70	20B-62601-21	FUEL PIPE CP	1	
71	267-62604-11	FUEL PIPE CP	1	
80	085-10622-01	RUBBER PIPE	1	
81	X85-10614-91	RUBBER PIPE (6.35X12.7X250)	1	
90	056-11000-30	HOSE CLAMP	2	
91	056-11200-40	HOSE CLAMP	1	
92	X56-11100-60	HOSE CLAMP	1	
185	056-81200-20	CLAMP	1	

640 Carburetor

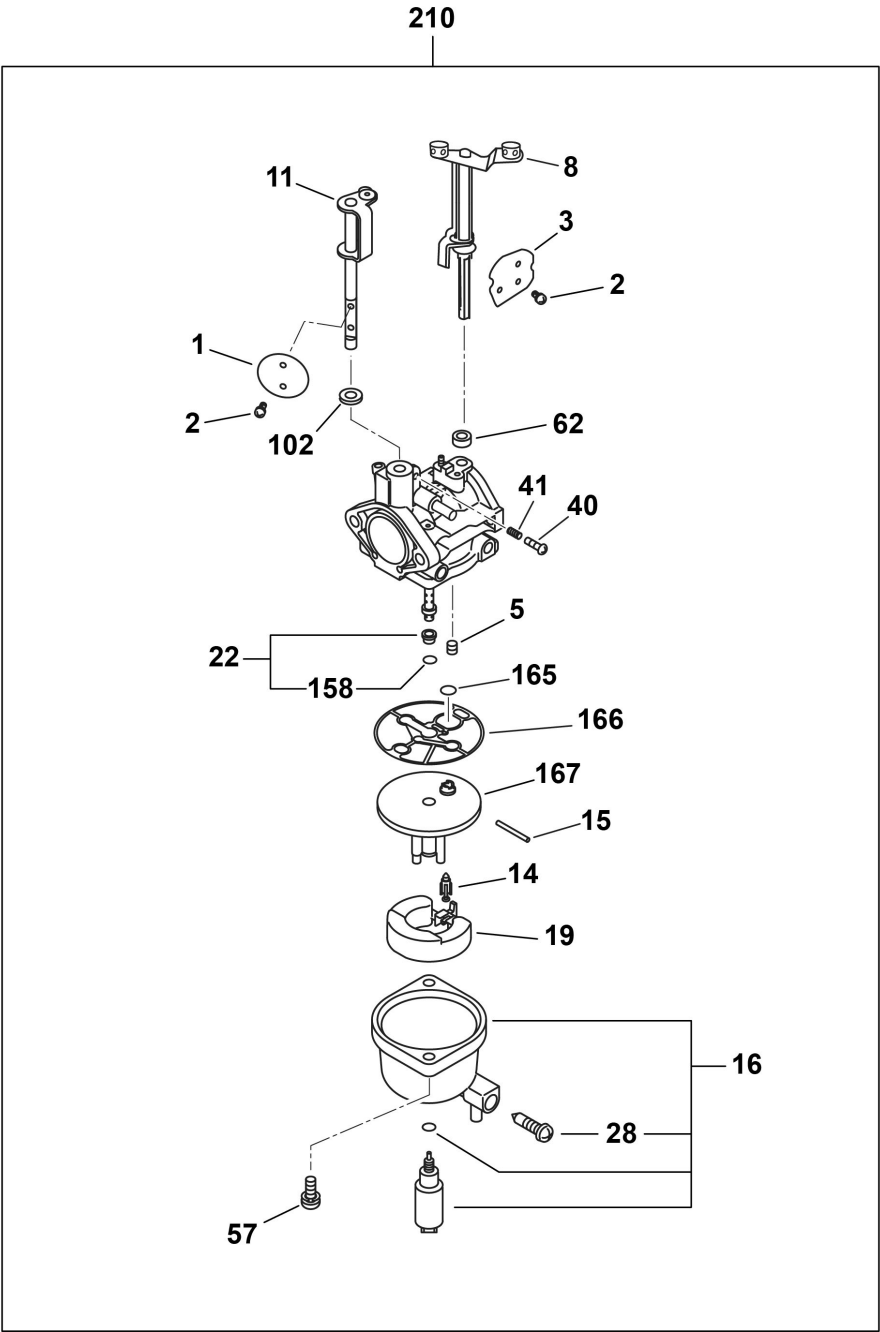



0640 0022 000

640 Carburetor

Ref	Part Number.	Description	Qty	Remark
210	20B-62320-20	CARBURETOR ASSY	1	
1	20B-62535-08	THROTTLE VALVE	1	
2	261-62352-08	SCREW	2	
3	20B-62526-08	CHOKE VALVE	1	
5	20B-62427-08	SLOW JET (#59)	1	
8	20B-62533-08	CHOKE SHAFT	1	
11	20B-62531-08	THROTTLE SHAFT	1	
14	20B-62500-08	FLOAT VALVE ASSY	1	
15	263-62515-08	FLOAT PIN	1	
16	20B-62550-08	FLOAT CHAMBER CP	1	
19	20B-62505-08	FLOAT ASSY	1	
22	20B-62415-08	MAIN JET (#115)	1	
28	20B-62354-08	DRAIN SCREW	1	
40	20B-62353-08	THROTTLE ADJUST SCREW	1	
41	20B-62445-08	THROTTLE ADJUST SPRING	1	
57	20B-62453-08	SCREW	2	
62	258-62554-08	GASKET (FOAM)	1	
102	226-62580-08	GASKET (FELT)	1	
158	20B-62542-08	O-RING	1	
165	20B-62541-08	O-RING	1	
166	20B-62540-08	SPACER	1	
167	20B-62520-08	SPACER	1	

700 Electric Device

FIG. 700

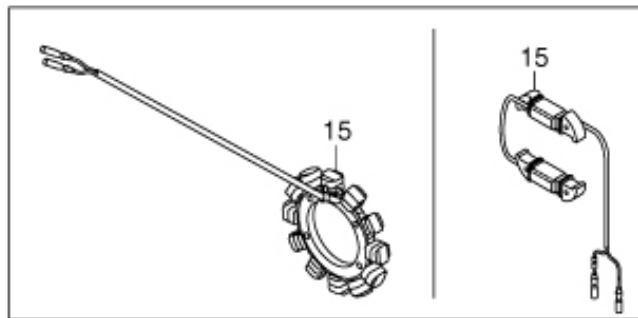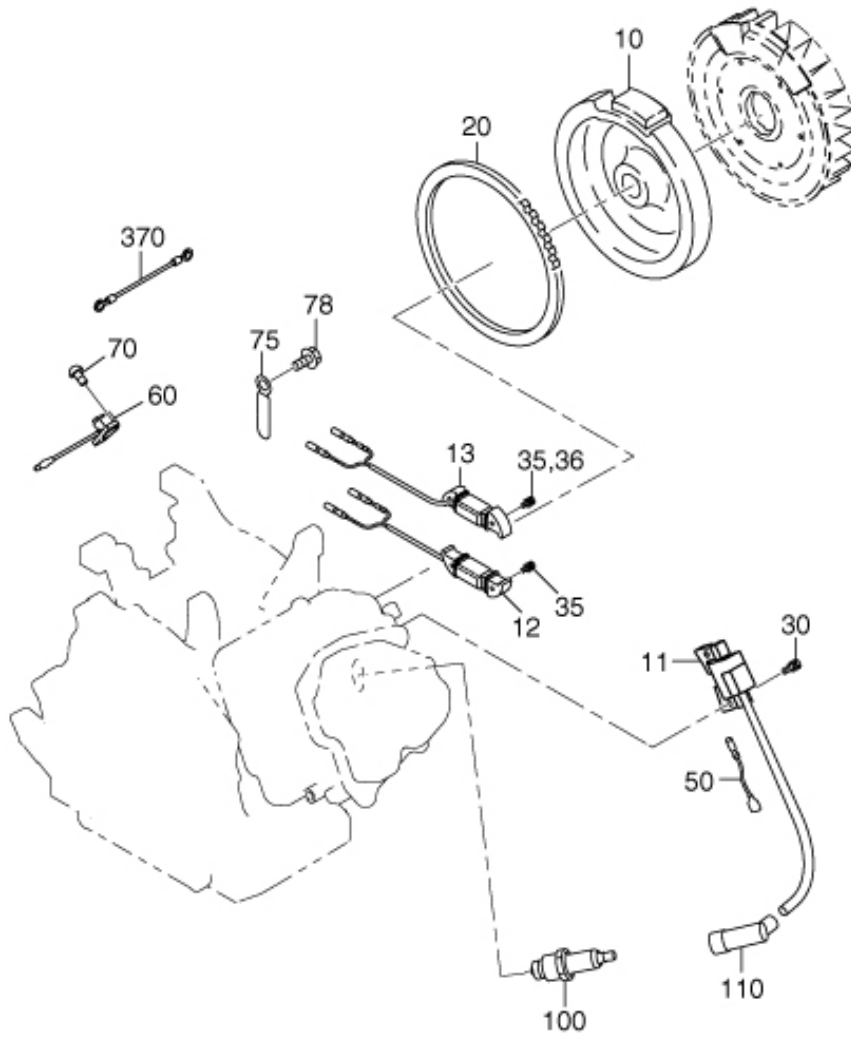

EX40


20B070003W00

700 Electric Device

Ref	Part Number.	Description	Qty	Remark
10	20B-79230-H1	FLYWHEEL CP	1	
11	20B-79430-H1	IGNITION COIL CP	1	
30	001-14063-00	BOLT & WASHER ASSY (M6X30)	2	
50	20B-73101-01	WIRE 1 CP	1	
75	214-79006-01	CLAMP CP	1	
78	011-00600-10	FLANGE BOLT (M6X8)	1	
100	065-01401-50	SPARK PLUG (NGK BR6HS)	1	
110	065-50003-11	SPARK PLUG CAP	1	

770 Electric Device

FIG. 770

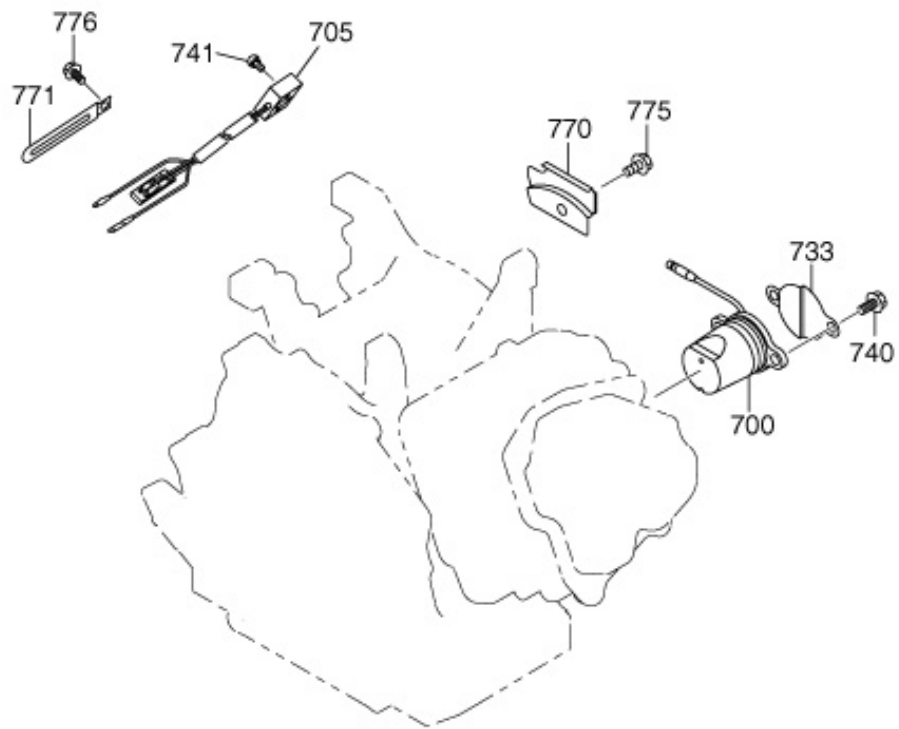

EX40

20B077001W00

770 Electric Device

Ref	Part Number.	Description	Qty	Remark
700	279-76301-51	OIL SENSOR CP	1	
705	KU3-11077-01	FLOAT C/U CP11	1	
740	001-04061-40	FLANGE BOLT (M6X14)	2	
741	015-00400-90	TAPPING SCREW (M4X12)	2	
770	20B-75501-03	WIRE CLAMP	1	
775	015-20600-50	TAPPING BOLT (M6X10)	1	

Part Number Index

The Part Number Index is a numeric index of all part numbers included in this manual. The index shows what page(s) the part is used on.

Part Number	Page	Part Number	Page	Part Number	Page
001-04061-40	27	20B-23403-J3	7	20B-79430-H1	25
001-04061-60	10	20B-23404-J3	7	20B-95103-03	21
001-04083-50	5	20B-23501-07	7	20B-99001-27	5
001-05084-00	7	20B-23502-07	7	214-79006-01	25
001-14062-50	15	20B-23503-07	7	226-62580-08	23
001-14063-00	25	20B-30101-J2	9	227-43501-13	15
001-65081-20	17	20B-31601-10	9	227-45002-03	15
002-27060-00	15	20B-32610-H7	13	227-50131-08	19
002-35060-00	15	20B-32641-H8	13	227-50135-08	19
002-38060-00	10	20B-32651-H0	13	22B-24101-03	7
002-38080-00	9, 21	20B-32680-H8	13	246-33611-03	9
003-11080-00	15	20B-32720-H8	13	246-33711-13	9
003-13060-00	9, 15	20B-32901-J1	9	246-35501-03	9
004-31040-80	15	20B-33401-H3	9	258-62554-08	23
004-31061-80	15	20B-33501-H3	9	261-50100-18	19
005-19041-00	9	20B-34201-11	9	261-62352-08	23
005-32054-01	7	20B-35001-01	9	263-23301-33	7
010-50604-40	5	20B-35101-21	9	263-35341-03	5
010-50802-90	5	20B-35201-03	9	263-62515-08	23
011-00600-10	9, 17, 21, 25	20B-35601-H1	9	267-37602-01	9
011-00600-20	5, 15, 17	20B-35901-H3	10	267-62604-11	21
011-00802-50	21	20B-35902-H3	10	277-15011-03	5
011-00803-20	9	20B-35903-13	9	277-36401-03	9
011-00803-40	5	20B-36101-00	9	277-36902-03	9
011-01000-40	5	20B-36102-10	9	277-36911-03	9
013-00602-81	17	20B-36501-03	9	277-36913-13	9
013-10500-30	15	20B-37001-11	9	277-37101-03	9
014-90500-20	9	20B-42201-01	15	277-38702-03	9
015-00400-60	9	20B-42301-10	15	277-41902-01	5
015-00400-90	27	20B-42501-13	15	277-43902-03	15
015-20600-50	27	20B-42701-13	15	277-45103-03	15
017-00500-30	9	20B-42801-13	15	277-50155-08	19
018-01800-10	7	20B-43301-01	15	277-96107-03	15
018-60600-20	15	20B-45003-11	5	279-52711-11	17
021-11400-20	5	20B-46001-21	15	279-63601-30	5
021-32000-50	5	20B-50101-08	19	279-76301-51	27
021-70600-30	15	20B-50110-08	19	KU3-11077-01	27
024-00700-21	9	20B-50120-08	19	X43-04401-62	21
031-00600-10	5	20B-50145-08	19	X56-11100-60	21
031-80500-20	9	20B-50301-H0	19	X60-01500-11	5
040-11400-30	5	20B-51302-11	17	X60-03502-40	5
044-00800-10	5	20B-52704-13	17	X64-13600-10	21
044-03500-91	5	20B-54101-H3	17	X64-20122-01	21
056-11000-30	21	20B-57101-03	10	X85-10614-91	21
056-11200-40	21	20B-60102-01	21	X85-11001-70	10
056-51000-50	5	20B-62320-20	23		
056-52100-20	7	20B-62353-08	23		
056-81200-20	21	20B-62354-08	23		
065-01401-50	25	20B-62415-08	23		
065-50003-11	25	20B-62427-08	23		
073-20057-60	21	20B-62445-08	23		
073-20058-20	17	20B-62453-08	23		
073-20058-60	17	20B-62500-08	23		
085-10622-01	21	20B-62505-08	23		
132-11AA1-10	5	20B-62520-08	23		
161-50125-08	19	20B-62526-08	23		
161-50150-08	19	20B-62531-08	23		
20B-10102-31	5	20B-62533-08	23		
20B-11002-21	5	20B-62535-08	23		
20B-13002-00	5	20B-62540-08	23		
20B-14202-03	5	20B-62541-08	23		
20B-15001-23	5	20B-62542-08	23		
20B-15501-01	5	20B-62550-08	23		
20B-16001-03	5	20B-62601-21	21		
20B-21001-11	7	20B-73101-01	25		
20B-22501-00	7	20B-75501-03	27		
20B-23401-J3	7	20B-79230-H1	25		

Part Description Index

The Part Description Index is an alphabetical index of all part descriptions included in this manual. The index shows what page(s) the part is used on.

A

ADJUST SCREW (M5X23).....9
AIR CLEANER AY.....13

B

BALANCER SHAFT.....7
BALL BEARING.....5
BLOWER HOUSING CP.....17
BOLT & WASHER ASSY (M6X14).....17
BOLT & WASHER ASSY (M6X25).....15
BOLT & WASHER ASSY (M6X30).....25
BOLT (M8X12).....17

C

CAMSHAFT AY.....9
CAMSHAFT PIN CP.....9
CARBURETOR ASSY.....23
CASE BAFFLE 1 CP.....17
CHAIN GUIDE.....9
CHOKE SHAFT.....23
CHOKE VALVE.....23
CLAMP.....15, 21
CLAMP CP.....25
CLIP.....5, 7, 9, 15
CLIP 1.....13
CONNECTING ROD ASSY.....7
COOLING BLOWER.....17
COVER.....13
COVER STAY(A/C).....10
CRANKCASE CP.....5
CRANKSHAFT CP.....7
CYLINDER HEAD AY.....5

D

DEFLECTOR CP.....9
DOWEL PIN.....5
DRAIN SCREW.....23

E

ELEMENT AY.....13
EXHAUST GASKET.....9
EXHAUST ROCKER ARM ASSY.....9
EXHAUST VALVE.....9

F

FLANGE BOLT (M10X75).....5
FLANGE BOLT (M6X12).....5, 15, 17
FLANGE BOLT (M6X14).....27
FLANGE BOLT (M6X16).....10
FLANGE BOLT (M6X8).....9, 17, 21, 25
FLANGE BOLT (M8X12).....9
FLANGE BOLT (M8X25).....21
FLANGE BOLT (M8X35).....5
FLANGE BOLT (M8X38).....5
FLANGE BOLT (M8X40).....7
FLANGE NUT (M18).....7

FLANGE NUT (M6).....10
FLANGE NUT (M8).....9, 21
FLOAT ASSY.....23
FLOAT C/U CP11.....27
FLOAT CHAMBER CP.....23
FLOAT PIN.....23
FLOAT VALVE ASSY.....23
FLYWHEEL CP.....25
FRICTION SPRING.....19
FRICTION WASHER.....15
FUEL FILTER.....21
FUEL PIPE CP.....21
FUEL STRAINER ASSY.....21
FUEL TANK CAP CP (BLACK).....21
FUEL TANK CP.....21

G

GASKET.....5
GASKET (FELT).....23
GASKET (FOAM).....23
GASKET 1.....10
GASKET 2.....10
GASKET 3.....9
GASKET SET.....5
GASKET(HEAD).....5
GASKET(ROCKER COVER).....5
GOVERNOR GEAR CP.....5
GOVERNOR LEVER AY.....15
GOVERNOR ROD.....15
GOVERNOR SHAFT CP.....15
GOVERNOR SLEEVE CP.....5
GOVERNOR SPRING.....15

H

HEAD BAFFLE 2 CP.....17
HOSE CLAMP.....21

I

IGNITION COIL CP.....25
INSULATOR CP.....9
INTAKE GASKET.....13
INTAKE ROCKER ARM ASSY.....9
INTAKE VALVE.....9

L

LABEL (MODEL).....21
LABEL (TRADE MARK).....17
LABEL (WARNING).....21
LABEL(HI-LOW).....15
LABEL(WARNING).....17
LOCKNUT (M6).....15

M

MAIN JET (#115).....23
MAINBEARING COVER CP.....5
MUFFLER COVER CP.....9
MUFFLER UN.....9

N

NUT.....15
NUT (M5).....9

O

O-RING.....9, 23
OIL GAUGE ASSY.....5
OIL SEAL.....5
OIL SENSOR CP.....27

P

PIN(ROCKER)CP.....9
PIPE KNOCK.....5
PISTON.....7
PISTON PIN.....7
PISTON RING SET.....7
PLUG.....5

R

RATCHET.....19
RATCHET GUIDE.....19
RECOIL STARTER ASSY.....19
REEL.....19
RELEASE LEVER.....9
RETAINER PLATE.....5
RETURN SPRING.....9, 15, 19
ROCKER COVER CP.....5
ROD SPRING.....15
ROLL PIN.....9
RUBBER PIPE.....21
RUBBER PIPE (10X15X170).....10
RUBBER PIPE (6.35X12.7X250).....21

S

SCREW.....15, 23
SCREW & WASHER ASSY (M5X20).....15
SCREW(M4X8).....15
SEAL-EXH VALVE.....5
SET SCREW.....19
SLOW JET (#59).....23
SPACER.....23
SPARK ARRESTER CP.....9
SPARK PLUG (NGK BR6HS).....25
SPARK PLUG CAP.....25
SPEED CONT. LEVER CP.....15
SPEED CONTROL BKT CP.....15
SPIRAL SPRING.....19
SPRING PIN.....9
SPRING RETAINER.....9
SPRING WASHER.....15
SQUARE NUT (M6).....15
STARTER KNOB.....19
STARTER PULLEY.....19
STARTER ROPE.....19
STOP PLATE.....15
STUD.....5

Part Description Index (continued)

T

TAPPING BOLT (M6X10).....27
TAPPING SCREW (M4X12).....27
TAPPING SCREW (M4X6).....9
TENTIONER.....9
TENTIONER PIN.....9
TENTIONER SPRING.....9
THROTTLE ADJUST SCREW.....23
THROTTLE ADJUST SPRING.....23
THROTTLE SHAFT.....23
THROTTLE VALVE.....23
TIMING CHAIN CP (112 LINK).....9

V

VALVE COLLET.....9
VALVE GUIDE.....5
VALVE SPRING.....9

W

WASHER (M8.5X18).....15
WIRE 1 CP.....25
WIRE CLAMP.....27
WOODRUFF KEY.....7

This Page Intentionally Left Blank

PRINTED IN THE USA

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047

Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com