

PARTS MANUAL

MODEL

Parts

Manual

EH650DC2890

10/12



SUBARU

Industrial Power Products

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047 - Phone 847-540-7300 - Fax 847-438-5012


e-mail: sales@subarupower.com - www.subarupower.com

© 2012 Subaru Industrial Power Products

Group Index

Group Name	Page
101 Crankcase.....	4
200 Crankshaft.....	8
301 Intake & Exhaust.....	10
315 Intake & Exhaust.....	12
400 Governor.....	14
500 Cooling & Starting.....	16
600 Fuel & Lubricant.....	18
640 Fuel & Lubricant.....	20
700 Electric Device.....	22
731 Electric Device.....	24
760 Electric Device.....	26
Part Number Index.....	28
Part Description Index.....	29

101 Crankcase

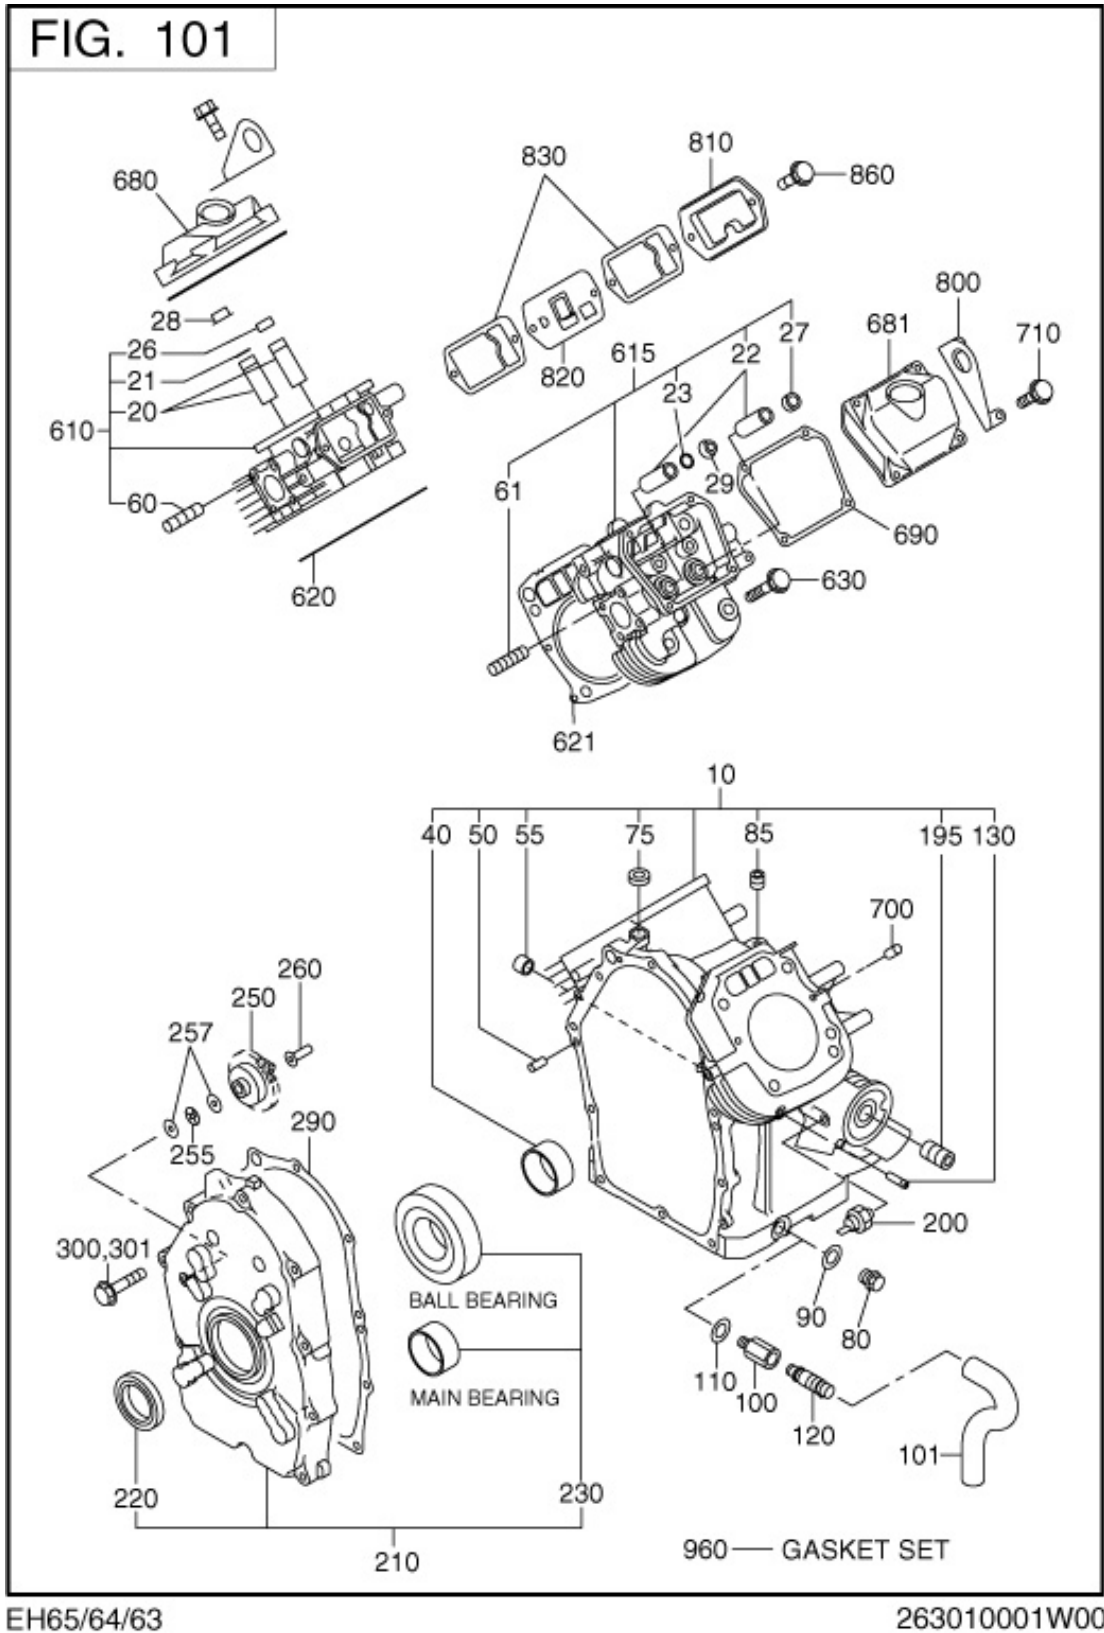

101 Crankcase

Ref	Part Number.	Description	Qty	Remark
10	263-10112-01	CRANKCASE CP	1	
20	263-14211-03	VALVE GUIDE	2	
21	056-51000-50	CLIP	1	
22	263-14211-03	VALVE GUIDE	2	
23	056-51000-50	CLIP	1	
26	132-11AA1-10	SEAL-EXH VALVE	1	
27	132-11AA1-10	SEAL-EXH VALVE	1	
28	263-35341-03	RETAINER PLATE	1	
29	263-35341-03	RETAINER PLATE	1	
40	263-15802-03	MAIN BEARING	1	
50	031-00801-10	DOWEL PIN	2	
55	263-55601-03	PIPE	2	
60	010-50802-90	STUD	4	
61	010-50802-90	STUD	4	
75	044-00800-10	OIL SEAL	1	
80	040-11400-30	PLUG	2	
85	235-15421-03	BLIND PLUG	1	
90	021-11400-20	GASKET	2	
101	263-68101-B0	OIL DRAIN HOSE AY	1	
120	263-65005-A3	OIL DRAIN VALVE	1	
130	263-15701-01	PIPE	1	
195	263-15901-03	UNION	1	
200	263-76002-A1	SWITCH OIL PRESSURE	1	
210	263-11102-71	MAIN BEARING COVER CP	1	
220	044-04200-30	OIL SEAL	1	
230	263-15802-03	MAIN BEARING	1	
250	263-45003-11	GOVERNOR GEAR CP	1	
255	263-46215-A3	THRUST BEARING	1	
257	263-46214-A3	WASHER	2	
260	277-41902-03	GOVERNOR SLEEVE	1	
290	263-16002-A3	GASKET (M.B COVER)	1	
300	011-00802-20	FLANGE BOLT	10	
610	263-41902-01	CYLINDER HEAD 1 CP	1	
615	263-13311-01	CYLINDER HEAD 2 CP	1	
620	263-15021-41	GASKET 1 (CYL HEAD)	1	
621	263-15121-31	GASKET 2 (CYL HEAD)	1	
630	011-01000-70	FLANGE BOLT	8	
680	263-15505-03	ROCKER COVER	1	
681	263-15503-03	ROCKER COVER	1	


101 Crankcase

Ref	Part Number.	Description	Qty	Remark
690	263-16101-A3	GASKET(ROCKER COVER)	2	
700	031-00600-20	DOWEL PIN	4	
710	011-00601-01	FLANGE BOLT	8	
800	280-19001-03	HOOK	2	
810	263-14301-03	BREATHER COVER	1	
820	280-14401-A1	BREATHER PLATE CP	1	
830	263-16006-03	GASKET(BREATHERPLATE	2	
860	011-00600-30	FLANGE BOLT	2	
960	263-99001-37	GASKET SET	1	

This Page Intentionally Left Blank

200 Crankshaft

FIG. 200

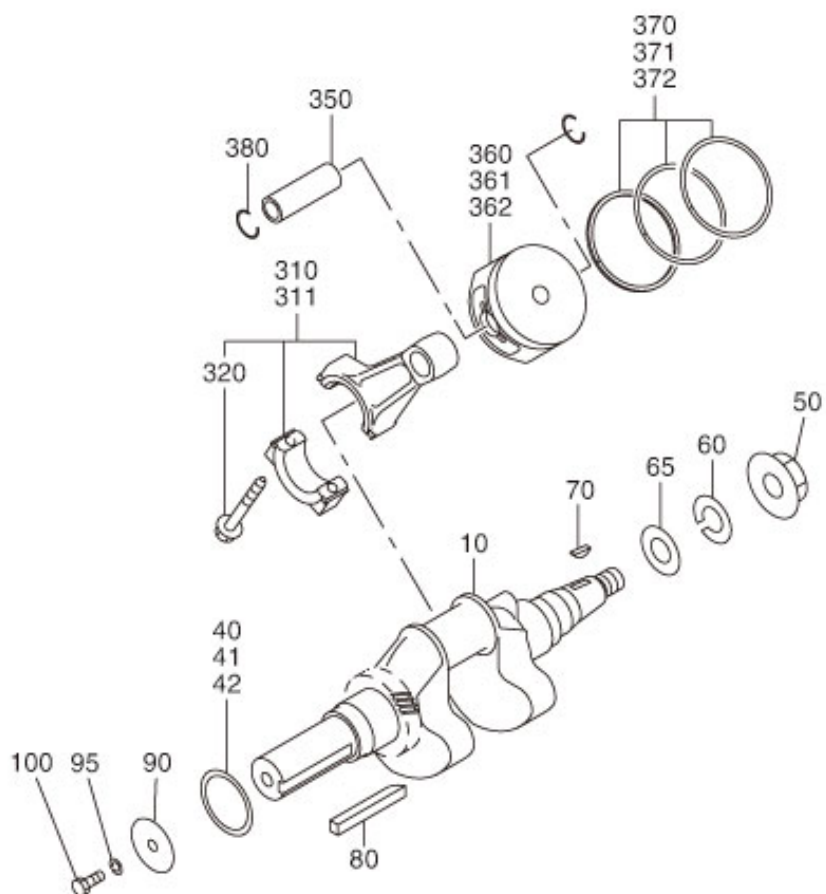


EH65/64/63

263020000W01

200 Crankshaft

Ref	Part Number.	Description	Qty	Remark
10	263-21211-11	CRANK SHAFT CP	1	
40	263-25012-A3	SPACER	1	
41	263-25013-A3	SPACER	1	
42	263-25014-A3	SPACER	1	
50	018-01800-10	FLANGE NUT	1	
65	003-10180-00	WASHER	1	
70	005-32054-01	WOODRUFF KEY	1	
310	263-22601-30	CONNECTING ROD AY	2	
320	001-05084-00	FLANGE BOLT	2	
350	263-23301-33	PISTON PIN	2	
360	263-23421-J3	PISTON	2	
361	263-23422-J3	PISTON	2	
362	263-23423-J3	PISTON	2	
370	263-23501-17	PISTON RING SET	2	
371	263-23502-17	PISTON RING SET	2	
372	263-23503-17	PISTON RING SET	2	
380	056-52100-20	CLIP	4	

301 Intake & Exhaust

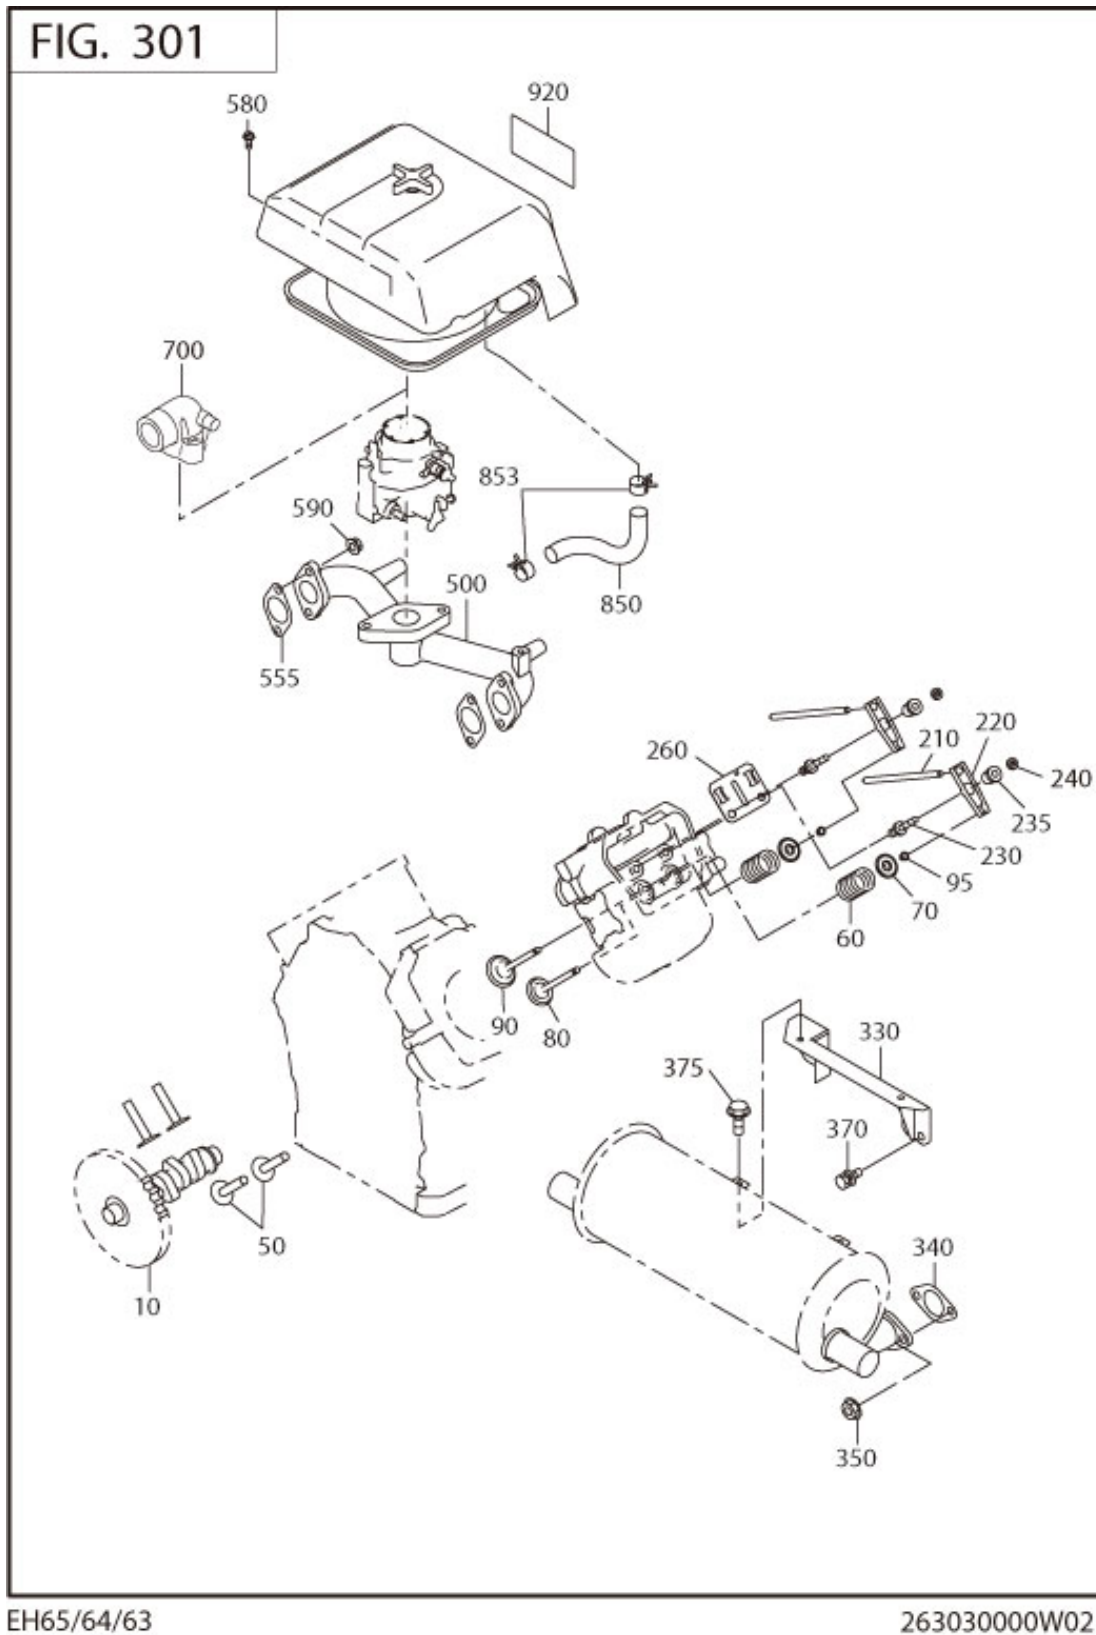


301 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
10	280-31701-13	CAM SHAFT	1	
50	263-33301-A3	TAPPET	4	
60	246-33611-03	VALVE SPRING	4	
70	246-33711-13	SPRING RETAINER	4	
80	263-33401-H3	INTAKE VALVE	2	
90	263-33502-H3	EXHAUST VALVE	2	
95	246-35501-03	COLLET-VALVE	8	
210	263-35322-A1	PUSH ROD CP	4	
220	267-36102-03	ROCKER ARM	4	
230	263-35801-03	BOLT(PIVOT)	4	
235	267-35701-03	PIVOT	4	
240	017-00601-10	NUT	4	
260	263-37002-A3	GUIDE PLATE	2	
340	270-35201-01	GASKET CP (MUFFLER)	2	
350	002-38080-00	FLANGE NUT	4	
500	280-33001-J3	INTAKE MANIFOLD	1	
555	263-35503-A3	GASKET(IN MANIFOLD)	2	
580	011-00600-20	FLANGE BOLT	3	
590	002-38080-00	FLANGE NUT	4	
850	263-18003-03	RUBBER PIPE	1	
853	056-12000-20	HOSE CLAMP	2	
920	263-91721-03	LABEL(TRADE MARK)	1	

315 Intake & Exhaust

FIG. 315

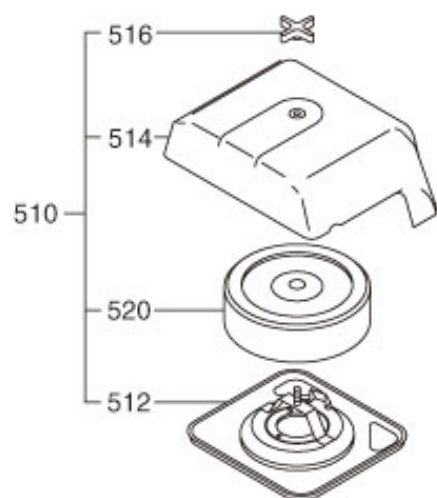


EH65/64/63

263031500W01

315 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
510	280-32602-00	AIR CLEANER AY	1	
512	280-32625-01	CLEANER BASE CP	1	
514	263-32630-03	CLEANER COVER	1	
516	263-32640-01	WING NUT	1	
520	263-32610-A1	CLEANER ELEMENT CP	1	

400 Governor

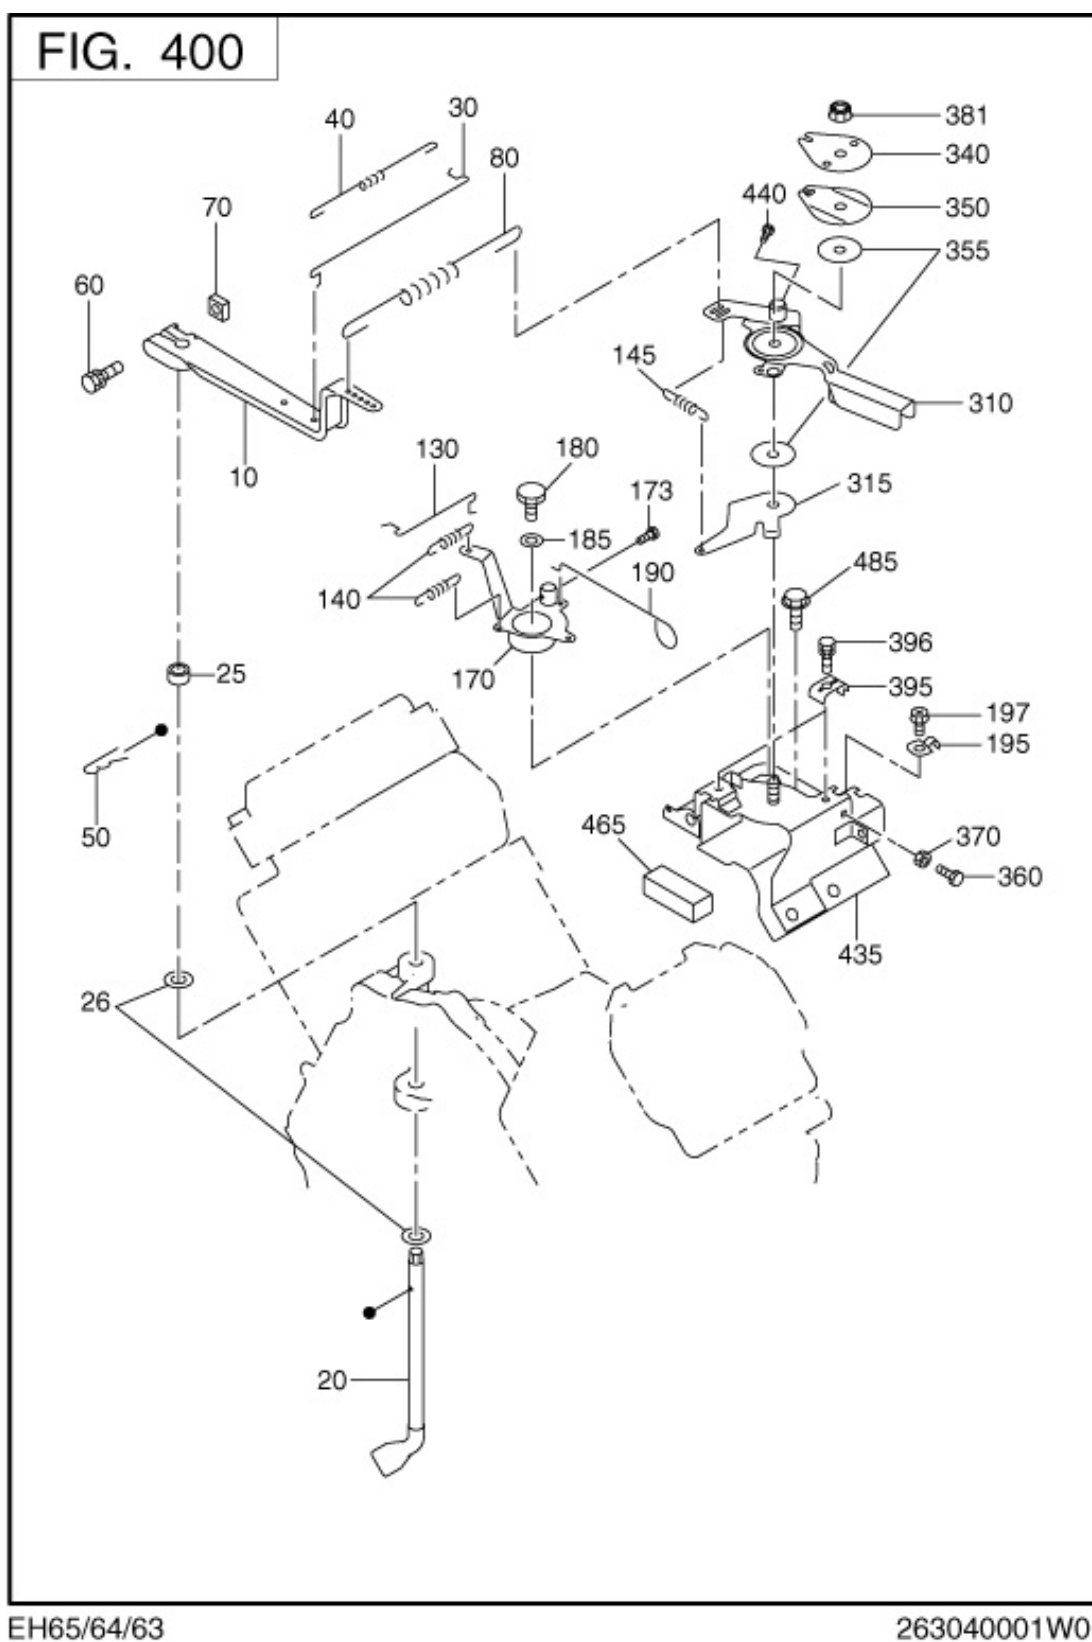


400 Governor

Ref	Part Number.	Description	Qty	Remark
10	263-42301-B3	GOVERNOR LEVER	1	
20	263-42201-A3	GOVERNOR SHAFT	1	
25	X23-00801-50	SPACER	1	
26	003-10080-00	WASHER	2	
30	263-42701-A3	GOVERNOR ROD	1	
40	263-42801-03	ROD SPRING	1	
50	005-11060-01	SNAP PIN	1	
60	001-14063-00	BOLT AND WASHER AY	1	
70	018-60600-20	NUT	1	
80	263-42509-A3	GOVERNOR SPRING	1	
130	263-46011-A3	CHOKE CONTROL ROD	1	
140	261-45201-03	RETURN SPRING	1	
170	263-46001-03	CHOKE CONTROL LINK	1	
180	226-43101-01	LINK PIVOT	1	
185	003-22100-00	WAVED WASHER	1	
190	263-43901-A3	CHOKE KNOB	1	
195	263-46010-03	CLAMP EH650	1	
197	015-20500-10	TAPPING SCREW	1	
310	263-43311-A3	SPEED CONTROL LEVER	1	
360	011-50500-20	BOLT	1	
370	002-27050-00	NUT	1	
381	002-38060-00	FLANGE NUT	1	
395	261-43901-03	CLAMP	1	
435	263-45021-A2	BRACKET(SPD CONTROL)	1	
465	X84-14320-00	RUBBER FOAM	1	
485	011-00600-20	FLANGE BOLT	2	

500 Cooling & Starting

FIG. 500

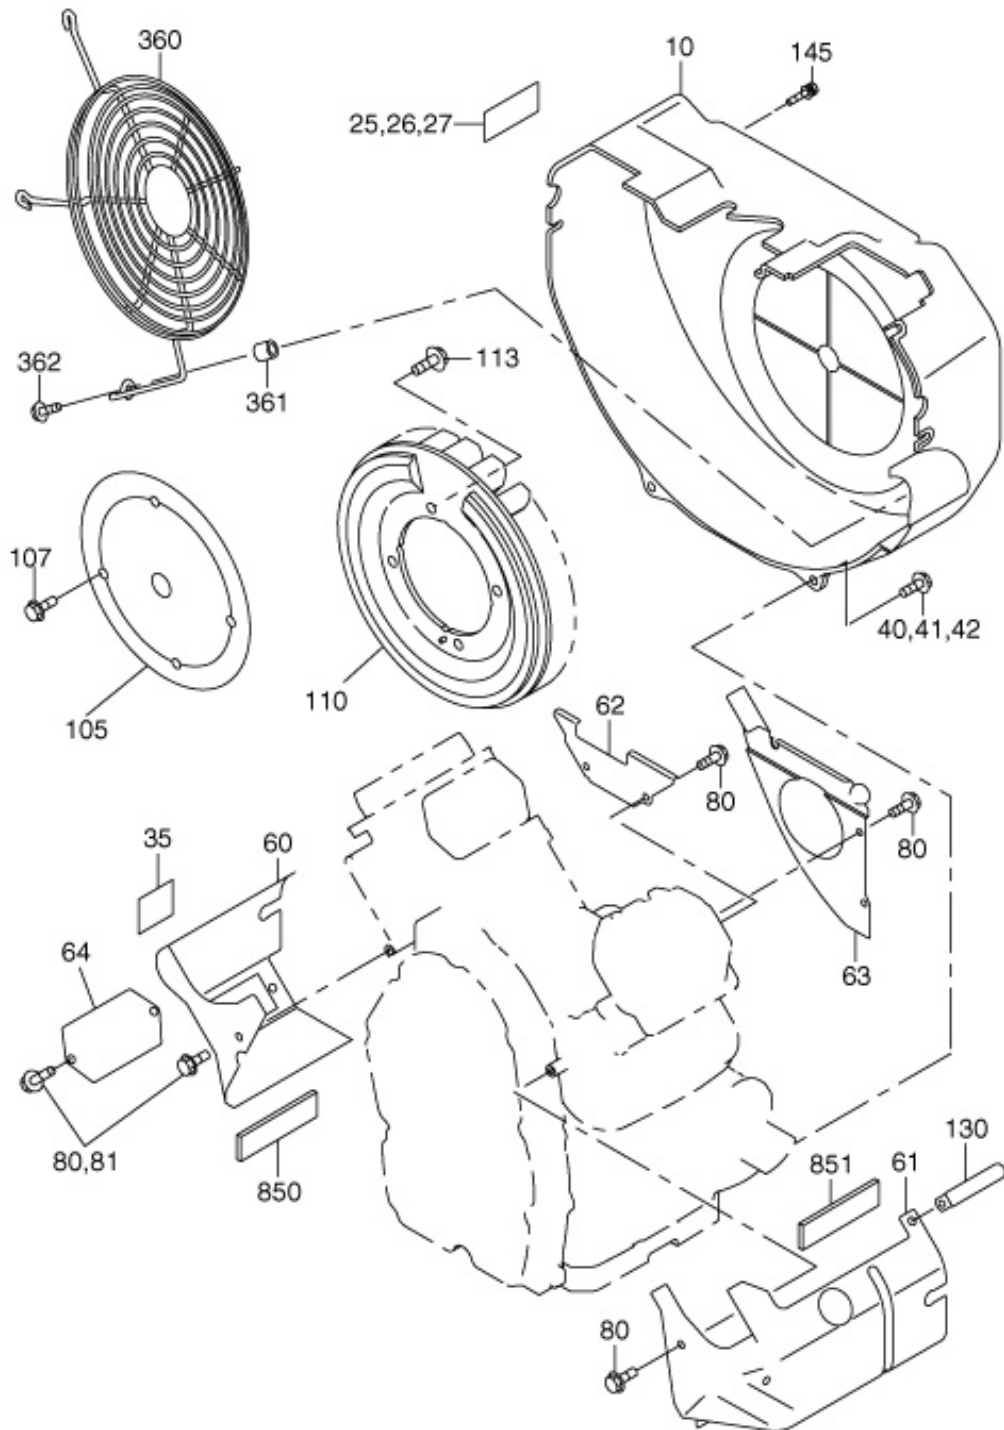

EH65/64/63

263050001W00

500 Cooling & Starting

Ref	Part Number.	Description	Qty	Remark
10	263-51121-B2	BLOWER HOUSING UN	1	
25	263-92001-03	LABEL(WARNING)	1	
40	011-00600-30	FLANGE BOLT	5	
41	011-00601-40	FLANGE BOLT	2	
60	263-52612-A1	CYLINDER BAFFLE 1 CP	1	
61	263-52703-C1	CYLINDER BAFFLE 2 CP	1	
62	263-52802-A3	CYLINDER BAFFLE 3	1	
63	263-52912-A2	CYLINDER BAFFLE 4 UN	1	
80	011-00600-20	FLANGE BOLT	8	
110	263-54101-A2	COOLING BLOWER UN	1	
113	001-14061-60	BOLT AND WASHER AY	4	
145	001-11063-50	BOLT AND WASHER AY	1	

[illegible]


263060001W00

600 Fuel & Lubricant

Ref	Part Number.	Description	Qty	Remark
55	263-65012-A3	FILTER,FUEL	1	
80	X85-10616-60	RUBBER PIPE	1	
81	X85-10615-11	RUBBER PIPE	1	
90	263-68501-03	HOSE CLAMP	2	
91	263-68501-03	HOSE CLAMP	2	
183	056-6100021	CLAMP	1	
230	085-10301-10	RUBBER PIPE	1	
235	206-75501-01	CLAMP CP	2	
270	263-63603-01	GAUGE CP,OIL	1	
290	263-66201-A3	GASKET(CARBURETOR)	1	
510	267-62201-10	FUEL PUMP AY	1	
515	263-65002-A3	BRACKET(FUEL PUMP)	1	
520	263-62657-01	PULSE PIPE	1	
522	X85-10615-61	RUBBER PIPE	1	
523	263-68501-03	HOSE CLAMP	2	
540	011-00600-20	FLANGE BOLT	5	
573	011-00801-10	FLANGE BOLT	2	
610	263-63901-13	INNER ROTOR	1	
615	263-63902-13	OUTER ROTOR	1	
620	263-64002-01	OIL PUMP COVER CP	1	
623	044-03501-70	OIL SEAL	1	
625	X24-08900-30	O RING	1	
640	011-00600-30	FLANGE BOLT	4	
650	263-64302-02	OIL PUMP FILTER UN	1	
653	263-65011-A3	FLANGE BOLT	1	
660	248-65801-00	OIL FILTER AY	1	
670	263-65001-13	PLUG(OIL RELIEF)	1	
673	003-70140-00	GASKET,ALUMINUM	1	
677	263-66001-03	SPRING(RELIEF VALVE)	1	
680	006-90308-00	STEEL BALL	1	
714	280-63602-A1	OIL FILLER CAP CP	1	
718	263-64414-A3	O RING	1	

640 Fuel & Lubricant

FIG. 640

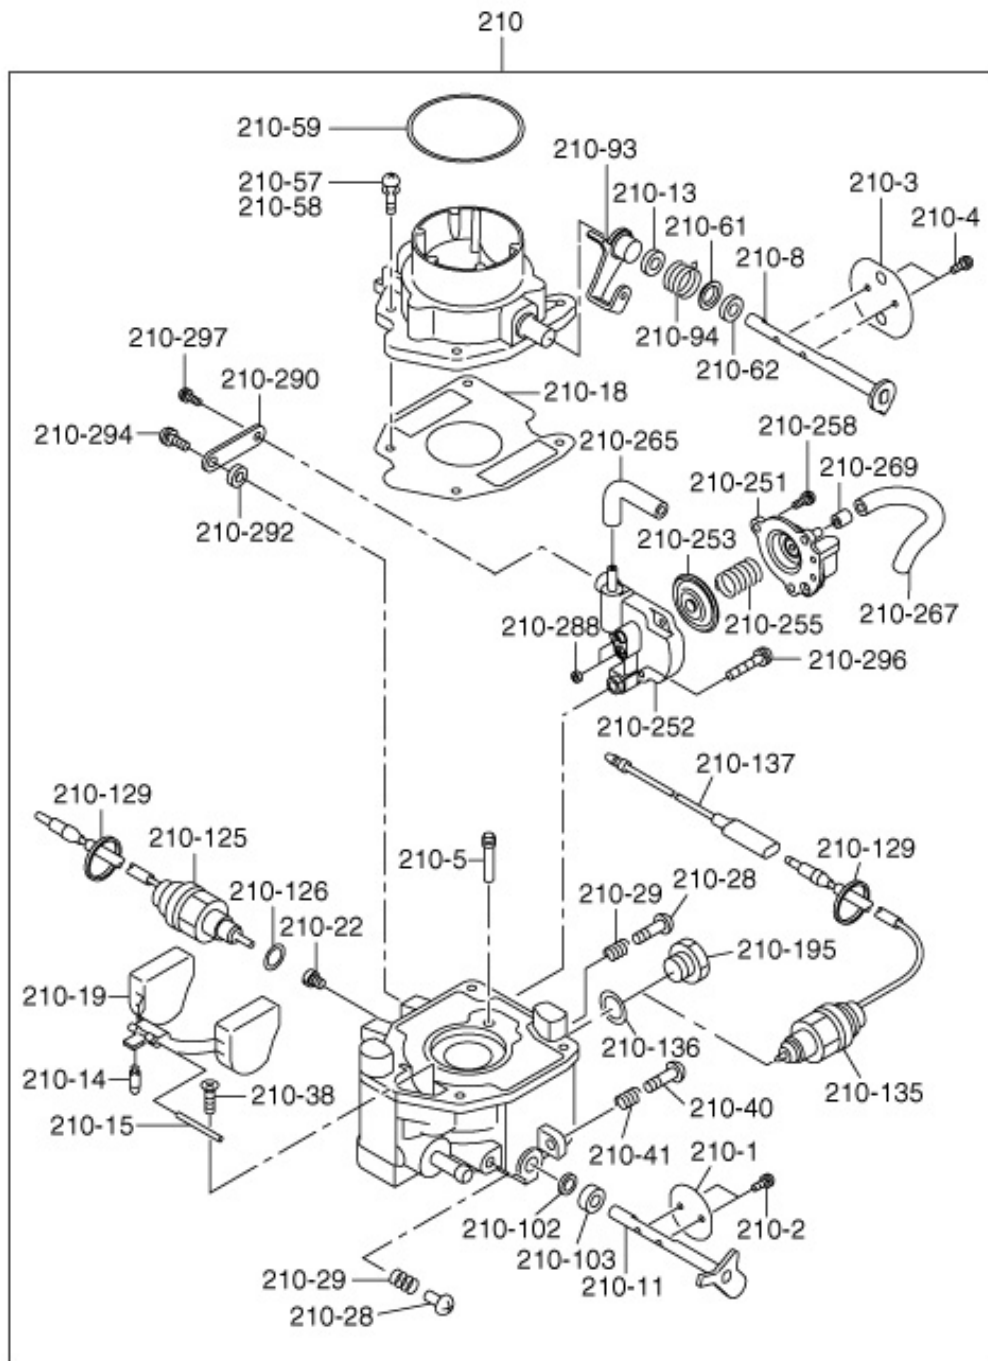

EH65/64/63


263064001W00

640 Fuel & Lubricant

Ref	Part Number.	Description	Qty	Remark
210	263-62384-00	CARBURETOR AY	1	
210-1	263-62535-08	VALVE,THROTTLE	1	
210-2	261-62352-08	SCREW,VALVE SET	2	
210-3	263-62528-08	VALVE,CHOKE	1	
210-4	258-62555-08	SCREW SET(VALVE)	2	
210-5	258-62420-08	JET(SLOW)	1	
210-8	263-62520-08	SHAFT ASSY,CHOKE	1	
210-11	263-62534-08	SHAFT ASSY,THROTTLE	1	
210-13	258-62551-08	RING(CHOKE LEVER)	1	
210-14	226-62501-08	VALVE,FLOAT	1	
210-15	258-62515-08	FLOAT PIN	1	
210-18	280-62545-08	GASKET,AIR HORN	1	
210-19	280-62505-08	FLOAT	1	
210-22	263-62400-08	JET,MAIN	1	
210-28	215-62353-08	SCREW,DRAIN	1	
210-29	215-62446-08	SPRING,DRAIN	1	
210-38	258-62556-08	SCREW SET(FLOAT PIN)	1	
210-40	263-62451-08	SCREW,THRO.ADJUST	1	
210-41	258-62445-08	SPRING(ADJUST SCREW)	1	
210-57	258-62450-08	SCREW SET(AIR HORN)	4	
210-59	263-62560-08	O-RING,AIR HORN	1	
210-61	280-62551-08	COLLAR,CHOKE	1	
210-62	258-62554-08	FILTER(CHOKE SHAFT)	1	
210-93	263-62524-08	LEVER ASSY,CHOKE	1	
210-94	263-62445-08	SPRING,CHOKE	1	
210-102	226-62580-08	FILTER,AIR	1	
210-103	258-62570-08	COLLAR(THRO.SHAFT)	1	
210-125	263-62556-08	VALVE CP,(SOLENOID)	1	
210-126	258-62546-08	GASKET,MAIN PASSAGE	1	
210-129	258-62566-08	CLAMP(SOLENOID)WIRE	1	
210-136	263-62555-08	GASKET	1	
210-195	263-62552-08	PLUG	1	

700 Electric Device

FIG. 700

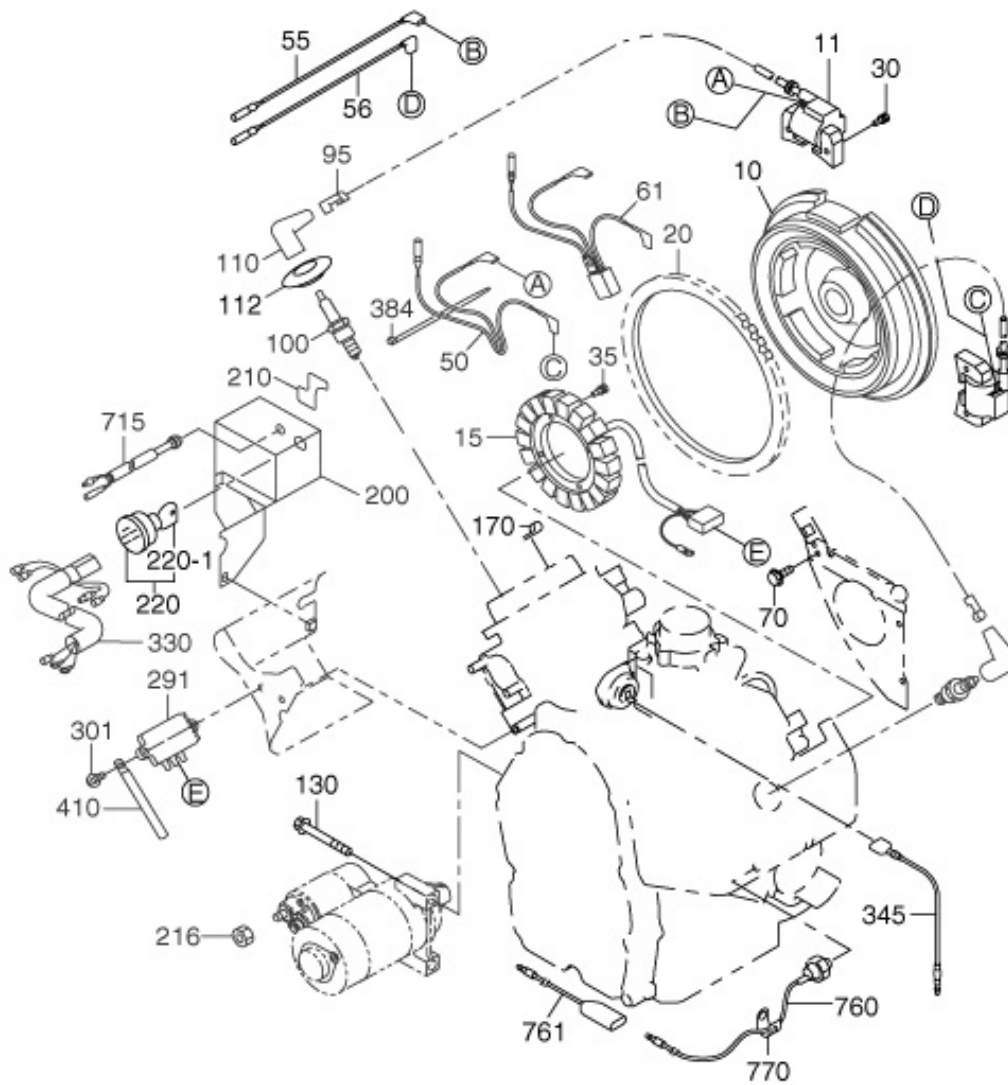

EH65/64/63


263070001W00

700 Electric Device

Ref	Part Number.	Description	Qty	Remark
10	263-77202-11	FLYWHEEL CP	1	
11	263-78203-01	IGNITION COIL CP	2	
15	263-79411-A1	CHARGE COIL CP	1	
20	263-71002-H3	RING GEAR	1	
30	001-14062-50	BOLT AND WASHER AY	4	
35	001-16052-00	BOLT AND WASHER AY	4	
50	263-73126-H1	WIRE CP(IG.COIL)	1	
95	X65-91000-10	PLUG TERMINAL	2	
100	065-01402-80	SPARK PLUG	2	
110	X65-51000-10	SPARK PLUG CAP	2	
112	279-55201-03	GROMMET(PLUG CAP)	1	
130	X11-00801-00	FLANGE BOLT	2	
170	X56-60800-30	CLAMP EH65RMI	2	
200	263-75121-01	CONTROL BOX CP	1	
210	263-95001-03	LABEL, CONTROL BOX	1	
216	002-38080-00	FLANGE NUT	1	
220	X66-00004-40	KEY SWITCH	1	
291	263-71903-A1	REGULATOR CP	1	
301	X11-00601-40	FLANGE BOLT	2	
330	263-73127-C1	WIRING HARNESS CP	1	
345	263-73129-A1	WIRE CP(IG.COIL)	1	
384	056-30000-10	WIRE BAND	4	
410	056-60002-50	CLAMP	1	
715	263-77301-10	LED LAMP AY	1	
760	263-73102-11	WIRE AY, OIL PRESSURE	1	
770	206-75501-01	CLAMP CP	1	

731 Electric Device

FIG. 731

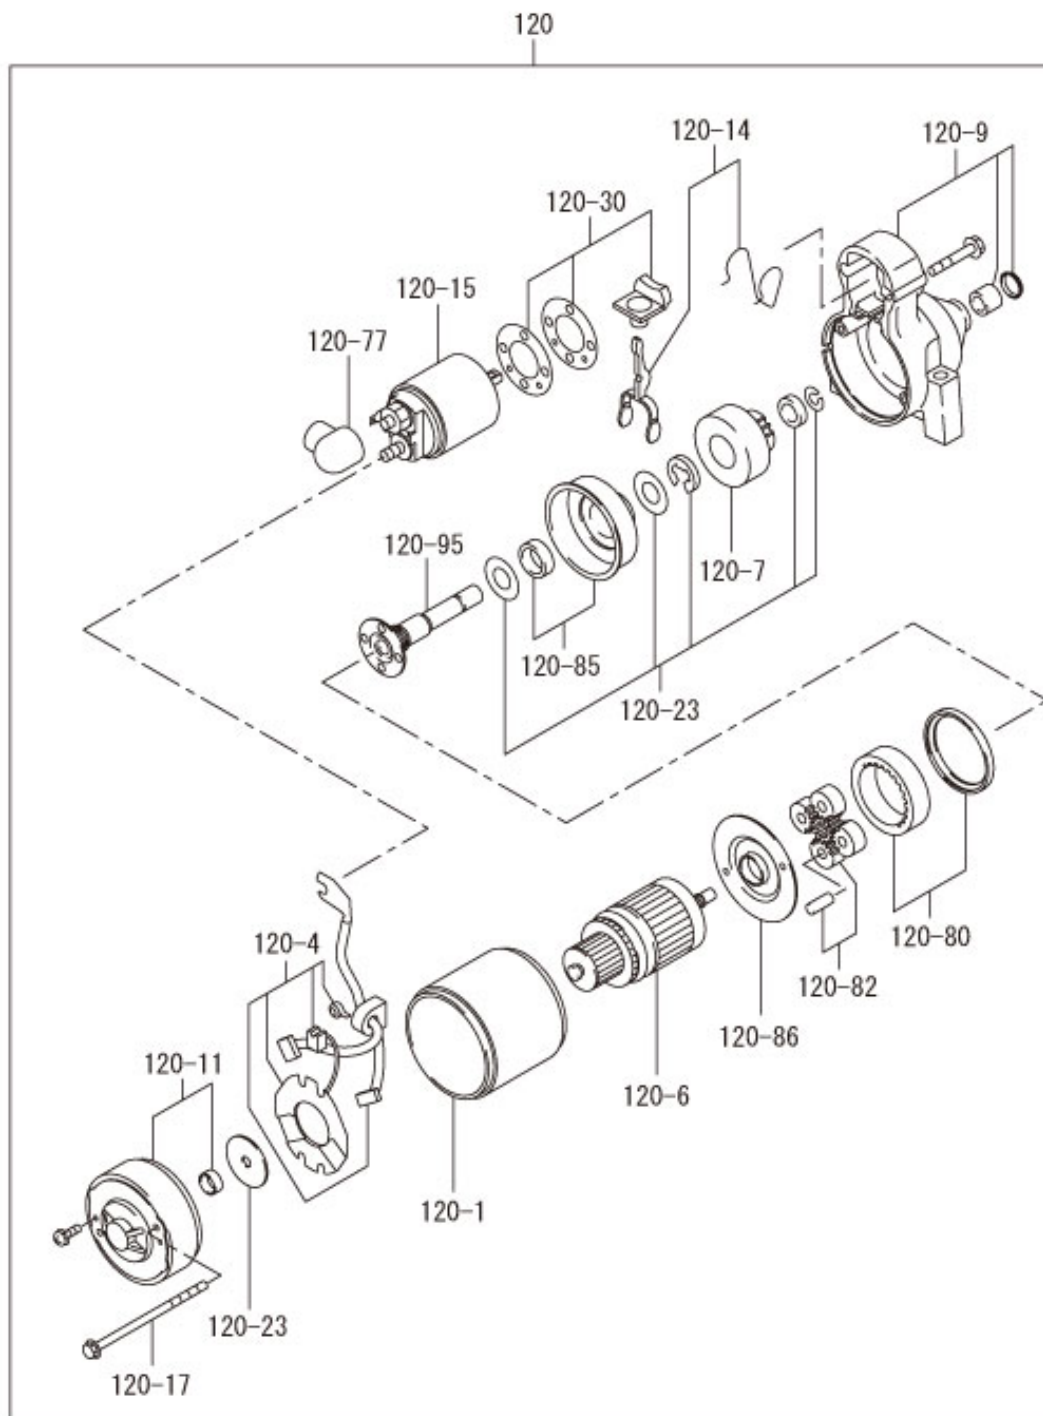

EH65/64/63


263073100W00

731 Electric Device

Ref	Part Number.	Description	Qty	Remark
120	263-70504-H0	STARTING MOTOR AY	1	
120-1	263-70561-08	YOKE AY	1	
120-4	245-70503-08	BRUSH HOLDER AY	1	
120-6	263-70512-08	ARMATURE AY	1	
120-7	263-70522-08	PINION AY	1	
120-9	263-70503-08	GEAR CASE AY	1	
120-11	263-70507-08	REAR COVER AY	1	
120-14	245-70518-08	SHIFT LEVER SET	1	
120-15	263-70515-08	MAGNETIC SWITCH AY	1	
120-17	207-70524-08	THROUGH BOLT	2	
120-23	245-70516-08	WASHER STOPPER SET	1	
120-30	245-70520-08	DUST COVER KIT	1	
120-77	207-70526-08	RUBBER CAP BS	1	
120-80	263-70596-08	INTERNAL GEAR	1	
120-82	263-70576-08	PLANET GEAR	3	
120-85	245-70509-08	CENTER BRACKET(P)	1	
120-86	263-70591-08	CENTER BRACKET (A)	1	
120-95	263-70571-08	PINION SHAFT	1	

760 Electric Device

FIG. 760

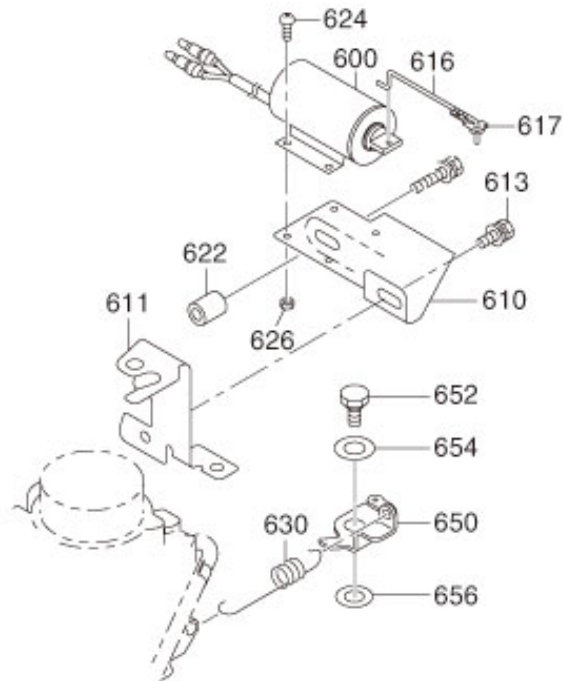

EH65/64/63

263076000W01

760 Electric Device

Ref	Part Number.	Description	Qty	Remark
600	263-75301-01	SOLENOID CP	1	
610	280-75401-01	BRACKET 1,SOLENOID	1	
611	280-75402-11	BRACKET 2,SOLENOID	1	
613	001-13082-00	BOLT AND WASHER AY	1	
616	263-75442-03	ROD SPRING	1	
617	X31-80300-20	ROLL PIN RMI	1	
622	023-00603-50	SPACER	1	
624	263-79902-A3	BOLT,FLANGED	2	
626	017-00300-10	NUT	4	
630	263-75422-01	SPRING	1	
650	226-43101-01	LINK 2 CP	1	
652	226-43101-01	LINK PIVOT CP	1	
654	021-71000-20	FRICTION WASHER	1	
656	263-46214-A3	WASHER	1	

Part Number Index

The Part Number Index is a numeric index of all part numbers included in this manual. The index shows what page(s) the part is used on.

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
001-05084-00	9	258-62420-08	21	263-46215-A3	5	263-99001-37	6
001-11063-50	17	258-62445-08	21	263-51121-B2	17	267-35701-03	11
001-13082-00	27	258-62450-08	21	263-52612-A1	17	267-36102-03	11
001-14061-60	17	258-62515-08	21	263-52703-C1	17	267-62201-10	19
001-14062-50	23	258-62546-08	21	263-52802-A3	17	270-35201-01	11
001-14063-00	15	258-62551-08	21	263-52912-A2	17	277-41902-03	5
001-16052-00	23	258-62554-08	21	263-54101-A2	17	279-55201-03	23
002-27050-00	15	258-62555-08	21	263-55601-03	5	280-14401-A1	6
002-38060-00	15	258-62556-08	21	263-62384-00	21	280-19001-03	6
002-38080-00	11, 23	258-62566-08	21	263-62400-08	21	280-31701-13	11
003-10080-00	15	258-62570-08	21	263-62445-08	21	280-32602-00	13
003-10180-00	9	261-43901-03	15	263-62451-08	21	280-32625-01	13
003-22100-00	15	261-45201-03	15	263-62520-08	21	280-33001-J3	11
003-70140-00	19	261-62352-08	21	263-62524-08	21	280-62505-08	21
005-11060-01	15	263-10112-01	5	263-62528-08	21	280-62545-08	21
005-32054-01	9	263-11102-71	5	263-62534-08	21	280-62551-08	21
006-90308-00	19	263-13311-01	5	263-62535-08	21	280-63602-A1	19
010-50802-90	5	263-14211-03	5	263-62552-08	21	280-75401-01	27
011-00600-20	11, 15, 17, 19	263-14301-03	6	263-62555-08	21	280-75402-11	27
011-00600-30	6, 17, 19	263-15021-41	5	263-62556-08	21	X11-00601-40	23
011-00601-01	6	263-15121-31	5	263-62560-08	21	X11-00801-00	23
011-00601-40	17	263-15503-03	5	263-62657-01	19	X23-00801-50	15
011-00801-10	19	263-15505-03	5	263-63603-01	19	X24-08900-30	19
011-00802-20	5	263-15701-01	5	263-63901-13	19	X31-80300-20	27
011-01000-70	5	263-15802-03	5	263-63902-13	19	X56-60800-30	23
011-50500-20	15	263-15901-03	5	263-64002-01	19	X65-51000-10	23
015-20500-10	15	263-16002-A3	5	263-64302-02	19	X65-91000-10	23
017-00300-10	27	263-16006-03	6	263-64414-A3	19	X66-00004-40	23
017-00601-10	11	263-16101-A3	6	263-65001-13	19	X84-14320-00	15
018-01800-10	9	263-18003-03	11	263-65002-A3	19	X85-10615-11	19
018-60600-20	15	263-21211-11	9	263-65005-A3	5	X85-10615-61	19
021-11400-20	5	263-22601-30	9	263-65011-A3	19	X85-10616-60	19
021-71000-20	27	263-23301-33	9	263-65012-A3	19		
023-00603-50	27	263-23421-J3	9	263-66001-03	19		
031-00600-20	6	263-23422-J3	9	263-66201-A3	19		
031-00801-10	5	263-23423-J3	9	263-68101-B0	5		
040-11400-30	5	263-23501-17	9	263-68501-03	19		
044-00800-10	5	263-23502-17	9	263-70503-08	25		
044-03501-70	19	263-23503-17	9	263-70504-H0	25		
044-04200-30	5	263-25012-A3	9	263-70507-08	25		
056-12000-20	11	263-25013-A3	9	263-70512-08	25		
056-30000-10	23	263-25014-A3	9	263-70515-08	25		
056-51000-50	5	263-32610-A1	13	263-70522-08	25		
056-52100-20	9	263-32630-03	13	263-70561-08	25		
056-60002-50	23	263-32640-01	13	263-70571-08	25		
056-6100021	19	263-33301-A3	11	263-70576-08	25		
065-01402-80	23	263-33401-H3	11	263-70591-08	25		
085-10301-10	19	263-33502-H3	11	263-70596-08	25		
132-11AA1-10	5	263-35322-A1	11	263-71002-H3	23		
206-75501-01	19, 23	263-35341-03	5	263-71903-A1	23		
207-70524-08	25	263-35503-A3	11	263-73102-11	23		
207-70526-08	25	263-35801-03	11	263-73126-H1	23		
215-62353-08	21	263-37002-A3	11	263-73127-C1	23		
215-62446-08	21	263-41902-01	5	263-73129-A1	23		
226-43101-01	15, 27	263-42201-A3	15	263-75121-01	23		
226-62501-08	21	263-42301-B3	15	263-75301-01	27		
226-62580-08	21	263-42509-A3	15	263-75422-01	27		
235-15421-03	5	263-42701-A3	15	263-75442-03	27		
245-70503-08	25	263-42801-03	15	263-76002-A1	5		
245-70509-08	25	263-43311-A3	15	263-77202-11	23		
245-70516-08	25	263-43901-A3	15	263-77301-10	23		
245-70518-08	25	263-45003-11	5	263-78203-01	23		
245-70520-08	25	263-45021-A2	15	263-79411-A1	23		
246-33611-03	11	263-46001-03	15	263-79902-A3	27		
246-33711-13	11	263-46010-03	15	263-91721-03	11		
246-35501-03	11	263-46011-A3	15	263-92001-03	17		
248-65801-00	19	263-46214-A3	5, 27	263-95001-03	23		

Part Description Index

The Part Description Index is an alphabetical index of all part descriptions included in this manual. The index shows what page(s) the part is used on.

A

AIR CLEANER AY.....13
ARMATURE AY.....25

B

BLIND PLUG.....5
BLOWER HOUSING UN.....17
BOLT.....15
BOLT AND WASHER AY.....15, 17, 23, 27
BOLT(PIVOT).....11
BOLT,FLANGED.....27
BRACKET 1,SOLENOID.....27
BRACKET 2,SOLENOID.....27
BRACKET(FUEL PUMP).....19
BRACKET(SPD CONTROL).....15
BREATHER COVER.....6
BREATHER PLATE CP.....6
BRUSH HOLDER AY.....25

C

CAM SHAFT.....11
CARBURETOR AY.....21
CENTER BRACKET (A).....25
CENTER BRACKET(P).....25
CHARGE COIL CP.....23
CHOKE CONTROL LINK.....15
CHOKE CONTROL ROD.....15
CHOKE KNOB.....15
CLAMP.....15, 19, 23
CLAMP EH650.....15
CLAMP EH65RMI.....23
CLAMP CP.....19, 23
CLAMP(SOLENOID)WIRE.....21
CLEANER BASE CP.....13
CLEANER COVER.....13
CLEANER ELEMENT CP.....13
CLIP.....5, 9
COLLAR(THRO.SHAFT).....21
COLLAR,CHOKE.....21
COLLET-VALVE.....11
CONNECTING ROD AY.....9
CONTROL BOX CP.....23
COOLING BLOWER UN.....17
CRANK SHAFT CP.....9
CRANKCASE CP.....5
CYLINDER BAFFLE 1 CP.....17
CYLINDER BAFFLE 2 CP.....17
CYLINDER BAFFLE 3.....17
CYLINDER BAFFLE 4 UN.....17
CYLINDER HEAD 1 CP.....5
CYLINDER HEAD 2 CP.....5

D

DOWEL PIN.....5-6
DUST COVER KIT.....25

E

EXHAUST VALVE.....11

F

FILTER(CHOKE SHAFT).....21
FILTER,AIR.....21
FILTER,FUEL.....19
FLANGE BOLT.....5-6, 9, 11, 15, 17, 19, 23
FLANGE NUT.....9, 11, 15, 23
FLOAT.....21
FLOAT PIN.....21
FLYWHEEL CP.....23
FRICTION WASHER.....27
FUEL PUMP AY.....19

G

GASKET.....5, 21
GASKET (M.B COVER).....5
GASKET 1 (CYL HEAD).....5
GASKET 2 (CYL HEAD).....5
GASKET CP (MUFFLER).....11
GASKET SET.....6
GASKET(BREATHERPLATE).....6
GASKET(CARBURETOR).....19
GASKET(IN MANIFOLD).....11
GASKET(ROCKER COVER).....6
GASKET,AIR HORN.....21
GASKET,ALUMINUM.....19
GASKET,MAIN PASSAGE.....21
GAUGE CP,OIL.....19
GEAR CASE AY.....25
GOVERNOR GEAR CP.....5
GOVERNOR LEVER.....15
GOVERNOR ROD.....15
GOVERNOR SHAFT.....15
GOVERNOR SLEEVE.....5
GOVERNOR SPRING.....15
GROMMET(PLUG CAP).....23
GUIDE PLATE.....11

H

HOOK.....6
HOSE CLAMP.....11, 19

I

IGNITION COIL CP.....23
INNER ROTOR.....19
INTAKE MANIFOLD.....11
INTAKE VALVE.....11
INTERNAL GEAR.....25

J

JET(SLOW).....21
JET,MAIN.....21

K

KEY SWITCH.....23

L

LABEL(TRADE MARK).....11
LABEL(WARNING).....17
LABEL, CONTROL BOX.....23
LED LAMP AY.....23
LEVER ASSY,CHOKE.....21
LINK 2 CP.....27
LINK PIVOT.....15
LINK PIVOT CP.....27

M

MAGNETIC SWITCH AY.....25
MAIN BEARING.....5
MAINBEARING COVER CP.....5

N

NUT.....11, 15, 27

O

O RING.....19
O-RING,AIR HORN.....21
OIL DRAIN HOSE AY.....5
OIL DRAINVALVE.....5
OIL FILLER CAP CP.....19
OIL FILTER AY.....19
OIL PUMP COVER CP.....19
OIL PUMP FILTER UN.....19
OIL SEAL.....5, 19
OUTER ROTOR.....19

P

PINION AY.....25
PINION SHAFT.....25
PIPE.....5
PISTON.....9
PISTON PIN.....9
PISTON RING SET.....9
PIVOT.....11
PLANET GEAR.....25
PLUG.....5, 21
PLUG TERMINAL.....23
PLUG(OIL RELIEF).....19
PULSE PIPE.....19
PUSH ROD CP.....11

R

REAR COVER AY.....25
REGULATOR CP.....23
RETAINER PLATE.....5
RETURN SPRING.....15
RING GEAR.....23
RING(CHOKE LEVER).....21

Part Description Index (continued)

ROCKER ARM.....11
ROCKER COVER.....5
ROD SPRING.....15, 27
ROLL PIN RMI.....27
RUBBER CAP BS.....25
RUBBER FOAM.....15
RUBBER PIPE.....11, 19

WIRING HARNESS CP.....23
WOODRUFF KEY.....9

Y

YOKE AY.....25

S

SCREW SET(AIR HORN).....21
SCREW SET(FLOAT PIN).....21
SCREW SET(VAIVE).....21
SCREW,DRAIN.....21
SCREW,THRO.ADJUST.....21
SCREW,VALVE SET.....21
SEAL-EXH VALVE.....5
SHAFT ASSY,CHOKE.....21
SHAFT ASSY,THROTTLE.....21
SHIFT LEVER SET.....25
SNAP PIN.....15
SOLENOID CP.....27
SPACER.....9, 15, 27
SPARK PLUG.....23
SPARK PLUG CAP.....23
SPEED CONTROL LEVER.....15
SPRING.....27
SPRING RETAINER.....11
SPRING(ADJUST SCREW).....21
SPRING(RELIEF VALVE).....19
SPRING,CHOKE.....21
SPRING,DRAIN.....21
STARTING MOTOR AY.....25
STEEL BALL.....19
STUD.....5
SWITCH OIL PRESSURE.....5

T

TAPPET.....11
TAPPING SCREW.....15
THROUGH BOLT.....25
THRUST BEARING.....5

U

UNION.....5

V

VALVE CP,(SOLENOID).....21
VALVE GUIDE.....5
VALVE SPRING.....11
VALVE,CHOKE.....21
VALVE,FLOAT.....21
VALVE,THROTTLE.....21

W

WASHER.....5, 9, 15, 27
WASHER STOPPER SET.....25
WAVED WASHER.....15
WING NUT.....13
WIRE AY, OIL PRESSURE.....23
WIRE BAND.....23
WIRE CP(IG.COIL).....23

This Page Intentionally Left Blank

PRINTED IN THE USA

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047

Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com