Introduction


This catalog is designed to identify Wisconsin Robin parts.

When ordering parts, it is always advisable to list the engine model, specification number and serial number. With this information, we can check your order for any incorrect part numbers. Use your Service Parts List to ensure proper part number and nomenclature identification.

TELEDYNE TOTAL POWER reserves the right to modify, alter and improve engines and parts. Part numbers and the structure of parts may change from those shown in this catalog.

Table of Contents


Air Shrouding	1
Crankcase and Cylinder	2-3
Crankshaft, Camshaft, Piston, Rod, Valve and Drive End :	4-5
Throttle, Governor and Control Box	6-7
Fuel Tank	8
Fuel Pump	9
Ignition Timer, Coil and Alternator	10
Starting Motor and Switch	11-12
Air Cleaner and Intake Manifold	13
Carburetor and Automatic Choke Carburetor pages	14

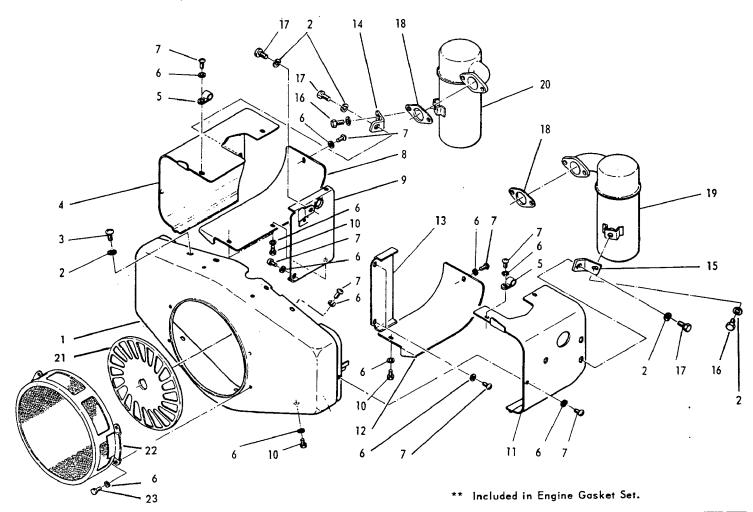

Ref. No.	Part Number	Description	Qty.		Ref. No.	
 1	EY2105115841X	BLOWER HOUSING	1		10	E
2	EY0032008000	WASHER, 8 mm, spring lock	6		11	E
		t-for Cythider Buffle			12	E
3	EY0043108160	SCREW, blower housing mounting 8 mm x 16 mm long, pan head	1		13	E
4	EY2105315801X	COVER, cylinder head, L.H. side	1		14	E
5	EY0566100021	CLAMP, spark plug wire	2		15	E
6	EY0032006000	WASHER, 6 mm, spring lock	22		16 17	E
		2-for spark plug wire clamps 4-for blower housing 4-for pulley guard			18	E
7	EY0017006120	SCREW, 6 mm x 12 mm long, hex head 4-for cylinder head covers	11		19	E
:		2-for lower cylinder shrouds 2-for cylinder heat deflectors 2-for spark plug wire clamp			20	E
		1-for blower housing		·	21	E
8	EY2105295801X	SHROUD, lower cylinder, L.H. side	1		22	E
9	EY2105300121	HEAT DEFLECTOR, cyl., L.H. side	1		23	E

Ref. No.	Part Number	Description	Qty.
10	EY0016506080	SCREW, 6 mm × 8 mm long, he× hd. 3-for lower cylinder shrouds 3-for blower housing	6
11	EY2105285801X	COVER, cylinder head, R.H. side	1
12	EY2105265801X	SHROUD, lower cylinder, R.H. side	1
13	EY2105270101	HEAT DEFLECTOR, cyl., R.H. side	1
14	EY2103530101	BRACKET, muffler, L.H. side	1
15	EY2103530201	BRACKET, muffler, R.H. side	1
16	EY0016508120	SCREW, muffler bracket to muffler 8 mm x 12 mm long, hexagon head	2
17	EY0016508160	SCREW, 8 mm x 16 mm long, hex hd. 2-for muffler bracket to cylinder hd. 1-for heat deflector, L.H. side	3
18	EY2083500101	GASKET, exhaust muffler	2
19	EY2103011511YA	MUFFLER, right hand side	1
20	EY2103021511YA	MUFFLER, left hand side	1
21	EY2105530111	DUST PLATE, blower housing	1
22	EY2105440301	PULLEY GUARD	1
23	EY0016506120	SCREW, pulley guard mounting 6 mm x 12 mm long, hex head	4

CRANKCASE and CYLINDER Group For Model EY21W

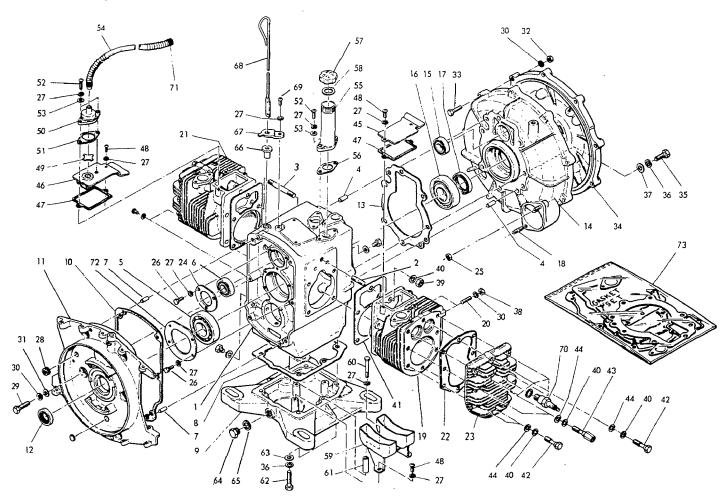

NOTE: Items without a part number are not sold separately.
** Included in Engine Gasket Set.


Ref. No.	Part Number	Description	Qty.	1 1	Ref. No.	Part Number	Description	Qty.
1	EY2101020101 -	CRANKCASE assembly	1		11	EY2101150101	CRANKCASE COVER assembly, fan end	1
		EY2106710113 OIL SPRAY NOZZLE (not illustrated)	2		12		EY0440270010 OIL SEAL	1
2		EY0105100042 STUD, cyl. block 10 mm x 38 mm long	9		13	**	GASKET, bearing cover	1
3		EY0105100031 STUD, cyl. block 10 mm x 83 mm long	1		14	EY2101100111	MAIN BEARING COVER assembly, take-off end	1
4		DOWEL PIN, crankcase cover	2		15		EY0600200010 BEARING, camshaft	1
		EY0600350020 BEARING, crankshaft main	1.		16		EY0601350010 BEARING, crank- shaft main	1
6		EY0600200020 BEARING, camshaft main	1		17		EY0440350020 OIL SEAL,	1
7		DOWEL PIN, crankcase cover mtg	2					
8	**	GASKET (BASE)	1		18		EY0105080044 STUD, starting motor mounting	2
9	EY2101340123	ENGINE BASE	7				(Not Illustrated)	.
10	**	GASKET, crankcase cover	1			EY0600400010	BEARING, take-off shaft	

CRANKCASE and CYLINDER Group For Model EY21W

Ref. No.	Part Number	Description	Qty.
19	EY2101250141	CYLINDER BLOCK asse'y, R.H. side Includes:	1
20		EY0013108301 STUD, muffler mtg 8 mm × 30 mm long	2
21	EY2101240141	CYLINDER BLOCK asse'y, L.H. side Includes: STUD (Ref. 20)	1
22	** EY2101510101	GASKET, cylinder head	ż
23	EY2101320103	CYLINDER HEAD	2
24	EY2101700403	BEARING RETAINER, camshaft,	1
25	EY0021708000	NUT (self-locking) starting motor mtg.	2
26	EY0016606160	SCREW, 6 mm x 16 mm long, hex.hd. 3-for camshaftbrg.retainer(fan end) 4-for main bearing retainer(fan end)	7
27	EY0032006000	WASHER, 6 mm, spring lock	18
28	EY0241100010	GROMMET, alternator wire, fan end	1
29	EY0016608350	SCREW, crankcase cover, fan end 8 mm x 35 mm long, hexagon head	6
30	EY0032008000	WASHER, 8 mm, spring lock	18
31	EY0031008000	WASHER, 8.4 mm I.D. x 16 mm O.D., plain steel, crankcase cover, fan end	6
32	EY0021708000	NUT, flange adapter mounting	8
33	EY0016508550	SCREW, flange adapter mounting 8 mm × 55 mm long, hexagon head	8
34	EY2101540201	FLANGE ADAPTER	1
35	EY0100100010 EY0100100090	SCREW, main brg. cover T.O. end 10 mm x 32 mm long, hexagon head 10 mm x 40 mm long, hexagon head	1 6
36	EY0032010000	WASHER, 10 mm, spring lock	13
37	EY0031010000	WASHER, main brg. cover, T.O. end 10.5 mm, plain steel	7
38	EY0021908000	NUT, muffler mounting	4
39	EY0021810000	NUT, cylinder block mounting	10
40	EY0032010000	WASHER, 10 mm, spring lock	26

EY21V			
Ref.	Part Number	Description	Qty.
41	**	GASKET, cylinder base	2
42	EY0103100020	SCREW, cylinder head mounting 10 mm x 46 mm long, hexagon head	12
43	EY0103100010	SCREW, cylinder head mtg. (special) 10 mm × 63.2 mm long	4
44	EY0200100040	WASHER, cylinder head	16
45	EY2101440101	TAPPET COVER, right hand side	1
46	EY2101430111	TAPPET COVER, left hand side	1
47	**	GASKET, tappet cover	2
48	EY0043106140	SCREW, 6 mm x 14 mm long, pan head 3-for tappet covers 2-for oil trough	5
49	EY2101600203	BREATHER VALVE	1
50	EY2101600103	ADAPTER, breather valve	1
51	**	GASKET, breather adapter	1
52	EY0043106200	SCREW, 6 mm x 20 mm long, pan head 2-for breather adapter 2-for oil filler adapter	4
53	EY0031006000	WASHER, breather adapter	4
54	EY0850100011	BREATHER TUBE	1
55	EY2106370103	ADAPTER, oil filler – dip stick Includes:	1
56	**	GASKET	1
57	EY2109900907	OIL FILLER CAP	1
58	**	GASKET, oil filler cap	1
59	EY2106380121	OIL TROUGH	1
60	EY0016606500	SCREW, oil trough mounting	1
61	EY2106700503	SPACER, oil trough mounting	1
62	EY0016610400	SCREW, engine base mounting	6
63	EY0031010000	WASHER, engine base mounting	6
64	EY0400160010	PLUG, oil drain]]
65	**	GASKET, oil drain plug	1
66	EY2106700313	SEAL, oil dip stick	1
67	EY2106540101	RETAINER, dip stick seal	1
68	EY2106360101	OIL DIP STICK	1
69	EY0043106120	SCREW, dip stick seal retainer 6 mm x 12 mm long, pan head	1
70	EY0650140010 (Optional)	SPARK PLUG with gasket NGK-B4, Champion J-8, AC 45	2
71	EY2101530103	PROTECTOR, breather tube	1
72	EY2101700313	BEARING RETAINER, fan end	ון
73	EY2109900107	ENGINE GASKET SET	ון
		Consisting of: CRANKCASE COVER gasket	ı
		BASE gasket	1
	15	MAIN BEARING COVER gasket MANIFOLD FLANGE gasket	
		CYLINDER gasket	2 2
		CYLINDER HEAD gasket	2 2
		BREATHER HOUSING gasket	1
		OIL FILLER ADAPTER gasket OIL FILLER CAP gasket	1
		DRAIN PLUG gasket	1
		MUFFLER gasket DRAIN FITTING gasket	2
		DIAIN LILLING GOSKET	L_ <u>'</u>

Fig. 3 CRANKSHAFT, CAMSHAFT, PISTON, ROD, VALVE and DRIVE END Group
For Model EY21W

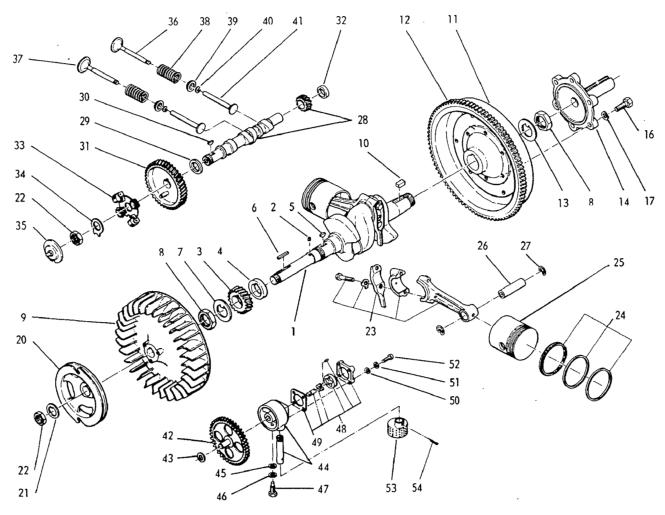


NOTE: Items without a part number are not sold separately.

Ref.	Part Number	Description	Qty.	Ref.	Part Number	Description	Qty.
1	EY2102020101	CRANKSHAFT assembly	1	8	EY0173300010	LOCKNUT, 30 mm thread, hex. steel 1 for crankshaft gear	2
2		EY0310040010 DOWEL PIN, alternator mounting	1			1 for flywheel mounting	
				9	EY2105410121	COOLING BLOWER	1
3	EY2102230103	CRANKSHAFT GEAR	1	10	EY0320100010	KEY, flywheel mounting	1
4	EY2102600113	SPACER, cronkshaft	1			10 mm wide x 6 mm nigh	
5	EY0323050010	WOODRUFF KEY, crankshaft gear		11	EY2102240111	FLYWHEEL assembly	1
	210323030010	mounting	1	12		EY2107100103 RING GEAR	1
	5 ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,			13	EY0205300010	LOCKWASHER, flywheel mounting 31 mm l.D. x 50 mm O.D., plain steel	1
6	EY0320050020	KEY, blower mounting	1	14	EY2102440223	TAKE-OFF SHAFT	,
_	=					TARE-OTT SHALL I	
7	EY0033630000	LOCKWASHER, crankshaft gear (special)	1	16	EY0016610300	SCREW, take-off shaft mounting 10 mm × 30 mm long, hexagon head	6

Ref. No.	Part Number	Description	Qty.	Ref.	Part Number	Description	Qty
17	EY0032010000	WASHER, take-off shaft mounting	6	36	EY2103340103	INTAKE VALVE	2
		10 mm spring lock		37	EY2103350133	EXHAUST VALVE	2
				38	EY2083360113	VALVE SPRING	4
20	EY2105420403	STARTING PULLEY, rope	1	39	EY2103370103	RETAINER, valve spring	4
21	EY0205200010	LOCKWASHER, starter pulley mtg.	1	40	EY2083380103	LOCK, valve spring	4
22	EY0173200010	NUT, 20 mm thread, hexagon steel I for starting pulley	2	41	EY2103330123	VALVE TAPPET	4
		1 for camshaft mounting		42	EY2106410101	GEAR, oil pump drive	1
23	EY2102250110	CONNECTING ROD assembly	2	43	EY0200120010	WASHER, oil pump gear	
		EY2102310123 OIL SCRAPER EY0205080031 LOCKWASHER	2 4	44	EY2106400151	ADAPTER ASSEMBLY, oil pump	
		EY2102300113 ROD BOLT	4	44	E 1 2 10 6 4 0 0 1 3 1		
	EY2102250210	CONNECTING ROD assembly		45	EY0031008000	WASHER, oil pump adapter	'
24	EY2102350107	.010" undersize RING SET, standard size	1	46	EY0032008000	WASHER, oil pump adapter mounting 8 mm, spring lock	1
		Consisting of:	2	47	EY2106701503	SET SCREW, oil pump adapter mtg	1
		SCRAPER RING	2 2			8 mm x 24 mm long, hexagon head	
	EY2102351207 EY2102351307	.010" oversize Ring Set .020" oversize Ring Set		48	EY2106390100	OIL PUMP assembly	1
_				49		EY2106390107 GASKET	1
25	EY2102340113 EY2102340213	PISTON, standard size	2	50	EY0031005000	WASHER, oil pump mounting	4
	EY2102340313	.020" oversize Piston				5.5 mm I.D. x 10 mm O.D., plain steel	
26	EY2102330103	PISTON PIN	2	51	EY0032005000	WASHER, oil pump mounting	4
27	EY0565200030	SNAP RING, piston pin	4	52	EY0043105200	SCREW, oil pump mounting	4
28	EY2103160111	CAMSHAFT with pinion gear	1	32	210043103200	5 mm x 20 mm long, pan head	-
29	EY0230220011	SPACER, camshaft gear	1	53	EY2106430101	STRAINER, oil pump	1
30	EY0053204200	WOODRUFF KEY, camshaft gear mtg. 4 mm wide x 5 mm high	1	54	EY0051030250	COTTER PIN, oil pump strainer mtg. 3 mm x 25 mm long	1
31	EY2103320121	CAMSHAFT GEAR	ı				
32	EY0230200050	SPACER, comshaft	1				
33	EY2104170111	GOVERNOR PLATE and flyweight	1				
34	EY2103540103	LOCKWASHER, camshaft gear 20.5mm l.D. x 32 mm O.D., plain steel	1				
35	EY2104500111	THRUST PLATE, governor	1				

THROTTLE, GOVERNOR and CONTROL BOX Group For Model EY21W

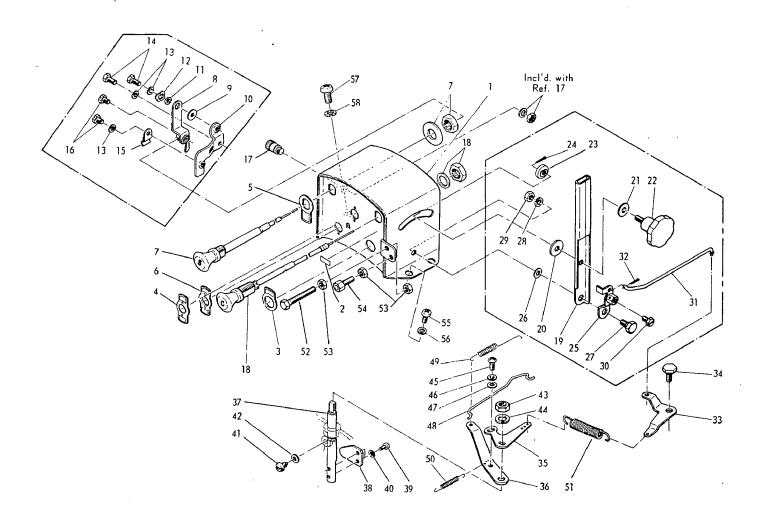


NOTE: Items without a part number are not sold separately.


Ref. No.	Part Number	Description	Qty.	Ref.	Part Number	Description	Qty.
	EY2104065801X	CONTROL BOX assembly(Includes ref. 2)	1	11		SPACER, start lever	1
2		LABEL (CHOKE)	1	12		FRICTION WASHER, start wire screw	1
3	EY0732000410	LABEL (START SWITCH)	1	13		WASHER, start lever & start wire mtg.	3
4	EY0732000390	LABEL (ENGINE SWITCH)	1			5 mm, spring lock	
5	EY0732000361	LABEL (START LEVER)	1	14		SCREW, start lever & start wire mtg. 5 mm x 12 mm long, hexagon head	2
6	EY0732000530	LABEL (CHARGE SWITCH)	1	15		CLAMP, start wire	1
7	EY2104530101	START CONTROL assembly	1	16		SCREW, start lever & clamp lever 5 mm x 8 mm long, hexagon head	2
•	EY2109900407	START CONTROL LEVER SET (Includes Items 8 thru 16)-	1	17	EY0664000010	TERMINAL, accessory lamp	,
8		START LEVER	1	''	2,0004000010	TERMINAL, decessory ramp mamma	
9		FRICTION WASHER, start lever	1	18	EY2104400101	CHOKE CONTROL assembly	1
10		CLAMP LEVER, start wire	1	•	EY2109900507	THROTTLE (SPEED) CONTROL LEVER SET(Includes Items 19 thru 32)	1
10		CLAMP LEVER, start wire	1			1	

For Model EY21W

Ref. No.	Part Number	Description	Qty.	Ref. No.	Part Number	Description	Qty.
19		LEVER, throttle control	1	43	EY0022708000	NUT, governor shaft mounting 8 mm thread, hexagon steel	1
20		FRICTION WASHER, control lever (inner)	1	44	EY0032008000	WASHER, governor shaft mounting 8 mm, spring lock	1
21		FRICTION WASHER, control lever (outer)	1	45	EY0043105120	SCREW, control link mounting	1
22	EY0637000202	KNOB, throttle lever	1	46	EY0032005000	WASHER, control link mounting	1
23		COTTER PIN, knob	1	47	EY0031005000	5 mm, spring lock WASHER, control link mounting	1
	•	1.6 mm x 10 mm long			2 / 333 / 33333	5.5 mm I.D. x 10 mm O.D., plain steel	
25		WIRE LEVER	1	•	EY2104250107	GOVERNOR SPRING and LINK SET (Includes Items 48 thru 51)	1
26		SPACER, control lever		48		GOVERNOR ROD	1
27		FULCRUM SCREW, wire lever	1	49		ROD SPRING, governor rod	1
28		WASHER, wire lever mounting	1	50	·	ROD SPRING, governor rod	1
29		NUT, wire lever mounting	1	51		GOVERNOR SPRING	1
		6 mm thread, hexagon steel		52	EY0016506450	SCREW, speed adjustment stop 6 mm x 45 mm long, hexagon head	1
30		SCREW, wire lever mounting	1	53	EY0022706000	NUT, 6 mm thread, hexagon steel I for speed adjustment screw	3
31		CONTROL ROD, wire lever	1			I for bowden wire adapter I for control box mounting	
32		COTTER PIN, control rod	1	54	EY0149060011	ADAPTER, bowden wire	ו
33	EY2104290201	CONTROL LINK (spring to control rod)	1	55	EY0043106120	SCREW, control box mounting	3
34	EY2104310111	FULCRUM SCREW, control link	1	56	EY0032006000	WASHER, control box mounting 6 mm, spring lock	3
35	EY2104230117	GOVERNOR LEVER and SHAFT SET (Includes Items 35 thru 47) CONTROL LINK (gov. lever to spring)		57	EY0043108160	SCREW, control box mounting	1
36		GOVERNOR LEVER	1	58	EY0032008000	WASHER, control box mounting	1
37		GOVERNOR SHAFT	ı			8 mm, spring lock	
38		GOVERNOR YOKE	1				
39	EY0043104080	SCREW, governor yoke mounting 4 mm x 8 mm long, pan head	2				
40	EY0032004000	WASHER, governor yoke mounting 4 mm, spring lock	2				
41		SCREW, governor shaft setting	1				
42		WASHER, governor shaft setting	1				
l							

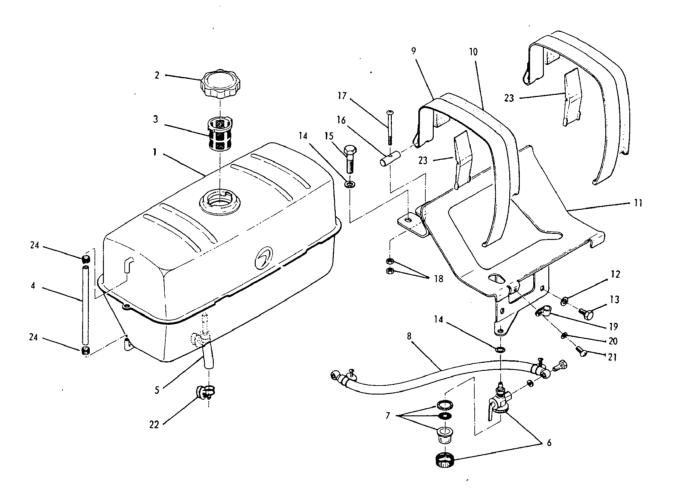


Ref. No.	Part Number	Description	Qty.	Ref.	Part Number	Description	Qty.
1	EY2106031220X	FUEL TANK assembly	1	14	EY0032010000	WASHER, tank bracket and strainer 10 mm, spring lock	3
2		EY0430430014 CAP with gasket EY0641360010 FILTER SCREEN	1	15	EY0016510200	SCREW, fuel tank bracket mounting 10 mm × 20 mm long, hex head	2
4		EY0850050180 SIGHT GAUGE	1	16	EY2106550101	TENSION PIN, fuel tank strap	2
5	EY0851060230	FUEL LINE assembly Tank to fuel strainer	1	17	EY0140060010	SCREW, fuel tank strap tension 6 mm x 65 mm long, round head	2
6	EY0642002100	FUEL STRAINER	1	18	EY0022706000	NUT, fuel tank strap tension screw 6 mm thread, hexagon steel	4
7 8	EY2109900617 EY2106260711	REPAIR KIT, fuel strainer		19	EY0566100021	CLAMP, fuel line	1
	EV2106515811	Strainer to pump	2	20	EY0032006000	WASHER, clamp mounting	1
10	EY2106701113	FELT BAND, fuel tank strap	2	21	EY0043106120	SCREW, clamp mounting	1
11	EY2106165811X	FUEL TANK BRACKET	ו	22	EY0091712000	HOSE CLAMP, tank fuel line	2
12	EY0032008000	WASHER, fuel tank bracket mtg 8 mm, spring lock	2	23	EY2106702303	STRAP GUIDE, fuel tank	2
13	EY0016508160	SCREW, fuel tank bracket mounting 8 mm x 16 mm long, hexagon head	2	24	EY0561080010	HOSE CLAMP, sight gauge	2
8 9 10 11 12	EY2106260711 EY2106515811 EY2106701113 EY2106165811X EY0032008000	FUEL LINE assembly Strainer to pump FUEL TANK STRAP FELT BAND, fuel tank strap FUEL TANK BRACKET WASHER, fuel tank bracket mtg 8 mm, spring lock SCREW, fuel tank bracket mounting	2 2 1 2	20 21 22 23	EY0032006000 EY0043106120 EY0091712000 EY2106702303	CLAMP, fuel line WASHER, clamp mode of mm, spring lock SCREW, clamp mode of mm x 12 mm lon HOSE CLAMP, tar STRAP GUIDE, fue	ounting

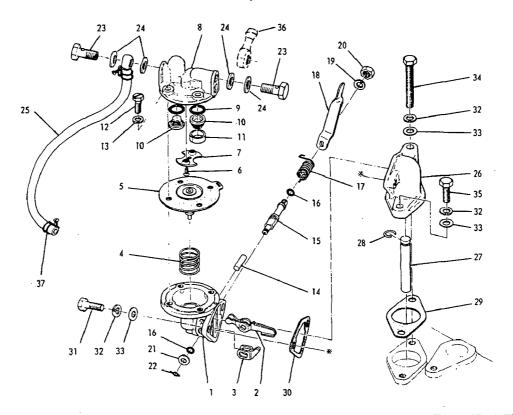

NOTE: Items without a part number are not sold separately.

Ref. No.	Part Number	Description	Qty.
•	EY2106220110	FUEL PUMP, complete	1
1		BODY, bottom half	i '
2	}	ROCKER ARM	
3		PRIMING ARM	1
4		DIAPHRAGM SPRING	ו ן
5	EY2106220118 †	DIAPHRAGM, complete]]
6		SCREW	2
7		VALVE RETAINER	1
8		BODY, top half	1
9		VALVE SEAT	2
10	EY2106220218 †	VALVE CAGE, complete	2
11		COLLER, valve cage	1
12		SCREW, body attaching	4
13		WASHER, body screw	4
14		SHAFT, rocker arm	1
15		SHAFT, primer lever	1
16	EY2106221618 †	"O" RING, primer shaft	2
17	· 	SPRING, primer return	1
18		PRIMING LEVER	1
19		WASHER, priming lever	1
20		NUT, priming lever	1
21		WASHER, 'O' ring retainer	1
22		CLIP, primer shaft retainer	1
23	EY0530080010	BANJO BOLT, fuel line fitting	2

	Ref. No.	Part Number	Description	Qty.
	24	***	GASKET, banjo bolt mounting	4
	25	EY 2106 280711	FUEL LINE assby., pump to carb.	1
į	26	EY 2106700823	ADAPTER, fuel pump mounting	1
	27	EY2106700603	PUSH ROD, fuel pump	1
	28	EY0565100010	CLIP, push rod retainer	1
	29	***	GASKET, adapter flange	1
	30	***	GASKET, fuel pump flange	1
	31	EY0016506160	SCREW, fuel pump to adapter 6 mm x 16 mm long, hexagon head	2
	32	EY0032006000	WASHER, 6 mm, spring lock 2-for fuel pump to adapter 2-for fuel pump adapter mounting	4
	33	EY0031006000	WASHER, 6.4 mm I.D. x 11.5 mm O.D., plain steel	4
	34	EY0100060060	SCREW, fuel pump adapter mtg 6 mm x 48 mm long, hexagon head	ī
	35	EY0016606200	SCREW, fuel pump adapter mtg 6 mm x 20 mm long, hexagon head	1
	36	EY0521070010 Optional	BANJO FITTING, fuel line Engine less tank — for 1/4" I.D. plastic fuel line furn'd. by cust.	1
	37	EY0091712000	HOSE CLAMP, fuel line	2
	•	EY2106220117	REPAIR KIT, fuel pump † parts included in kit.	1
	•	EY2106220217	GASKET SET, fuel pump	1

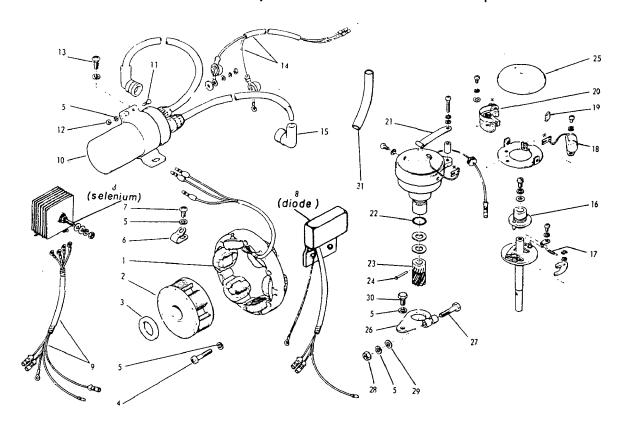


NOTE: Items without a part number are not sold separately.

**Used previous to engine serial No. Z4355

Ref. No.	Part Number	Description	Qty.	Ref.	Part Number	Description	Qty.
•	EY2107030110	ALTERNATOR assembly	1	15	EY0655000050	CAP, spark plug	2
1		Includes: EY2107031508 STATOR	1	•	EY2107070120	IGNITION TIMER assembly(Includes Items 16 thru 25)	,
2		EY2107032008 ROTOR	1	16		CAM	1
3	EY0230220020	SPACER, alternator	1	17		GOVERNOR SPRING	2
4	EY0043106300	SCREW, stator mounting	4	•	EY2107070127	POINT & CONDENSER KIT(Includes Items 18, 19, 20)	1
5	EY0032006000	WASHER, 6 mm, spring lock	8	18		CONDENSER	1
		4 for stator mounting		19		OIL FELT	1
		l for clamp mounting		20		CONTACT BREAKER	1
		1 for ignition coil 2 for breaker bracket mounting		21		EY2107070628 SPRING, cover	,
6	EY0566100021	CLAMP, stator wire	1	22		EY2107070728 "O" RING, timer body	,
7	EY0043106120	SCREW, stator wire clamp	1	23		EY2107070828 GEAR, driven	1
8	EY2107130201	DIODE RECTIFIER assembly	ı	24		EY2107070928 GEAR RIVET	1
,	EY2107310611	WIRE HARNESS, rectifier	1	25	EY2107071028	BREAKER COVER	1
10		·	•	26	EY2107080111	ADVANCE ARM	1
10	EY2107120120	IGNITION COIL assembly, with spark plug cables	1	27	EY0016606300	SCREW, advance arm clamp	1
11		EY2107120228 SCREW	2	28	EY0022706000	NUT, advance arm clamp	1
12		EY2107120328 NUT5 mm thread, hexagon steel	2	29	EY0031006000	WASHER, advance arm clamp screw 6.4 mm I.D. x 11.5 mm O.D., pl. steel	1
13	EY0043108140	SCREW, ignition coil mounting 8 mm x 14 mm long, pan head	2	30	EY0016506120	SCREW, advance arm mounting 6 mm x 12 mm long, hexagon head	1
14	EY2107120128	WIRE HARNESS, ignition coil	ī	**31	EY0850100020	VINYL TUBE, wire protect	1


Beginning with engine Serial No. 97198, this DUST PROOF starting motor replaces EY2107050140 starting motor on page 11, and is interchangeable as a complete unit.

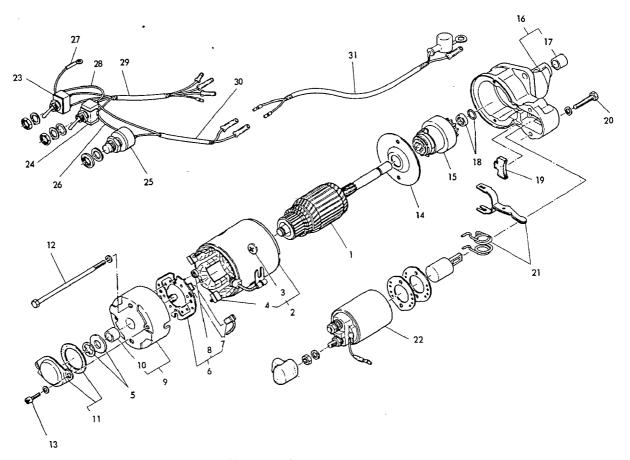

NOTE: Items without a part number are not sold separately.

Ref.	Part Number	Description	Qty.	
•	EY2107050210	STARTING MOTOR assembly (Includes items 1 thru 22)	1	
1	EY2107053208	ARMATURE assembly	Į	
2	EY2107053508	FIELD COIL assembly	1	
3		EY2107050808 CORE SCREWS	4	i
4	†	BRUSH (+)	2	
•	EY2107050507	BRUSH HOLDER KIT	1	
5		EY2107053308 KIT, thrust washer	1	
6		EY2107053808 HOLDER, brush assy. Includes:	1	
7	†	BRUSH (-)	2	i
8		EY2107054108 BRUSH SPRING	4	İ
9		REAR COVER assembly	1	
10	•	EY2107054208 BEARING	ן ז	
11		EY2107055008 KIT, dust cover	1 1	
12		EY2107054908 THROUGH BOLT	2	i
13		SCREW, dust cover	2	
14	EY2107054308	CENTER PLATE	1	
15	EY2107054408	PINION assembly	ו	


	Ref. No.	Part Number	Description	Qty.
	16	EY2107050607	DRIVE END HEAD assembly	1
Ì	17	1:	EY2107054708 BEARING, drive end	1
	18		EY2107053408 PINION STOP SET	1
	19		DUST COVER	1
	20		SCREW, magnetic switch mounting	2
	21	EY2107054608	SHIFT LEVER KIT	1
	22	EY2107054808	MAGNETIC SWITCH assembly	1
	•	EY2107310721	SWITCH and wire harness assembly (Includes Items 23 thru 30)	1
	23	EY0660000020	SWITCH, charge select	1
	24	EY0660000030	SWITCH, ignition	1
	25	EY0663000010	SWITCH, starter	1
	26		WIRES (yellow, red) ignition switch	
			to starter switch	1
	27		WIRE 3, to light terminal	1
	28		WIRE 5 (red) ignition switch to	1
			charge switch	1
	29	EY2107310212	WIRE HARNESS 2, alternator	1
	30	EY2107310902	WIRE HARNESS 9, ignition -	
			starter switch	1
	31	EY2107310121	WIRE HARNESS 1, to starting motor	1
	•	EY2109900717	BRUSH SET for service	1
			† Included in brush set	1

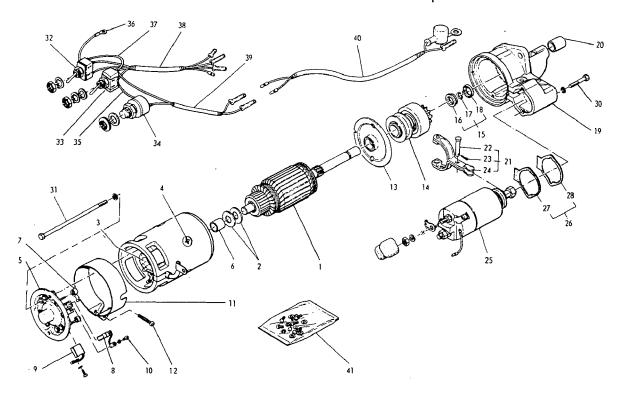

NOTE: Items without a part number are not sold separately.

Ref. No.	Part Number	Description	Qıy.	Ref.	Part Number	Description	Qty.
•	EY2107050140	STARTING MOTOR assembly	1	21	EY2107050207	SHIFT LEVER SET	1
1	EY2107050108	ARMATURE assembly		22 23		PIN, shift lever	1
2	EY2107050208	THRUST WASHER	2	24		SHIFT LEVER	1
3	EY 2107050708	FIELD COIL assembly	1	25	EY2107052208	MAGNETIC SWITCH assembly	1
4		EY2107050808 CORE SCREWS	4	26	EY2107050307	DUST PROOF KIT	1
5	EY2107050908	REAR COVER assembly	1	27 28		PACKING	1
6 7		EY2107051008 BEARING EY2107051308 BRUSH SPRING	1 4	30		SCREW, magnetic switch mounting	2
8 9	† †	BRUSH (+) BRUSH (-)	2 2	31		THRU BOLT	2
10	*	SCREW, prush	4	•	EY2107310714	SWITCH and wire harness assembly (Includes Items 32 thru 40)	1
11		BRUSH COVER assembly	1	32 33	EY0660000020 EY0660000030	SWITCH, charge select	ו
12	*	SCREW, brush cover	1	34	EY0663000010	SWITCH, starter	i
13	EY2107051408	CENTER BEARING	1			WIRES (yellow, red) ignition switch to starter switch	1
14	EY2107051508	PINION assembly	1	36 37		WIRE 3, to light terminal	3
15	EY2107050107	PINION STOPPER SET	1	38	EY2107310212	WIRE HARNESS 2, alternator	1
16		PINION STOPPER	1 1	39	EY2107310902	WIRE HARNESS 9, ignition -	1
17 18		CLIP, pinion stopperWASHER, pinion stopper		40	EY2107310121	WIRE HARNESS 1, to starting motor	1
19		DRIVE END HEAD assembly	1	41	EY2107050407	* Included in kit (Ref. 10, 12))
20		EY2107051708 BEARING, drive end	וו	•	EY2109900707	BRUSH SET for service	1


AIR CLEANER and INTAKE MANIFOLD Group For Model EY21W

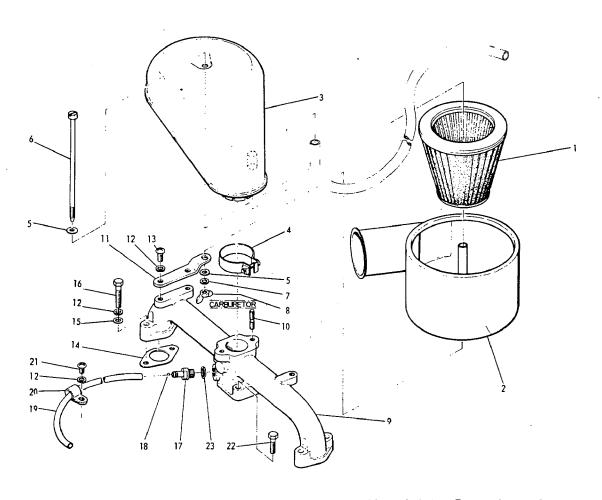

NOTE: Items without a part number are not sold separately.

** Included in Engine Gasket Set.

Ref. No.	Part Number	Description	Qty.	Ref. No.	Part Number	Description	Qty.
•	EY2103260240	AIR CLEANER assembly	1	12	EY0032006000	WASHER, 6 mm, spring lock 2-for bracket mounting	7
1		EY2103260128 ELEMENT	1 1			4-for manifold mounting 1-for drain clamp mounting	
3		COVERwith EY2103272008 Bushing	1	13	EY0043106140	SCREW, air cleaner bracket mounting 6 mm x 14 mm long, pan head	2
4	•	CLAMP	1	14	EY2103600403	GASKET, manifold	2
5		WASHER, cover and bracket mt'g 6 mm, plain steel	2	15	EY0031006000	WASHER, manifold mounting	4
6		BOLT, air cleaner cover mounting 6 mm x 165 mm long, hexagon head	1	16	EY0016606350	SCREW, manifold mounting	4
7		WASHER, body mounting	1	17	EY2106530101	DRAIN FITTING, assembly	1
8		NUT, air cleaner bracket mounting	1	18		EY0069010800 STEEL BALL	1
		6 mm thread, hexagon steel, wing		19	EY0850050100	TUBING, manifold drain, vinyl	1
9	EY2103310121	INTAKE MANIFOLD assembly	1	20	EY0566120010	CLAMP, manifold drain tubing	1
10		Includes: EY0013106281 STUD, carb. mt'g 6 mm × 28 mm long	2	21	EY0043106140	SCREW, clamp mounting	1
11	EY2103520111	BRACKET, air cleaner support	1	22	EY0016506250	SCREW, manifold mounting	2
				23	**	GASKET, drain fitting	1

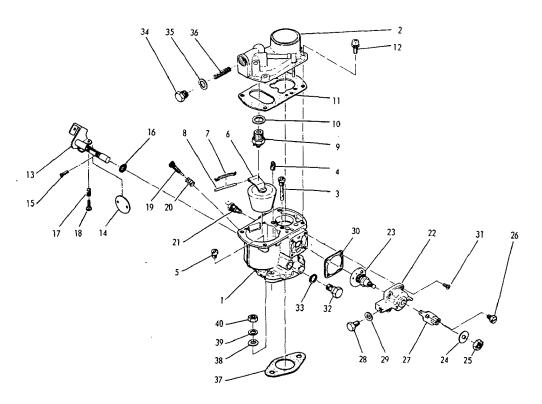

NOTE: Items without a part number are not sold separately.

Ref. No.	Part Number	Description	Qty.	Ref.	Part Number	Description	Qty.
•	EY2106230800	CARBURETOR assembly(Includes Items 1 thru 36)	1	22	EY2106230208	STARTING VALVE assembly	1
1		BODY, lower	1	23		STARTING VALVE	1
2		BODY, upper	1	24		WASHER, lever	1
3		NOZZLE	1	25		NUT, lever	1
4		IDLE AIR JET	1	26		SCREW, lever mounting	1 1
5		MAIN JET	١,	27	†	STARTING LEVER assembly	וין
6	EY2106250508	"High Altitude" Jets are available	١,	28		SCREW, starting valve	1
7	L12100230308			29		WASHER, starting valve	1 1
	_	RETAINER, float pin		30	† *	GASKET, starting valve	1
8	† .	FLOAT PIN] '	31]	SCREW, valve mounting	4
9	EY2106230308 †	FUEL VALVE assembly	1	32		STARTING JET	1
10	† *	GASKET, fuel valve	1	33		WASHER, jet mounting	1
11	† *	GASKET, carburetor body	1	34		PLUG, screen retainer	1
12		SCREW — WASHER, body attaching	4	35	*	GASKET, screen plug	1
13		THROTTLE SHAFT	1	36	1	SCREEN, fuel filter	1
14		THROTTLE VALVE	١,	37	† *	FLANGE GASKET, carburetor	1
15		SCREW, throttle shaft and valve	2	38	EY0031006000	WASHER, carburetor mounting 6.4 mm I.D. x 11.5 mm O.D., plain steel	2
16		SEAL, throttle shaft	1	39	EY0032006000	WASHER, carburetor mounting	2
17		SPRING, throttle stop screw	1			6 mm, spring lock	
18		SCREW, throttle stop	1	40	EY0022706000	NUT, carburetor mounting6 mm thread, hexagon steel	2
19	†	IDLE SCREW	1	•	EY2106230107	REPAIR KIT, carburetor	
20	†	SPRING, idle screw	1			† Parts included in kit.	
21	Ť	IDLE JET	1	•	EY2106230207	GASKET SET, carburetor * Parts included in set.	

AUTOMATIC CHOKE CARBURETOR

For WISCONSIN-ROBIN Model EY21W Engine

OPERATION

The choke assembly is a component part of the carburetor that automatically closes the carburetor choke valve for starting and regulates the degree of opening as the engine warms up. Its operation is dependent on current to heat a thermostat spring and manifold vacuum for the choke diaphragm.

While the engine is cold and inoperative the thermostat spring will hold the carburetor choke valve in a closed position. When engine is started, manifold vacuum opens the diaphragm operated choke valve, against the thermostat spring tension, a predetermined amount for warm-up. By the time the engine is sufficiently warmed up, electric current connected to an element in the choke cover heats up the thermostat spring causing it to completely lose its tension. This enables the manifold vacuum to rotate the choke valve to a full open position for normal engine operation.

Refer to the following Figs. 1, 2 and 3 for detailed information and illustrations of the choke position for Starting, Warm-up and Running.

STARTING

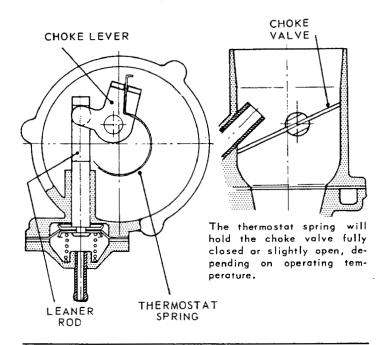


Fig. 1

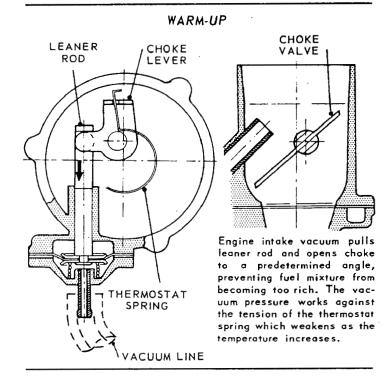


Fig. 2

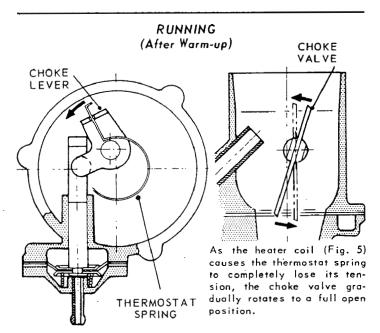


Fig. 3

SERVICE

With reference to Fig. 4, check choke valve opening when automatic leaner is fully activated, engine cold. If the appropriate angle is not obtained, check diaphragm assembly and thermostat spring. Replace complete cover and thermostat assembly if heating coil or thermostat spring are defective.

In reassembly of choke, mount components as illustrated in Fig. 5 and Fig. 7. Be sure that choke shaft and choke valve operate freely, and that the choke lever engages end of thermostat spring.

When servicing carburetor parts other than the automatic choke, refer to the carburetor overhaul instructions in the *Engine Repair Manual* for Model EY21W.

Caution: Do not lubricate inside of thermostat spring cover and housing. Clean with automatic choke spray cleaner and blow out with compressed air.

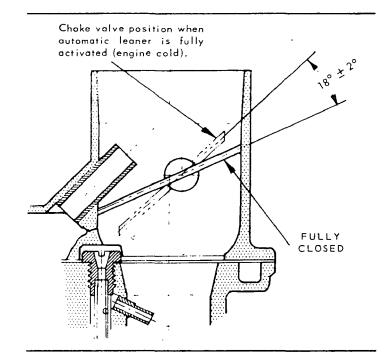


Fig. 4

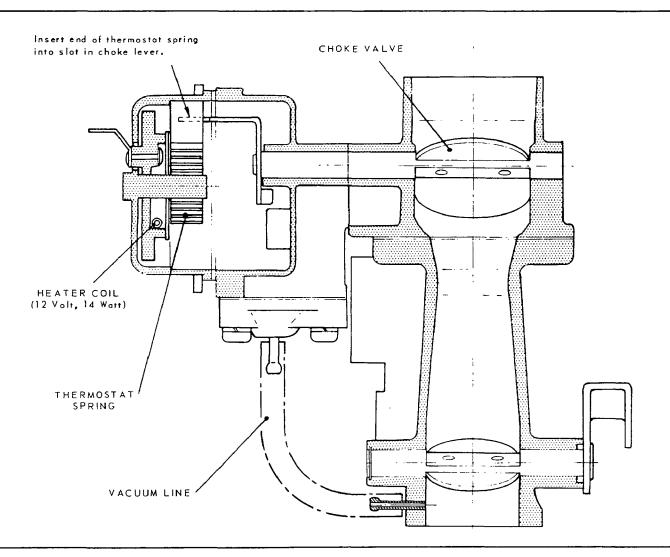


Fig. 5

CHOKE ADJUSTMENT

The automatic choke is adjusted by the manufacturer to satisfy all normal running conditions and therefore should not immediately be tampered with. In the event of repair or abnormal conditions, adjustment can be made in the following manner and with reference to Fig.~6 and Fig.~7.

1. Initially, slip end of thermostat spring into slot in choke lever when mounting choke cover, see Fig. 6.

At an ambient temperature of 73 °F (23 °C), and the choke valve closed, there should be no spring tension between the thermostat spring and choke lever.

- 2. Mount lock ring and three screws but do not tighten.
- 3. To obtain initial tension on thermostat spring, turn choke cover clockwise about 60° or until dash (-) mark on cover aligns with point of cast notches on choke body. Tighten lock ring screws and connect ignition wires.
- 4. If further adjustment is required after engine has been tested, slightly loosen lock ring screws and turn choke cover one notch at a time - clockwise to delay choke valve opening (richer fuel mixture), counter-clockwise to advance choke valve opening (leaner starting mixture). Tighten lock ring screws.

Note: Carburetor settings other than automatic choke adjustment can be found on Page 23 of the EY21W Repair Manual.

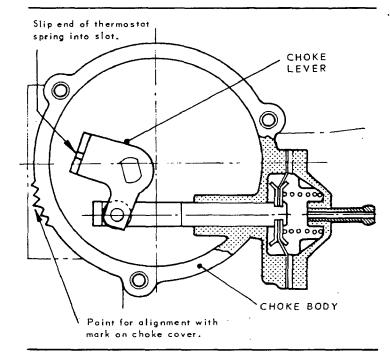


Fig. 6


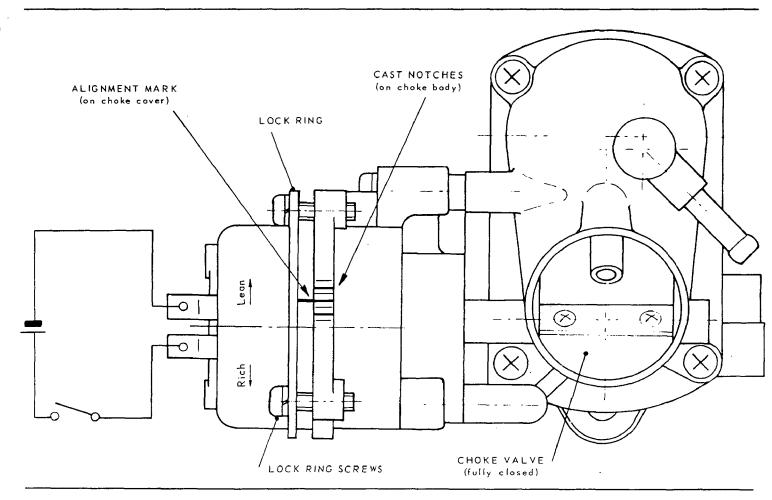


Fig. 7

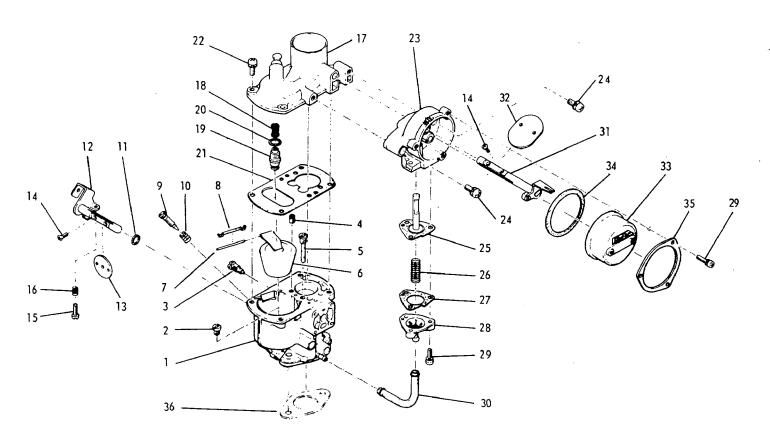

NOTE: Items without a part number are not sold separately.

Ref. No.	Part Number	Description	Qty.
	EY2106230530	CARBURETOR assembly	1
1		BODY, lower	1
2		MAIN JET	1
3	EY2106232208†	IDLE JET	1
4		JET, idle air	1
5		MAIN NOZZLE	ון
6	EY2106250508	FLOAT	ן ו
7	EY2106231008	FLOAT PIN	ו
8		RETAINER, float pin	1
9	EY2106232008†	IDLE SCREW	1 1
10	EY 2106 2446 08 †	SPRING, idle screw	1
11	EY2106231708 +*	SEAL, throttle shaft	1
12		THROTTLE SHAFT and LEVER	1
13		THROTTLE VALVE	1
14	EY1306235808	SCREW, throttle and choke valve 3 mm × 7 mm long, round head	4
15	EY 2096 235 208	SCREW, throttle stop, 4 mm x 12 mm	1
16		SPRING, throttle stop screw	1
17		BODY, upper	1
18	EY 2106 236 108 †	STRAINER, fuel	1
19	EY2106250108†	FUEL VALVE assembly	1
20	EY2076254508 †*	GASKET, fuel valve	1
21	EY 2106 231 208 † *	GASKET, carburetor body	1

Ref.	Part Number	Description	Qty.
22	EY 2016 231 308	SCREW-WASHER, body attaching 5 mm x 14 mm long	4
23		CHOKE HOUSING	1
24	EY 1306237308	SCREW-WASHER, choke housing mt g 5 mm x 16 mm long	2
25	EY2106235208†	DIAPHRAGM, choke	1
26		SPRING, choke diaphragm	1
27	EY2106255008 **	GASKET, choke diaphragm	ו
28		COVER, choke diaphragm	1
29	EY1076235708	SCREW-WASHER, choke covers 4 mm x 16 mm long	6
30	EY2106235408	HOSE, vacuum	1
31		CHOKE SHAFT and LEVER	1
32		CHOKE VALVE	1
33	EY2106236208	CHOKE COVER assembly	1
34	EY2106235508 *	GASKET, choke cover	1
35		LOCK RING	1
36	EY2106700703 † *	FLANGE GASKET, carburetor	1
	EY 2106230307	REPAIR KIT, carburetor	
		† Parts included in kit.	
	EY 2106230407	GASKET SET, carburetor	
		* Parts included in set.	İ