

EH180V00001	N_EX,SNAPPER 96/97
261A00020G	CRANK CASE GROUP
26110101A1	CRANK CASE CP
2611010112	CRANK CASE UN
2611010014	CRANK CASE UN.
2611010109	CRANK CASE
2271380103	CYLINDER LINER
2271380105	CYLINDER LINER
440250150	OIL SEAL
600250010	BALL BEARING
X310060020	DOWEL PIN
2611100200	MAINBEARING COVER AY
2611100201	MAINBEARING COVER CP
2611100203	MAIN BEARING COVER
2274620103	GOVERNOR GEAR SHAFT
440250070	OIL SEAL
600250010	BALL BEARING
2616500103	OIL JET
2614540101	GOVERNOR GEAR CP
2274500303	GOVERNOR GEAR
2634160103	FLYWEIGHT
X307300070	PIN
2054190103	GOVERNOR SLEEVE
2616510103	OIL SHELTER PLATE
A110060020	FLANGE BOLT
2616390111	OIL PUMP (INNER)CP
2616390103	OIL PUMP(INNER)
2616395003	OIL PUMP SHAFT
2616390203	OIL PUMP(OUTER)
2616530203	OIL PUMP COVER
2616540113	O RING
2616570201	OIL DRAIN PLUG
2616540303	O RING(OIL DRAIN)
2611300111	CYLINDER HEAD CP
2611300112	CYLINDER HEAD UN
2611300113	CYLINDER HEAD
2611300014	CYLINDER HEAD.
2381400103	INTAKE VALVE SEAT
2381400105	INTAKE VALVE SEAT
2381410103	EXHAUST VALVE SEAT
2381410105	EXHAUST VALVE SEAT
2371420103	VALVE GUIDE
2371420105	VALVE GUIDE
105060140	STUD
X310060020	DOWEL PIN

2611500113	GASKET (HEAD)
2611600203	GASKET(BEARING COV)
2611700103	LEAF VALVE
2611701103	RETAINER PLATE
2611430101	TAPPET COVER CP
2611610101	BREATHER PLATE CP
2611610103	BREATHER PLATE
2271600303	LEAF VALVE
2271600403	RETAINER PLATE
2261620103	OIL SHELTER PLATE
57120051	RIVET
2611600603	GASKET(TAPPET COVER)
2611600703	GASKET(BREATHER PLA)
2611550101	ROCKER COVER
2611550103	ROCKER COVER
2531600503	GASKET(ROCKER COVER)
2611080113	RUBBER PIPE
561120040	HOSE CLAMP
A130060040	BOLT AND WASHER AY
A110060020	FLANGE BOLT
A110080100	FLANGE BOLT
A110080010	FLANGE BOLT
A110060020	FLANGE BOLT
A110060020	FLANGE BOLT
261B00010G	CRANKSHAFT,PISTON GR
2612500101	CRANK SHAFT CP
2612500103	CRANK SHAFT
261250N004	CRANK SHAFT.
2612500004	CRANK SHAFT.
2272230203	CRANKSHAFT GEAR
2272230204	CRANK SHAFT GEAR.
2272250310	CONNECTING ROD AY
2272250101	CONNECTING ROD CP
2272251005	CONROD CP
2272300113	CONNECTING ROD BOLT
2142330113	PISTON PIN
2272340103	PISTON
2612360103	TOP RING
2612370103	SECOND RING
2612390101	OIL RING CP
565140010	CLIP
X230250180	SPACER
X230250190	SPACER
X230250200	SPACER
A021814000	NUT
A032014000	SPRING WASHER
323030010	WOODRUFF KEY

261C00030G	INTAKE EXHAUST GROUP
2613170101	CAMSHAFT CP
2613170103	CAMSHAFT
2533170014	CAMSHAFT.
2273640103	RELEASE LEVER
2273870103	RETURN SPRING
2273860123	PIN (SPRING)
31522000	SNAPRING (OUTER)
51904100	SPRING PIN
2393330103	TAPPET
2393330105	TAPPET
2613340103	INTAKE VALVE
2613350103	EXHAUST VALVE
2613360103	VALVE SPRING
13209KA040	RET-VALVE SPR
13210KA031	COLLET-VALVE
2613540103	ROCKER SHAFT
2613530101	PUSH ROD CP
2533610100	ROCKER ARM AY
2533610103	ROCKER ARM
149080021	ADJUSTING SCREW
170080090	NUT
2373612013	SPACER
2613010101	MUFFLER CP
2613420311	MUFFLER COVER CP
2613420312	MUFFLER COVER UN
2613520101	GASKET(EXHAUST)CP
2613260110	AIR CLEANER AY
2613500101	AIR CLEANER COVER
26138001A1	BRACKET (A/C) CP
26138002A1	BRACKET(A/C.COVE)CP
2273290113	INSULATOR
2613590403	GASKET 2 (INSULATOR)
26135901A3	GASKET(INNER VENT)
A130080030	BOLT AND WASHER ASSY
A011008160	BOLT & WASHER AY
A152050010	TAPPING SCREW
A023806000	FLANGE NUT
A110060020	FLANGE BOLT
A110060030	FLANGE BOLT
152060040	TAPPING BOLT
2613265301	WING BOLT CP
261D00020G	GOVERNOR,OPERATION G
2614230103	GOVERNOR LEVER
2274220103	GOVERNOR SHAFT
2614250113	GOVERNOR SPRING
26142701B3	GOVERNOR ROD

2614280103	ROD SPRING
26145101B3	CHOKE ROD
26146001A1	BRACKET(SPEED C.)CP
26143301A1	SPEED CONT. LEVER CP
26143801A1	CHOKE LEVER CP
2614520103	RETURN SPRING
2614530103	SPACER
2614310101	LINK PIVOT
2614310103	LINK PIVOT
2614390103	CLAMP
31306000	CLIP
A011406250	BOLT AND WASHER AY
186060020	NUT
A110060020	FLANGE BOLT
A023806000	FLANGE NUT
2374500423	SPRING (ADJUST)
43105200	SCREW,PANHEAD
11705300	BOLT AND WASHER AY
261E00020G	COOLING,STARTING GRP
2615120101	BLOWER HOUSING CP
2615500101	ENGINE SHROUD/TANK
X732003900	LABEL(WARNING)
2619520203	LABEL(EMISSION CONT)
2615021100	RECOIL STARTER AY
901080610	BLACK
2615510101	TOP COVER
2275260103	CYLINDER BAFFLE
2615600103	GUIDE PLATE
A110060020	FLANGE BOLT
A110060030	FLANGE BOLT
A110060020	FLANGE BOLT
A110060010	FLANGE BOLT
47105160	TAPPING SCREW
110060140	FLANGE BOLT
261F00020G	FUEL LUBRICANT GROUP
2276261201	FUEL PIPE CP
851060850	RUBBER PIPE
561110020	HOSE CLAMP
2616230110	CARBURETOR AY
2616370103	OIL FILLER
62610190	O RING
26165301A1	BRACKET(OIL FILL.)CP
2616520103	CLAMP (OIL FILLER)
213180010	GASKET
2616360111	OIL GAUGE CP
26165501A3	OIL FILTER BRACKET
2616560113	GASKET (O.F.BRACKET)

2616590100	OIL FILTER AY
2616570101	OIL DRAIN PLUG
211140020	GASKET
430440132	FUEL TANK CAP CP
435440031	OUTER CAP
434180012	INNER CAP
841260020	SPONGE
210260050	GASKET(TANK CAP)
232420012	PARTITION PLATE
647000400	FUEL COCK AY
566000250	CLAMP
110060170	FLANGE BOLT
A110060020	FLANGE BOLT
261G00030G	ELECTRIC DEVICE GROU
2617020130	MAGNETO AY
2617920111	FLYWHEEL CP
2617940121	IGNITION COIL CP
X650141030	SPARK PLUG
X655100010	SPARK PLUG CAP
X659100010	PLUG TERMINAL
2067550101	CLAMP CP
2067550109	INSULATOR
566100021	CLAMP
566030010	CLAMP
2617600101	PLUG GUARD
A110060121	FLANGE BOLT
A150040010	TAPPING SCREW
261H00010G	BRAKE GROUP
2618600110	BRAKE AY
2267270611	STOP SWITCH
A110060020	FLANGE BOLT
43704120	SCREW AND WASHER AY
732999989	LABEL(N.P.C)

