

# PARTS MANUAL

MODEL  
**Parts**  
**Manual**

EH650DB5430

05/13



**SUBARU**

Industrial Power Products

**Subaru Industrial Power Products**

905 Telser Road - Lake Zurich, IL 60047 - Phone 847-540-7300 - Fax 847-438-5012

 
e-mail: [sales@subarupower.com](mailto:sales@subarupower.com) - [www.subarupower.com](http://www.subarupower.com)

© 2012 Subaru Industrial Power Products

# Group Index

| Group Name                  | Page   |
|-----------------------------|--------|
| 100 Crankcase.....          | 4      |
| 200 Crankshaft.....         | 8      |
| 300 Intake & Exhaust.....   | 10     |
| 315 Intake & Exhaust.....   | 12     |
| 400 Governor.....           | 14     |
| 500 Cooling & Starting..... | 16     |
| 600 Fuel & Lubricant.....   | 18     |
| 640 Fuel & Lubricant.....   | 20     |
| 700 Electric Device.....    | 22     |
| 730 Electric Device.....    | 24     |
| <br>Part Number Index.....  | <br>26 |
| Part Description Index..... | 27     |

## FIG. 102



## 100 Crankcase

| Ref | Part Number. | Description          | Qty | Remark |
|-----|--------------|----------------------|-----|--------|
| 10  | 263-1011121  | CRANK CASE CP        | 1   |        |
| 20  | 263-14211-03 | VALVE GUIDE          | 2   |        |
| 21  | 056-51000-50 | CLIP                 | 1   |        |
| 22  | 263-14211-03 | VALVE GUIDE          | 2   |        |
| 23  | 056-51000-50 | CLIP                 | 1   |        |
| 26  | 132-07AA0-50 | SEAL-INT VALVE       | 1   |        |
| 27  | 132-07AA0-50 | SEAL-INT VALVE       | 1   |        |
| 28  | 263-35341-03 | RETAINER PLATE       | 1   |        |
| 29  | 263-35341-03 | RETAINER PLATE       | 1   |        |
| 40  | 263-15805-03 | MAIN BEARING         | 1   |        |
| 50  | 031-00801-10 | DOWEL PIN            | 2   |        |
| 55  | 263-55601-03 | PIPE                 | 2   |        |
| 60  | 010-50802-90 | STUD                 | 4   |        |
| 61  | 010-50802-90 | STUD                 | 4   |        |
| 75  | 044-00800-10 | OIL SEAL             | 1   |        |
| 80  | 040-11400-30 | PLUG                 | 2   |        |
| 85  | 235-15421-03 | BLIND PLUG           | 1   |        |
| 90  | 021-11400-20 | GASKET               | 2   |        |
| 130 | 159-65401-03 | PIPE(PULSE)          | 1   |        |
| 195 | 263-15901-03 | UNION                | 1   |        |
| 200 | 248-76301-01 | SWITCH OIL PRESSURE  | 1   |        |
| 210 | 263-11001-51 | MAINBEARING COVER CP | 1   |        |
| 220 | 044-04200-30 | OIL SEAL             | 1   |        |
| 230 | 60-04500-20  | BALL BEARING         | 1   |        |
| 250 | 263-45004-01 | GOVERNOR GEAR CP     | 1   |        |
| 255 | 263-46215-A3 | THRUST BEARING       | 1   |        |
| 257 | 263-46214-03 | WASHER               | 2   |        |
| 260 | 277-41902-03 | GOVERNOR SLEEVE      | 1   |        |
| 290 | 263-16002-A3 | GASKET (M.B COVER)   | 1   |        |
| 300 | 011-00802-20 | FLANGE BOLT          | 10  |        |
| 610 | 263-13211-11 | CYLINDER HEAD 1 CP   | 1   |        |
| 615 | 263-13311-11 | CYLINDER HEAD 2 CP   | 1   |        |
| 620 | 263-15021-41 | GASKET 1 (CYL HEAD)  | 1   |        |
| 621 | 263-15121-31 | GASKET 2 (CYL HEAD)  | 1   |        |
| 630 | 011-01000-70 | FLANGE BOLT          | 8   |        |
| 680 | 263-15505-03 | ROCKER COVER         | 1   |        |
| 681 | 263-15503-03 | ROCKER COVER         | 1   |        |
| 690 | 263-16101-A3 | GASKET(ROCKER COVER) | 2   |        |
| 700 | 031-00600-20 | DOWEL PIN            | 4   |        |


## 100 Crankcase

| Ref | Part Number. | Description          | Qty | Remark |
|-----|--------------|----------------------|-----|--------|
| 710 | 011-00601-01 | FLANGE BOLT          | 8   |        |
| 800 | 280-19001-03 | HOOK                 | 2   |        |
| 810 | 263-14301-03 | BREATHER COVER       | 1   |        |
| 820 | 280-14401-A1 | BREATHER PLATE CP    | 1   |        |
| 830 | 263-16006-03 | GASKET(BREATHERPLATE | 2   |        |
| 860 | 011-00600-30 | FLANGE BOLT          | 2   |        |
| 960 | 263-99001-27 | GASKET SET           | 1   |        |

***This Page Intentionally Left Blank***

## 200 Crankshaft

FIG. 200

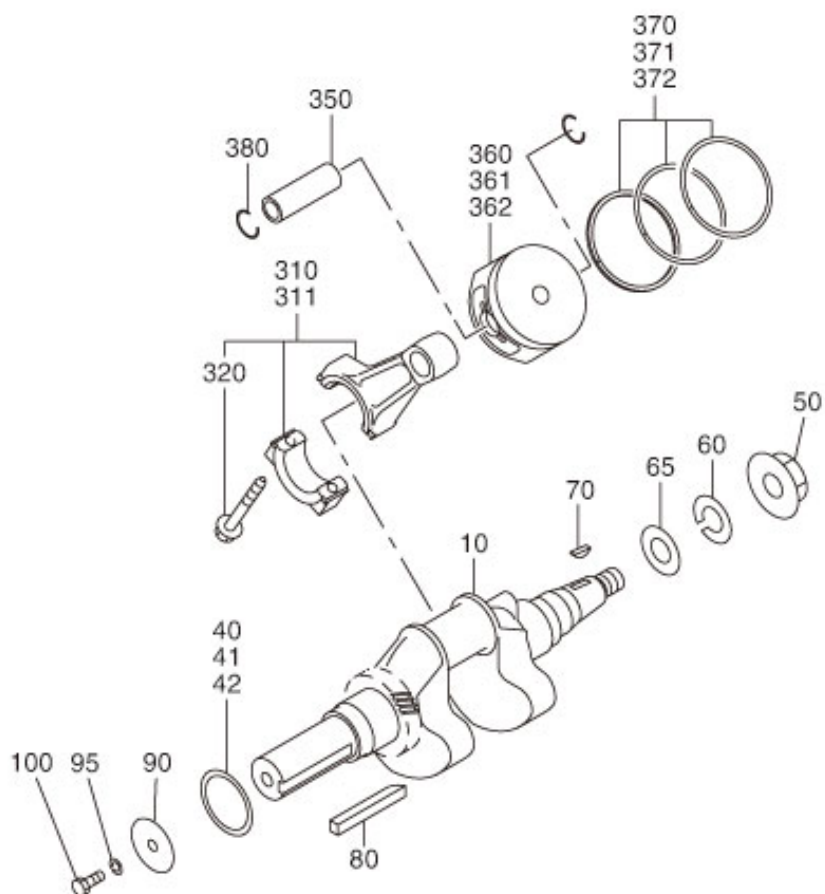


EH65/64/63

263020000W01

## 200 Crankshaft

| Ref | Part Number. | Description       | Qty | Remark |
|-----|--------------|-------------------|-----|--------|
| 10  | 263-20922-11 | CRANK SHAFT CP    | 1   |        |
| 40  | 263-25012-A3 | SPACER            | 1   |        |
| 41  | 263-25013-A3 | SPACER            | 1   |        |
| 42  | 263-25014-A3 | SPACER            | 1   |        |
| 50  | 018-01800-10 | FLANGE NUT        | 1   |        |
| 65  | 003-10180-00 | WASHER            | 1   |        |
| 70  | 005-32054-01 | WOODRUFF KEY      | 1   |        |
| 80  | 005-30105-01 | KEY               | 1   |        |
| 90  | 020-01000-30 | WASHER            | 1   |        |
| 95  | 003-20100-00 | SPRING WASHER     | 1   |        |
| 100 | 001-66102-50 | BOLT              | 1   |        |
| 310 | 263-22601-30 | CONNECTING ROD AY | 2   |        |
| 320 | 001-05084-00 | FLANGE BOLT       | 2   |        |
| 350 | 263-23301-23 | PISTON PIN        | 2   |        |
| 360 | 263-23421-J3 | PISTON            | 2   |        |
| 370 | 263-23501-17 | PISTON RING SET   | 2   |        |
| 380 | 056-52100-20 | CLIP              | 4   |        |

## 300 Intake & Exhaust

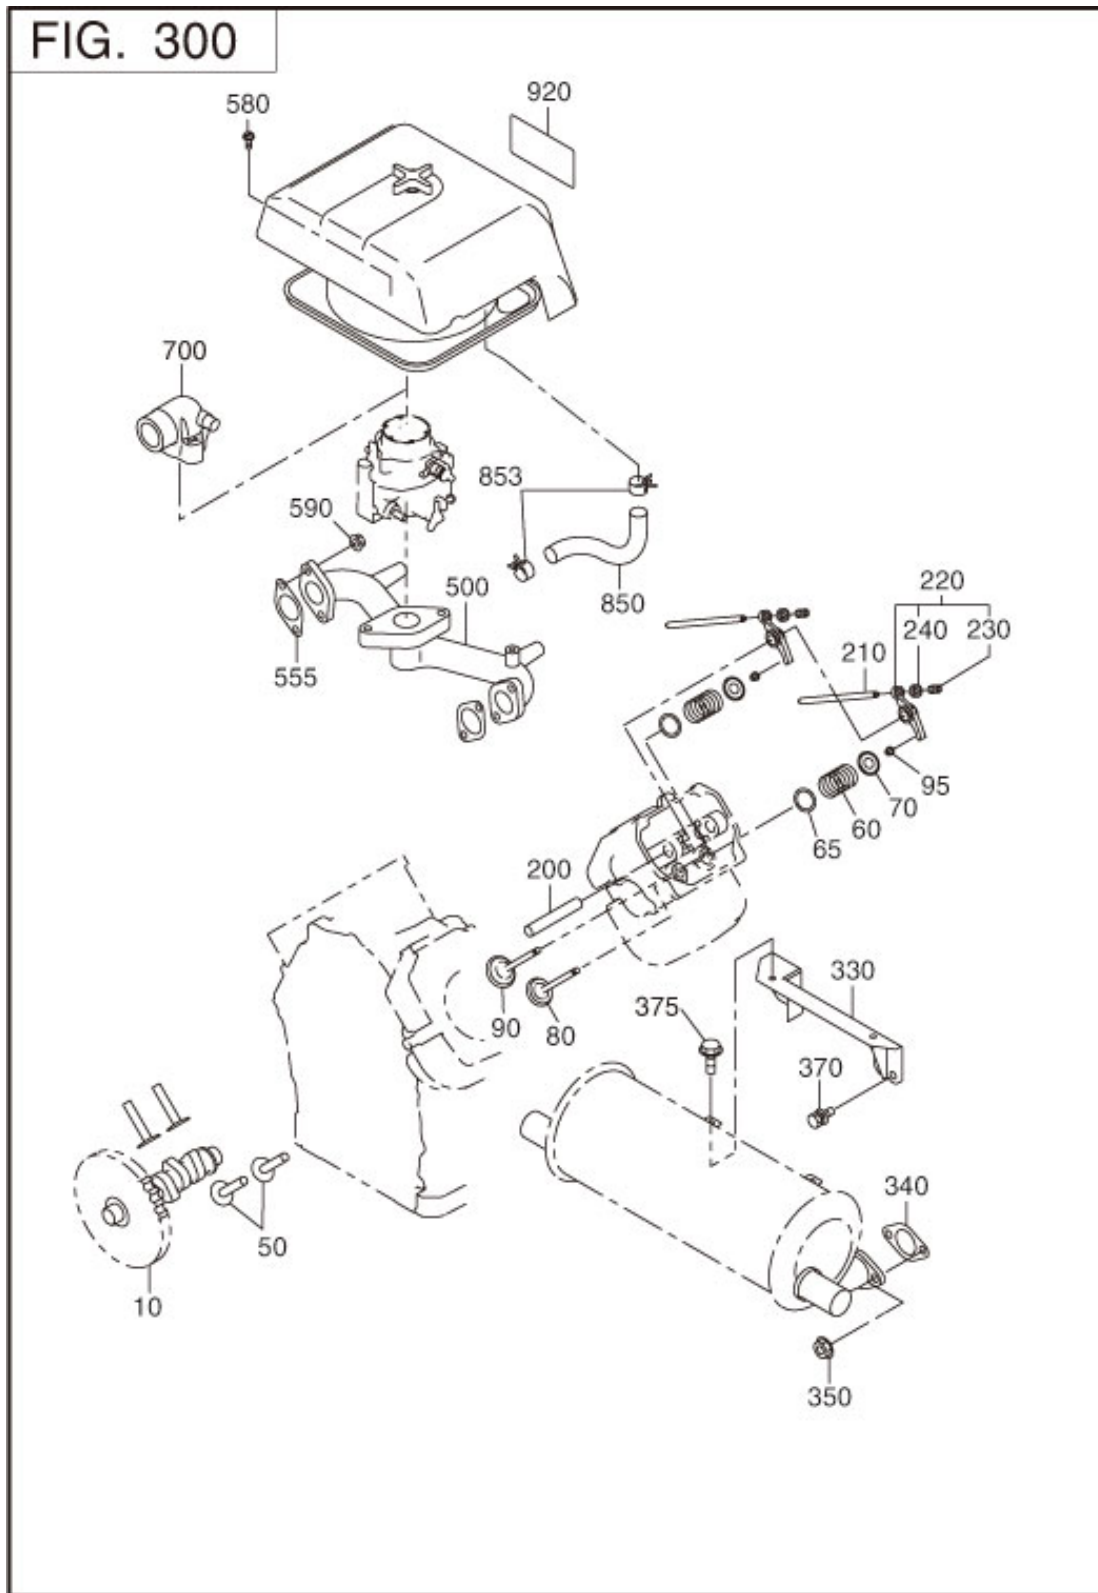

EH65/64/63


263030000W01

## 300 Intake & Exhaust

| Ref | Part Number. | Description         | Qty | Remark |
|-----|--------------|---------------------|-----|--------|
| 10  | 280-31701-13 | CAM SHAFT           | 1   |        |
| 50  | 263-33301-A3 | TAPPET              | 4   |        |
| 60  | 246-33611-03 | VALVE SPRING        | 4   |        |
| 70  | 246-33711-13 | SPRING RETAINER     | 4   |        |
| 80  | 263-33401-H3 | INTAKE VALVE        | 2   |        |
| 90  | 263-33502-H3 | EXHAUST VALVE       | 2   |        |
| 95  | 246-35501-03 | COLLET-VALVE        | 8   |        |
| 210 | 263-35322-A1 | PUSH ROD CP         | 4   |        |
| 220 | 267-36102-03 | ROCKER ARM          | 4   |        |
| 230 | 261-35801-13 | BOLT(PIVOT)         | 4   |        |
| 235 | 267-35701-03 | PIVOT               | 4   |        |
| 240 | 017-00601-10 | NUT                 | 4   |        |
| 260 | 263-37002-A3 | GUIDE PLATE         | 2   |        |
| 350 | 018-00800-10 | FLANGE NUT          | 4   |        |
| 500 | 280-33001-C3 | INTAKE MANIFOLD     | 1   |        |
| 555 | 263-35503-A3 | GASKET(IN MANIFOLD) | 2   |        |
| 580 | 011-00600-20 | FLANGE BOLT         | 3   |        |
| 590 | 002-38080-00 | FLANGE NUT          | 4   |        |
| 850 | 263-18003-03 | RUBBER PIPE         | 1   |        |
| 853 | 056-12000-20 | HOSE CLAMP          | 2   |        |
| 920 | 263-91722-03 | LABEL(TRADE MARK)   | 1   |        |

## 315 Intake & Exhaust

FIG. 315

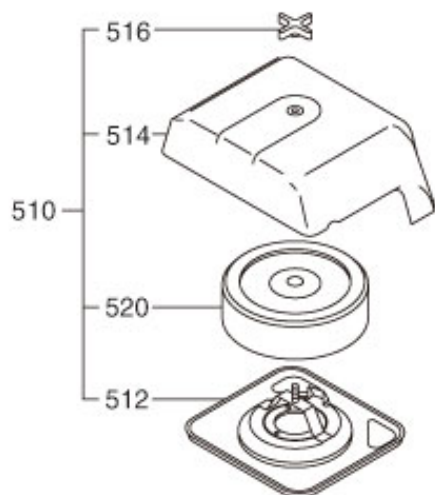


EH65/64/63

263031500W01

## 315 Intake & Exhaust

| Ref | Part Number. | Description        | Qty | Remark |
|-----|--------------|--------------------|-----|--------|
| 510 | 280-32602-00 | AIR CLEANER AY     | 1   |        |
| 512 | 280-32625-01 | CLEANER BASE CP    | 1   |        |
| 514 | 263-32630-03 | CLEANER COVER      | 1   |        |
| 516 | 263-32640-01 | WING NUT           | 1   |        |
| 520 | 263-32610-A1 | CLEANER ELEMENT CP | 1   |        |

# 400 Governor

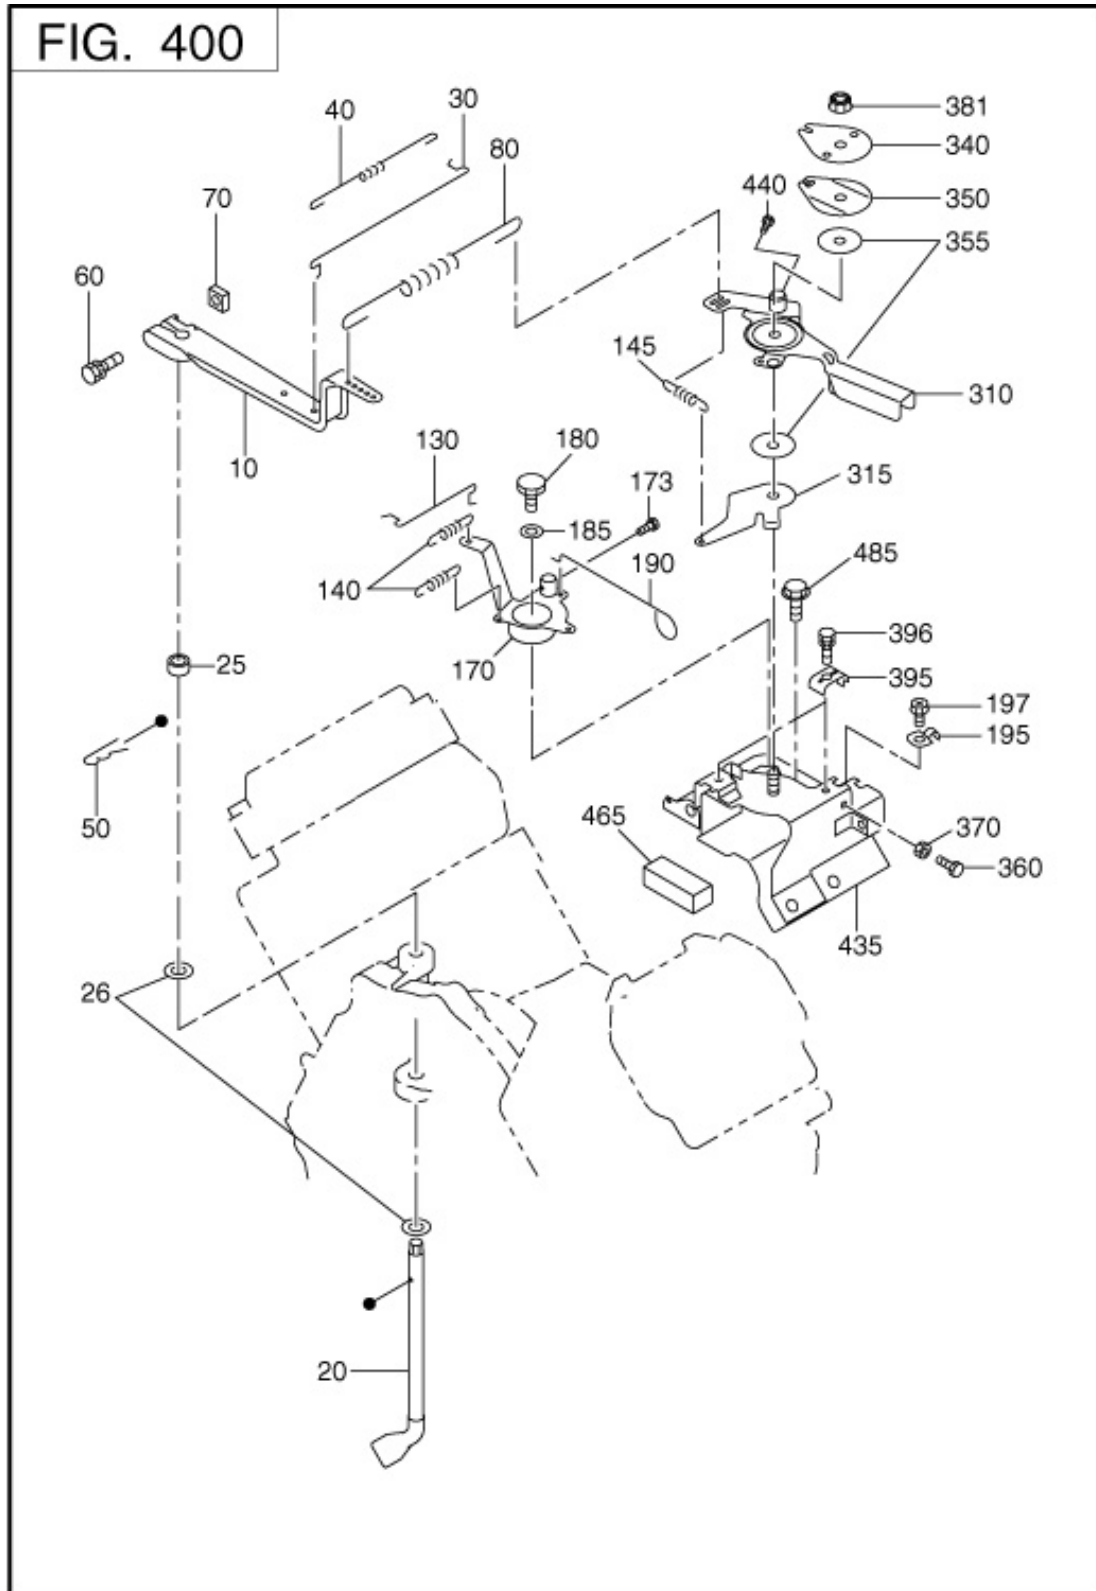

EH65/64/63


263040001W01

## 400 Governor

| Ref | Part Number. | Description          | Qty | Remark |
|-----|--------------|----------------------|-----|--------|
| 10  | 263-42301-B3 | GOVERNOR LEVER       | 1   |        |
| 20  | 263-42201-A3 | GOVERNOR SHAFT       | 1   |        |
| 25  | X23-00801-50 | SPACER               | 1   |        |
| 26  | 003-10080-00 | WASHER               | 2   |        |
| 30  | 263-42701-13 | GOVERNOR ROD         | 1   |        |
| 40  | 263-42801-13 | ROD SPRING           | 1   |        |
| 50  | 005-11060-01 | SNAP PIN             | 1   |        |
| 60  | 001-14063-00 | BOLT AND WASHER AY   | 1   |        |
| 70  | 018-60600-20 | NUT                  | 1   |        |
| 80  | 263-42503-03 | GOVERNOR SPRING      | 1   |        |
| 130 | 263-46011-13 | CHOKE CONTROL ROD    | 1   |        |
| 140 | 261-45201-13 | RETURN SPRING        | 2   |        |
| 170 | 263-46001-01 | CHOKE CONTROL LINKCP | 1   |        |
| 173 | 004-31040-80 | SCREW                | 1   |        |
| 180 | 226-43101-01 | LINK PIVOT CP        | 1   |        |
| 185 | 003-22100-00 | WAVED WASHER         | 1   |        |
| 190 | 263-43901-13 | CHOKE KNOB           | 1   |        |
| 195 | 263-46010-03 | CLAMP(CHOKE KNOB)    | 1   |        |
| 197 | 015-20500-10 | TAPPING SCREW        | 1   |        |
| 310 | 263-43301-A3 | SPEED CONTROL LEV CP | 1   |        |
| 340 | 227-43501-13 | STOP PLATE           | 1   |        |
| 350 | 263-45002-03 | SPRING WASHER        | 1   |        |
| 355 | 021-70600-30 | FRICTION WASHER      | 2   |        |
| 360 | 011-50500-20 | BOLT                 | 2   |        |
| 370 | 002-27050-00 | NUT                  | 2   |        |
| 381 | 002-35060-00 | SELF LOCK NUT        | 1   |        |
| 395 | 261-43901-03 | CLAMP                | 2   |        |
| 396 | 001-17052-00 | BOLT & WASHER AY     | 2   |        |
| 435 | 263-45011-A2 | BRACKET UN(SPD CTL)  | 1   |        |
| 440 | 004-31040-80 | SCREW                | 1   |        |
| 485 | 011-00600-20 | FLANGE BOLT          | 2   |        |

## 500 Cooling & Starting

FIG. 500

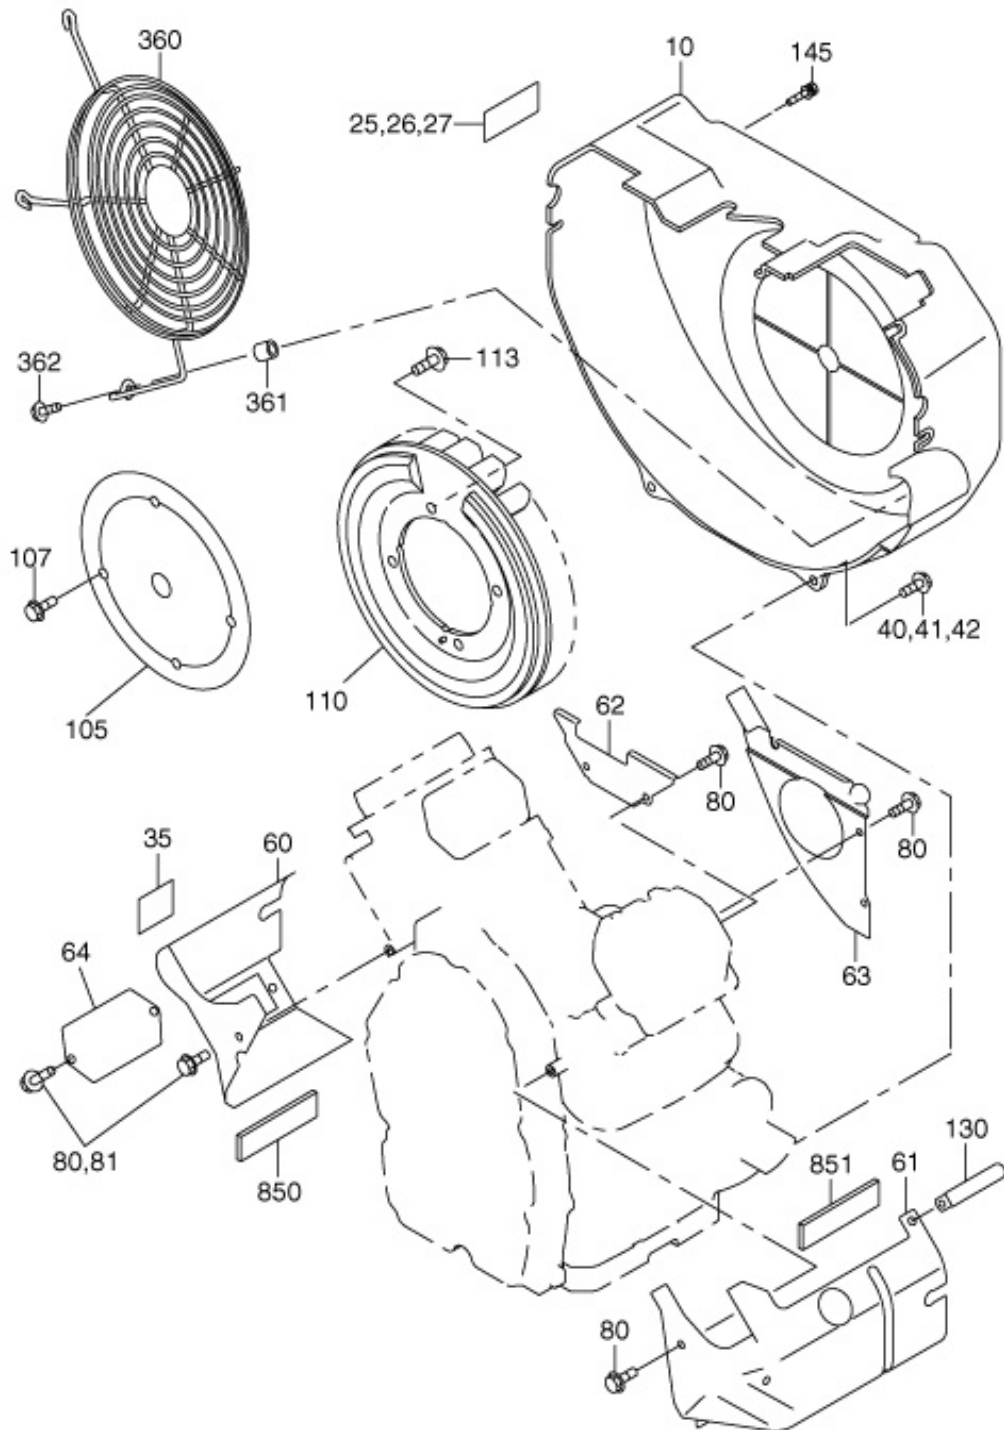


EH65/64/63

263050001W00

## 500 Cooling & Starting

| Ref | Part Number. | Description          | Qty | Remark |
|-----|--------------|----------------------|-----|--------|
| 10  | 263-51121-B2 | BLOWER HOUSING UN    | 1   |        |
| 25  | 073-20049-80 | LABEL(CAUTION)       | 1   |        |
| 35  | 263-91802-03 | LABEL(ENGINE NAME)   | 1   |        |
| 40  | 011-00600-30 | FLANGE BOLT          | 8   |        |
| 60  | 263-52612-A1 | CYLINDER BAFFLE 1 CP | 1   |        |
| 61  | 263-52704-A1 | CYLINDER BAFFLE 2 CP | 1   |        |
| 62  | 263-52801-03 | CYLINDER BAFFLE 3    | 1   |        |
| 63  | 263-52912-A2 | CYLINDER BAFFLE 4 UN | 1   |        |
| 80  | 011-00600-20 | FLANGE BOLT          | 8   |        |
| 110 | 263-54101-H2 | COOLING BLOWER UN    | 1   |        |
| 113 | 001-14061-60 | BOLT AND WASHER AY   | 4   |        |


## 600 Fuel & Lubricant

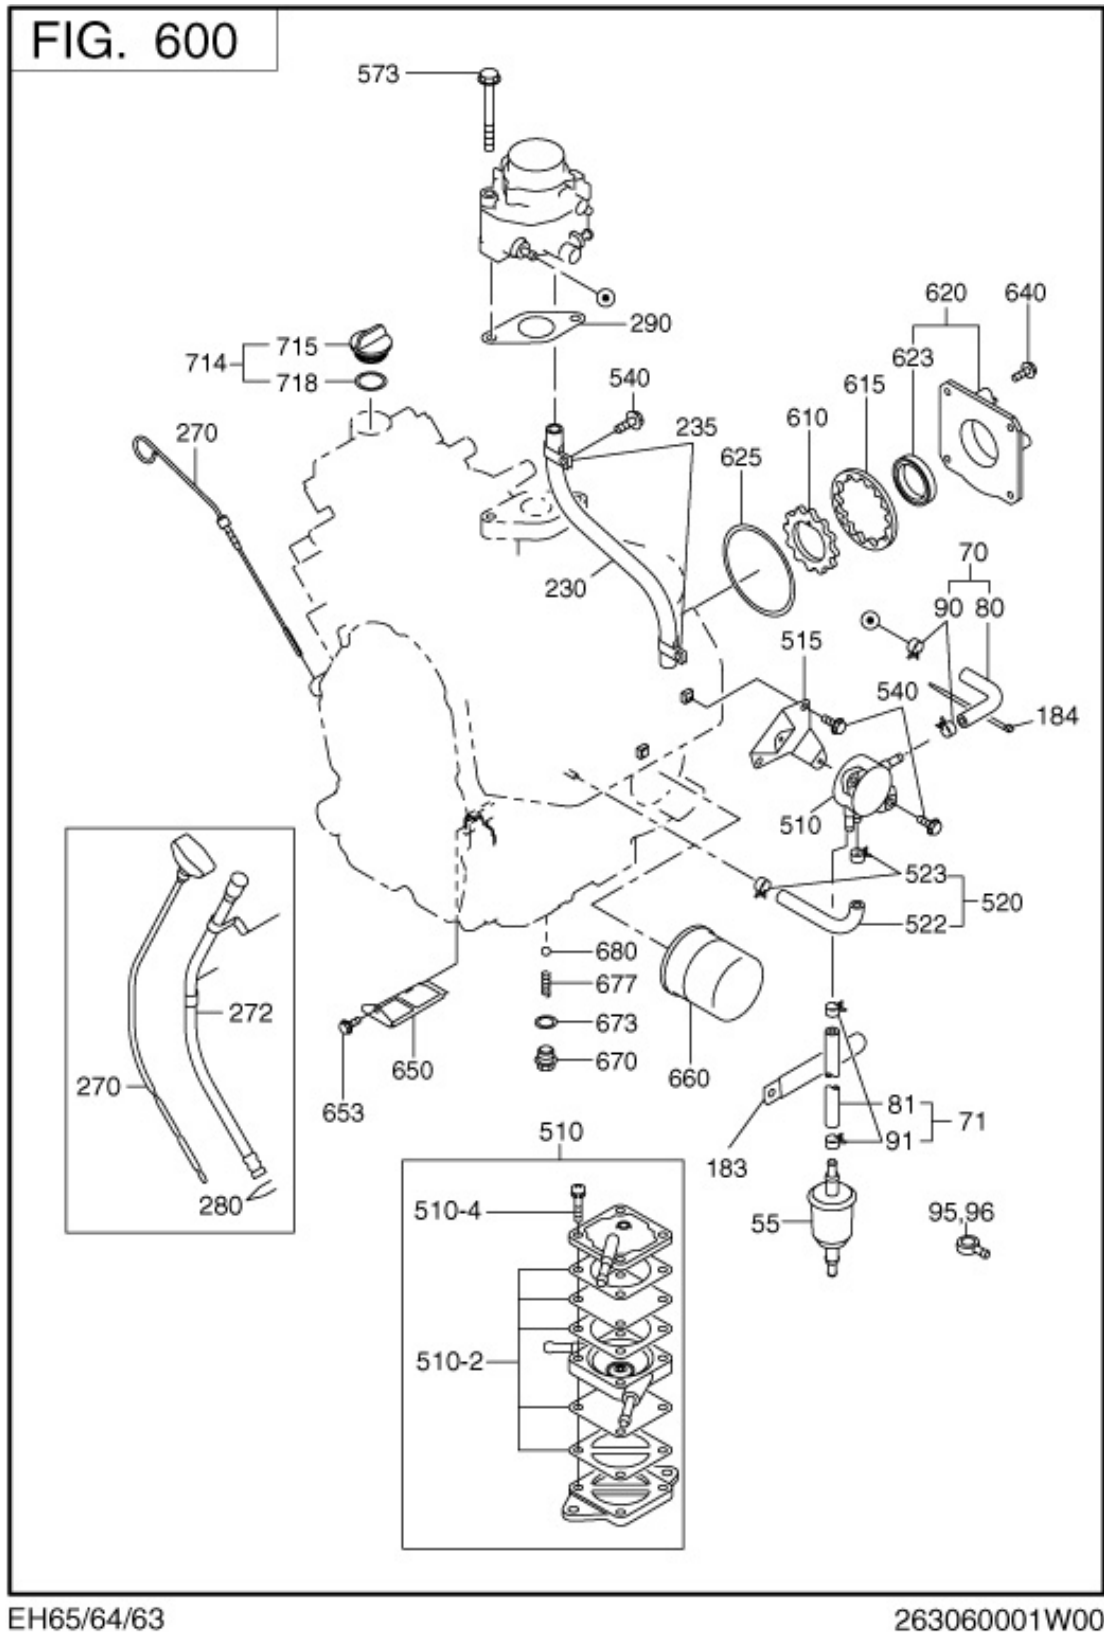

## 600 Fuel & Lubricant

| Ref | Part Number. | Description          | Qty | Remark |
|-----|--------------|----------------------|-----|--------|
| 55  | 263-65012-A3 | FILTER,FUEL          | 1   |        |
| 80  | 263-68006-B3 | RUBBER PIPE          | 1   |        |
| 81  | 263-68007-B3 | RUBBER PIPE          | 1   |        |
| 90  | 263-68501-03 | HOSE CLAMP           | 2   |        |
| 91  | 263-68501-03 | HOSE CLAMP           | 2   |        |
| 183 | 056-61000-21 | CLAMP                | 1   |        |
| 230 | 085-10301-10 | RUBBER PIPE          | 1   |        |
| 235 | 206-75501-01 | CLAMP CP             | 2   |        |
| 270 | 263-63603-01 | OIL GAUGE CP         | 1   |        |
| 290 | 263-66201-A3 | GASKET(CARBURETOR)   | 1   |        |
| 510 | 267-62201-10 | FUEL PUMP AY         | 1   |        |
| 515 | 263-65002-A3 | BRACKET(FUEL PUMP)   | 1   |        |
| 520 | 263-62653-B1 | PULSE PIPE CP        | 1   |        |
| 522 | 263-68008-B3 | RUBBER PIPE          | 1   |        |
| 523 | 263-68501-03 | HOSE CLAMP           | 2   |        |
| 540 | 011-00600-20 | FLANGE BOLT          | 5   |        |
| 573 | 011-00801-10 | FLANGE BOLT          | 2   |        |
| 610 | 263-63901-03 | INNER ROTOR          | 1   |        |
| 615 | 263-63902-03 | OUTER ROTOR          | 1   |        |
| 620 | 263-64002-01 | OIL PUMP COVER CP    | 1   |        |
| 623 | 044-03501-70 | OIL SEAL             | 1   |        |
| 625 | X24-08900-30 | O RING               | 1   |        |
| 640 | 011-00600-30 | FLANGE BOLT          | 4   |        |
| 650 | 263-64302-02 | OIL PUMP FILTER UN   | 1   |        |
| 653 | 263-65011-A3 | FLANGE BOLT          | 1   |        |
| 660 | 248-65801-00 | OIL FILTER AY        | 1   |        |
| 670 | 263-65001-13 | PLUG(OIL RELIEF)     | 1   |        |
| 673 | 003-70140-00 | GASKET,ALUMINUM      | 1   |        |
| 677 | 263-66001-03 | SPRING(RELIEF VALVE) | 1   |        |
| 680 | 006-90308-00 | STEEL BALL           | 1   |        |
| 715 | 280-63602-A1 | OIL FILLER CAP CP    | 1   |        |
| 718 | 263-64414-A3 | O RING               | 1   |        |
 
## FIG. 640




## 640 Fuel & Lubricant

| Ref  | Part Number. | Description          | Qty | Remark |
|------|--------------|----------------------|-----|--------|
| 210  | 263-62481-10 | CARBURETOR AY        | 1   |        |
| -1   | 263-62535-08 | VALVE,THROTTLE       | 1   |        |
| -2   | 261-62352-08 | SCREW,VALVE SET      | 2   |        |
| -3   | 263-62528-08 | VALVE,CHOKE          | 1   |        |
| -4   | 258-62555-08 | SCREW SET(VALVE)     | 2   |        |
| -5   | 258-62420-08 | JET(SLOW)            | 1   |        |
| -8   | 263-62520-08 | SHAFT ASSY,CHOKE     | 1   |        |
| -11  | 263-62531-08 | SHAFT ASSY,THROTTLE  | 1   |        |
| -13  | 258-62551-08 | RING(CHOKE LEVER)    | 1   |        |
| -14  | 226-62501-08 | VALVE,FLOAT          | 1   |        |
| -15  | 258-62515-08 | FLOAT PIN            | 1   |        |
| -18  | 280-62545-08 | GASKET,AIR HORN      | 1   |        |
| -19  | 280-62505-08 | FLOAT                | 1   |        |
| -22  | 263-62400-08 | JET,MAIN             | 1   |        |
| -28  | 215-62353-08 | SCREW,DRAIN          | 1   |        |
| -29  | 215-62446-08 | SPRING,DRAIN         | 1   |        |
| -38  | 258-62556-08 | SCREW SET(FLOAT PIN) | 1   |        |
| -40  | 263-62451-08 | SCREW,THRO.ADJUST    | 1   |        |
| -41  | 258-62445-08 | SPRING(ADJUST SCREW) | 1   |        |
| -57  | 258-62450-08 | SCREW SET(AIR HORN)  | 4   |        |
| -59  | 263-62560-08 | O-RING,AIR HORN      | 1   |        |
| -61  | 280-62551-08 | COLLAR,CHOKE         | 1   |        |
| -62  | 258-62554-08 | FILTER(CHOKE SHAFT)  | 1   |        |
| -93  | 263-62524-08 | LEVER ASSY,CHOKE     | 1   |        |
| -94  | 263-62445-08 | SPRING,CHOKE         | 1   |        |
| -102 | 226-62580-08 | FILTER,AIR           | 1   |        |
| -103 | 258-62570-08 | COLLAR(THRO.SHAFT)   | 1   |        |
| -125 | 263-62556-08 | VALVE CP,(SOLENOID)  | 1   |        |
| -126 | 258-62546-08 | GASKET,MAIN PASSAGE  | 1   |        |
| -129 | 258-62566-08 | CLAMP(SOLENOID)WIRE  | 1   |        |
| -136 | 263-62555-08 | GASKET               | 1   |        |
| -195 | 263-62552-08 | PLUG                 | 1   |        |

## 700 Electric Device

FIG. 700

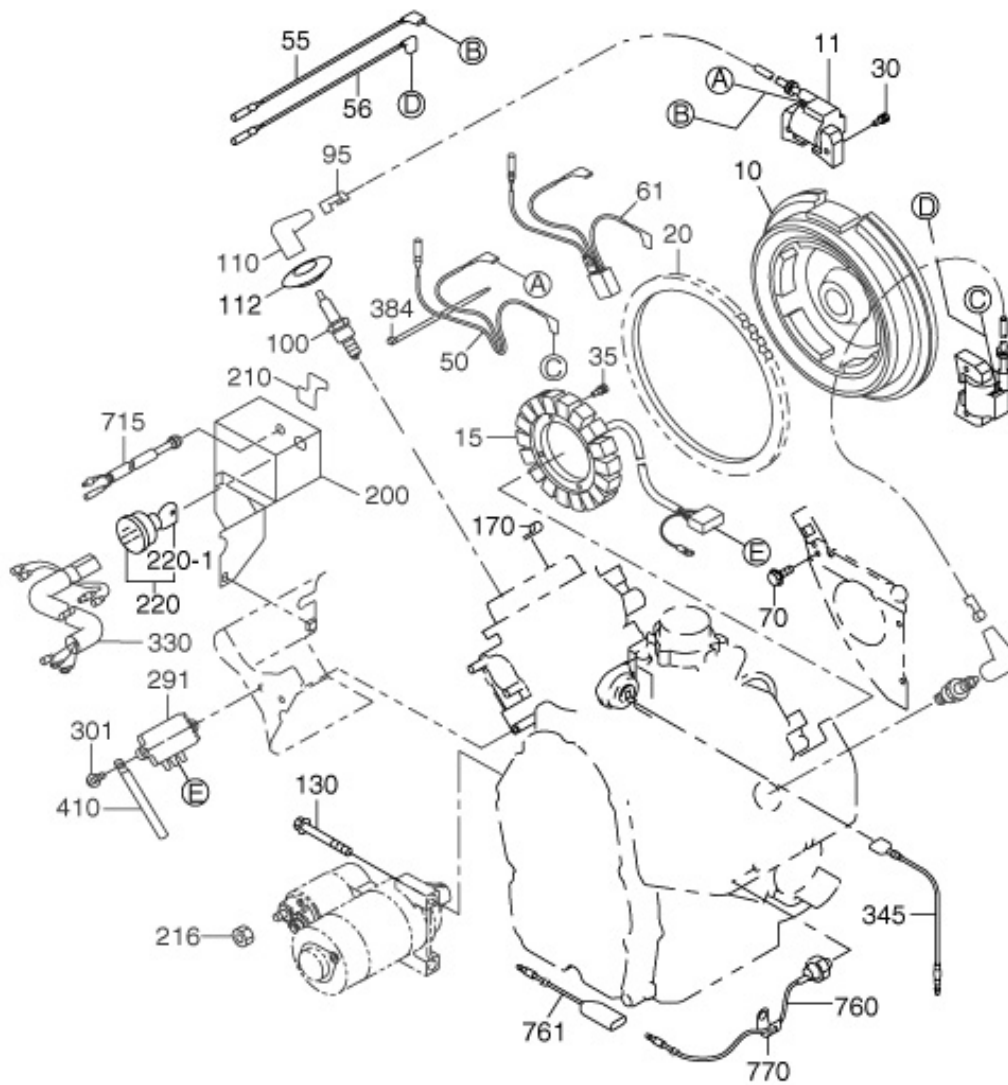

EH65/64/63


263070001W00

## 700 Electric Device

| Ref | Part Number. | Description          | Qty | Remark |
|-----|--------------|----------------------|-----|--------|
| 10  | 263-77207-01 | FLYWHEEL CP          | 1   |        |
| 11  | 263-78203-01 | IGNITION COIL CP     | 2   |        |
| 15  | 263-79411-A1 | CHARGE COIL CP       | 1   |        |
| 20  | 263-71002-H3 | RING GEAR            | 1   |        |
| 30  | 001-14062-50 | BOLT AND WASHER AY   | 4   |        |
| 35  | 001-16052-00 | BOLT AND WASHER AY   | 4   |        |
| 50  | 263-73126-H1 | WIRE CP(IG.COIL)     | 1   |        |
| 61  | KU3-11052-21 | STOP DIODE CP        | 1   |        |
| 70  | 011-00600-10 | FLANGE BOLT          | 1   |        |
| 95  | 065-90000-10 | PLUG TERMINAL        | 2   |        |
| 100 | 065-01402-80 | SPARK PLUG           | 2   |        |
| 110 | X65-51000-10 | SPARK PLUG CAP       | 2   |        |
| 130 | 011-00801-00 | FLANGE BOLT          | 2   |        |
| 216 | 002-38080-00 | FLANGE NUT           | 1   |        |
| 291 | 263-71901-01 | REGULATOR CP         | 1   |        |
| 301 | 011-00601-40 | FLANGE BOLT          | 2   |        |
| 330 | 263-73130-A1 | WIRING HARNESS       | 1   |        |
| 384 | 056-30000-10 | WIRE BAND            | 3   |        |
| 410 | 056-60002-50 | CLAMP                | 1   |        |
| 760 | 263-73102-11 | WIRE AY(OIL PRE.SW.) | 1   |        |
| 770 | 206-75501-01 | CLAMP CP             | 2   |        |

## 730 Electric Device

FIG. 730

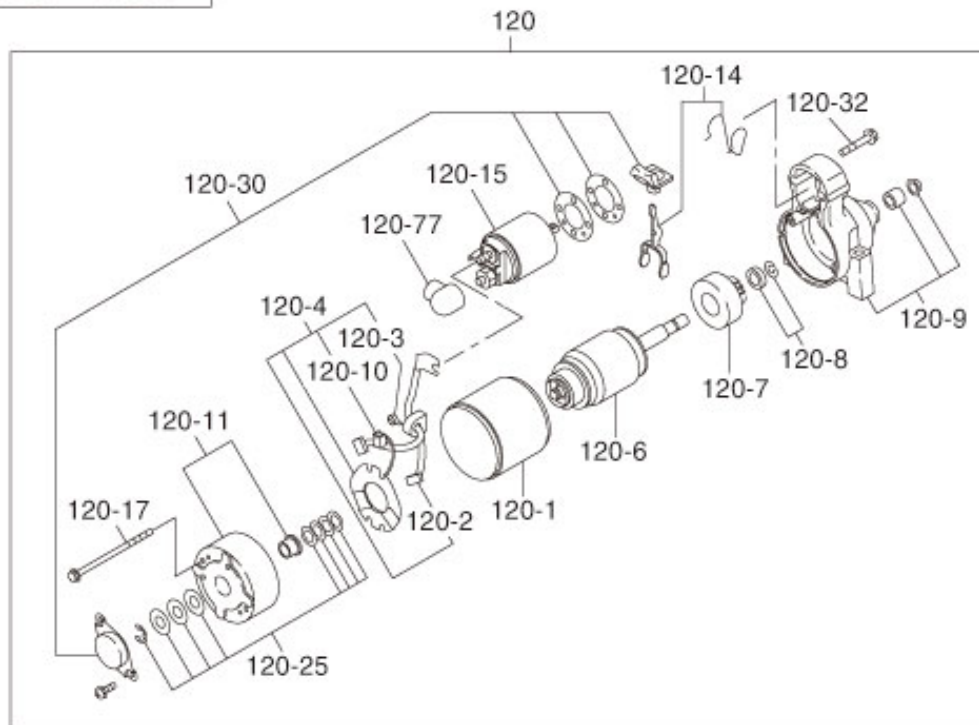

EH65/64/63

263073000W01

## 730 Electric Device

| Ref | Part Number. | Description    | Qty | Remark |
|-----|--------------|----------------|-----|--------|
| 120 | 263-70504-J0 | STARTING MOTOR | 1   |        |

# Part Number Index

The Part Number Index is a numeric index of all part numbers included in this manual. The index shows what page(s) the part is used on.

| Part Number                      | Page | Part Number          | Page | Part Number          | Page | Part Number          | Page |
|----------------------------------|------|----------------------|------|----------------------|------|----------------------|------|
| 001-05084-00 .....9              |      | 246-35501-03 .....11 |      | 263-51121-B2 .....17 |      | X65-51000-10 .....23 |      |
| 001-14061-60 .....17             |      | 248-65801-00 .....19 |      | 263-52612-A1 .....17 |      |                      |      |
| 001-14062-50 .....23             |      | 248-76301-01 .....5  |      | 263-52704-A1 .....17 |      |                      |      |
| 001-14063-00 .....15             |      | 258-62420-08 .....21 |      | 263-52801-03 .....17 |      |                      |      |
| 001-16052-00 .....23             |      | 258-62445-08 .....21 |      | 263-52912-A2 .....17 |      |                      |      |
| 001-17052-00 .....15             |      | 258-62450-08 .....21 |      | 263-54101-H2 .....17 |      |                      |      |
| 001-66102-50 .....9              |      | 258-62515-08 .....21 |      | 263-55601-03 .....5  |      |                      |      |
| 002-27050-00 .....15             |      | 258-62546-08 .....21 |      | 263-62400-08 .....21 |      |                      |      |
| 002-35060-00 .....15             |      | 258-62551-08 .....21 |      | 263-62445-08 .....21 |      |                      |      |
| 002-38080-00 .....11, 23         |      | 258-62554-08 .....21 |      | 263-62451-08 .....21 |      |                      |      |
| 003-10080-00 .....15             |      | 258-62555-08 .....21 |      | 263-62481-10 .....21 |      |                      |      |
| 003-10180-00 .....9              |      | 258-62556-08 .....21 |      | 263-62520-08 .....21 |      |                      |      |
| 003-20100-00 .....9              |      | 258-62566-08 .....21 |      | 263-62524-08 .....21 |      |                      |      |
| 003-22100-00 .....15             |      | 258-62570-08 .....21 |      | 263-62528-08 .....21 |      |                      |      |
| 003-70140-00 .....19             |      | 261-35801-13 .....11 |      | 263-62531-08 .....21 |      |                      |      |
| 004-31040-80 .....15             |      | 261-43901-03 .....15 |      | 263-62535-08 .....21 |      |                      |      |
| 005-11060-01 .....15             |      | 261-45201-13 .....15 |      | 263-62552-08 .....21 |      |                      |      |
| 005-30105-01 .....9              |      | 261-62352-08 .....21 |      | 263-62555-08 .....21 |      |                      |      |
| 005-32054-01 .....9              |      | 263-1011121 .....5   |      | 263-62556-08 .....21 |      |                      |      |
| 006-90308-00 .....19             |      | 263-11001-51 .....5  |      | 263-62560-08 .....21 |      |                      |      |
| 010-50802-90 .....5              |      | 263-13211-11 .....5  |      | 263-62653-B1 .....19 |      |                      |      |
| 011-00600-10 .....23             |      | 263-13311-11 .....5  |      | 263-63603-01 .....19 |      |                      |      |
| 011-00600-20 .....11, 15, 17, 19 |      | 263-14211-03 .....5  |      | 263-63901-03 .....19 |      |                      |      |
| 011-00600-30 .....6, 17, 19      |      | 263-14301-03 .....6  |      | 263-63902-03 .....19 |      |                      |      |
| 011-00601-01 .....6              |      | 263-15021-41 .....5  |      | 263-64002-01 .....19 |      |                      |      |
| 011-00601-40 .....23             |      | 263-15121-31 .....5  |      | 263-64302-02 .....19 |      |                      |      |
| 011-00801-00 .....23             |      | 263-15503-03 .....5  |      | 263-64414-A3 .....19 |      |                      |      |
| 011-00801-10 .....19             |      | 263-15505-03 .....5  |      | 263-65001-13 .....19 |      |                      |      |
| 011-00802-20 .....5              |      | 263-15805-03 .....5  |      | 263-65002-A3 .....19 |      |                      |      |
| 011-01000-70 .....5              |      | 263-15901-03 .....5  |      | 263-65011-A3 .....19 |      |                      |      |
| 011-50500-20 .....15             |      | 263-16002-A3 .....5  |      | 263-65012-A3 .....19 |      |                      |      |
| 015-20500-10 .....15             |      | 263-16006-03 .....6  |      | 263-66001-03 .....19 |      |                      |      |
| 017-00601-10 .....11             |      | 263-16101-A3 .....5  |      | 263-66201-A3 .....19 |      |                      |      |
| 018-00800-10 .....11             |      | 263-18003-03 .....11 |      | 263-68006-B3 .....19 |      |                      |      |
| 018-01800-10 .....9              |      | 263-20922-11 .....9  |      | 263-68007-B3 .....19 |      |                      |      |
| 018-60600-20 .....15             |      | 263-22601-30 .....9  |      | 263-68008-B3 .....19 |      |                      |      |
| 020-01000-30 .....9              |      | 263-23301-23 .....9  |      | 263-68501-03 .....19 |      |                      |      |
| 021-11400-20 .....5              |      | 263-23421-J3 .....9  |      | 263-70504-J0 .....25 |      |                      |      |
| 021-70600-30 .....15             |      | 263-23501-17 .....9  |      | 263-71002-H3 .....23 |      |                      |      |
| 031-00600-20 .....5              |      | 263-25012-A3 .....9  |      | 263-71901-01 .....23 |      |                      |      |
| 031-00801-10 .....5              |      | 263-25013-A3 .....9  |      | 263-73102-11 .....23 |      |                      |      |
| 040-11400-30 .....5              |      | 263-25014-A3 .....9  |      | 263-73126-H1 .....23 |      |                      |      |
| 044-00800-10 .....5              |      | 263-32610-A1 .....13 |      | 263-73130-A1 .....23 |      |                      |      |
| 044-03501-70 .....19             |      | 263-32630-03 .....13 |      | 263-77207-01 .....23 |      |                      |      |
| 044-04200-30 .....5              |      | 263-32640-01 .....13 |      | 263-78203-01 .....23 |      |                      |      |
| 056-12000-20 .....11             |      | 263-33301-A3 .....11 |      | 263-79411-A1 .....23 |      |                      |      |
| 056-30000-10 .....23             |      | 263-33401-H3 .....11 |      | 263-91722-03 .....11 |      |                      |      |
| 056-51000-50 .....5              |      | 263-33502-H3 .....11 |      | 263-91802-03 .....17 |      |                      |      |
| 056-52100-20 .....9              |      | 263-35322-A1 .....11 |      | 263-99001-27 .....6  |      |                      |      |
| 056-60002-50 .....23             |      | 263-35341-03 .....5  |      | 267-35701-03 .....11 |      |                      |      |
| 056-61000-21 .....19             |      | 263-35503-A3 .....11 |      | 267-36102-03 .....11 |      |                      |      |
| 065-01402-80 .....23             |      | 263-37002-A3 .....11 |      | 267-62201-10 .....19 |      |                      |      |
| 065-90000-10 .....23             |      | 263-42201-A3 .....15 |      | 277-41902-03 .....5  |      |                      |      |
| 073-20049-80 .....17             |      | 263-42301-B3 .....15 |      | 280-14401-A1 .....6  |      |                      |      |
| 085-10301-10 .....19             |      | 263-42503-03 .....15 |      | 280-19001-03 .....6  |      |                      |      |
| 132-07AA0-50 .....5              |      | 263-42701-13 .....15 |      | 280-31701-13 .....11 |      |                      |      |
| 159-65401-03 .....5              |      | 263-42801-13 .....15 |      | 280-32602-00 .....13 |      |                      |      |
| 206-75501-01 .....19, 23         |      | 263-43301-A3 .....15 |      | 280-32625-01 .....13 |      |                      |      |
| 215-62353-08 .....21             |      | 263-43901-13 .....15 |      | 280-33001-C3 .....11 |      |                      |      |
| 215-62446-08 .....21             |      | 263-45002-03 .....15 |      | 280-62505-08 .....21 |      |                      |      |
| 226-43101-01 .....15             |      | 263-45004-01 .....5  |      | 280-62545-08 .....21 |      |                      |      |
| 226-62501-08 .....21             |      | 263-45011-A2 .....15 |      | 280-62551-08 .....21 |      |                      |      |
| 226-62580-08 .....21             |      | 263-46001-01 .....15 |      | 280-63602-A1 .....19 |      |                      |      |
| 227-43501-13 .....15             |      | 263-46010-03 .....15 |      | 60-04500-20 .....5   |      |                      |      |
| 235-15421-03 .....5              |      | 263-46011-13 .....15 |      | KU3-11052-21 .....23 |      |                      |      |
| 246-33611-03 .....11             |      | 263-46214-03 .....5  |      | X23-00801-50 .....15 |      |                      |      |
| 246-33711-13 .....11             |      | 263-46215-A3 .....5  |      | X24-08900-30 .....19 |      |                      |      |

# Part Description Index

The Part Description Index is an alphabetical index of all part descriptions included in this manual. The index shows what page(s) the part is used on.

## A

AIR CLEANER AY.....13

## B

BALL BEARING.....5  
BLIND PLUG.....5  
BLOWER HOUSING UN.....17  
BOLT.....9, 15  
BOLT & WASHER AY.....15  
BOLT AND WASHER AY.....15, 17, 23  
BOLT(PIVOT).....11  
BRACKET UN(SPD CTL).....15  
BRACKET(FUEL PUMP).....19  
BREATHER COVER.....6  
BREATHER PLATE CP.....6

## C

CAM SHAFT.....11  
CARBURETOR AY.....21  
CHARGE COIL CP.....23  
CHOKE CONTROL LINKCP.....15  
CHOKE CONTROL ROD.....15  
CHOKE KNOB.....15  
CLAMP.....15, 19, 23  
CLAMP CP.....19, 23  
CLAMP(CHOKE KNOB).....15  
CLAMP(SOLENOID)WIRE.....21  
CLEANER BASE CP.....13  
CLEANER COVER.....13  
CLEANER ELEMENT CP.....13  
CLIP.....5, 9  
COLLAR(THRO.SHAFT).....21  
COLLAR,CHOKE.....21  
COLLET-VALVE.....11  
CONNECTING ROD AY.....9  
COOLING BLOWER UN.....17  
CRANK CASE CP.....5  
CRANK SHAFT CP.....9  
CYLINDER BAFFLE 1 CP.....17  
CYLINDER BAFFLE 2 CP.....17  
CYLINDER BAFFLE 3.....17  
CYLINDER BAFFLE 4 UN.....17  
CYLINDER HEAD 1 CP.....5  
CYLINDER HEAD 2 CP.....5

## D

DOWEL PIN.....5

## E

EXHAUST VALVE.....11

## F

FILTER(CHOKE SHAFT).....21  
FILTER,AIR.....21  
FILTER,FUEL.....19  
FLANGE BOLT.....5-6, 9, 11, 15, 17, 19, 23

FLANGE NUT.....9, 11, 23  
FLOAT.....21  
FLOAT PIN.....21  
FLYWHEEL CP.....23  
FRICTION WASHER.....15  
FUEL PUMP AY.....19

## G

GASKET.....5, 21  
GASKET (M.B COVER).....5  
GASKET 1 (CYL HEAD).....5  
GASKET 2 (CYL HEAD).....5  
GASKET SET.....6  
GASKET(BREATHERPLATE).....6  
GASKET(CARBURETOR).....19  
GASKET(IN MANIFOLD).....11  
GASKET(ROCKER COVER).....5  
GASKET,AIR HORN.....21  
GASKET,ALUMINUM.....19  
GASKET,MAIN PASSAGE.....21  
GOVERNOR GEAR CP.....5  
GOVERNOR LEVER.....15  
GOVERNOR ROD.....15  
GOVERNOR SHAFT.....15  
GOVERNOR SLEEVE.....5  
GOVERNOR SPRING.....15  
GUIDE PLATE.....11

## H

HOOK.....6  
HOSE CLAMP.....11, 19

## I

IGNITION COIL CP.....23  
INNER ROTOR.....19  
INTAKE MANIFOLD.....11  
INTAKE VALVE.....11

## J

JET(SLOW).....21  
JET,MAIN.....21

## K

KEY.....9

## L

LABEL(CAUTION).....17  
LABEL(ENGINE NAME).....17  
LABEL(TRADE MARK).....11  
LEVER ASSY,CHOKE.....21  
LINK PIVOT CP.....15

## M

MAIN BEARING.....5  
MAINBEARING COVER CP.....5

## N

NUT.....11, 15

## O

O RING.....19  
O-RING,AIR HORN.....21  
OIL FILLER CAP CP.....19  
OIL FILTER AY.....19  
OIL GAUGE CP.....19  
OIL PUMP COVER CP.....19  
OIL PUMP FILTER UN.....19  
OIL SEAL.....5, 19  
OUTER ROTOR.....19

## P

PIPE.....5  
PIPE(PULSE).....5  
PISTON.....9  
PISTON PIN.....9  
PISTON RING SET.....9  
PIVOT.....11  
PLUG.....5, 21  
PLUG TERMINAL.....23  
PLUG(OIL RELIEF).....19  
PULSE PIPE CP.....19  
PUSH ROD CP.....11

## R

REGULATOR CP.....23  
RETAINER PLATE.....5  
RETURN SPRING.....15  
RING GEAR.....23  
RING(CHOKE LEVER).....21  
ROCKER ARM.....11  
ROCKER COVER.....5  
ROD SPRING.....15  
RUBBER PIPE.....11, 19

## S

SCREW.....15  
SCREW SET(AIR HORN).....21  
SCREW SET(FLOAT PIN).....21  
SCREW SET(VALVE).....21  
SCREW,DRAIN.....21  
SCREW,THRO.ADJUST.....21  
SCREW,VALVE SET.....21  
SEAL-INT VALVE.....5  
SELF LOCK NUT.....15  
SHAFT ASSY,CHOKE.....21  
SHAFT ASSY,THROTTLE.....21  
SNAP PIN.....15  
SPACER.....9, 15  
SPARK PLUG.....23  
SPARK PLUG CAP.....23  
SPEED CONTROL LEV CP.....15  
SPRING RETAINER.....11

## Part Description Index (continued)

SPRING WASHER.....9, 15  
SPRING(ADJUST SCREW).....21  
SPRING(RELIEF VALVE).....19  
SPRING,CHOKE.....21  
SPRING,DRAIN.....21  
STARTING MOTOR.....25  
STEEL BALL.....19  
STOP DIODE CP.....23  
STOP PLATE.....15  
STUD.....5  
SWITCH OIL PRESSURE.....5

### T

TAPPET.....11  
TAPPING SCREW.....15  
THRUST BEARING.....5

### U

UNION.....5

### V

VALVE CP,(SOLENOID).....21  
VALVE GUIDE.....5  
VALVE SPRING.....11  
VALVE,CHOKE.....21  
VALVE,FLOAT.....21  
VALVE,THROTTLE.....21

### W

WASHER.....5, 9, 15  
WAVED WASHER.....15  
WING NUT.....13  
WIRE AY(OIL PRE.SW.).....23  
WIRE BAND.....23  
WIRE CP(IG.COIL).....23  
WIRING HARNESS.....23  
WOODRUFF KEY.....9

***This Page Intentionally Left Blank***

PRINTED IN THE USA

## Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047

Phone 847-540-7300 - Fax 847-438-5012

e-mail: [sales@subarupower.com](mailto:sales@subarupower.com) - [www.subarupower.com](http://www.subarupower.com)