

EC025GR5023

PARTS MANUAL

(~~276-109~~)

FIG. 2 CRANKCASE, CYLINDER and MUFFLER

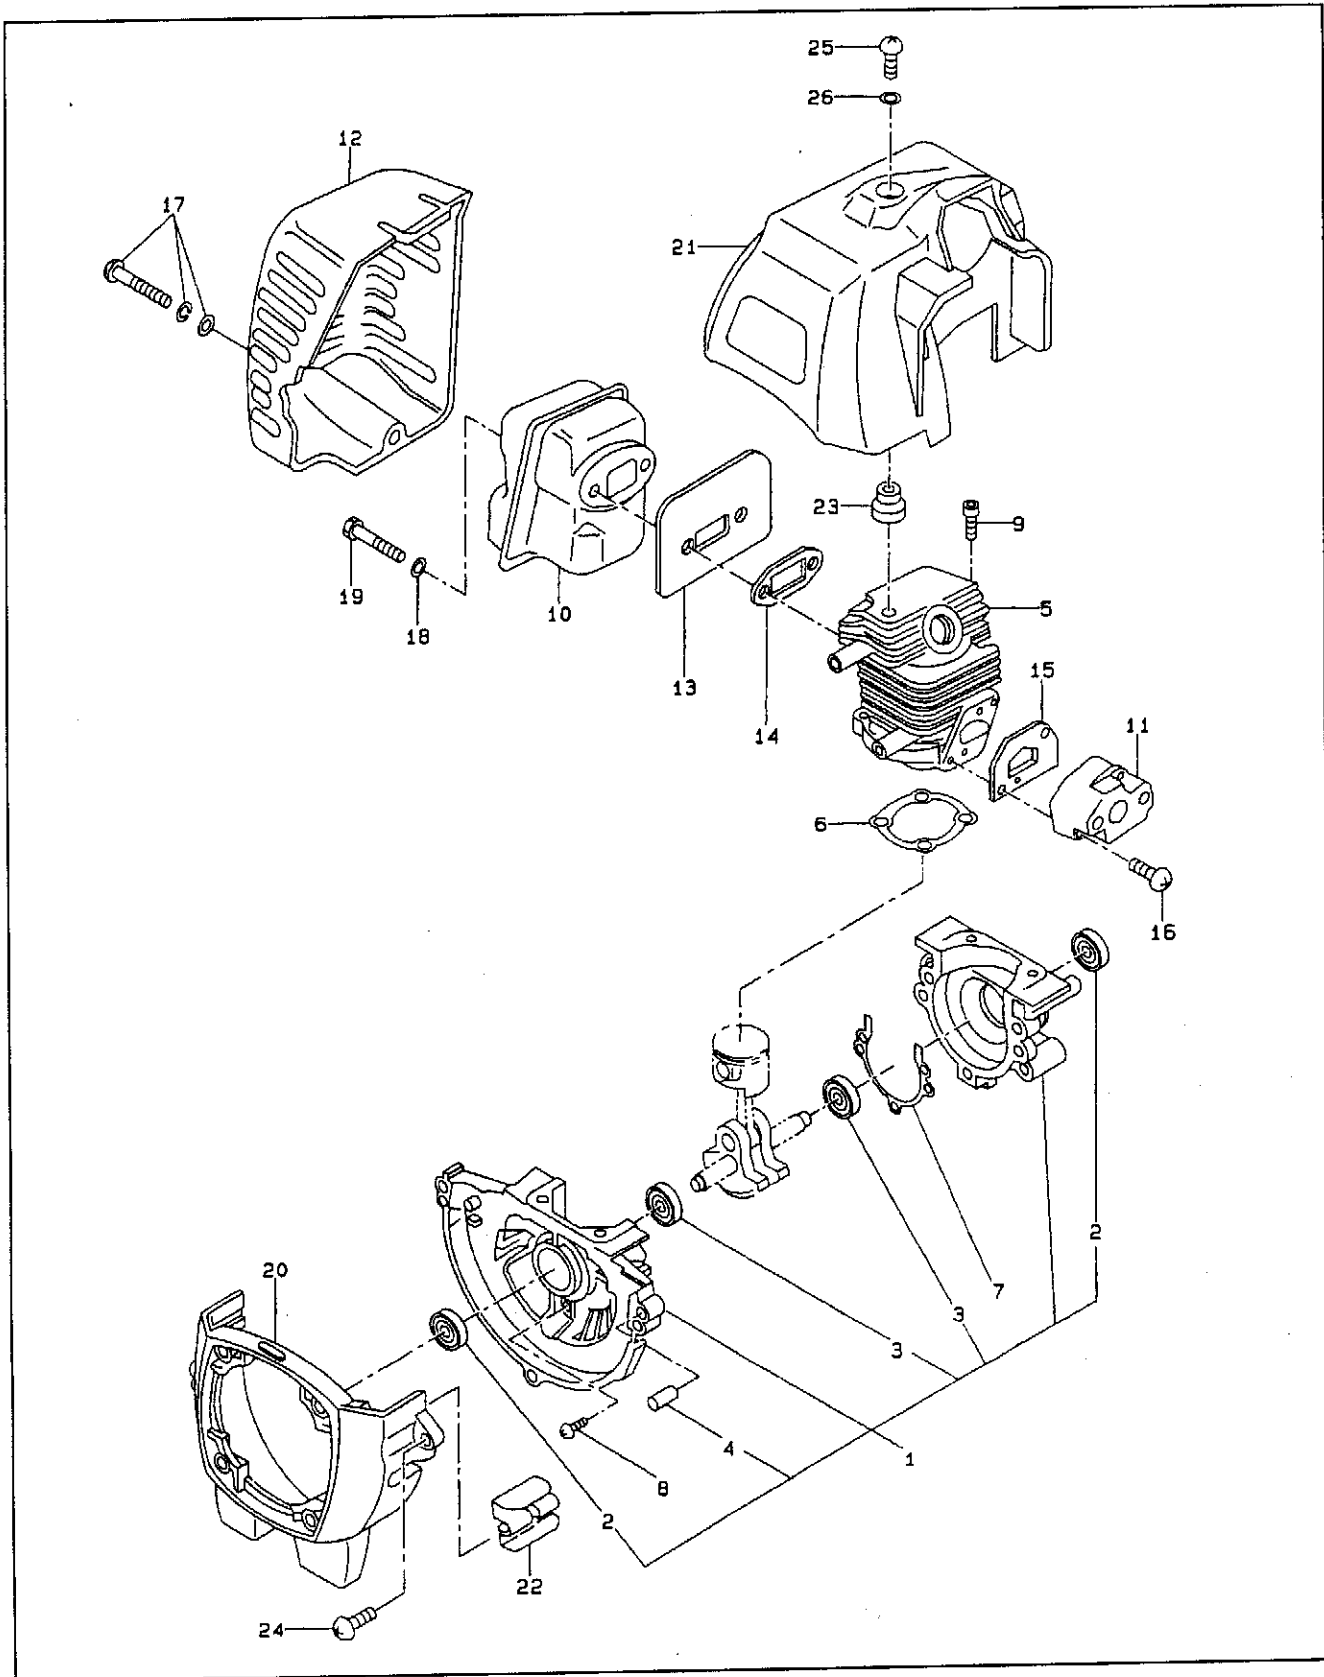


FIG. 2 CRANKCASE, CYLINDER and MUFFLER

[illegible]

FIG. 3 **CRANKSHAFT and PISTON**

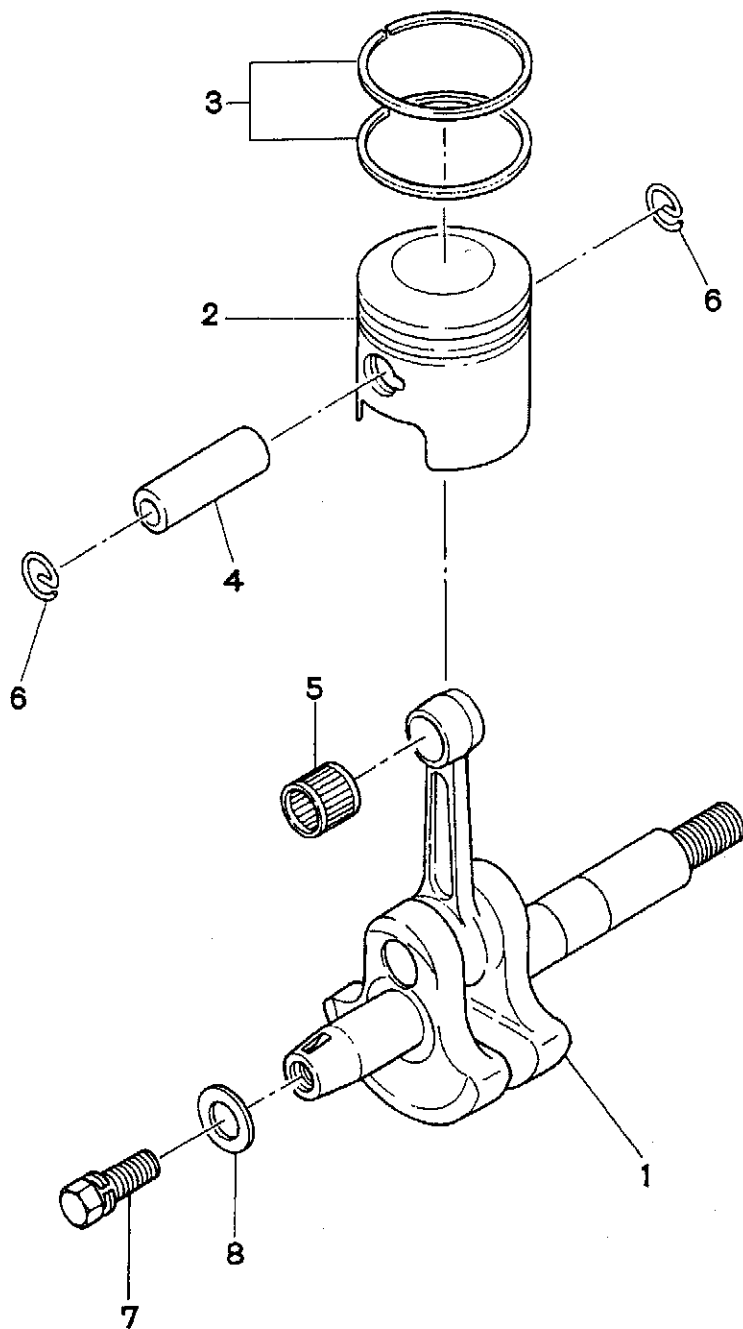


FIG. 3 CRANKSHAFT and PISTON

[illegible]

FIG. 4 RECOIL STARTER

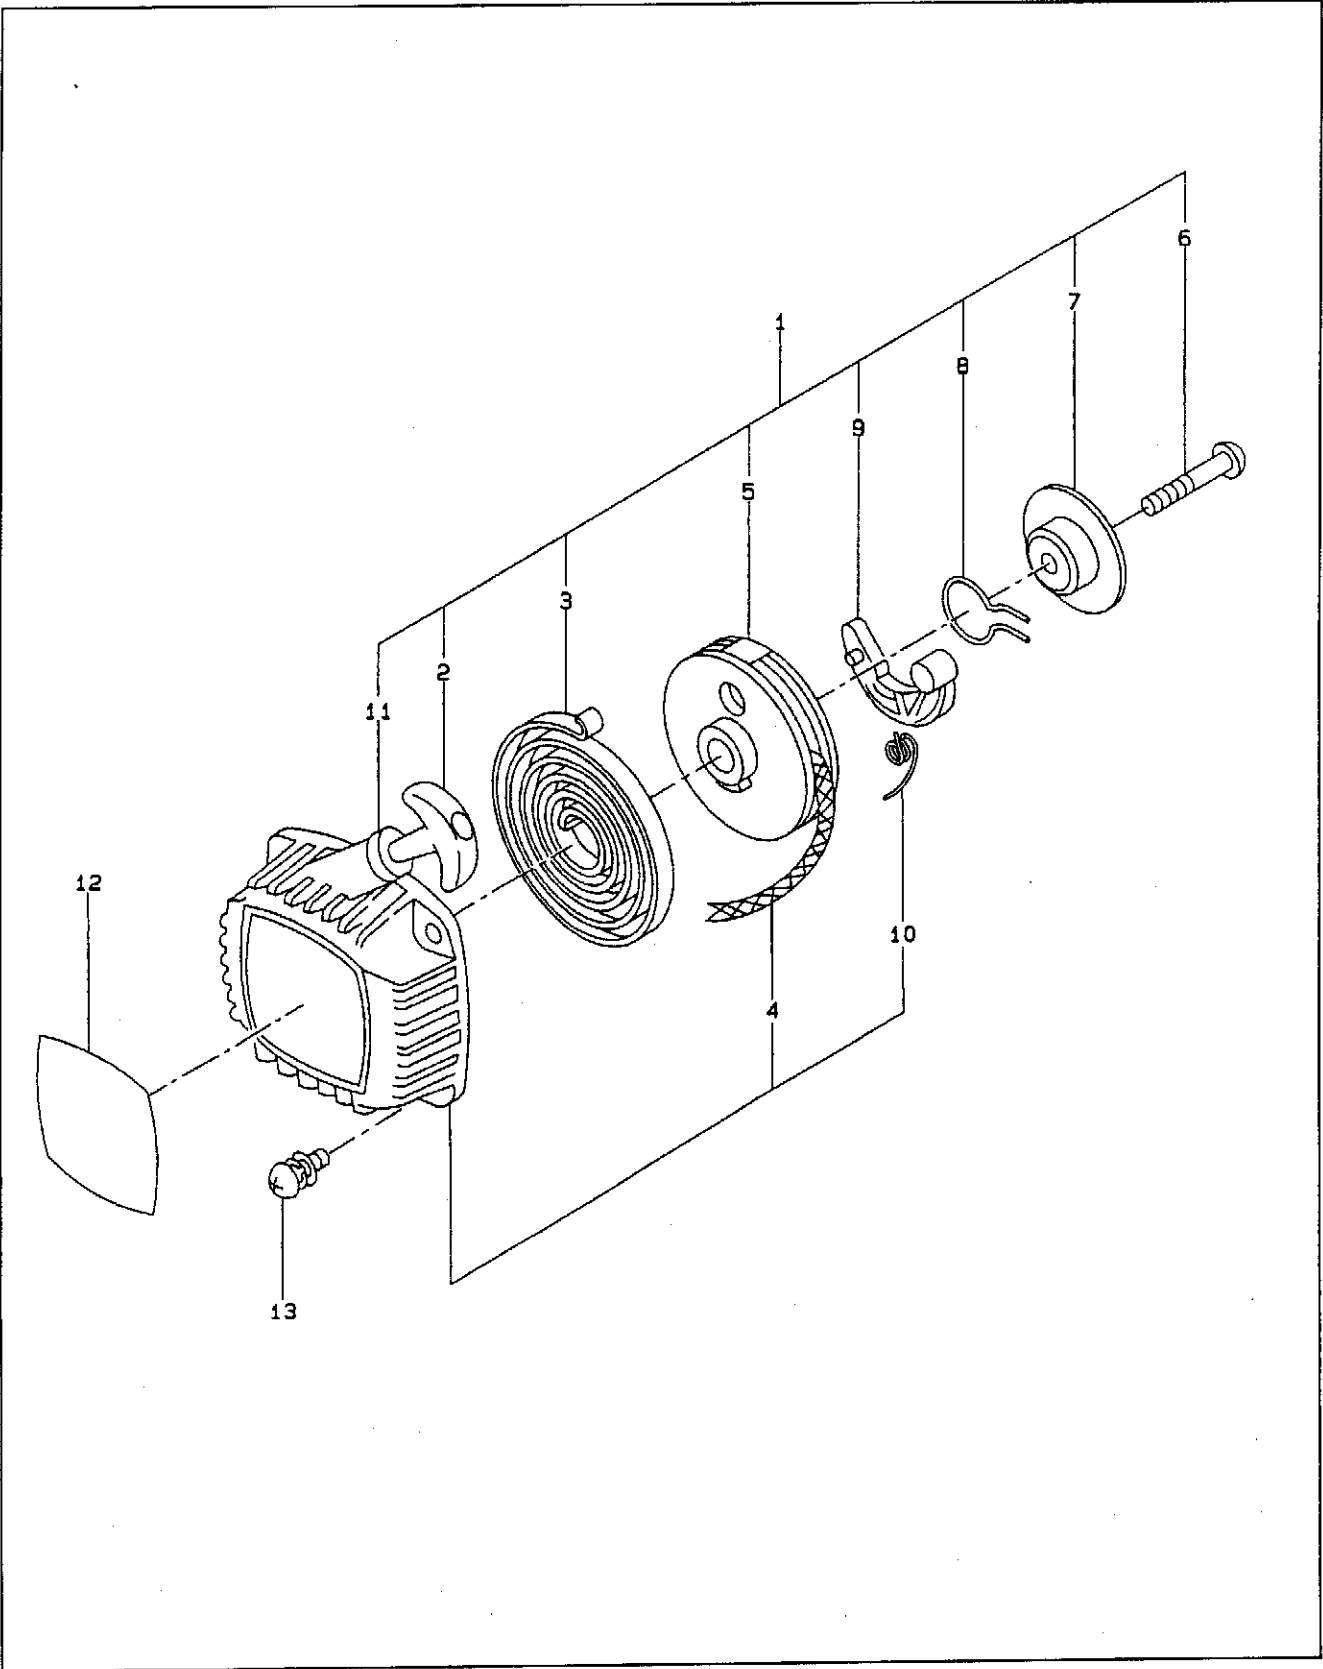


FIG. 4 RECOIL STARTER

[illegible]

FIG. 5 FUEL TANK

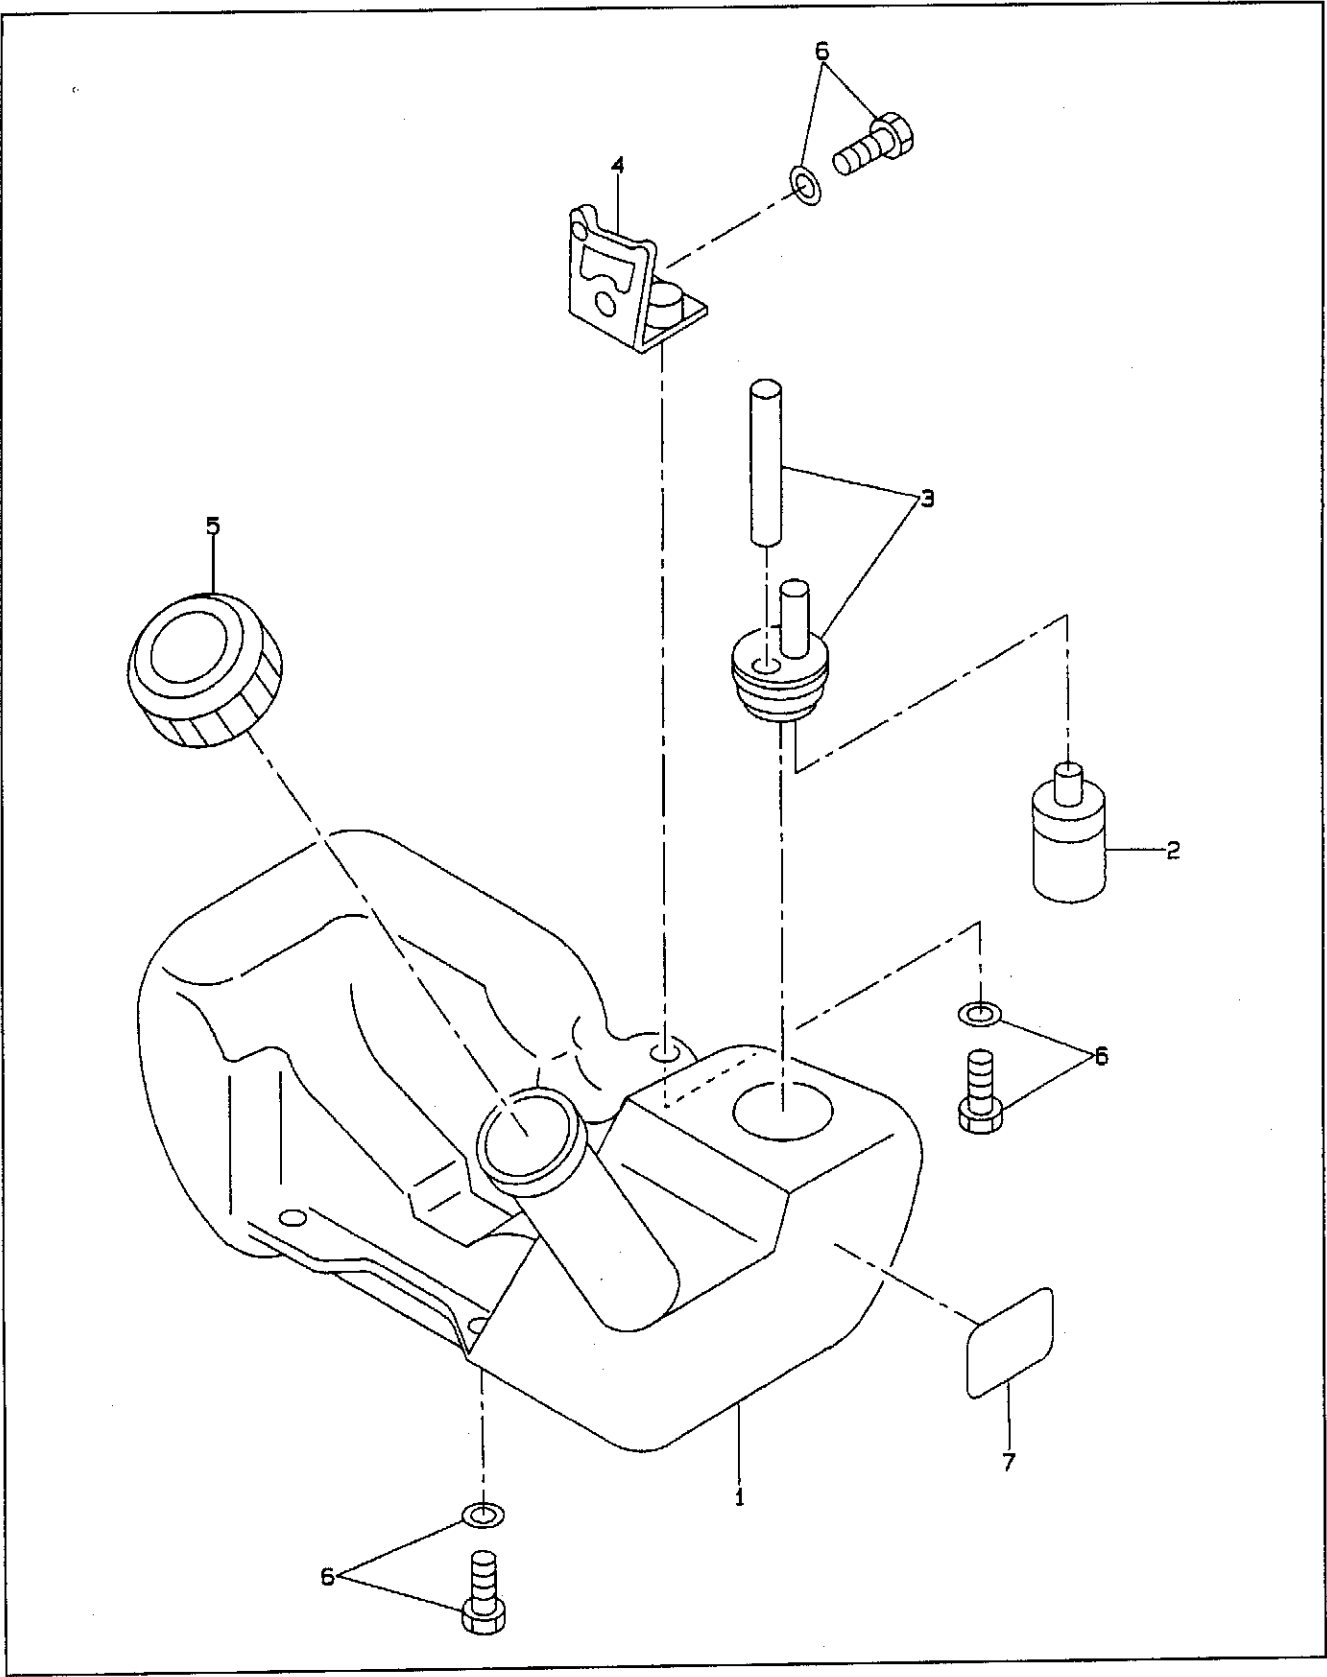


FIG. 5 FUEL TANK

[illegible]

FIG. 6 CARBURETOR and AIR CLEANER

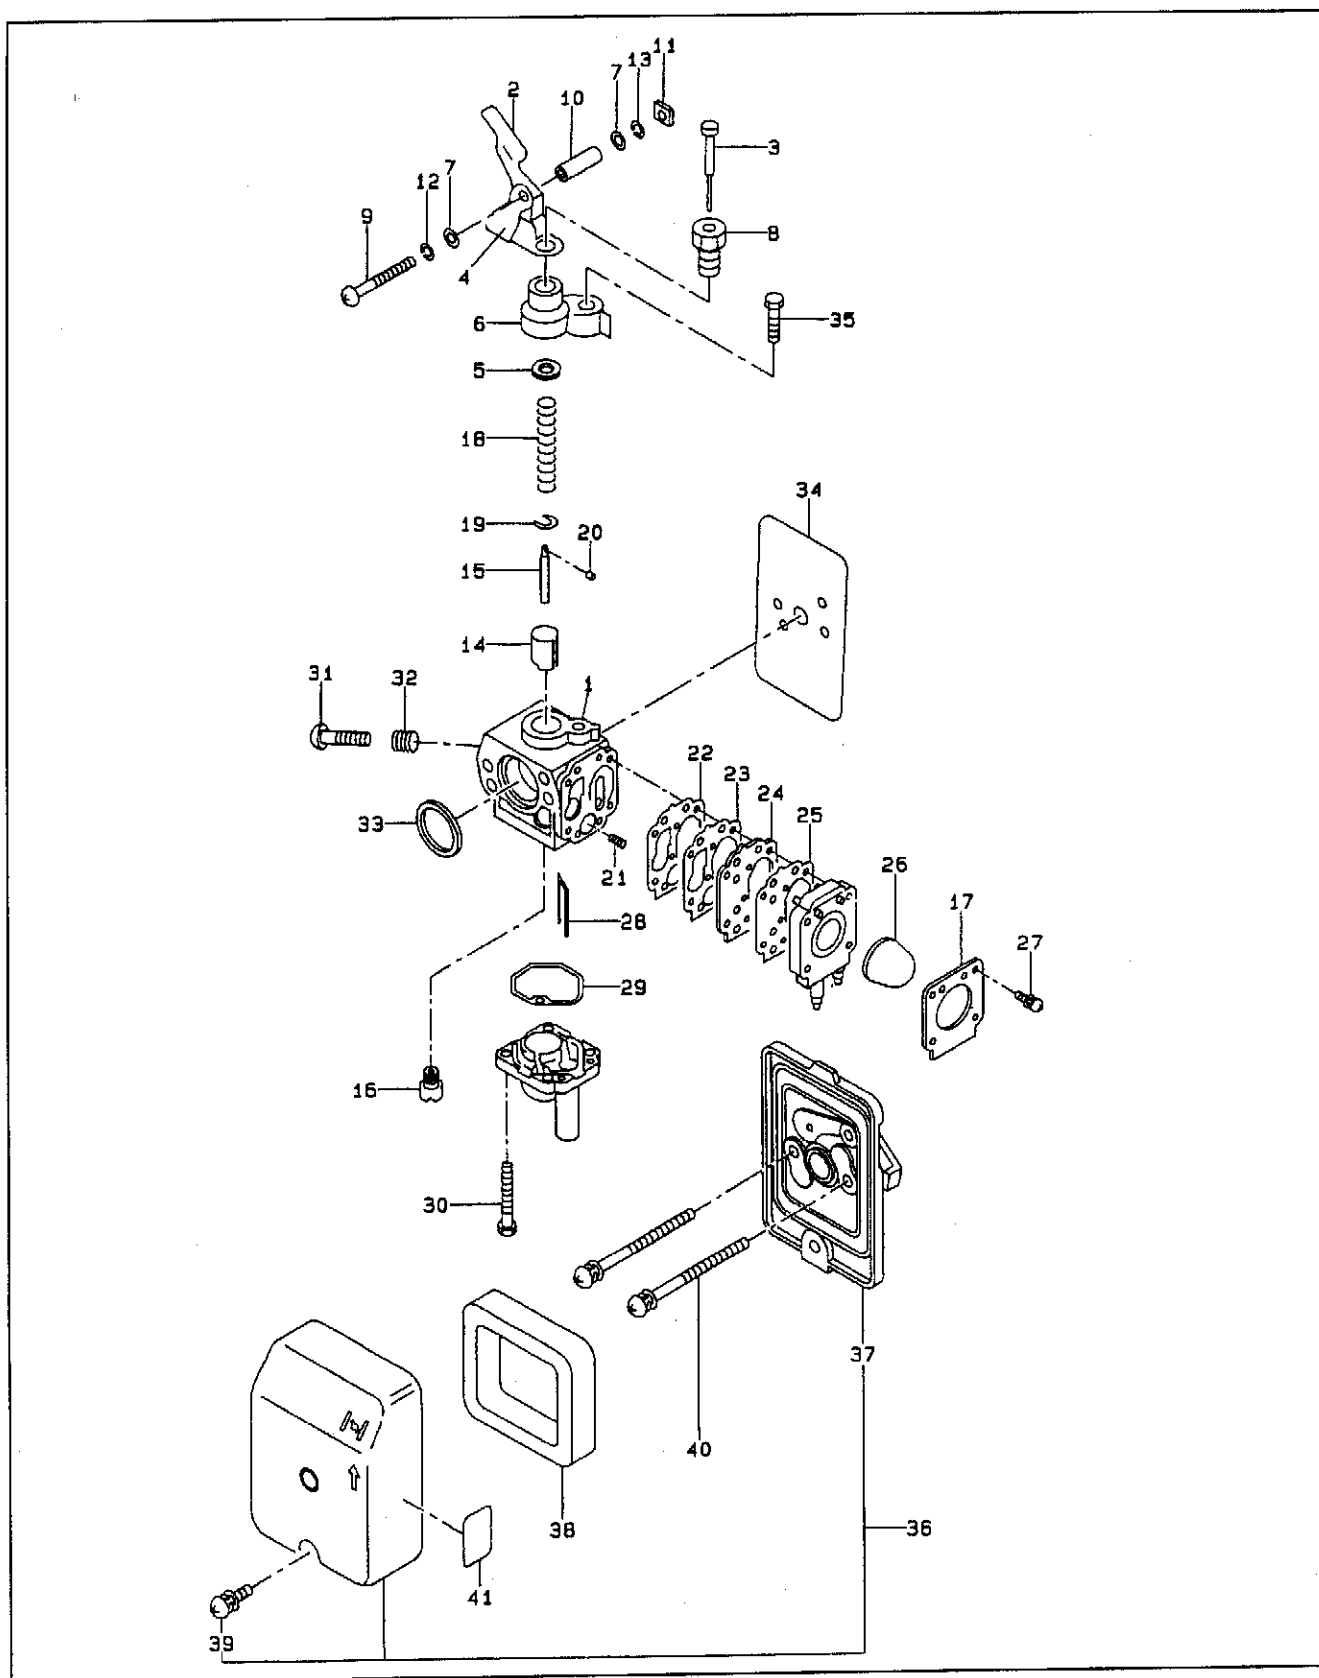


FIG. 6 CARBURETOR and AIR CLEANER

REF	PART NUMBER	DESCRIPTION	QTY	REMARKS
* 1	525-60150-00	CARBURETOR ASS'Y	1	Includes items 1 thru 33
* 2	525-60150-30	THROTTLE LEVER ASS'Y	1	Includes items 3 thru 13
2	510-60331-10	THROTTLE LEVER	1	
3	525-60150-40	CONTROL CABLE	1	
4	523-60030-20	HOLDER MOUTING ASS'Y	1	
5	524-60100-30	CAP PACKING	1	
6	525-60150-60	CAP	1	
7	510-60331-50	PACKING	2	
8	525-60150-50	BOLT	1	
9	510-60332-20	SCREW	1	
10	510-60332-10	SPACER	1	
11	510-60331-40	NUT	1	
12	510-60331-30	SPRING WASHER	1	
13	510-60331-60	SPRING WASHER	1	
14	524-60100-50	THROTTLE VALVE	1	
15	525-60150-20	JET NEEDLE	1	
16	523-60140-50	MAIN JET	1	
17	523-60330-50	PUMP PLATE	1	
18	510-60330-40	THROTTLE SPRING	1	
19	510-60480-40	SPRING RECEIVE	1	
20	510-60480-50	JET NEEDLE CLIP	1	
21	542-60032-10	CHECK VALVE SPRING	1	
22	523-60314-40	PUMP PACKING	1	
23	524-60102-40	PUMP DIAPHRAGM	1	
24	524-60053-12	PUMP PLATE	1	
25	524-60052-63	PACKING	1	
26	523-60312-30	PRIMER PUMP	1	
27	523-60312-40	SCREW (M3 x 14)	4	
28	524-60101-40	DRAIN WIRE	1	
29	524-60101-60	CHAMBER PACKING	1	
30	510-60412-20	SCREW (M3 x 10)	4	
31	524-60101-20	SLOW STOP SCREW	1	
32	510-60482-40	ADJUST SPRING	1	
33	523-60310-50	FLANGE PACKING	1	
34	525-35009-00	GASKET CARBURETOR	1	
35	524-60100-40	SCREW	1	
* 36	525-30120-00	AIR CLEANER ASS'Y	1	Includes items 37 thru 39
37	525-30120-30	CLEANER BODY ASSY	1	
38	525-30120-20	ELEMENT	1	
39	525-30120-10	SCREW (M5 x 15)	1	
40	004-33056-00	SCREW and WASHER ASS'Y (M5 x 60)	2	
41	525-95017-00	LABEL, operation	1	

FIG. 7 MAGNETO

