

PARTS MANUAL

MODEL
EX27
Engine

EX270D50023

11/16



SUBARU

Industrial Power Products

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047 - Phone 847-540-7300 - Fax 847-438-5012


e-mail: sales@subarupower.com - www.subarupower.com

© 2015 Subaru Industrial Power Products

Group Index

Group Name	Page
100 Crankcase.....	4
200 Crankshaft.....	8
300 Intake & Exhaust.....	10
315 Intake & Exhaust.....	14
400 Governor.....	16
500 Cooling & Starting.....	18
520 Cooling & Starting.....	20
600 Fuel & Lubricant.....	22
640 Carburetor.....	24
700 Electric Device.....	28
770 Electric Device.....	30
900 Accessory.....	32
 Part Number Index.....	 34
Part Description Index.....	35

100 Crankcase

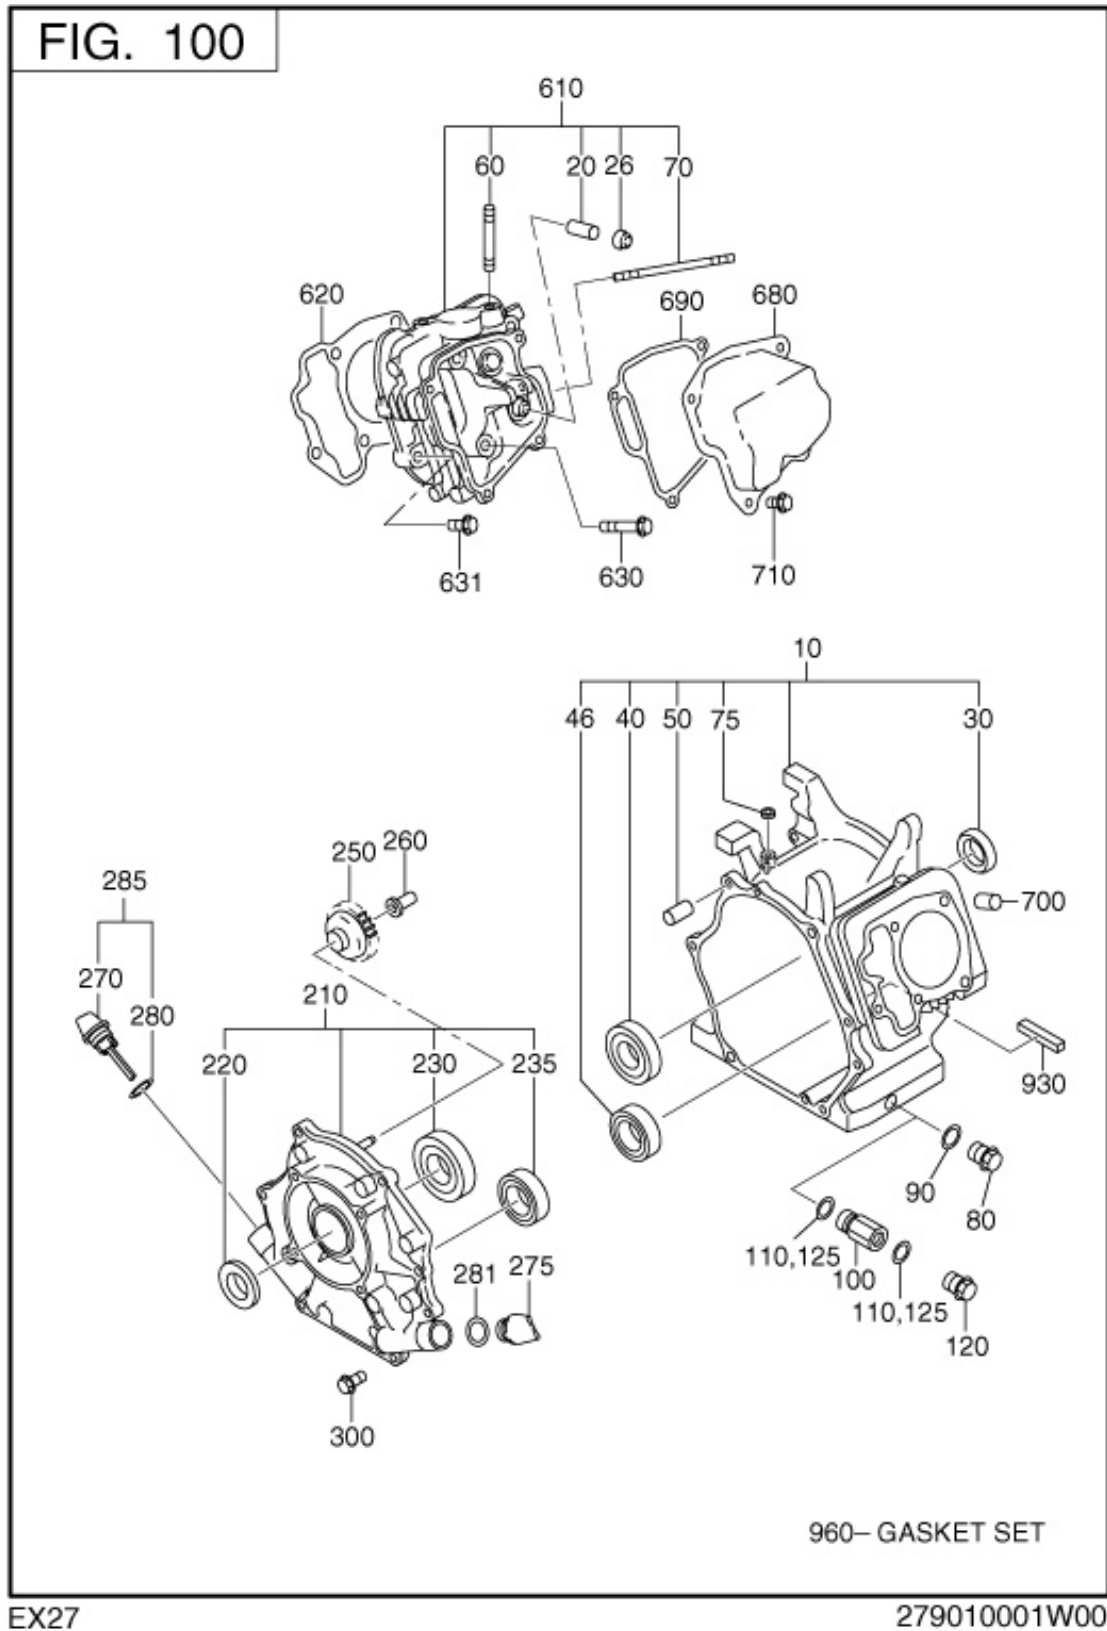

100 Crankcase


Ref	Part Number.	Description	Qty	Remark
10	279-10102-91	CRANKCASE CP	1	Start Code: 6951. Start Date: 1/11/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: W/OIL SENSOR.
10	279-10102-81	CRANKCASE CP	1	End Code: 6950. Start Date: 1/1/2006 0:00:00. Start Date: 1/10/2006 0:00:00. Remarks: W/OIL SENSOR. Interchangeable with 279-10102-91.
20	237-14202-03	VALVE GUIDE	2	Start Date: 12/31/9999 0:00:00. Remarks: 5.5DX9.5DX27L.
26	277-16010-01	STEM SEAL	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 5.5DX9.5DX15DX7.8B.
30	044-03001-60	OIL SEAL	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 30DX45DX7B.
40	060-03003-41	BALL BEARING	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 30DX62DX16B.
50	277-15011-03	PIPE KNOCK	2	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 10.3DX8.5DX14L.
60	010-50802-50	STUD	2	M8X1.25X25
70	010-50604-10	STUD	2	M6X1X107
75	044-00600-20	OIL SEAL	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 6DX10DX2.5B.
80	040-11400-30	PLUG	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: M14X1.5X20DX12L.
90	021-11400-20	GASKET	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 14.1DX19DX2.3T.
210	279-11002-11	MAIN BEARING COVER C	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: FLANGE 4-5/16-24UNF.
220	044-03001-60	OIL SEAL	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 30DX45DX7B.
230	060-03003-70	BALL BEARING	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 30DX62DX16B.
250	277-45004-J1	GOVERNOR GEAR CP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 53DX29.1T N=33.
260	277-41901-03	GOVERNOR SLEEVE	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 6DX7.6DX16DX26L.

100 Crankcase

Ref	Part Number.	Description	Qty	Remark
270	279-63601-13	OIL GAUGE	2	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: M22X1.5 L=67.5+18. Interchangeable with 279-63601-23.
280	021-32000-50	GASKET	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 20DX27DX1.5T RUBBER.
300	001-04083-50	FLANGE BOLT	7	M8X1.25X35
610	279-13001-21	CYLINDER HEAD CP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
620	279-15001-33	GASKET (HEAD)	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: T=0.2.
630	011-00802-40	FLANGE BOLT	4	M8X1.25X68
631	011-00803-10	FLANGE BOLT	1	M8X1.25X33
680	277-15503-01	ROCKER COVER CP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
690	277-16001-13	GASKET	1	
700	277-15011-03	PIPE KNOCK	2	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 10.3DX8.5DX14L.
710	011-00600-20	FLANGE BOLT	4	M6X1.0X12
960	279-99001-27	GASKET SET	1	Start Date: 12/31/9999 0:00:00.

This Page Intentionally Left Blank


200 Crankshaft

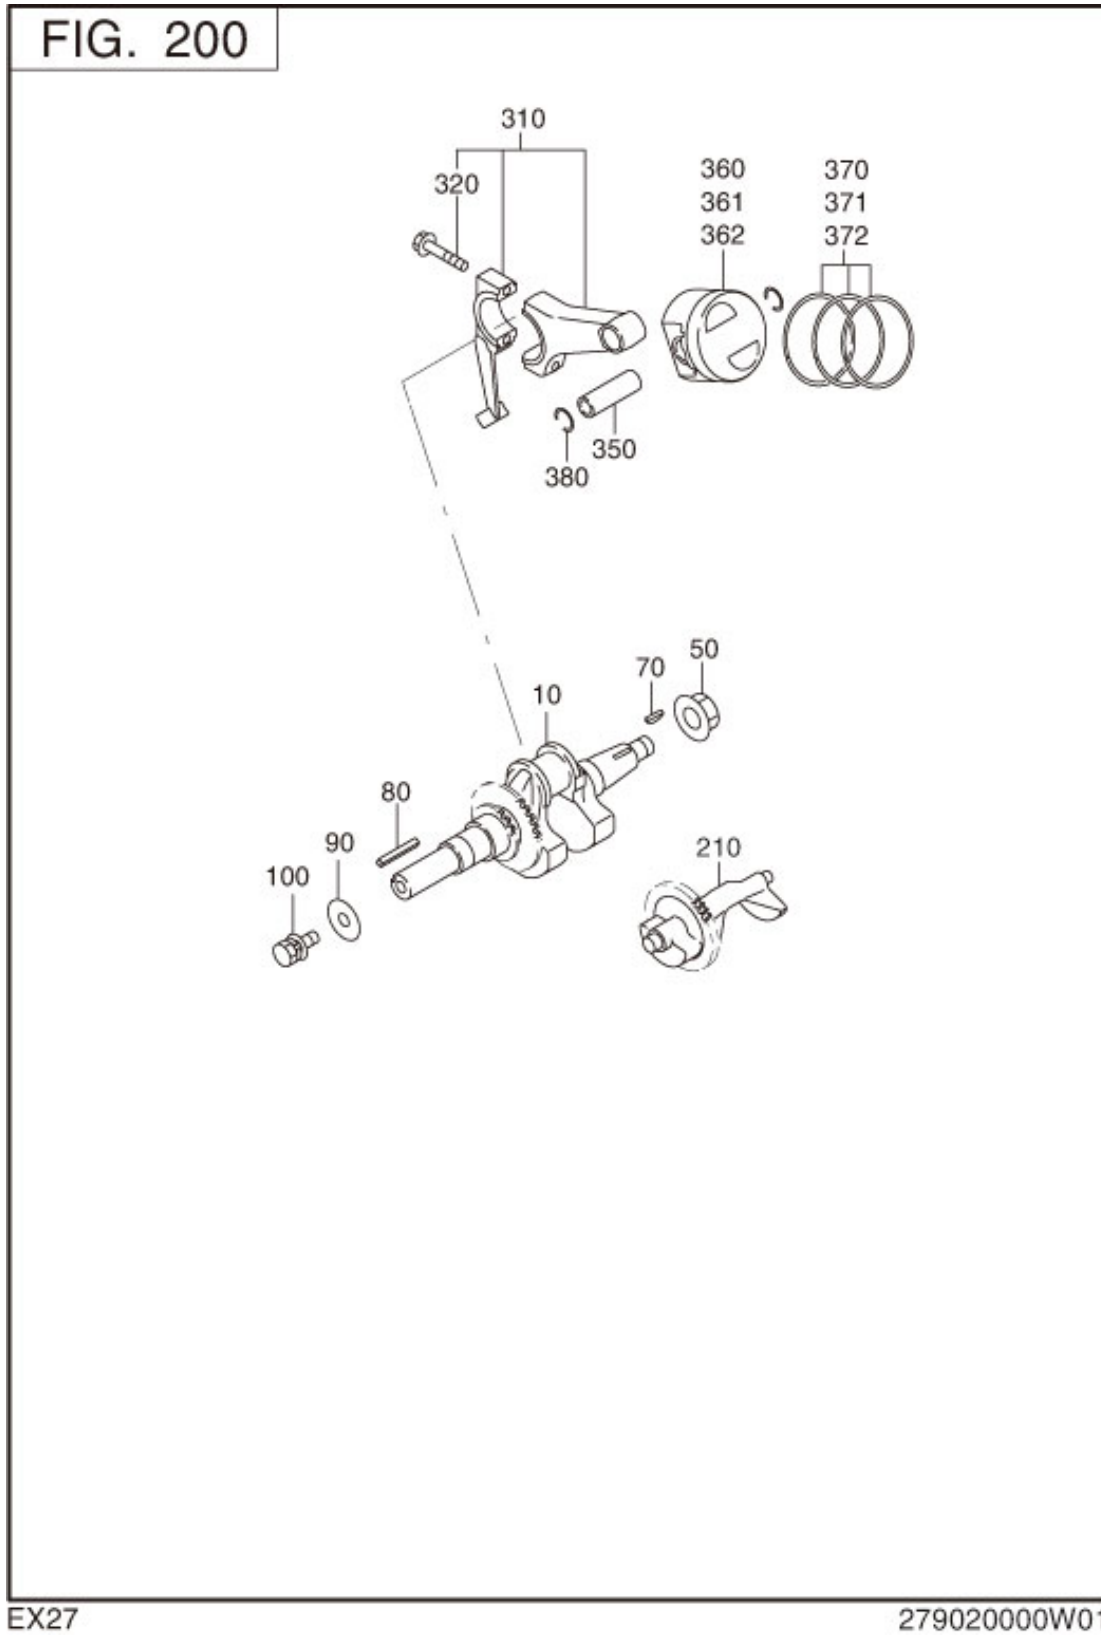

200 Crankshaft

Ref	Part Number.	Description	Qty	Remark
10	279-20901-61	CRANKSHAFT CP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: L=324 DU 25.4DX72.2L.
50	018-01800-10	FLANGE NUT (M18)	1	
70	032-30300-10	WOODRUFF KEY	1	M3X6X16
80	207-26001-03	KEY	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 6.3BX6.3HX40L.
310	279-22501-20	CONNECTING ROD AY	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 104.5CDX26B 34.5D-18. Interchangeable with 279-22501-30.
320	279-23001-03	FLANGE BOLT	2	M7X1.0X40
350	279-23301-13	PISTON PIN (18X13X53)	1	
360	279-23401-H3	PISTON	1	STANDARD
361	279-23403-H3	PISTON	1	0.25 OVERSIZED
362	279-23404-H3	PISTON	1	0.50 OVERSIZED
370	279-23511-17	PISTON RING SET	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: STD (75D) OIL EXPAND.
371	279-23512-17	PISTON RING SET	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 0.25 O.S. OIL EXPAND.
372	279-23513-17	PISTON RING SET	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 0.50 O.S. OIL EXPAND.
380	056-51800-10	CLIP	2	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 18.9DX1.6D.

300 Intake & Exhaust

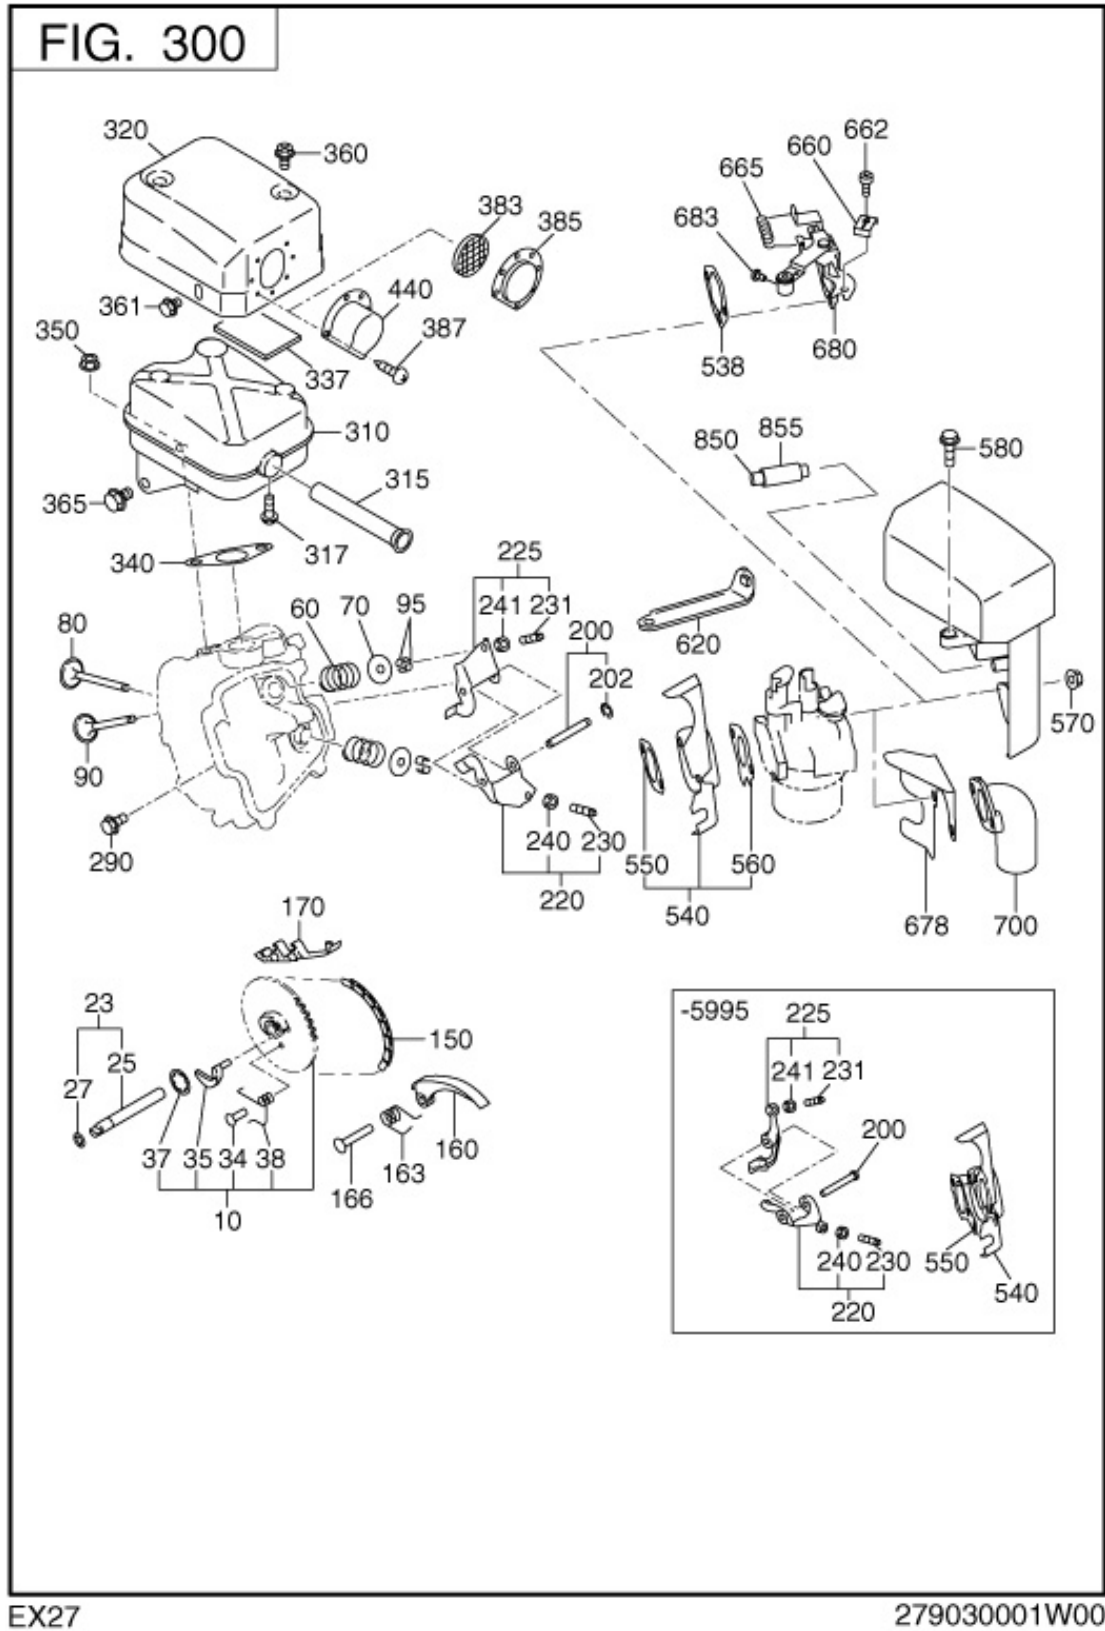

300 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
10	279-31601-01	CAM SHAFT CP	1	
25	277-35101-03	CAMSHAFT PIN	1	
27	024-00600-10	O-RING	1	
34	277-38601-03	SPRING PIN	1	
35	279-36401-03	RELEASE LEVER	1	
37	277-36501-03	CLIP	1	
38	277-38701-03	RETURN SPRING	1	
60	279-33601-03	VALVE SPRING	2	
70	269-33701-03	SPRING RETAINER	2	
80	279-33401-H3	INTAKE VALVE	1	
90	279-33501-H3	EXHAUST VALVE	1	
95	132-10KA0-31	VALVE COLLET	4	
150	279-35601-11	TIMING CHAIN CP (100 LINK)	1	
160	277-36911-03	TENTIONER	1	
163	277-37101-03	TENTIONER SPRING	1	
166	277-36902-03	TENTIONER PIN	1	
170	277-36913-13	CHAIN GUIDE	1	
200	277-35002-01	ROCKER PIN CP	1	
202	003-13050-00	CLIP	1	
220	277-36201-00	INTAKE ROCKER ARM ASSY	1	
225	277-36202-00	EXHAUST ROCKER ARM ASSY	1	
230	014-90500-20	ADJUST SCREW	1	M5X0.5X23
231	014-90500-20	ADJUST SCREW	1	M5X0.5X23
240	017-00500-30	NUT	1	M5X0.5
241	017-00500-30	NUT	1	M5X0.5
290	011-00600-20	FLANGE BOLT	1	M6X1.0X12
310	279-30111-K1	MUFFLER CP ¹	1	
310	279-30111-L1	MUFFLER CP ²	1	
315	279-37601-01	SPARK ARRESTER CP	1	
317	015-00400-60	TAPPING SCREW	1	M4X6
320	279-34201-11	MUFFLER COVER CP ³	1	
320	279-34201-21	MUFFLER COVER CP ⁴	1	
340	277-35201-13	EXHAUST GASKET	1	

Footnotes

- 1:** End Code: 6971
2: Start Code: 6972
3: End Code: 7030
4: Start Code: 7031

300 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
350	980-20082-80	FLANGE NUT	2	M8
360	015-20600-90	TAPPING BOLT	2	M6X10
361	011-00600-10	FLANGE BOLT	1	M6X1.10X8
365	011-00803-20	FLANGE BOLT	1	M8X12
387	015-00400-60	TAPPING SCREW	2	M4X6
440	277-37001-H1	DEFLECTOR CP	1	
540	279-32902-J1	INSULATOR CP	1	
550	279-35903-J3	INTAKE GASKET	1	
560	279-35902-J3	INTAKE GASKET	1	
570	002-38060-00	FLANGE NUT	2	M6X1.0
580	001-04062-00	FLANGE BOLT	1	M6X1.0X20

Footnotes


1: End Code: 6971
2: Start Code: 6972
3: End Code: 7030
4: Start Code: 7031

This Page Intentionally Left Blank


315 Intake & Exhaust

FIG. 315


URETHANE FOAM

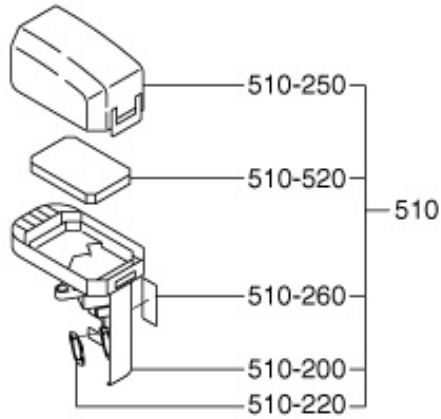

DUAL ELEMENT

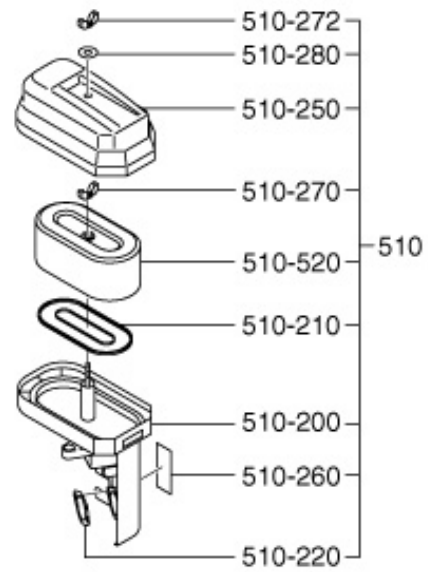

PRE CLEANER

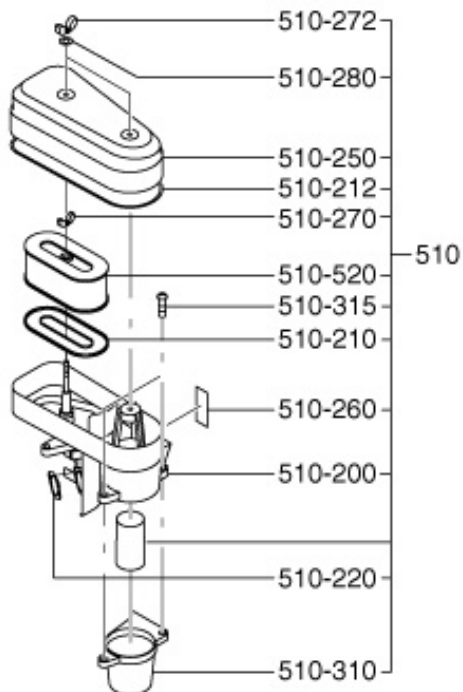


EX27

279031501W00

315 Intake & Exhaust

Ref	Part Number.	Description	Qty	Remark
510	279-32730-08	LABEL	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
510	279-32740-08	NUT	2	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
510	279-32607-07	DUAL ELEMENT SET	1	
510	279-32643-18	COVER	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
510	279-32650-08	GASKET	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Interchangeable with 279-32650-18.
510	279-32615-30	AIR CLEANER AY	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: DUAL.
510	279-32634-28	ELBOW COMP,AIR/C	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
510	279-32720-08	SEAL	1	


400 Governor

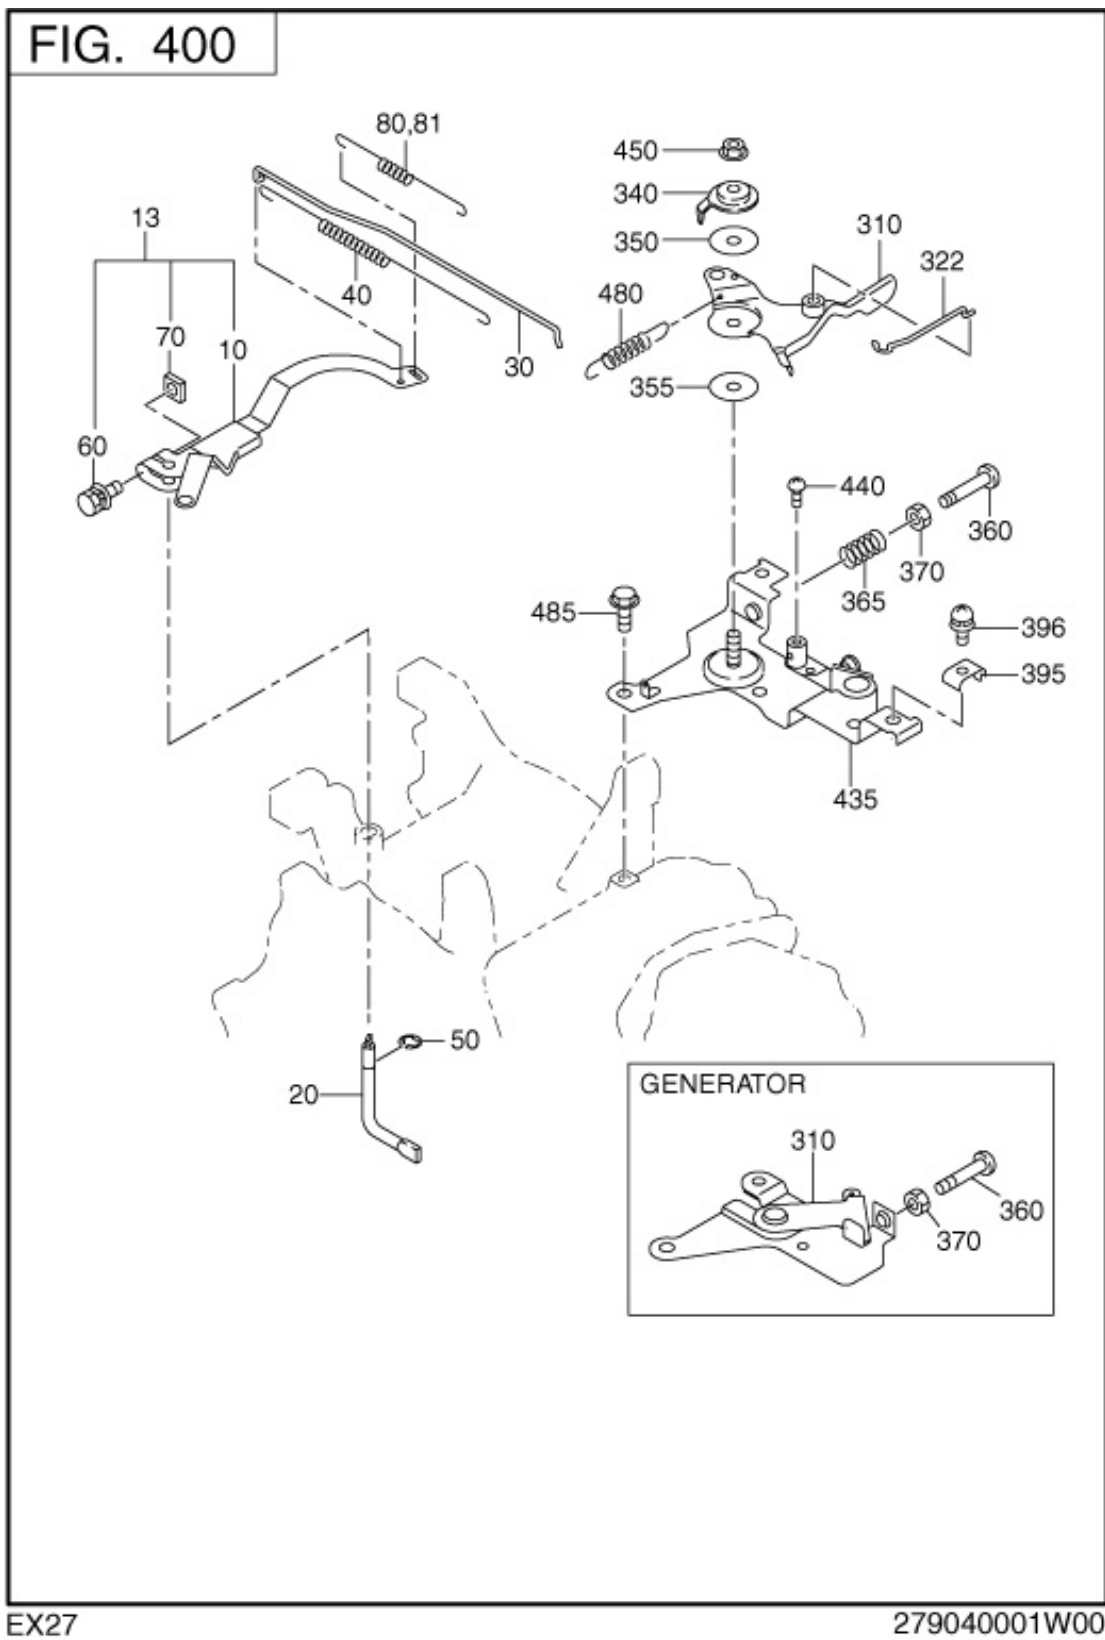

400 Governor

Ref	Part Number.	Description	Qty	Remark
10	279-42301-43	GOVERNOR LEVER	1	End Code: 6997. Start Date: 1/1/2006 0:00:00. Start Date: 2/26/2006 0:00:00.
10	279-42301-53	GOVERNOR LEVER	1	Start Code: 6998. Start Date: 2/27/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
20	277-42201-33	GOVERNOR SHAFT	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
30	279-42701-11	GOVERNOR ROD CP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
40	277-42801-23	ROD SPRING	1	
50	003-13050-00	CLIP	1	
60	013-00602-40	BOLT & WASHER ASSY	1	M6X1.0X25
70	018-60600-20	SQUARE NUT	1	M6X1.0X4.9
80	279-42502-63	GOVERNOR SPRING	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 7.5DX0.7DX115L N=19.
310	277-43303-01	SPEED CONTROL LEVER CP	1	
322	277-43701-01	LINK ROD CP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
340	277-43502-03	STOP PLATE	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
350	277-44501-03	WASHER	1	
355	021-70600-70	FRICTION WASHER	1	NYLON
360	004-31062-50	SCREW	1	M6X1.0X25
365	237-45004-23	ADJUST SPRING	1	
395	277-43902-03	CLAMP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
396	013-10500-30	SCREW AND WASHER ASSY	1	M5X0.8X20
435	277-46002-01	SPEED CONTROL BRACKET CP	1	
440	004-31040-80	SCREW(M4X8)	1	
450	002-35060-00	LOCKNUT	1	M6X1.0
480	267-45101-03	RETURN SPRING	1	End Code: 7030. Start Date: 1/1/2006 0:00:00. Start Date: 3/31/2006 0:00:00. Remarks: 7DX0.7DX28L N=15.
480	277-45103-03	RETURN SPRING	1	Start Code: 7031. Start Date: 4/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 7DX0.7DX28L N=15.
485	011-00600-20	FLANGE BOLT	2	M6X1.0X12

500 Cooling & Starting

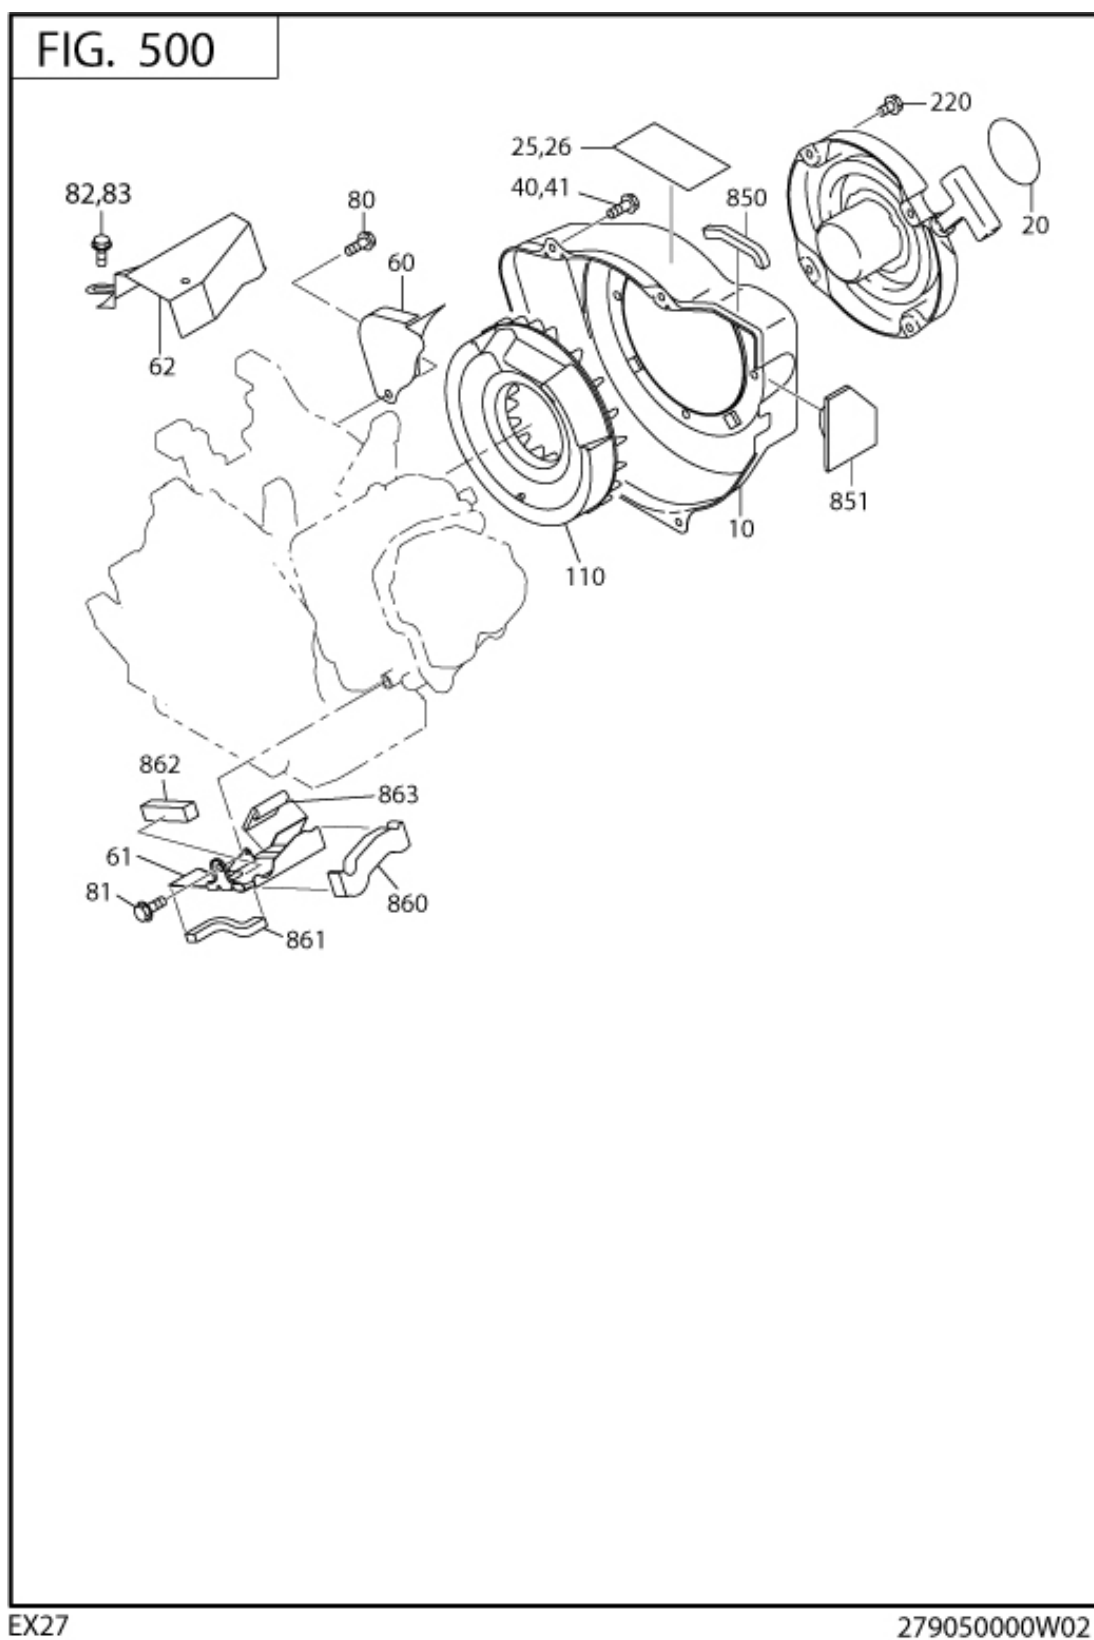


500 Cooling & Starting


Ref	Part Number.	Description	Qty	Remark
10	279-51202-01	BLOWER HOUSING CP (BLACK)	1	
20	073-20054-70	LABEL(TRADE MARK)	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 60D.
40	011-00600-30	FLANGE BOLT	4	M6X1.0X14
60	279-52711-11	CASE BAFFLE 1 CP	1	
61	279-52702-13	HEAD BAFFLE 2	1	
81	011-00600-20	FLANGE BOLT	1	M6X1.0X12
220	011-00600-10	FLANGE BOLT	4	M6X1.10X8

520 Cooling & Starting

FIG. 520

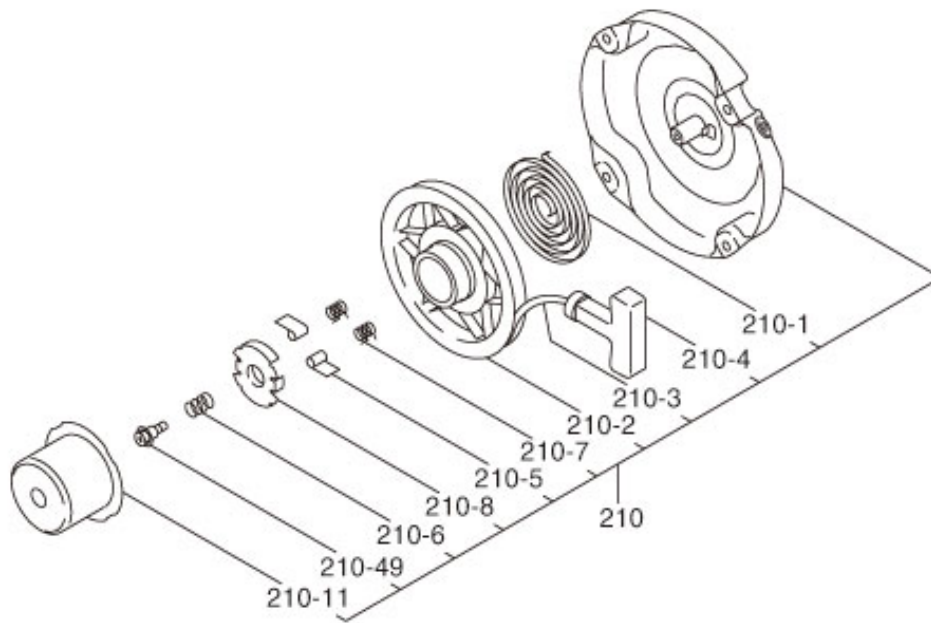

RESIN

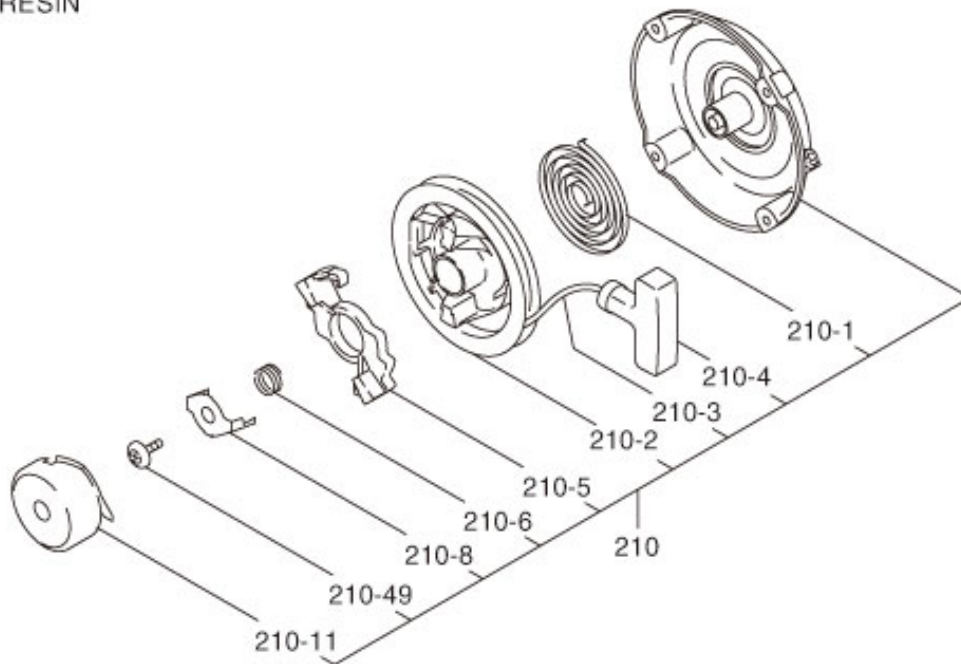

EX27


279052000W01

520 Cooling & Starting

Ref	Part Number.	Description	Qty	Remark
210	226-50752-08	RATCHET SPRING	2	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210	226-50741-08	FRICTION PLATE	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210	279-50145-08	STARTER PULLEY	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210	226-50753-18	CENTER SCREW	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210	279-50125-08	RACHET	2	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210	279-50202-00	RECOIL STARTER AY	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 170PD.
210	226-50716-08	SPIRAL SPRING	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210	226-50701-08	STARTER HANDLE	1	
210	279-50110-08	STARTER ROPE	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210	279-50120-08	REEL	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210	226-50731-08	FRICTION SPRING	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.

600 Fuel & Lubricant

FIG. 600

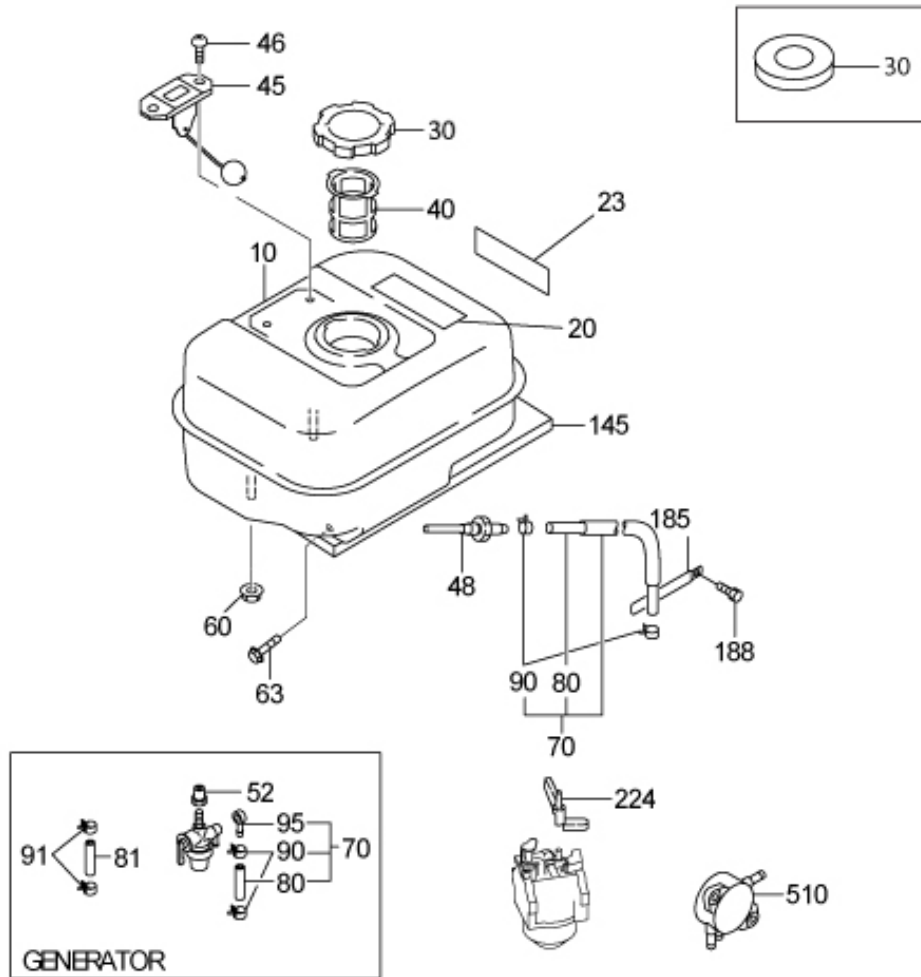

EX27


279060000W03

600 Fuel & Lubricant

Ref	Part Number.	Description	Qty	Remark
10	279-60102-11	FUEL TANK CP (BLACK)	1	6.1 LITRE
20	073-20051-81	LABEL(WARNING)	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 42X104 ENGLISH.
23	279-95111-03	LABEL(MODEL)	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 32X125.
30	043-04400-50	FUEL TANK CAP CP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: 43DX68DX14H BLACK.
40	X64-13600-10	FUEL FILTER	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
48	050-51200-20	UNION	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: M12X4DX78L W/FILTER.
60	002-38080-00	FLANGE NUT	2	M8X1.25
63	011-00802-50	FLANGE BOLT (M8X25)	2	
70	279-62602-01	FUEL PIPE CP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
80	X85-10615-80	RUBBER PIPE	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
85	279-64502-H1	GLASS TUBE	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
90	056-11100-50	HOSE CLAMP	2	Start Code: 6972. Start Date: 2/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
90	X56-11100-20	HOSE CLAMP	2	End Code: 6971. Start Date: 1/1/2006 0:00:00. Start Date: 1/31/2006 0:00:00. Remarks: 10.5DX8BX0.7T.
224	277-43801-01	CHOKE LEVER CP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.

640 Carburetor

FIG. 640

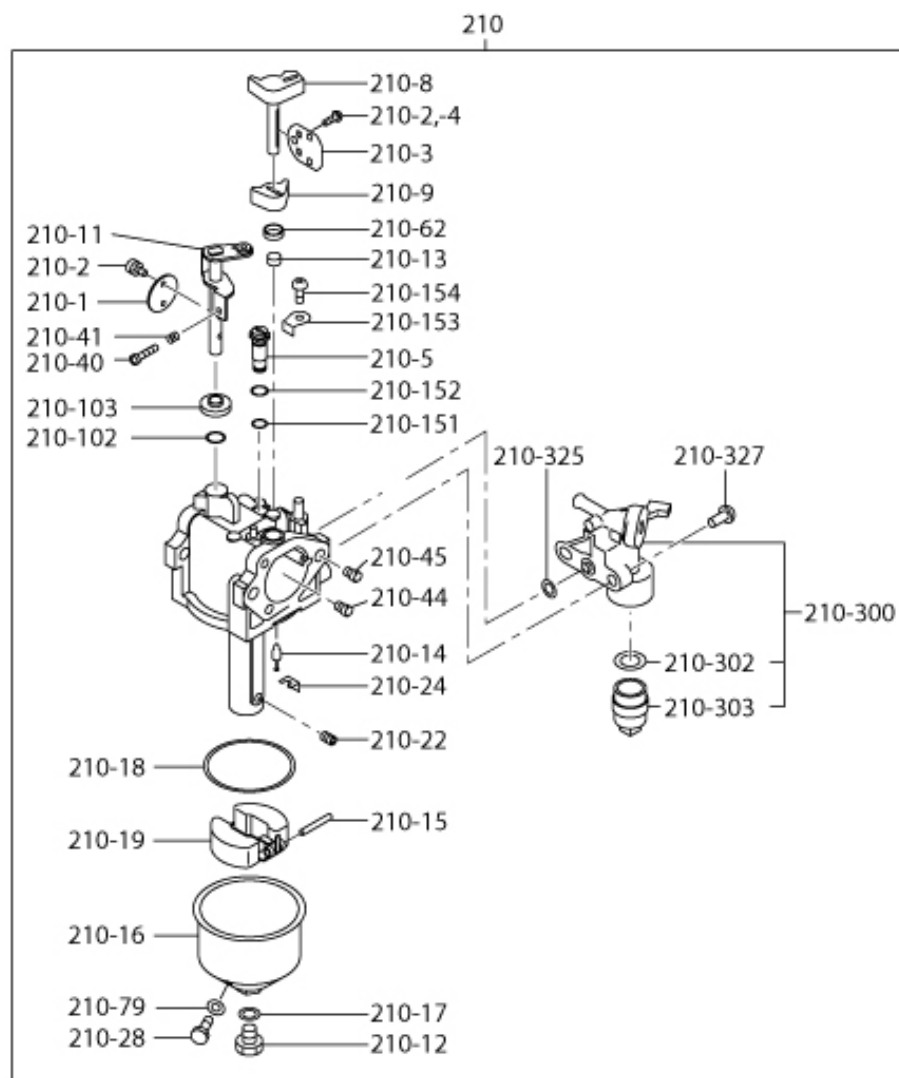

EX27

279064000W02

640 Carburetor

Ref	Part Number.	Description	Qty	Remark
210-302	277-62110-18	PACKING	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-300	279-62103-10	COCK BODY-A	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-152	279-62452-08	O-RING	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-28	285-62551-08	DRAIN SCREW	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-11	279-62530-08	SHAFT SUB ASSY(TH)	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-12	251-62453-08	SCREW	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-14	279-62500-08	VALVE ASSY NEEDLE	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-15	279-62515-08	PIN FLOAT LEVER	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-16	285-62550-08	FLOAT CHAMBER SUB AY	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-17	251-62350-08	GASKET	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-18	279-62540-08	GASKET CHAMBER	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-22	279-62401-08	JET MAIN	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: #96.
210-40	279-62353-18	SCREW ADJUSTING	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-41	279-62445-08	SPRING	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-79	285-62552-08	GASKET	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-102	279-62561-08	BUSH	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-103	279-62562-08	COLLAR	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-151	279-62451-08	O-RING	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-19	279-62505-08	FLOAT SUB ASSY	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-0	279-62302-40	CARBURETOR AY	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-1	279-62535-08	VALVE THROTTLE	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-2	251-62450-08	SCREW	2	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.


640 Carburetor

Ref	Part Number.	Description	Qty	Remark
210-3	279-62525-08	VALVE CHOKE	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-5	279-62420-08	JET SLOW	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: #40.
210-8	279-62520-08	SHAFT CHOKE	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-303	277-62100-18	CUP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-325	006-26100-61	O-RING	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
210-327	279-62585-08	SCREW	2	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.

This Page Intentionally Left Blank

700 Electric Device

FIG. 700

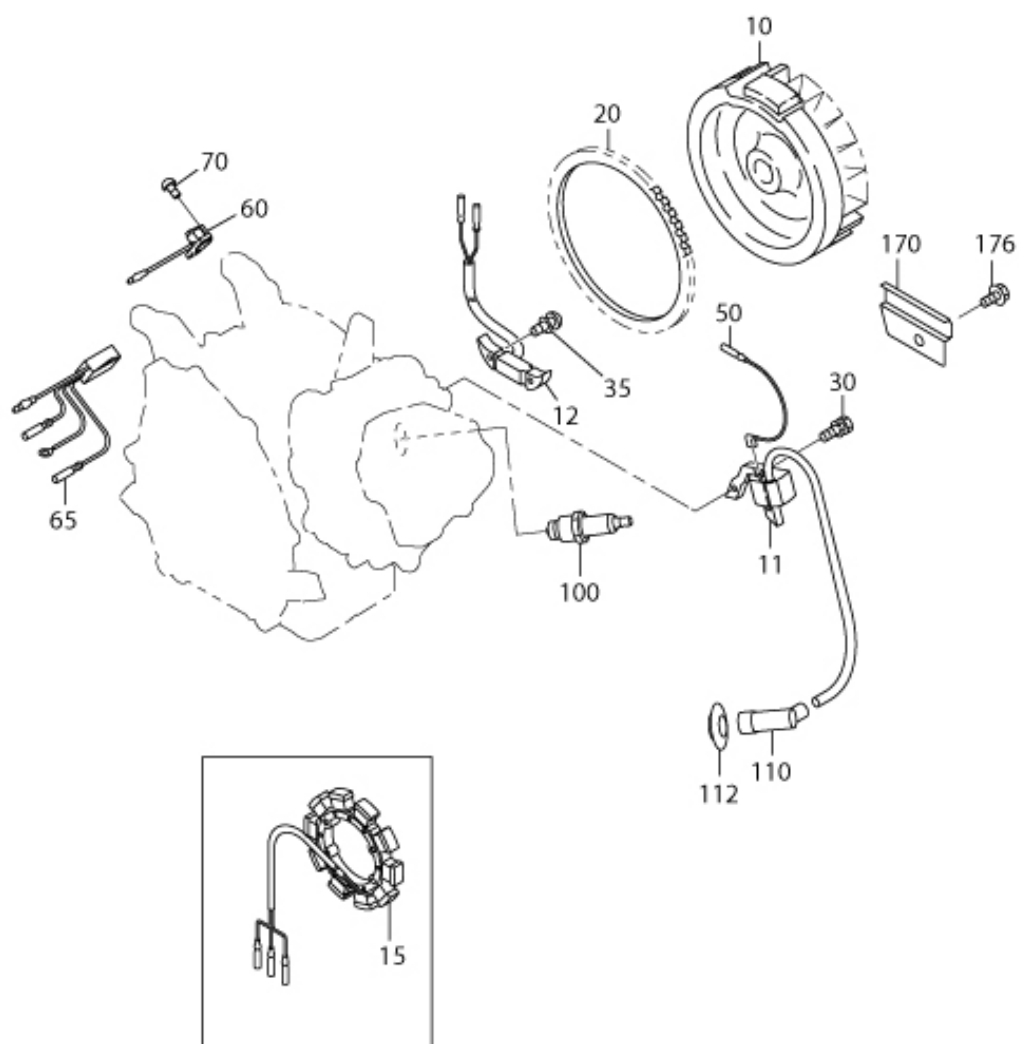

EX27


279070000W03

700 Electric Device

Ref	Part Number.	Description	Qty	Remark
10	279-79231-01	FLYWHEEL CP	1	Start Code: 7061. Start Date: 5/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
10	279-79230-11	FLYWHEEL CP	1	End Code: 7060. Start Date: 1/1/2006 0:00:00. Start Date: 4/30/2006 0:00:00. Remarks: MARK FA AP02.
11	279-79430-01	IGNITION COIL CP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: MARK AB.
30	001-14062-50	BOLT AND WASHER ASSY	2	M6X1.0X25
50	277-73102-H1	WIRE 2 CP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: L=360 BLACK.
60	X66-00004-20	SWITCH AY	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
70	015-00400-90	TAPPING SCREW	2	M4X12
100	065-01401-50	SPARK PLUG (NGK BR6HS)	1	
110	065-50002-70	SPARK PLUG CAP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.

770 Electric Device

FIG. 770

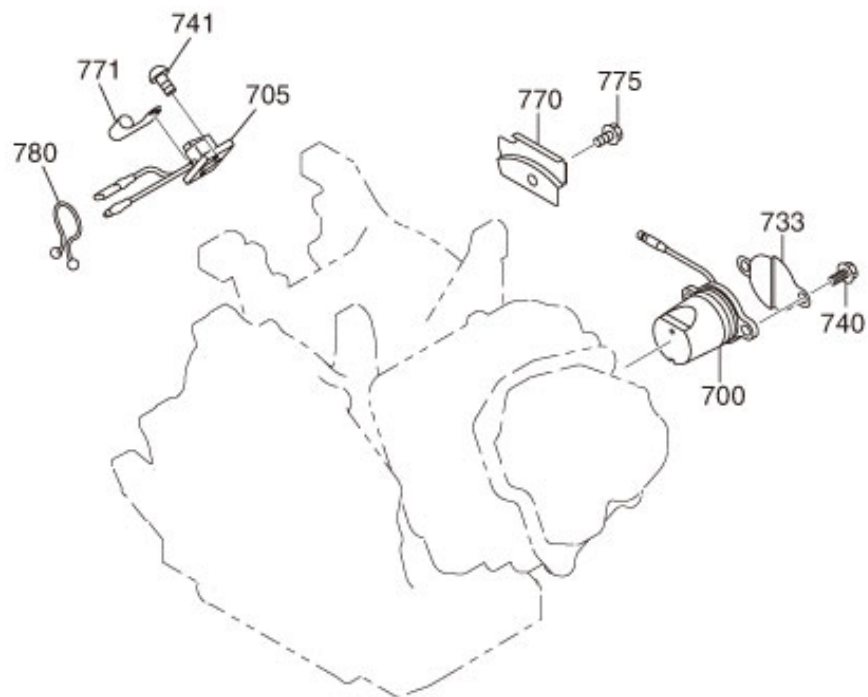


EX27

279077000W01

770 Electric Device

Ref	Part Number.	Description	Qty	Remark
700	279-76301-41	OIL SENSOR CP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
705	KU3-11043-11	FLOAT C/U CP3	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
740	001-14061-60	BOLT & WASHER ASSY (M6X16)	2	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00. Remarks: M6X1.0X16L W/W,SW.
741	011-00600-10	FLANGE BOLT	1	M6X1.10X8
770	279-75501-13	WIRE CLAMP	1	Start Date: 1/1/2006 0:00:00. Start Date: 12/31/9999 0:00:00.
775	015-20600-50	TAPPING BOLT (M6X10)	1	
775	015-20600-50	TAPPING BOLT (M6X10)	1	

900 Accessory

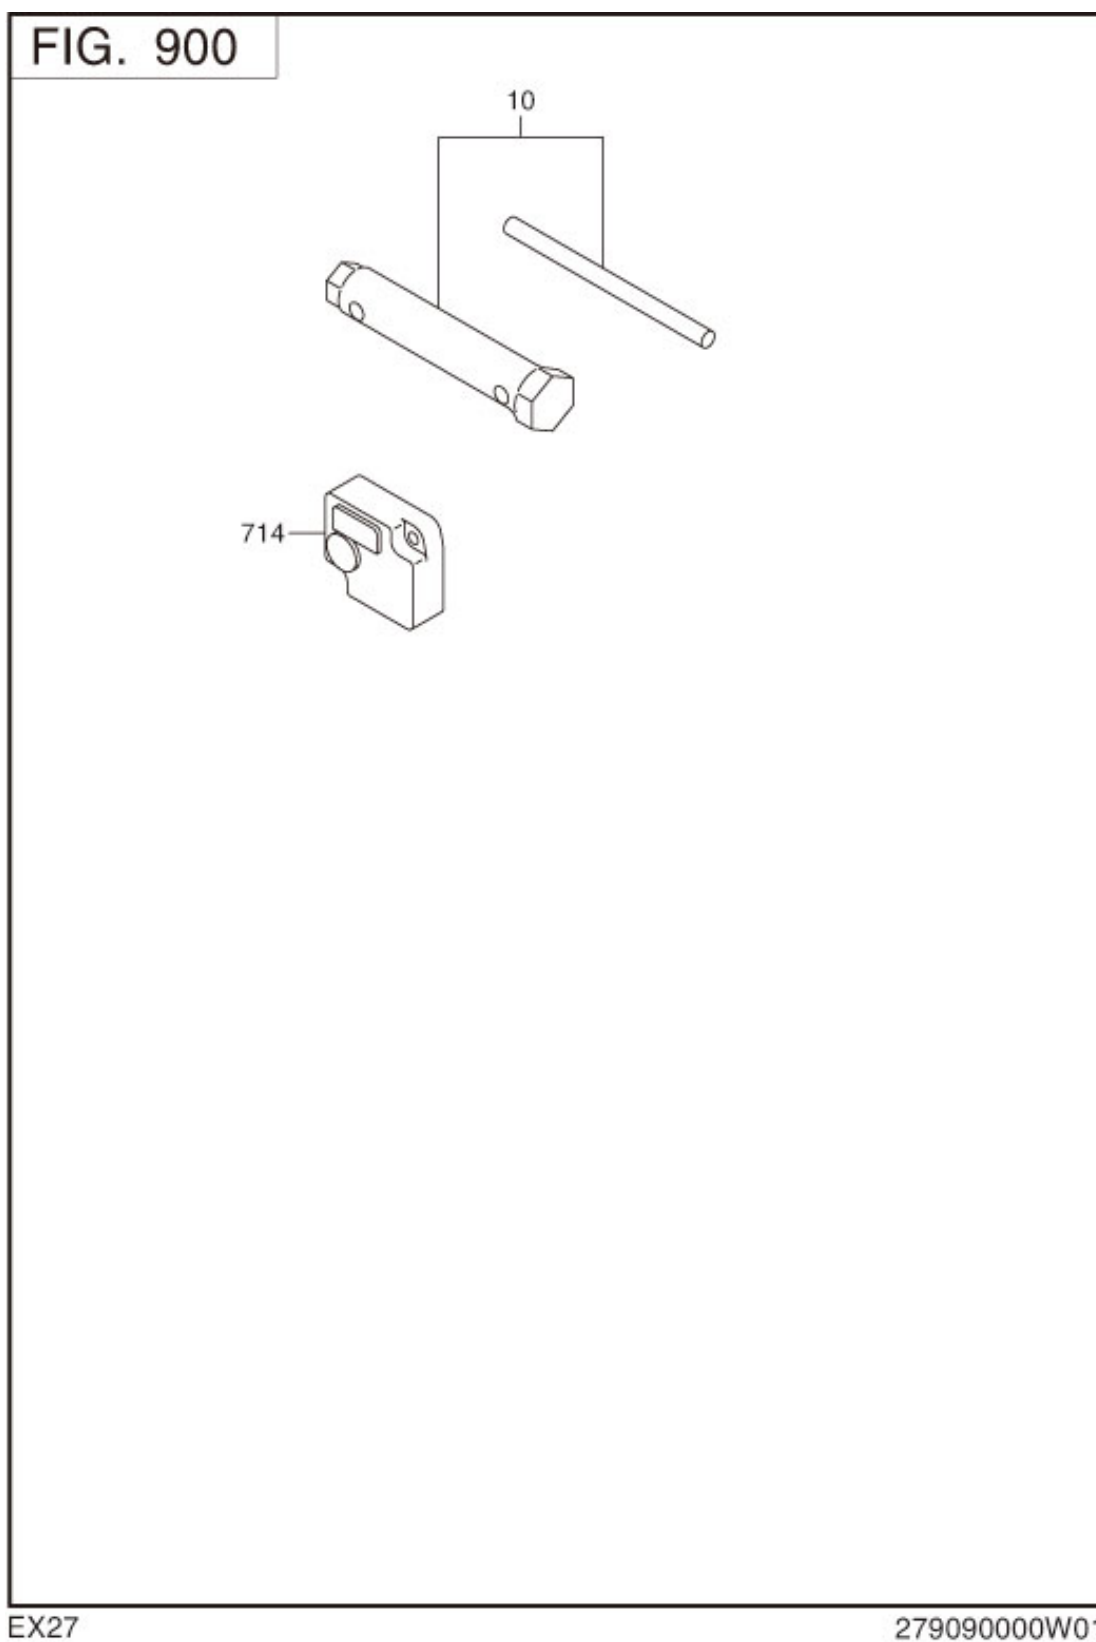

900 Accessory

Ref	Part Number.	Description	Qty	Remark
10	277-90301-H0	ACCESSORY TOOL KIT	1	

Part Number Index

The Part Number Index is a numeric index of all part numbers included in this manual. The index shows what page(s) the part is used on.

Part Number	Page	Part Number	Page	Part Number	Page
001-04062-00	12	277-35002-01	11	279-42301-53	17
001-04083-50	6	277-35101-03	11	279-42502-63	17
001-14061-60	31	277-35201-13	11	279-42701-11	17
001-14062-50	29	277-36201-00	11	279-50110-08	21
002-35060-00	17	277-36202-00	11	279-50120-08	21
002-38060-00	12	277-36501-03	11	279-50125-08	21
002-38080-00	23	277-36902-03	11	279-50145-08	21
003-13050-00	11, 17	277-36911-03	11	279-50202-00	21
004-31040-80	17	277-36913-13	11	279-51202-01	19
004-31062-50	17	277-37001-H1	12	279-52702-13	19
006-26100-61	26	277-37101-03	11	279-52711-11	19
010-50604-10	5	277-38601-03	11	279-60102-11	23
010-50802-50	5	277-38701-03	11	279-62103-10	25
011-00600-10	12, 19, 31	277-41901-03	5	279-62302-40	25
011-00600-20	6, 11, 17, 19	277-42201-33	17	279-62353-18	25
011-00600-30	19	277-42801-23	17	279-62401-08	25
011-00802-40	6	277-43303-01	17	279-62420-08	26
011-00802-50	23	277-43502-03	17	279-62445-08	25
011-00803-10	6	277-43701-01	17	279-62451-08	25
011-00803-20	12	277-43801-01	23	279-62452-08	25
013-00602-40	17	277-43902-03	17	279-62500-08	25
013-10500-30	17	277-44501-03	17	279-62505-08	25
014-90500-20	11	277-45004-J1	5	279-62515-08	25
015-00400-60	11-12	277-45103-03	17	279-62520-08	26
015-00400-90	29	277-46002-01	17	279-62525-08	26
015-20600-50	31	277-62100-18	26	279-62530-08	25
015-20600-90	12	277-62110-18	25	279-62535-08	25
017-00500-30	11	277-73102-H1	29	279-62540-08	25
018-01800-10	9	277-90301-H0	33	279-62561-08	25
018-60600-20	17	279-10102-81	5	279-62562-08	25
021-11400-20	5	279-10102-91	5	279-62585-08	26
021-32000-50	6	279-11002-11	5	279-62602-01	23
021-70600-70	17	279-13001-21	6	279-63601-13	6
024-00600-10	11	279-15001-33	6	279-64502-H1	23
032-30300-10	9	279-20901-61	9	279-75501-13	31
040-11400-30	5	279-22501-20	9	279-76301-41	31
043-04400-50	23	279-23001-03	9	279-79230-11	29
044-00600-20	5	279-23301-13	9	279-79231-01	29
044-03001-60	5	279-23401-H3	9	279-79430-01	29
050-51200-20	23	279-23403-H3	9	279-95111-03	23
056-11100-50	23	279-23404-H3	9	279-99001-27	6
056-51800-10	9	279-23511-17	9	285-62550-08	25
060-03003-41	5	279-23512-17	9	285-62551-08	25
060-03003-70	5	279-23513-17	9	285-62552-08	25
065-01401-50	29	279-30111-K1	11	980-20082-80	12
065-50002-70	29	279-30111-L1	11	KU3-11043-11	31
073-20051-81	23	279-31601-01	11	X56-11100-20	23
073-20054-70	19	279-32607-07	15	X64-13600-10	23
132-10KA0-31	11	279-32615-30	15	X66-00004-20	29
207-26001-03	9	279-32634-28	15	X85-10615-80	23
226-50701-08	21	279-32643-18	15		
226-50716-08	21	279-32650-08	15		
226-50731-08	21	279-32720-08	15		
226-50741-08	21	279-32730-08	15		
226-50752-08	21	279-32740-08	15		
226-50753-18	21	279-32902-J1	12		
237-14202-03	5	279-33401-H3	11		
237-45004-23	17	279-33501-H3	11		
251-62350-08	25	279-33601-03	11		
251-62450-08	25	279-34201-11	11		
251-62453-08	25	279-34201-21	11		
267-45101-03	17	279-35601-11	11		
269-33701-03	11	279-35902-J3	12		
277-15011-03	5-6	279-35903-J3	12		
277-15503-01	6	279-36401-03	11		
277-16001-13	6	279-37601-01	11		
277-16010-01	5	279-42301-43	17		

Part Description Index

The Part Description Index is an alphabetical index of all part descriptions included in this manual. The index shows what page(s) the part is used on.

A

ACCESSORY TOOL KIT.....33
ADJUST SCREW.....11
ADJUST SPRING.....17
AIR CLEANER AY.....15

B

BALL BEARING.....5
BLOWER HOUSING CP (BLACK).....19
BOLT & WASHER ASSY.....17
BOLT & WASHER ASSY (M6X16).....31
BOLT AND WASHER ASSY.....29
BUSH.....25

C

CAM SHAFT CP.....11
CAMSHAFT PIN.....11
CARBURETOR AY.....25
CASE BAFFLE 1 CP.....19
CENTER SCREW.....21
CHAIN GUIDE.....11
CHOKE LEVER CP.....23
CLAMP.....17
CLIP.....9, 11, 17
COCK BODY-A.....25
COLLAR.....25
CONNECTING ROD AY.....9
COVER.....15
CRANKCASE CP.....5
CRANKSHAFT CP.....9
CUP.....26
CYLINDER HEAD CP.....6

D

DEFLECTOR CP.....12
DRAIN SCREW.....25
DUAL ELEMENT SET.....15

E

ELBOW COMP,AIR/C.....15
EXHAUST GASKET.....11
EXHAUST ROCKER ARM ASSY.....11
EXHAUST VALVE.....11

F

FLANGE BOLT.....6, 9, 11-12, 17, 19, 31
FLANGE BOLT (M8X25).....23
FLANGE NUT.....12, 23
FLANGE NUT (M18).....9
FLOAT C/U CP3.....31
FLOAT CHAMBER SUB AY.....25
FLOAT SUB ASSY.....25
FLYWHEEL CP.....29
FRICTION PLATE.....21
FRICTION SPRING.....21
FRICTION WASHER.....17

FUEL FILTER.....23
FUEL PIPE CP.....23
FUEL TANK CAP CP.....23
FUEL TANK CP (BLACK).....23

G

GASKET.....5-6, 15, 25
GASKET (HEAD).....6
GASKET CHAMBER.....25
GASKET SET.....6
GLASS TUBE.....23
GOVERNOR GEAR CP.....5
GOVERNOR LEVER.....17
GOVERNOR ROD CP.....17
GOVERNOR SHAFT.....17
GOVERNOR SLEEVE.....5
GOVERNOR SPRING.....17

H

HEAD BAFFLE 2.....19
HOSE CLAMP.....23

I

IGNITION COIL CP.....29
INSULATOR CP.....12
INTAKE GASKET.....12
INTAKE ROCKER ARM ASSY.....11
INTAKE VALVE.....11

J

JET MAIN.....25
JET SLOW.....26

K

KEY.....9

L

LABEL.....15
LABEL(MODEL).....23
LABEL(TRADE MARK).....19
LABEL(WARNING).....23
LINK ROD CP.....17
LOCKNUT.....17

M

MAIN BEARING COVER C.....5
MUFFLER COVER CP.....11
MUFFLER CP.....11

N

NUT.....11, 15

O

O-RING.....11, 25-26
OIL GAUGE.....6

OIL SEAL.....5
OIL SENSOR CP.....31

P

PACKING.....25
PIN FLOAT LEVER.....25
PIPE KNOCK.....5-6
PISTON.....9
PISTON PIN (18X13X53).....9
PISTON RING SET.....9
PLUG.....5

R

RACHET.....21
RATCHET SPRING.....21
RECOIL STARTER AY.....21
REEL.....21
RELEASE LEVER.....11
RETURN SPRING.....11, 17
ROCKER COVER CP.....6
ROCKER PIN CP.....11
ROD SPRING.....17
RUBBER PIPE.....23

S

SCREW.....17, 25-26
SCREW ADJUSTING.....25
SCREW AND WASHER ASSY.....17
SCREW(M4X8).....17
SEAL.....15
SHAFT CHOKE.....26
SHAFT SUB ASSY(TH).....25
SPARK ARRESTER CP.....11
SPARK PLUG (NGK BR6HS).....29
SPARK PLUG CAP.....29
SPEED CONTROL BRACKET CP.....17
SPEED CONTROL LEVER CP.....17
SPIRAL SPRING.....21
SPRING.....25
SPRING PIN.....11
SPRING RETAINER.....11
SQUARE NUT.....17
STARTER HANDLE.....21
STARTER PULLEY.....21
STARTER ROPE.....21
STEM SEAL.....5
STOP PLATE.....17
STUD.....5
SWITCH AY.....29

T

TAPPING BOLT.....12
TAPPING BOLT (M6X10).....31
TAPPING SCREW.....11-12, 29
TENTIONER.....11
TENTIONER PIN.....11
TENTIONER SPRING.....11
TIMING CHAIN CP (100 LINK).....11

Part Description Index (continued)

U

UNION.....23

V

VALVE ASSY NEEDLE.....25

VALVE CHOKE.....26

VALVE COLLET.....11

VALVE GUIDE.....5

VALVE SPRING.....11

VALVE THROTTLE.....25

W

WASHER.....17

WIRE 2 CP.....29

WIRE CLAMP.....31

WOODRUFF KEY.....9

This Page Intentionally Left Blank

PRINTED IN THE USA

Subaru Industrial Power Products

905 Telser Road - Lake Zurich, IL 60047

Phone 847-540-7300 - Fax 847-438-5012

e-mail: sales@subarupower.com - www.subarupower.com